



KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
1	PR919-187	Replacement Blade Set, 3/16" (919-AAS), 14 blades	11	PR919-121S	Bearing Block w/Mounting Screws, pkg of 2
	PR919-188	Replacement Blade Set, 1/4" (919-ABS), 10 blades	12	-NLA-	Guide Rod
	PR919-189	Replacement Blade Set, 3/8" (919-ACS), 7 blades	13	PR919-80S	Bridge w/Mounting Screws
	PR919-191	Replacement Blade Set, 7/32" (919-ADS), 12 blades	14	PR919-17S	Guide Rod Cushions, pkg of 4
2	PR919-142S	Carrier Plate, 3/16" & 3/8" (919-AAS & 919-ACS)	15	PR919-18	Rubber Feet, pkg of 4
	PR919-143S	Carrier Plate, 7/32" (919-ADS)	17	-NLA-	Slotted Hex Head Screw
	PR919-144S	Carrier Plate, 1/4" (919-ABS)	18	-NLA-	Sleeve
3	PR919-125S	Safety Guard w/Mounting Screws	-NLA-	-NLA-	Washer
5	PR919-114	Handle w/Mounting Screws	19	PR919-184S	Blade Assembly Hardware Kit
6	PR919-192	Pusher Head Assembly, 3/16" (919-AAS)	20	PR919-185	Lower Blade Tensioning Knob
	PR919-194	Pusher Head Assembly, 1/4" (919-ABS)	21	-NLA-	Tensioning Knob Sleeves
	PR919-192	Pusher Head Assembly, 3/8" (919-ACS)	22	PR79-083	Tensioning Knob Washers
	PR919-193	Pusher Head Assembly, 7/32" (919-ADS)	A	PR76-238S	Phillips Head Screw, 10-24x1/2", pkg of 6
7	PR919-127S	Pusher Head Spacers, Blk 7/32", pkg of 12	B	PR76-440	Hex Head Screw, 1/4-20x3/4
	PR919-128S	Pusher Head Spacers, Gry 1/4", pkg of 12	D	PR76-593S	Screw w/Knob, pkg of 4
	PR919-126S	Pusher Head Spacers, Wht 3/16" & 3/8", pkg of 12	E	PR76-202	Socket Head Set Screw
9	PR919-19S	Pusher Head Bolts, pkg of 2	F	PR76-485S	Bridge Retaining Screws, pkg of 16
10	-NLA-	Complete Base	H	PR79-132	Split Lock Washer, Stainless Steel
			n/s	PR919-177S	Pusher Head Plate