



Ventless Hoods For Rotisseries

SERIES: VGH

Operation Manual



BKI LIMITED WARRANTY
2812 Grandview Dr. • Simpsonville, SC 29680 • USA
(864) 963-3471 • Toll Free: (800) 927-6887 • Fax: (864) 963-5316

WHAT IS COVERED	<p>This warranty covers defects in material and workmanship under normal use, and applies only to the original purchaser providing that:</p> <ul style="list-style-type: none"><input type="checkbox"/> The equipment has not been accidentally or intentionally damaged, altered or misused;<input type="checkbox"/> The equipment is properly installed, adjusted, operated and maintained in accordance with national and local codes, and in accordance with the installation and operating instructions provided with this product.<input type="checkbox"/> The serial number rating plate affixed to the equipment has not been defaced or removed.
WHO IS COVERED	<p>This warranty is extended to the original purchaser and applies only to equipment purchased for use in the U.S.A.</p>
COVERAGE PERIOD	<ul style="list-style-type: none"><input type="checkbox"/> Warranty claims must be received in writing by BKI within one (1) year from date of installation or within one (1) year and three (3) months from date of shipment from the factory, whichever comes first.<input type="checkbox"/> COB Models: One (1) Year limited parts and labor.<input type="checkbox"/> COM Models: Two (2) Year limited parts and labor. COM convection ovens also have a two (2) year door warranty.<input type="checkbox"/> CO1 Models: Two (2) Year limited parts and labor. Five (5) Year limited door warranty.<input type="checkbox"/> BevLes Products: Two (2) Year limited parts and labor.<input type="checkbox"/> Warranty period begins the date of dealer invoice to customer or ninety (90) days after shipment date from BKI, whichever comes first.
WARRANTY COVERAGE	<p>This warranty covers on-site labor, parts and reasonable travel time and travel expenses of the authorized service representative up to (100) miles round trip and (2) hours travel time and performed during regular, weekday business hours.</p>
EXCEPTIONS	<p>Any exceptions must be pre-approved in advance and in writing by BKI. The extended door warranty on convection ovens years 3 through 5 is a parts only warranty and does not include labor, travel, mileage or any other charges.</p>
EXCLUSIONS	<ul style="list-style-type: none"><input type="checkbox"/> Negligence or acts of God,<input type="checkbox"/> Thermostat calibrations after (30) days from equipment installation date,<input type="checkbox"/> Air and gas adjustments,<input type="checkbox"/> Light bulbs,<input type="checkbox"/> Glass doors and door adjustments,<input type="checkbox"/> Fuses,<input type="checkbox"/> Adjustments to burner flames and cleaning of pilot burners,<input type="checkbox"/> Tightening of screws or fasteners,<input type="checkbox"/> Failures caused by erratic voltages or gas suppliers,<input type="checkbox"/> Unauthorized repair by anyone other than a BKI Factory Authorized Service Center,<input type="checkbox"/> Damage in shipment,<input type="checkbox"/> Alteration, misuse or improper installation,<input type="checkbox"/> Thermostats and safety valves with broken capillary tubes,<input type="checkbox"/> Freight - other than normal UPS charges,<input type="checkbox"/> Ordinary wear and tear,<input type="checkbox"/> Failure to follow installation and/or operating instructions,<input type="checkbox"/> Events beyond control of the company.
INSTALLATION	<p>Leveling, as well as proper installation and check out of all new equipment - per appropriate installation and use materials - is the responsibility of the dealer or installer, not the manufacturer.</p>
REPLACEMENT PARTS	<p>BKI genuine Factory OEM parts receive a (90) day materials warranty effective from the date of installation by a BKI Factory Authorized Service Center.</p>

Table of Contents

Table of Contents	1
Introduction	2
Safety Precautions.....	2
Safety Signs and Messages.....	2
Specific Precautions	3
Safe Work Practices	3
ETL Information	5
Installation	6
Unpacking and Handling.....	6
Inspection for Shipping Damage	6
Location and Clearance	6
Detailed Installation Instructions.....	6
Wiring	7
Baffle Grease / Odor Filter	8
Operation	9
Principles of Operation	9
Controls and Indicators	9
Preparation	10
Start-Up.....	10
Shut-Down	10
When to Replace the Filter	11
Cleaning.....	11
Maintenance	12
Scheduled Maintenance	12
Cleaning the Grease Baffle	13
Replacing the Charcoal/Odor Filter	13

BKI Worldwide is a wholly owned subsidiary of Standex International Corporation.

Introduction

Congratulations! You have chosen **BKI**'s Rotisserie Ventless Global Hood (VGH) system, a state-of-the-art unit that filters grease laden air and returns it to the room.

The VGH is a simple ventless extraction hood system designed to mount on top of VGG model rotisserie ovens manufactured by BKI. The hood may be shipped on top of new units or retrofitted at a store location. The VGH-5 is designed for use on the VGG-5; while the VGH-8 is designed for use on VGG-8's and VGG-16's. The hood does not employ and is not designed as a fire suppression system. The purpose of the hood is to *limit* the emission of grease laden air drawn out of or rising above the rotisserie oven. Pass thru and solid back versions are available.


The **BKI** name and trademark on this unit assures you of the finest in design and engineering -- that it has been built with care and dedication -- using the best materials available. Attention to the operating instructions regarding proper operation, installation and maintenance will result in long lasting dependability to insure the highest profitable return on your investment.

NOTICE

PLEASE READ THIS ENTIRE MANUAL BEFORE OPERATING THE UNIT. If you have any questions, please contact your **BKI** Distributor. If they do not answer your questions, contact the **BKI** Technical Service Department, toll free: 1-800-927-6887. Outside the U.S., call 1-864-963-3471.

Safety Precautions

Always follow recommended safety precautions listed in this manual. Below is the safety alert symbol. When you see this symbol on your equipment, be alert to the potential for personal injury or property damage.

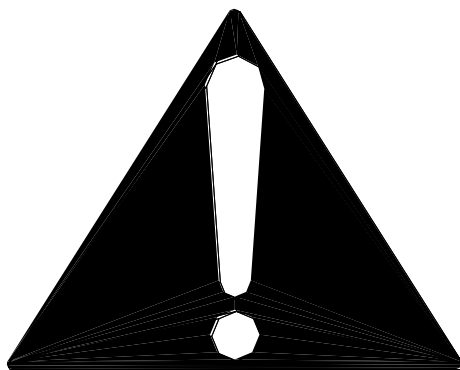

Safety Signs and Messages

The following Safety signs and messages are placed in this manual to provide instructions and identify specific areas where potential hazards exist and special precautions should be taken. Know and understand the meaning of these instructions, signs, and messages. Damage to the equipment, death or serious injury to you or other persons may result if these messages are not followed.

▲ DANGER

This message indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

▲ WARNING

This message indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

This message indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

This message is used when special information, instructions or identification are required relating to procedures, equipment, tools, capacities and other special data.

Specific Precautions

DANGER

Carbon monoxide poisoning will result from using this hood with any appliance that utilizes combustible fuel. Use only electrical appliances with this hood.

WARNING

In the event of an appliance fire, serious injury, property damage or death could occur if the appliance is not properly placed on top of the rotisserie. The hood has not been secured by fasteners. To ensure that the appliance remains in the proper position on top of the rotisserie hood during normal operation, **DO NOT TIP, PULL, OR PUSH APPLIANCE WITHOUT PROVIDING ADEQUATE PRECAUTION!**

WARNING

California Residents Only. This product can expose you to chemicals including chromium, and lead which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

NOTICE


Hood failure could result if the hood is operated without the grease baffle and particle/odor filter installed. This is a special filter designed for this application only; other filters will not work properly. Use only a **BKI** particle/odor filter.

Safe Work Practices



Beware of High Voltage

This equipment uses high voltage. Serious injury can occur if you or any untrained or unauthorized person installs, services, or repairs this equipment. Always Use an Authorized Service agent to Service Your Equipment

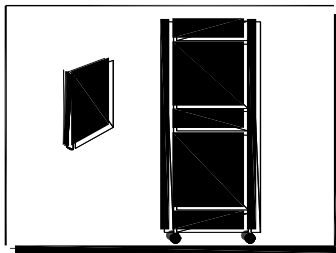

Keep this manual with the Equipment

This manual is an important part of your equipment. Always keep it near for easy access. If you need to replace this manual, contact:


BKI
 Technical Services Department
 2812 Grandview Drive
 Simpsonville, S.C. 29680
 Or call toll free: 1-800-927-6887
 Outside the U.S., call 864-963-3471



Protect Children

Keep children away from this equipment. Children may not understand that this equipment is dangerous for them and others.

NEVER allow children to play near or operate your equipment.

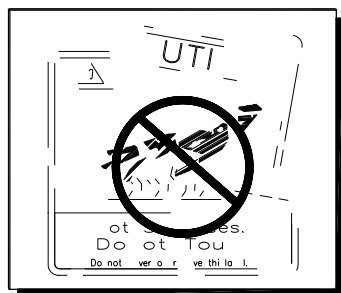


Keep Safety Labels Clean and in Good Condition

Do not remove or cover any safety labels on your equipment. Keep all safety labels clean and in good condition. Replace any damaged or missing safety labels.

If you need new safety labels, contact:

BKI

Technical Services Department
 2812 Grandview Drive
 Simpsonville, S.C. 29680
 Or call toll free: 1-800-927-6887
 Outside the U.S., call 864-963-3471

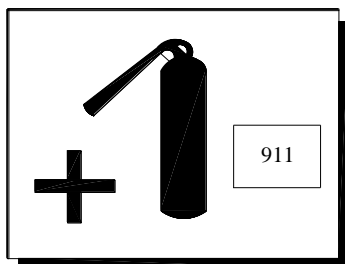


Prepare for Emergencies

Be prepared for fires, injuries, or other emergencies.

Keep a first aid kit and a fire extinguisher near the equipment. You must use a 40-pound Type BC fire extinguisher and keep it within 25 feet of your equipment.

Keep emergency numbers for doctors, ambulance services, hospitals, and the fire departments near your telephone.

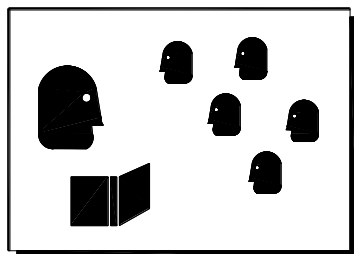

Know your responsibility as an Employer

- Make certain your employees know how to operate the equipment.
- Make certain your employees are aware of the safety precautions on the equipment and in this manual.
- Make certain that you have thoroughly trained your employees about operating the equipment safely.
- Make certain the equipment is in proper working condition. If you make unauthorized modifications to the equipment, you will reduce the safety and function of the equipment.

ETL Information

⚠ WARNING

Failure to adhere to building, fire and electrical codes during installation of this unit could result in death, serious injury or property damage. The authority having jurisdiction, such as the local building inspector or fire marshal, should be consulted prior to installation to insure compliance with applicable codes.

⚠ WARNING

In the event of an appliance fire, serious injury, property damage or death could occur if the appliance is powered from a source other than the rotisserie for which it is designed for. The hood used on top of the appliance **MUST** receive its input power from the appliance. This hood has not been installed with Fire Extinguishing System.

NOTICE

This filter hood is an Intertek Testing Services, inc. classified ductless hood for use with ETL listed type commercial cooking appliance only (rotisserie).

Installation

Unpacking and Handling

Inspection for Shipping Damage

YOU are responsible for filing all freight claims with the delivering truck line. Inspect all cartons and crates for damage as soon as they arrive. If damage to cartons or pallets is found, or if a shortage is found, note this on the bill of lading (all copies) prior to signing and receiving.

If damage is found when the equipment is opened, immediately call the delivering truck line and follow up the call with a written report indicating concealed damage to your shipment. Ask for an immediate inspection of your concealed damage item. Packaging material **MUST** be retained to show the inspector from the shipping line.

Location and Clearance

Make sure the rotisserie is mounted on a level surface capable of supporting the fully loaded oven. Refer to oven installation guidelines in the oven manual.

The hood will be installed in one of two ways. New VGG's may be ordered with the hood already assembled (mounted to the top of the Rotisserie) or shipped with it for installation at the store location. VGG's already in service may be fitted with the hood at a store location as a retro-fit installation.

⚠ WARNING Disconnect VGG rotisserie from the electrical supply before attempting installation. VGH-8 Hood for use only with BKI Models VGG-8 or VGG-16 rotisseries.
VGH-5 Hood for use only with BKI Model VGG-5 rotisserie.

Detailed Installation Instructions

1. Remove side panel on the control side of the VGG and both side panels on the VGH.
2. Unscrew the 4 philips head screws of the access plate on the ceiling of the VGG and turn it around allowing hole to access the VGG control compartment. Reattach the plate with the 4 philips head screws.
3. Install the F0155 bushing provided into access hole of VGG.
4. Attach 1 of the FB68943018 (Appliance Lifting/Installation Bracket) handles on each side of the VGH using the bottom two holes that the side panels attach to and with screws removed from the side panels.

⚠ CAUTION The hood lifting/installation brackets (FB68943018) are used as lifting mechanism and are attached to the sides of the hood with side panels removed for placing the hood on top of the oven. Failure to install this part could cause damage to the hood and/or oven.

5. Pick up and place the VGH on the VGG making sure the controls are on the same side as the VGG controls.

Wiring


⚠ WARNING

Electrocution, equipment failure or property damage could result if an unlicensed electrician performs the electrical installation. Ensure that a licensed electrician perform the electrical installation.

⚠ WARNING

In the event of an appliance fire, serious injury, property damage or death could occur if the appliance is powered from a source other than the oven. The hood **MUST** receive its input power from the rotisserie for which it is mounted on.

1. Feed power wires and interlock wires through access hole into VGG.
2. The power wires # 14, 15, and ground are wired as follows:

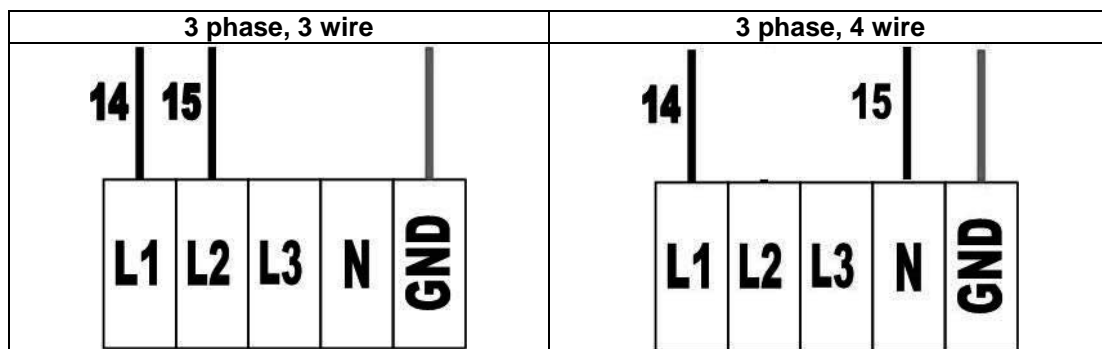

3. For interlock, remove #5 wire from VGG Power Switch. Crimp male connector provided with VGH onto #5 wire and plug into female connector of VGH wire #11. Place VGH wire #10 into VGG Power Switch where #5 wire was.
4. Replace all side panels.

Baffle Grease / Odor Filter

These filters will come already installed in the hood. If not, follow the steps below to install the filters.

1. Remove the filter(s) from the plastic bag.
2. Open the hood and filters doors on the front of the unit by pulling on the handles.
3. Observing the “FRONT” marking on the grease filter and facing the control side of the hood away from the blower, slide the filter into the unit as shown. Repeat for the Charcoal filter with the “ARROW” mark showing air flow direction pointing towards the blower.
4. Close the filters and hood doors.



Operation


Principles of Operation

The hood requires a VGG rotisserie power supply, a two-wire connections tapped into the control circuits of the VGG it is mounted to, and the activation of a simple On / Off switch to operate. The wiring change to the VGG ensures that the rotisserie is inoperable until the filter and door switch circuits are satisfied (that is, the filters are present and the door(s) are closed).

A blower inside the ventless hood draws cooking vapors through a grease baffle. Inside the baffle, the air reverses direction two times capturing particles of moisture, grease, and dirt. Material collecting on the baffle drains into the condensation trough located below the baffle. After air passes through the baffle, it then enters a charcoal odor filter. The charcoal odor filter helps to remove cooking odors from the air. The filtered air then passes through the blower and is returned to the room.

The VGG oven may now be energized and operated normally. Refer to the Rotisserie manual on operations of the VGG. If a hood door is opened, the "Door Latch" pilot light illuminates and a relay opens the control circuit in the VGG causing the VGG to immediately power off. If either filter is removed, the "Check Filters" pilot light illuminates and neither the hood or VGG will operate.

Controls and Indicators

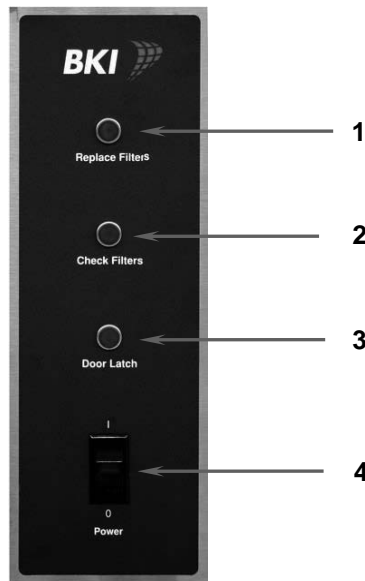

Item	Label	Description	Function
1	Replace Filters	Light Indicator	This light illuminates to indicate time to change out the old filters to new ones.
2	Check Filters	Light Indicator	This light illuminates if either of the two filters or both are not in place. The hood will not run with this light on.
3	Door Latch	Light Indicator	This light illuminates if either of the hood front or rear glass door or both is open. The hood will not run if this light is on.
4	Power (0/1)	Main Power Switch / Light Indicator	Turns power to the entire unit ON (1) or OFF (0).

Preparation

The following conditions must be met for the Filter Hood to function:

- The charcoal odor filter must be installed.
- The grease baffle must be installed.
- The filters door and hood doors must be shut.
- Power must be supplied to the hood from the VGG.

Start-Up

To start the Filter Hood, press the power “On / Off” rocker switch button to position **I**.

Shut-Down

NOTICE

Power to the appliance is turned off, when the hood is turned off.

NOTICE

For proper operation, always turn off appliance and allow time for it to cool before turning off the filter hood. This will insure proper capture of grease vapors.

To stop the Filter Hood, press the power “On / Off” rocker switch button to **0**.



When to Replace the Filter

The vacuum switch is designed to monitor the level of negative/static pressure created by the blower. When the charcoal filter is approximately 70% dirty, the “Replace Filters” pilot light illuminates. This light is an indication to the operators that the filter needs to be changed soon. Theoretically, the hood may be operated with 100% dirty filter (however, hood performance will be affected), as the hood is not designed to shut-down with dirty filters.

In low to medium volume applications, the charcoal filter may need replacement prior to the REPLACE FILTERS light illuminating. If you smell a strong odor coming from the face of the filter and the REPLACE FILTERS light is not illuminated, the filter needs to be replaced. If necessary, refer to the procedure in this manual for replacing the filters (see page 13).

Cleaning

Refer to scheduled maintenance in this manual (see page 12).

Maintenance

⚠ WARNING

Electrocution could occur if this unit is hosed down with water. This unit is NOT designed for hose wash-down cleaning! Refer to scheduled maintenance below for proper hood cleaning.

⚠ WARNING

Electrocution could occur if power is not removed from this unit before servicing. Remove power at disconnect or circuit breaker **BEFORE** servicing hood.

Scheduled Maintenance

Use the following table to help manage scheduled maintenance activities.

FREQUENCY	PERFORMED BY	PART	ACTIVITY
Daily	User	Entire Hood	Wipe unit down with a soft rag and mild cleaning agent.
	User	Condensation trough	Check condensation trough. Empty if necessary.
	User	Grease Baffle	Clean grease baffle. If necessary, refer to the procedure in this manual for cleaning the baffle.
Weekly	User	Charcoal/Odor Filter	Inspect charcoal/odor filter. In low to medium volume applications, the filter may need replacement prior to the indicating light turning on. This condition will be evident by a strong odor coming from the face of the filter. If necessary, refer to the procedure in this manual for replacing the filter.
Monthly	User	Door and Filter Interlock	Check door and filter interlock operation. The unit should not operate with the front door open or either the grease baffle or charcoal/odor filter removed. Clean area between grease baffle and charcoal/odor filter.

⚠ WARNING

Injury from rotating fan blades could occur if power is not removed from this unit before cleaning the blower section. Remove power at disconnect or circuit breaker **BEFORE** cleaning the blower section.

3 Months	User	Blower Section	Clean the blower section.
----------	------	----------------	---------------------------

Cleaning the Grease Baffle

1. Shut down the unit.
2. Open the front Hood door and Filters door, and slide out the grease baffle from the unit.
3. Spray the grease baffle with degreasing type soap.
4. Rinse with hot water; dry, and replace in hood.

Replacing the Charcoal/Odor Filter

1. Shut down the unit.
2. Open the hood door and the filters door on the front of the unit by pulling out on the handles.
3. Slide the used filter out of the unit.
4. Remove the replacement filter from the plastic bag.
5. Observing the "AIR FLOW DIRECTION" mark on the filter, slide the filter into the unit.

NOTICE

When installing a new filter, slight resistance should be observed as the filter is being slid into place. This resistance is generated by flap metal plates located on the top of the filter compartment frames. If this resistance is not felt after a period of time it may become necessary to adjust the pressure that these plates provide by pulling them slightly downwards with your fingers.

6. Close the doors.



2812 Grandview Dr., Simpsonville, S.C. 29680, USA
<http://www.bkideas.com>

Made and printed in the U.S.A
LI0296/0808

SS-OM-033.02

Revised 10/17/18