


Hot Cabinets	FL-2328	
Rev. 4 (3/13)	Page 1 of 4	

Model No.	Volts	Watts	Amps	Hertz	Phase	NEMA
H135UA11 H135SUA11	120	1500	12.3	60	1	5-15P
H135UA11240 H135SUA11240	240	1500	6.1	60	1	6-15P

All are designed for AC service. The above model numbers may be followed by "*M*", "*L*", "*D*", "*R*" and ending with "*S*" or "*Z*".

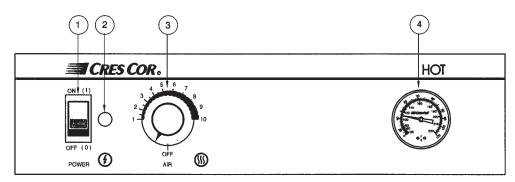

CONTROL PANEL PARTS IDENTIFICATION

- 1. Power Switch
- 2. Yellow Light-Power
- 3. Thermostat
- 4. Thermometer

HOW TO INSTALL UNIT:

- 1. Place cabinet near warm ovens. Do *NOT* put in drafty areas or near ventilating systems.
- 2. Plug cord end into proper wall outlet.

HOW TO START UNIT:

- 1. Turn the POWER switch on. The *yellow* light will turn on.
- 2. Turn thermostat to #10.
- 3. Preheat cabinet for 30 minutes.
- 4. Put food into cabinet.
- 5. Turn thermostat to #8 and close door.

NOTE: No. 8 setting = approx. 190°F (88°C) No. 6 setting = approx. 165°F (74°C)

Proper food holding temperature is 140°F (60°C) or higher. The thermometer shows the temperature inside.

TO TURN OFF UNIT:

- 1. Turn thermostat off.
- 2. Turn the POWER switch off.
- 3. The *yellow* light will go out.

Hot Cabinets	FL-2328
Rev. 4 (3/13)	Page 2 of 4



MAINTENANCE

HOT UNIT REMOVAL INSTRUCTIONS:

- 1. Unplug power cord from wall outlet.
- 2. Pull entire unit out the front of the cabinet.


HOW TO CLEAN THE CABINET:

WARNING *BEFORE* cleaning the cabinet:

1. Allow cabinet to cool.

HOW TO CLEAN UNIT:

- 2. Remove Hot unit from cabinet.
- 3. Do NOT use abrasives or harsh chemicals.

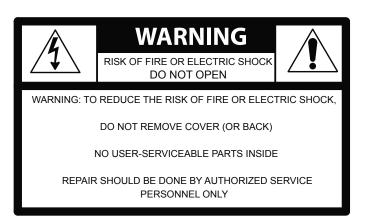

Cleaning Notes:

- 1. Wipe up spills as soon as possible.
- 2. Clean cabinet regularly to avoid heavy dirt build-up.
- 3. Make a test spot with cleaner.
- 4. Follow manufacturer's directions on cleaner.
- 5. Do not mix cleaners.
- 6. Avoid drips and splashes.

	Soil	Cleaner	Method
DOORS Vinyl (Out) Aluminum (In)	Dirt, Grease and Oil	Mild Detergent* and water.	 Wipe with soft, damp cloth. Rinse well.
	Dirt	Mild detergent* and hot water, or mild abrasive cleaner.	 Use soft, damp cloth. Rinse with hot water. Wipe dry.
CABINETS (H137UA11 is	Steam (No strong alkaline additive)	 Rinse after steam cleaning. Wipe dry. 	
Aluminum) (H137SUA11 is	Fingerprints, Grease	Chemical oven cleaner for cabinet material	Follow oven manufacturer's directions
Stainless Steel) and Oil		Mild abrasive cleaner; oily or waxy cleaner	Apply with clean, soft cloth. Wipe with damp cloth.
	Water Spots	Mild abrasive cleaner. Oily of waxy cleaner.	Apply with soft, clean cloth. Wipe with damp cloth.



TROUBLE-SHOOTING CHART:

FAILURE	POSSIBLE CAUSE
1. Yellow light at switch does NOT light.	1a. Circuit breaker/fuse to wall outlet is blown.
	1b. Cord is unplugged from wall outlet.
	1c. Switch is "OFF".
2. Unit does not heat.	2a. Thermostat set too low or is "OFF".
	2b. Switch is "OFF".
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts. UNPLUG UNIT FROM
-	WALL OUTLET.
4. Blower does not work or makes noise.	4a. Defective blower.

NOTE: Optional digital thermometer will flash if cabinet temperature is below 140° F or above 250° F. Call the factory if you need different settings.

If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

REPLACEMENT PARTS:		
DESCRIPTION	120 VOLT	240 VOLT
Hot Unit (H35UA11)	HU-1254-058	HU-1254-059
Hot Unit (H135SUA11)	HU-1254-062	HU-1254-063
Blower Kit	0769-180-K	0769-182-K
Heater Kit	0811-019-K	0811-020-К
Thermostat Kit	0848-062-K	0848-062-K
Thermometer Kit (Analog)	5238-030-К	5238-030-К
Power Cord	0810-029	0810-039
Power Switch	0808-116-K	0808-116-K
Power Light	0766-094	0766-095
Terminal Block	0852-091	0852-091
CABINET	W/BLACK FRAME	W/O BLACK FRAME
Door Assembly, Aluminum	1200-495-BL-K	1221-571-K
Door Assembly, Red	1200-499-BL-K	1221-571-RK
Door Assembly, Stainless Steel	-	1221-571-SS
Door Gasket	0861-259-K	0861-271-K
Door Latch	1006-154-01-K	1006-154-01-K
Door Hinge	0519-104-K	0519-104-K
Pan Slides	0621-281-K	0621-281-K

Hot Cabinets	FL-2328
Rev. 4 (3/13)	Page 4 of 4



WIRING DIAGRAM:

