

ELECTRICA

Model No.	LLLCTRICA						
H137WSUA9C H137WSUA6C H138WS185C H138WS1834C H138WS1816C H137WSUA9C208 H137WSUA9C208 H137WSUA6C208 H137WSUA6C208 H138WS185C208 H138WS185C208 H138WS1834C208 H138WS1816C208 H138WS1816C208 H137WSUA12C240 H137WSUA9C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H138WS185C240 H138WS185C240 H138WS1834C240	Model No.						
H137WSUA5C H138WS185C H138WS1834C H137WSUA12C208 H137WSUA5C208 H137WSUA5C208 H137WSUA6C208 H137WSUA6C208 H138WS185C208 H138WS185C208 H138WS1816C208 H138WS1816C208 H137WSUA12C240 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H138WS185C240 H138WS1834C240 H138WS1834C240	H137WSUA12						
H137WSUA6C H138WS1834C H138WS1816C H137WSUA12C208 H137WSUA5C208 H137WSUA6C208 H138WS185C208 H138WS1834C208 H138WS1834C208 H138WS1816C208 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H138WS185C240 H138WS1834C240 H138WS1834C240 H138WS1834C240	H137WSUA9C						
H138WS185C H138WS1816C H138WS1816C H137WSUA12C208 H137WSUA5C208 H137WSUA6C208 H138WS185C208 H138WS1834C208 H138WS1834C208 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA6C240 H137WSUA5C240 H137WSUA5C240 H138WS185C240 H138WS1834C240	H137WSUA5C						
H138WS1834C H137WSUA12C208 H137WSUA9C208 H137WSUA6C208 H138WS185C208 H138WS1834C208 H138WS1834C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA6C240 H138WS185C240 H138WS185C240 H138WS1834C240	H137WSUA6C						
H138WS1816C H137WSUA12C208 H137WSUA9C208 H137WSUA6C208 H138WS185C208 H138WS1834C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA6C240 H138WS185C240 H138WS1834C240 H138WS1834C240	H138WS185C						
H137WSUA12C208 H137WSUA5C208 H137WSUA6C208 H138WS185C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H137WSUA5C240 H138WS185C240 H138WS185C240 H138WS1834C240	H138WS1834C						
H137WSUA9C208 H137WSUA6C208 H138WS185C208 H138WS1834C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA6C240 H137WSUA6C240 H138WS185C240 H138WS1834C240	H138WS1816C						
H137WSUA5C208 H138WS185C208 H138WS1834C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA5C240 H137WSUA6C240 H138WS185C240 H138WS185C240 H138WS1834C240	H137WSUA12C208						
H137WSUA6C208 H138WS185C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA6C240 H137WSUA6C240 H138WS185C240 H138WS185C240 H138WS185C240 H138WS1834C240	H137WSUA9C208						
H138WS1834C208 H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA6C240 H137WSUA6C240 H138WS185C240 H138WS185C240 H138WS1834C240	H137WSUA5C208						
H138WS1834C208 H137WSUA12C240 H137WSUA5C240 H137WSUA6C240 H137WSUA6C240 H138WS185C240 H138WS185C240 H138WS1834C240	H137WSUA6C208	208	2000	9.6	60	1	6-15P
H138WS1816C208 H137WSUA12C240 H137WSUA5C240 H137WSUA6C240 H138WS185C240 H138WS185C240 H138WS1834C240	H138WS185C208						
H137WSUA12C240 H137WSUA9C240 H137WSUA5C240 H137WSUA6C240 240 2000 8.3 60 1 6-15P H138WS185C240 H138WS1834C240	H138WS1834C208						
H137WUA9C240 H137WSUA5C240 H137WSUA6C240 240 2000 8.3 60 1 6-15P H138WS185C240 H138WS1834C240	H138WS1816C208						
H137WSUA5C240 H137WSUA6C240 240 2000 8.3 60 1 6-15P H138WS185C240 H138WS1834C240	H137WSUA12C240						
H137WSUA6C240 240 2000 8.3 60 1 6-15P H138WS185C240	H137WUA9C240						
H138WS185C240 H138WS1834C240	H137WSUA5C240						
H138WS1834C240	H137WSUA6C240	240	2000	8.3	60	1	6-15P
	H138WS185C240						
H138WS1816C240	H138WS1834C240						
	H138WS1816C240						

NOTE: The above model numbers are basic models.

They may be followed by letters: **M**, **L**, **D** or ending with **S** and/or **Z**.

HOW TO INSTALL UNIT:

- 1. Place cabinet on level floor.
- 2. Plug cord end into proper wall outlet.
- 3. Fill water pan with 4 gallons (15 liters) of water.



Use of treated or soft water may be required for proper operation and to maintain warranty.

- 4. Place the cabinet in a well-ventilated area.
- 5. Push the switch to "On", turn the "Air" thermostat to No. 9 and run the unit for one hour.

NOTE: *DO <u>NOT</u> PUT FOOD IN CABINET!* This step is to burn off manufacturing oils and excess adhesive.

6. Let the cabinet cool and wipe inside clean with detergent and hot water before first use.



Air is VERY HOT when door is opened.

HOW TO PROOF:

- 1. Fill water pan with *HOT* water.
- 2. Turn power switch to "ON".
- 3. Turn "AIR" thermostat to "PROOF" (No. 1).
- 4. Turn "HUMIDITY" thermostat to No. 3½.
- 5. Preheat for ½ hour (30 minutes).
- 6. Put fresh or *fully thawed* dough into cabinet.


NOTE: Do *NOT* put in frozen dough.

NOTE: The optional digital thermometer display flashes when temperature in center of cabinet is below 140°F/60°C or above 250°F/121°C. Call the factory if you need different settings.

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com

Rev. 15 (6/08



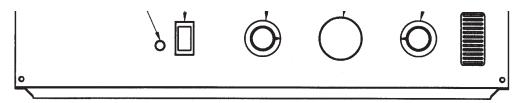

HOW TO HOLD:

No water is needed in pan.

- 1. Push power switch to "ON." Yellow light will come on.
- 2. Turn "AIR" thermostat to No. 9.
- 3. Preheat cabinet for 30 minutes.
- 4. Turn "AIR" thermostat to desired temperature. (See thermostat settings below.)
- 5. Put product into cabinet.

HOW TO HOLD WITH HUMIDITY:

- 1. Fill water pan with HOT water.
- 2. Push power switch to "ON."
- 3. Turn the "AIR" Thermostat to No. 9.
- 4. Turn the "HUMIDITY" thermostat to No. 9.
- 5. Preheat for 30 minutes.
- 6. Turn "AIR" thermostat to desired temperature. (See thermostat settings below.)
- 7. Put product into cabinet.

NOTES: 180°F/82°C is approximately No. 8. Proper food holding temperature is 140°F/60°C or higher.



Air is **VERY HOT** when door is opened.


SOME TYPICAL THERMOSTAT SETTINGS:

THERMOST	AT SETTINGS	RES	ULT
Air	Humidity	Cab. Temp.	Humidity
150° F	Off	150° F	N/A
Med Hold	Off	175° F	N/A
High Hold	Off	205° F	N/A
Maximum	Off	220° F	N/A
Proof	31/2	100° F	98%
Low	Low	115° F	98%
Low	Med	150° F	95%
Low	High	150° F	95%
Low Hold	Low	160° F	30%
Low Hold	Med	160° F	50%
Low Hold	High	160° F	95%
Med Hold	Low	170° F	15%
Med Hold	Med	170° F	35%
Med Hold	High	170° F	85%
Med Hold	Max	170° F	90%
High Hold	Low	205° F	7%
High Hold	Med	205° F	15%
High Hold	High	205° F	40%
Maximum	Maximum	220° F	30%

Note: These settings are based on laboratory conditions and may differ from conditions at point of use. Experiment with the settings to determine what is best for your application.

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com



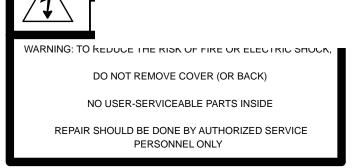

HOW TO TURN UNIT OFF:

Push switch to "OFF" Position.

MAINTENANCE: WATER PAN

Drain, wipe and fill water pan daily. (Clear vinyl drain hose is provided.)

- 1. Push hose onto drain nozzle under the base.
- 2. Turn knob to open the drain.

MAINTENANCE: CABINET

- 1. Wipe the inside of cabinet after daily use.
- 2. Leave doors slightly open to fully dry interior.

arts as build-E MAY

BE AFFECTED WITHOUT PROPER CLEANING.

WARNING

BEFORE CLEANING CABINET:

- 1. Remove Power Cord from cabinet.
- 2. Do NOT hose cabinet with water.
- 3. Do NOT get water on controls.
- 4. Do NOT use abrasives or harsh chemicals.

Cleaning hints:

- 1. Wipe up spills as soon as possible.
- 2. Clean cabinet regularly to avoid heavy dirt build-up.
- 3. Make a test spot with cleaner.
- 4. Follow manufacturer's directions on cleaner.
- 5. Do not mix cleaners.
- 6. Avoid drips and splashes.

HOW TO CLEAN THE UNIT:

HOW TO GLEAN THE GMH.					
	Soil	Cleaner	Method		
CABINET Inside and Outside (Stainless Steel)	ROUTINE CLEANING	Soap, Ammonia, or mild *detergent and water.	 Sponge on with cloth. Rinse with water. Wipe dry. 		
	STUBBORN SPOTS AND STAINS	Mild abrasive made for stainless steel.	1. Apply with damp sponge or cloth.2. Rub lightly.		
	BURNT-ON FOODS OR GREASE	Chemical oven cleaner for stainless steel.	Follow oven cleaner manufacturer's directions.		
	HARD WATER SPOTS and SCALE	Vinegar	Swab or wipe with cloth. Rinse and dry.		
*Mild detergents include soaps and non-abrasive cleaners.					

Note: Gaskets are removable for cleaning.

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com

Insulated Hot Cabinets


Rev. 15 (6/08



REPLACEME

				<u>240V</u>
Power Unit				0675-009
)675-009D
Heater Kit, Air	2000W	0811-268	0811-269	0811-270
	1000W	0811-074	0811-074-02	0811-074-1
Heater Kit, Water	1850W	0811-271		0811-271
High Limit		0848-060	0848-060	0848-060
Thermometer	Analog	5238-030	5238-030	5238-030
	Digital	5238-034	5238-034	5238-034
Transformer (used with digital thermometer)		0769-159	0769-159	0769-159
Thermostat, Air	Solid State	0848-008-ACK	0848-008-ACK	0848-008-ACK
Thermostat, Water	Solid State	0848-008-ACK	0848-008-ACK	0848-008-ACK
Relay		0857-130	0857-102	0857-102
Power Cord	2000W	0810-065-12	0810-039-07	0810-039-07
Power Switch		0808-116	0808-116	0808-116
Power Light		0766-094	0766-095	0766-095
Vent Fan		0769-165	0769-174	0769-174
Blower Kit		0769-180-K	0769-182-K	0769-182-K
Door, Complete (Stainless Steel)	UA12/UA	5/1834/1816	1221-525	
	UA5/185		1221-545	
Door, Gasket (Stainless Steel)	UA9	UA9		
	UA12/UA	UA12/UA6/1834/1816		
	UA5/185	UA5/185		
	UA9		0861-182	
Door Hinge (Stainless Steel)			0519-074-K	
Door Latch	All Models	S	1006-122-01	-K



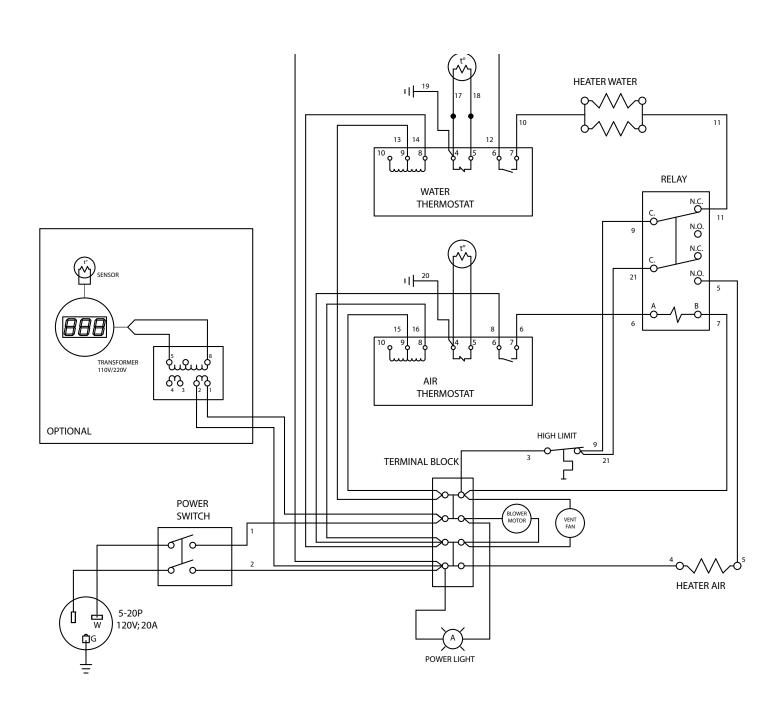

Insulated Hot Cabinets

Rev. 15 (6/08



