

**RE SERIES MARINE E<sup>4</sup>  
ELECTRIC FRYERS**  
**Installation, Operation, Service and Parts Manual**



**FPRE 17 kW & 22 kW**

 **Frymaster**<sup>®</sup>



Frymaster, a member of the Commercial Food Equipment Service Association, recommends using CFESA Certified Technicians.

**24-Hour Service Hotline 1-800-551-8633**

**OCTOBER 2013**

[www.frymaster.com](http://www.frymaster.com)

Email: [service@frymaster.com](mailto:service@frymaster.com)



**NOTICE**

IF, DURING THE WARRANTY PERIOD, THE CUSTOMER USES A PART FOR THIS MANITOWOC FOOD SERVICE EQUIPMENT OTHER THAN AN **UNMODIFIED** NEW OR RECYCLED PART PURCHASED DIRECTLY FROM FRYMASTER DEAN, OR ANY OF ITS AUTHORIZED SERVICERS, AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, FRYMASTER DEAN AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS, DAMAGES OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICER.

** DANGER**

Copper wire suitable for at least 167°F (75°C) must be used for power connections.

** DANGER**

The electrical power supply for this appliance must be the same as indicated on the rating and serial number plate located on the inside of the fryer door.

** DANGER**

This appliance must be connected to the voltage and phase as specified on the rating and serial number plate located on the inside of the fryer door.

** DANGER**

All wiring connections for this appliance must be made in accordance with the wiring diagrams furnished with the equipment. Wiring diagrams are located on the inside of the fryer door.

** DANGER**

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

**NOTICE**

Drawings and photos used in this manual are intended to illustrate operational, cleaning and technical procedures. They may differ slightly in appearance or placement between fryers but functionality should remain the same. They may not conform to onsite management operational procedures.

** WARNING**

Frymaster fryers equipped with legs are for permanent installations. Fryers fitted with legs must be lifted during movement to avoid damage and possible bodily injury. For a moveable or portable installation, Frymaster optional equipment casters must be used. Questions? Call 1-800-551-8633 or email: [service@frymaster.com](mailto:service@frymaster.com)

** DANGER**

The front ledge of the fryer is not a step. Do not stand on the fryer. Serious injury can result from slips or contact with the hot oil.

** WARNING**

This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.

**NOTICE**

This appliance is intended for professional use only and is to be operated by qualified personnel only. A Frymaster DEAN Factory Authorized Servicer (FAS) or other qualified professional should perform installation, maintenance, and repairs. Installation, maintenance, or repairs by unqualified personnel may void the manufacturer's warranty.

**NOTICE**

This equipment must be installed in accordance with the appropriate national and local codes of the country and/or region in which the appliance is installed.

**NOTICE TO U.S. CUSTOMERS**

This equipment is to be installed in compliance with the basic plumbing code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the U.S. Food and Drug Administration.

** WARNING**

No structural material on the fryer should be altered or removed to accommodate placement of the fryer under a hood. Questions? Call the Frymaster Dean Service Hotline at 1-800-551-8633.

**NOTICE TO OWNERS OF UNITS EQUIPPED WITH COMPUTERS**

**U.S.**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. While this device is a verified Class A device, it has been shown to meet the Class B limits.

**CANADA**

This digital apparatus does not exceed the Class A or B limits for radio noise emissions as set out by the ICES-003 standard of the Canadian Department of Communications.

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites de classe A et B prescrites dans la norme NMB-003 édictée par le Ministre des Communications du Canada.

** DANGER**

Improper installation, adjustment, maintenance or service, and unauthorized alterations or modifications can cause property damage, injury, or death. Read the installation, operating, and service instructions thoroughly before installing or servicing this equipment.

** DANGER**

The crumb tray in fryers equipped with a filter system must be emptied into a fireproof container at the end of frying operations each day. Some food particles can spontaneously combust if left soaking in certain shortening material.

** WARNING**

Do not bang fry baskets or other utensils on the fryer's joiner strip. The strip is present to seal the joint between the frypots. Banging fry baskets on the strip to dislodge shortening will distort the strip, adversely affecting its fit. It is designed for a tight fit and should only be removed for cleaning.

** WARNING**

Never spray the fryer with water or use water jets to clean the fryer.



**RE Series Marine Electric Fryers  
Installation, Operation, Service and Parts Manual**

**TABLE OF CONTENTS**

**CHAPTER 1: Introduction**

1.1 General ..... 1-1  
1.2 Safety Information..... 1-1  
1.3 Controller Information ..... 1-2  
1.4 Shipping Damage Claim Procedure ..... 1-2  
1.5 Service Information ..... 1-2

**CHAPTER 2: Installation Instructions**

2.1 Introduction ..... 2-1  
2.2 Power Requirements..... 2-2  
2.3 Installation ..... 2-3  
2.4 After the Fryers are Anchored at the Frying Station ..... 2-3  
2.5 Dimensions and Weights..... 2-4

**CHAPTER 3: Operating Instructions**

3.1 Equipment Setup and Shutdown Procedures..... 3-1  
3.2 Operation of the Solid-State Digital Controller ..... 3-2

**CHAPTER 4: Filtration Instructions**

4.1 Introduction ..... 4-1  
4.2 Preparing the Filter for Use ..... 4-1  
4.3 Operation of the Filter ..... 4-3  
4.4 Draining and Disposing of Waste Oil ..... 4-5

**CHAPTER 5: Preventive Maintenance**

5.1 Cleaning the Fryer ..... 5-1  
5.1.1 Clean Inside and Outside of the Fryer Cabinet ..... 5-1  
5.1.2 Clean the Built in Filtration System ..... 5-1  
5.1.3 Clean the Frypot and Heating Elements (Boil-Out)..... 5-2  
5.1.4 Clean Detachable Parts and Accessories ..... 5-3  
5.2 Annual/Periodic System Inspection ..... 5-3

## **CHAPTER 6: Operator Troubleshooting**

|       |                                    |     |
|-------|------------------------------------|-----|
| 6.1   | Introduction .....                 | 6-1 |
| 6.2   | Troubleshooting.....               | 6-2 |
| 6.2.1 | Control and Heating Problems ..... | 6-2 |
| 6.2.2 | Filtration Problems .....          | 6-4 |

## **CHAPTER 7: Service Procedures**

|       |  |      |
|-------|--|------|
| 7.1   | General .....  | 7-1  |
| 7.2   | Replacing a Remote Digital Controller .....                          | 7-1  |
| 7.3   | Replacing Component Box Components .....                             | 7-1  |
| 7.4   | Replacing a High-Limit Thermostat.....                               | 7-2  |
| 7.5   | Replacing a Temperature Probe .....                                  | 7-3  |
| 7.6   | Replacing a Heating Element .....                                    | 7-4  |
| 7.7   | Replacing Contactor Box Components .....                             | 7-6  |
| 7.8   | Replacing a Frypot .....   | 7-7  |
| 7.9   | Built in Filtration System Service Procedures .....                  | 7-9  |
| 7.9.1 | Filtration System Problem Resolution .....                           | 7-9  |
| 7.9.2 | Replacing the Filter Motor, Filter Pump and Related Components ..... | 7-10 |
| 7.9.3 | Replacing the Filter Transformer or Filter Relay .....               | 7-11 |
| 7.10  | Interface Board Diagnostic Chart.....                                | 7-12 |
| 7.11  | Probe Resistance Chart.....  | 7-13 |
| 7.12  | Wiring Diagram, Simplified RE17/22 Delta .....                       | 7-14 |
| 7.13  | Wiring Diagram, System.....  | 7-15 |
| 7.14  | Wiring Diagram, System RCCL .....                                    | 7-16 |
| 7.15  | Wiring Diagram, Contactor Box 14kW .....                             | 7-17 |
| 7.16  | Wiring Diagram, Contactor Box 22kW .....                             | 7-18 |
| 7.17  | Wiring Diagram, Wiring Harnesses .....                               | 7-19 |
| 7.18  | Wiring Diagram, Remote Cable.....                                    | 7-20 |
| 7.19  | Wiring Diagram, Basket Lift.....                                     | 7-21 |

## **CHAPTER 8: Parts List**

|         |  |      |
|---------|--|------|
| 8.1     | Accessories .....  | 8-1  |
| 8.2     | Cabinetry .....  | 8-2  |
| 8.2.1   | Backs, Panels, Doors, Handles, Sides, Tilt Housings & Topcaps..... | 8-2  |
| 8.2.2   | Cabinet Bases, Braces and Associated Parts .....                   | 8-4  |
| 8.2.2.1 | FPRE117/122 Single .....   | 8-4  |
| 8.2.2.2 | FPRE217/222 Double.....  | 8-6  |
| 8.3     | Drain System Components.....                                       | 8-8  |
| 8.3.1   | FPRE217/222 Euro-Look Drain Tube Sections and Parts .....          | 8-8  |
| 8.3.2   | Drain Valve Assembly and Component Parts.....                      | 8-9  |
| 8.3.2.1 | FPRE117/122 Single Drain Valve Assembly .....                      | 8-9  |
| 8.3.2.2 | FPRE217/222 Euro-Look Drain Valve Assembly .....                   | 8-10 |
| 8.4     | Electronics and Wiring Components.....                             | 8-11 |
| 8.4.1   | Component Boxes .....  | 8-11 |
| 8.4.2   | Contactor Boxes .....  | 8-12 |
| 8.4.3   | Terminal Blocks .....  | 8-14 |

|         |   |      |
|---------|---|------|
| 8.4.4   | Heating Element Assembly and Associated Parts.....            | 8-15 |
| 8.4.5   | Remote Digital Controller .....                               | 8-17 |
| 8.4.6   | Wiring Assemblies and Harnesses .....                         | 8-17 |
| 8.4.6.1 | Contactor Box Wiring Assembly 12-Pin.....                     | 8-17 |
| 8.4.6.2 | Contactor Box Wiring Assembly 6-Pin Left Element.....         | 8-17 |
| 8.4.6.3 | Contactor Box Wiring Assembly 9-Pin Right Element .....       | 8-18 |
| 8.4.6.4 | Main Wiring Harness .....                                     | 8-18 |
| 8.4.6.5 | Component Box Wiring Harness .....                            | 8-18 |
| 8.5     | Filtration System Components .....                            | 8-19 |
| 8.5.1   | FPRE117/122 Single Filtration Components .....                | 8-19 |
| 8.5.2   | FPRE217/222 Filtration Components .....                       | 8-21 |
| 8.6     | Frypot Assembly and Thermostat .....                          | 8-23 |
| 8.7     | FPRE217/222 Oil Return System Components .....                | 8-23 |
| 8.8     | Oil Disposal Plumbing .....                                   | 8-25 |
| 8.9     | Wiring Connectors, Pin Terminals, Seals and Power Cords ..... | 8-26 |
| 8.10    | Fasteners.....  | 8-28 |

# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 1: INTRODUCTION

---

### 1.1 General

Read the instructions in this manual thoroughly before attempting to operate this equipment. This manual covers all configurations of RE Series Electric Fryer models specifically configured for use aboard surface ships, including FPRE117/122 kW and FPRE217/222 kW models. The fryers in this model family have most parts in common, and when discussed as a group, will be referred to as “RE Series Marine Electric” fryers.

The RE Series Marine Electric fryers feature a built-in filtration system and also include features such as deep cold-zones and open frypots with rotating elements. These fryers are equipped with remote mounted solid-state digital controllers. Fryers in this series can be single units or grouped in batteries of two or more fryers.


### 1.2 Safety Information


Before attempting to operate your unit, read the instructions in this manual thoroughly.


Throughout this manual, you will find notations enclosed in double-bordered boxes similar to the one below.

 **DANGER**

**Hot cooking oil causes severe burns. Never attempt to move a fryer containing hot oil or to transfer hot oil from one container to another.**

 **CAUTION** boxes contain information about actions or conditions that *may cause or result in a malfunction of your system.*

 **WARNING** boxes contain information about actions or conditions that *may cause or result in damage to your system,* and which may cause your system to malfunction.

 **DANGER** boxes contain information about actions or conditions that *may cause or result in injury to personnel,* and which may cause damage to your system and/or cause your system to malfunction.

**Fryers in this series are equipped with the following automatic safety features:**

1. Two high-temperature detection features one of which sounds an alarm and the other shuts off power to the elements should the temperature control fail and the temperature continue to rise.
2. A safety switch built into the drain valve, which prevents the elements from heating with the drain valve even partially open.
3. A magnetic tilt switch that shuts off the elements when lifted for frypot cleaning.

### 1.3 Controller Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. While this device is a verified Class A device, it has been shown to meet the Class B limits. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

### 1.4 Shipping Damage Claim Procedure

#### ***What to do if this equipment arrives damaged:***

Please note that this equipment was carefully inspected and packed by skilled personnel before leaving the factory. The freight company assumes full responsibility for safe delivery upon acceptance of the equipment.

1. File Claim for Damages Immediately—Regardless of extent of damage.
2. Visible Loss or Damage—Be sure this is noted on the freight bill or express receipt and is signed by the person making the delivery.
3. Concealed Loss or Damage—If damage is unnoticed until equipment is unpacked, notify the freight company or carrier immediately and file a concealed damage claim. This should be done within 15 days of date of delivery. Be sure to retain container for inspection.

### 1.5 Service Information

For non-routine maintenance or repairs, or for service information, contact your local Frymaster Authorized Servicer (FAS). A list of Frymaster Factory Authorized Servicers (FAS's) is located on the Frymaster website at [www.frymaster.com](http://www.frymaster.com). Service information may also be obtained by calling the Frymaster Technical Services Department at 1-800-551-8633 or via e-mail at [service@frymaster.com](mailto:service@frymaster.com). The following information will be needed in order to assist you efficiently:

**Model Number:** \_\_\_\_\_  
**Serial Number:** \_\_\_\_\_  
**Voltage:** \_\_\_\_\_

Also be prepared to describe the specific problem.

**RETAIN AND STORE THIS MANUAL IN A SAFE PLACE FOR FUTURE USE.**



# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 2: INSTALLATION INSTRUCTIONS

---

### 2.1 Introduction

The instructions in this chapter cover all configurations of RE Series Marine Electric Fryer models specifically configured for use aboard surface ships, including FPRE117/122 kW and FPRE217/222 kW models. The instructions do not cover and may not be used for installations ashore.

**Proper installation is essential for the safe, efficient, trouble-free operation of this appliance. Any unauthorized alteration of this equipment will void the Frymaster warranty.**

#### NOTICE

All fryers shipped without factory supplied cords and plug assemblies must be hardwired using flexible conduit to the terminal block located on the rear of the fryer. These fryers should be wired to NEC specifications. Hardwired units must include installation of restraint devices.

#### DANGER

Adequate means must be provided to limit the movement of this appliance without depending on or transmitting stress to the electrical conduit.

#### NOTICE

If this equipment is wired directly into the electrical power supply, a means for disconnection from the supply having a contact separation of at least 3-mm in all poles must be incorporated in the fixed wiring.

#### NOTICE

This equipment must be positioned so that the plug is accessible unless other means for disconnection from the power supply (e.g., a circuit breaker) is provided.

#### NOTICE

If this appliance is permanently connected to fixed wiring, it must be connected by means of copper wires having a temperature rating of not less than 167°F (75°C).

#### NOTICE

If the electrical power supply cord is damaged, it must be replaced by a Frymaster Dean Factory Authorized Servicer technician or a similarly qualified person in order to avoid a hazard.

#### DANGER

This appliance must be connected to a power supply having the same voltage and phase as specified on the rating plate located on the inside of the appliance door.

**⚠ DANGER**

All wiring connections for this appliance must be made in accordance with the wiring diagram(s) furnished with the appliance. Refer to the wiring diagram(s) affixed to the inside of the appliance door when installing or servicing this equipment.

**⚠ DANGER**

The appliance area must be kept free and clear of combustible material at all times.

**⚠ WARNING**

**Do not block the area around the base or under the fryers.**

All installation and service on FRYMASTER equipment must be performed by qualified, certified, licensed, and/or authorized installation or service personnel.

Service may be obtained by contacting a local Frymaster DEAN Factory Authorized Servicer.

In the event of a power failure, the fryer(s) will automatically shut down. If this occurs, turn the power switch OFF. Do not attempt to start the fryer(s) until power is restored.

A clearance of 6 inches (15cm) must be provided at both sides and back adjacent to combustible construction. A minimum of 24 inches (61cm) should be provided at the front of the equipment for servicing and proper operation.

Connections should be made by means of an approved, flexible-metallic or rubber-covered electrical cable and quick-disconnect plug. The fryers may be installed with “hard-wired” connections, but use of quick-disconnect plugs will facilitate service if required. Connections are made to the fryer power input terminal block located in the lower back of the fryer(s).

## 2.2 Power Requirements

| Use copper wire ONLY, suitable for at least 167°F (75°C) |         |       |              |                   |        |                |
|--|---------|-------|--------------|-------------------|--------|----------------|
| MODEL  | VOLTAGE | PHASE | WIRE SERVICE | MINIMUM WIRE SIZE |        | AMPS (per leg) |
|  |         |       |              | AWG               | mm     |                |
| FPRE117  | 440     | 3     | 3            | 6                 | (4.11) | 23             |
| FPRE117  | 480     | 3     | 3            | 6                 | (4.11) | 21             |
| FPRE122  | 440     | 3     | 3            | 6                 | (4.11) | 29             |
| FPRE122  | 480     | 3     | 3            | 6                 | (4.11) | 27             |
| FPRE217 (Per Vat)  | 440     | 3     | 3            | 6                 | (4.11) | 23             |
| FPRE217 (Per Vat)  | 480     | 3     | 3            | 6                 | (4.11) | 21             |
| FPRE222 (Per Vat)  | 440     | 3     | 3            | 6                 | (4.11) | 29             |
| FPRE222 (Per Vat)  | 480     | 3     | 3            | 6                 | (4.11) | 27             |

RE Series Marine electric fryers are equipped with a filter system that requires a separate 120VAC or 220VAC depending on configuration, single-phase, 3-wire, 20 amp service (refer to wiring diagram on page 7-15).

**NOTICE**

**If this appliance is permanently connected to fixed wiring, it must be connected by means of copper wires having a temperature rating of not less than 167°F (75°C).**

**⚠ DANGER**

**This appliance must be connected to a power supply having the same voltage and phase as specified on the rating plate located on the inside of the appliance door.**

**⚠ DANGER**

**All wiring connections for this appliance must be made in accordance with the wiring diagram(s) furnished with the appliance. Refer to the wiring diagram(s) affixed to the inside of the appliance door when installing or servicing this equipment.**

## 2.3 Installation

Shipboard installations are often unique, however, here's a list of do's and don'ts to avoid trouble:

**Do** ensure the fryer is adequately attached to the deck.

**Do** ensure the fryer is mounted well away from appliances, which are sprayed with water.

**Do** mount the remote controller within easy reach of the operator and away from the heat and vapors of the fryer vat and other cooking equipment.

**Do** remove the 15-pin plug from the controller cable with a pin pusher before routing it to the fryer and carefully reattach, using the provided diagram in section 7.15.

**Don't** mount the remote controller on the fryer's flue cap or on the bulkhead above the fryer vat.

**Don't** cut and splice the remote controller's cable to facilitate routing it to the fryer.



**DO** use a pin pusher to remove the 15-pin plug on the controller cable for routing.



**DO NOT** mount the controller on the fryer's flue cap or on the bulkhead above the fryer's vat.

**⚠ DANGER**

**No structural material on the fryer should be altered or removed to accommodate placement of the fryer under a hood. Questions? Call the Frymaster Dean Service Department at 1-800-551-8633 or via e-mail at [service@frymaster.com](mailto:service@frymaster.com)**

**⚠ DANGER**

**Hot oil can cause severe burns. Avoid contact. Under all circumstances, oil must be removed from the fryer before attempting to move it to avoid oil spills, falls and severe burns. This fryer may tip and cause personal injury if not secured in a stationary position.**


## 2.4 After Fryers Are Anchored At the Frying Station

1. Close frypot drain-valve(s) and fill frypot(s) with water to the bottom oil level line.
2. Boil out frypot(s) in accordance with the instructions in Section 5.1.3 of this manual.
3. Drain, clean, and fill frypot(s) with cooking oil. (See *Equipment Setup and Shutdown Procedures* in Chapter 3.)


## 2.5 Dimensions and Weights

Single Fryer (with filter): LWH (inches) 28.33 X 15.58 X 45.5 – 295 lbs. empty.

2-Fryer Battery: LWH (inches) 28.30 X 31.45 X 45.5 – 490 lbs. empty.

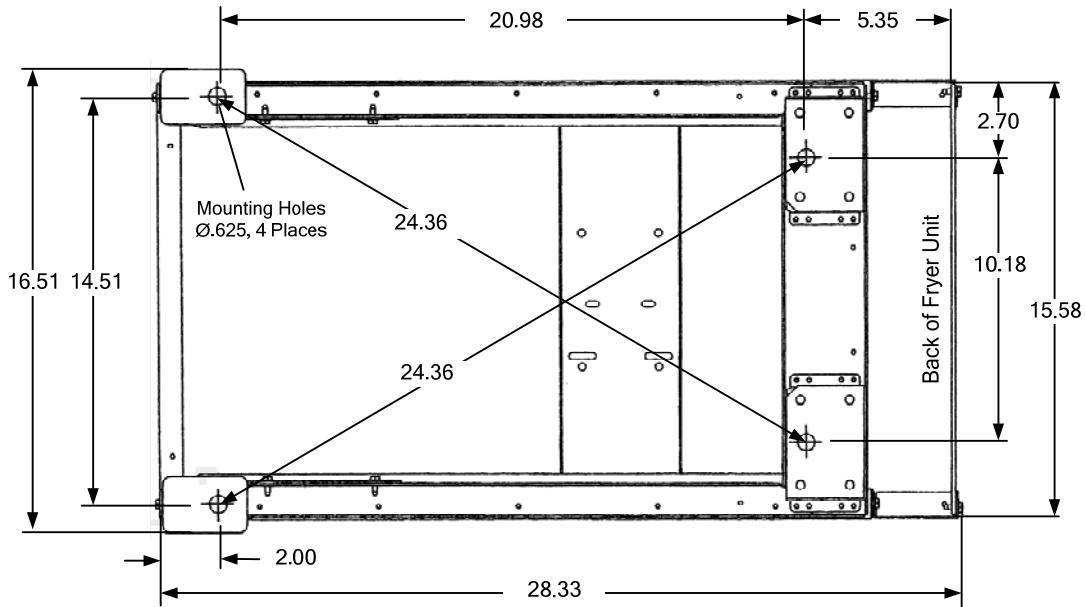

**Single Fryer (with filter)**

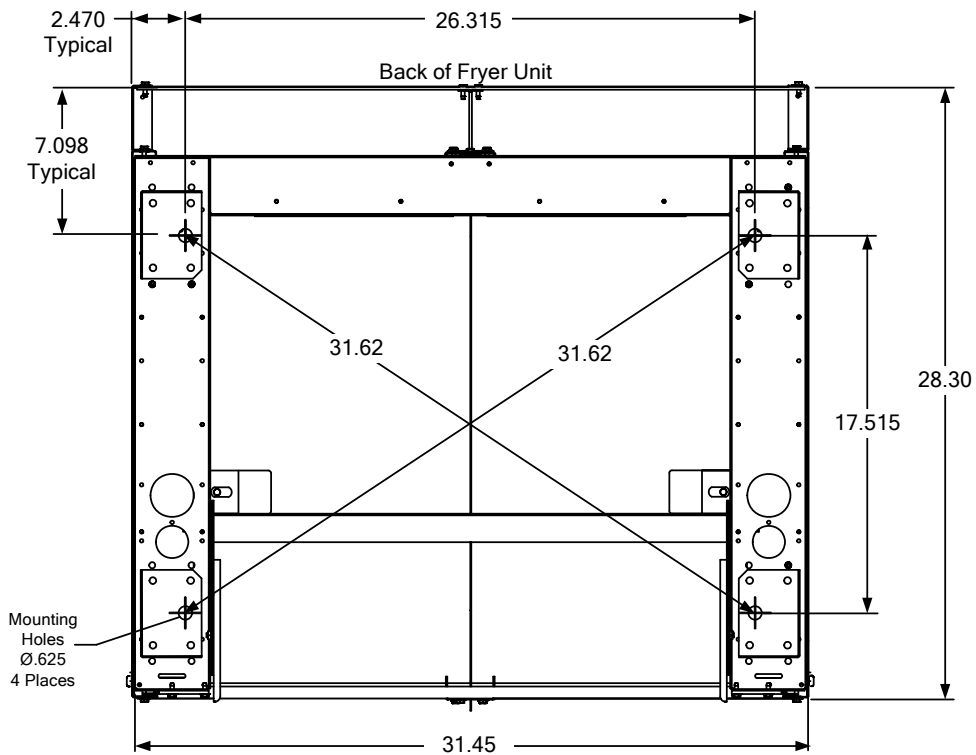

**2-Fryer Battery**

# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 3: OPERATING INSTRUCTIONS

---

### 3.1 Equipment Setup and Shutdown Procedures

#### Setup

**⚠ DANGER**

Never operate the appliance with an empty frypot. The frypot must be filled with water, oil or shortening before energizing the elements. Failure to do so will result in irreparable damage to the elements and may cause a fire.

**⚠ DANGER**

Remove all drops of water from the frypot before filling with oil or shortening. Failure to do so will cause spattering of hot liquid when the oil or shortening is heated to cooking temperature.

1. Fill the frypot with oil to the bottom OIL LEVEL line located on the rear of the frypot. This will allow for oil expansion as heat is applied. Do not fill cold oil any higher than the bottom line; overflow may occur as heat expands the oil.

**NOTE:** If solid shortening is used, first raise the elements, then pack the shortening into the bottom of the frypot. Lower the elements, and then pack the shortening around and over the elements to the lower mark. It may be necessary to add shortening to bring the level up to the upper mark after the packed shortening has melted. Cooking oil/shortening capacity of RE17/22 series fryer is 50 lbs. (25 liters) at 70°F (21°C).

**⚠ DANGER**

Never set a complete block of solid shortening on top of the heating elements.

When using solid shortening, always pre-melt the shortening before adding it to the frypot. If the shortening is not pre-melted, it must be packed down into the bottom of the frypot and between the elements, and the fryer must be started in the melt-cycle mode.

Never cancel the melt-cycle mode when using solid shortening. Doing so will result in damage to the elements and increase the potential for a flash fire.

2. Replace the basket support rack on top of the heating elements.
3. If the fryer is not hard-wired into the power supply, ensure that the power cord is plugged into the appropriate receptacle. Verify that the face of the plug is flush with the outlet plate, with no portion of the prongs visible.

4. Ensure that the oil level is at the *top* OIL LEVEL line when the oil *is at its cooking temperature*. It may be necessary to add oil to bring the level up to the upper mark, *after it has reached cooking temperature*.


**Shutdown**

1. Turn the fryer off.
2. Filter the oil and clean the fryers (See Chapters 4 and 5).

**3.2 Operation of the Solid-State Digital Controller (operation of other controllers is covered in the Frymaster Controllers Manual PN 819-5616)**

**NOTE:** Refer to Chapter 4 of this manual for operating instructions for the built-in filtration system.

Fryers configured for marine use are equipped with remotely mounted solid-state digital controllers.

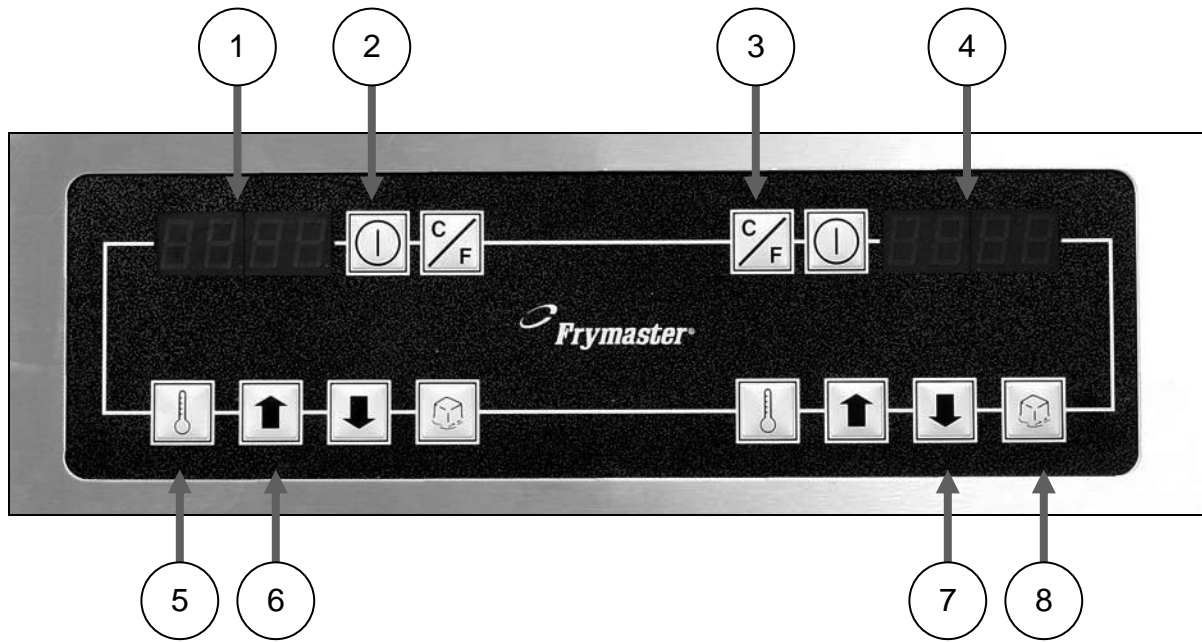

**Marine Solid-State Digital Controller**


| ITEM | DESCRIPTION  |
|------|--|
| 1    | Lighted Display – LED display for a full-pot fryer. Displays setpoint temperature.   |
| 2    | On/Off Switch – Switches the power On or Off.  |
| 3    | C/F Switch – Toggles the display between Fahrenheit and Celsius  |
| 4    | Lighted Display- LED Display – Displays current frypot temperature and heat mode light (decimal) will alternately illuminate as the elements cycle on and off. |
| 5    | Temperature / Setpoint Display Switch –Toggles the display between frypot temperature and setpoint temperature.  |
| 6    | Up Arrow – Raises setpoint temperature.  |
| 7    | Down Arrow – Lowers the setpoint temperature.  |
| 8    | Melt-Cycle Cancel Switch – Cancels the melt-cycle mode.  |

The digital controller, illustrated above, is used to maintain oil at the temperature indicated by the controller.

The fryer has two built-in high-limit protection features. If the temperature in the frypot reaches 411°F (210°C), an alarm will sound. In the event that the temperature continues to rise, there is a second and separate high limit circuit that will shut down the system at 425° (218°C), sound an alarm and display “help”.

A shunt trip device is integrated into the marine specifications. The shunt trip is a contact, which is closed by a coil in the fryer’s 24-volt safety circuit. Leads from the shunt trip extend from the fryer and can be wired to a specialized shipboard circuit breaker. Voltage from the ship passes through the closed shunt trip on the fryer, keeping the ship’s circuit breaker closed. If the fryer’s safety circuit opens due to the high-limit opening or the opening of a drain valve while the fryer is on, the shunt-trip circuit on the fryer opens, which opens the ship’s circuit breaker, killing power to the fryer.

**The digital controller has no timing features, so the operator must monitor cooking.**

 **WARNING**  
**Before pressing the power switch to the ON position, ensure that the frypot is properly filled with oil. See Section 3.1.**

## **CONTROLLER OPERATING PROCEDURE**

1. Turn the power switch ON.
2. Verify that the control is set to the desired cooking temperature.
3. Press the power switch to the ON position. The POWER light will illuminate.
4. If the frypot temperature is below 180°F (82°C), the controller will automatically enter a warm-up cycle (often called a melt cycle). The heating elements will cycle on and off repeatedly, allowing the oil to heat gradually, without scorching. During the warm-up cycle, the heating mode light (decimal point) will alternately illuminate and go off as the elements cycle on and off. When the frypot temperature reaches 180°F (82°C), the controller will exit the warm-up cycle and the heating mode light will remain continuously illuminated.
5. When the oil temperature reaches the setpoint, the elements will cycle OFF and the HEAT light will go off, indicating that the fryer is ready for the cooking process to begin.

## **INTRODUCTION**

The Digital Controller allows the operator to program the frypot setpoint and to toggle the display between the frypot temperature and the programmed setpoint. The setpoint is an operator-determined frying temperature. When the controller is turned on, it automatically brings the cooking oil to the setpoint and maintains it at that temperature until the controller is turned off. Units display the setpoint by default. This controller also features a programmable melt-cycle cancel switch and a switch for toggling the temperature display between Fahrenheit and Celsius as well as toggling between the setpoint and the actual temperature.

The controller has three error display messages:


**HELP**, indicating a heating problem or drain valve problem. Turn the fryer off reset the drain handle and try again. If the error still appears, call the Frymaster hotline.


**HOT** and actual frypot temperature, indicating that the shortening temperature is above 411°F (210°C). If this display is seen, turn the fryer off immediately and contact an authorized service center.

**Pr ob**, indicating that the controller has detected a problem in the temperature measuring circuits and control circuits. Turn the fryer off and contact an authorized service center.



**NOTE:** This controller is configured for the fryer on which it installed (i.e., gas or electric and full- or split-pot). Although identical in appearance, controllers configured for use on one type of fryer are not interchangeable with those configured for use on another type.

## **CONTROLLER OPERATING INSTRUCTIONS**

1. Turn the controller on by pressing the ON/OFF switch .

 
The controller software version number will display for four seconds then, *in non-CE units*, the setpoint temperature will appear in the display. *In CE units*, the frypot temperature will appear in the display – to view the setpoint temperature, press the temperature switch  for the frypot in question.

A decimal point will appear between the first two numbers of the display, indicating that the unit is heating. When the frypot has reached the setpoint temperature, the heat indicator decimal point will go out, indicating that the fryer is ready for cooking.

2. Adjust the setpoint if necessary. To raise the setpoint temperature, press an up arrow . Press a down arrow  to lower the setpoint temperature.

The display will change at the rate of approximately one-degree per second initially. If the arrow is pressed and held, after a change of about 12°, the rate of change will increase, allowing large changes in setpoint temperature to be made quickly.

## **SELECTING FAHRENHEIT OR CELSIUS DISPLAY MODE**

To toggle the temperature display between Fahrenheit and Celsius, press the right C/F switch . The display(s) will change from xxx°F to xxx°C, where “xxx” is the frypot or setpoint temperature.

## **CANCELING THE MELT-CYCLE**


### **DANGER**

**Do not cancel the melt-cycle mode if using solid shortening!**

The melt-cycle is designed to prevent scorching shortening and overheating the frypot or elements while gradually melting blocks of shortening. The controller automatically starts the fryer in the




melt-cycle mode and remains in this mode until the frypot temperature reaches 180°F (82°C) or the melt-cycle is cancelled by the operator. If you are not using solid shortening, you may cancel the melt-cycle.

To cancel the melt-cycle on a full-pot unit, press the right melt-cycle cancel switch . On a split-pot unit, press the left switch for the left frypot or the right switch for the right frypot.

## **DISABLING OR ENABLING THE MELT-CYCLE CANCEL SWITCH**

The controller can be programmed to disable the melt-cycle cancel switch to prevent accidentally canceling the melt-cycle.

1. With the controller in the OFF mode, press the melt-cycle cancel switch . The display will show either "0", meaning that the melt-cycle **can** be bypassed or a "1" meaning that the melt-cycle **cannot** be bypassed.
2. To change the bypass configuration, press and hold the melt-cycle cancel switch for five to six seconds to toggle the "0" to "1" or "1" to "0". Release the switch when the display shows the desired setting.

# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 4: FILTRATION INSTRUCTIONS

### 4.1 Introduction

The FootPrint Pro filtration system allows the oil in one frypot to be safely and efficiently filtered while the other frypots in a battery remain in operation. Section 4.2 covers preparation of the filter system. Operation of the system is covered in section 4.3.



#### **⚠ WARNING**

**The work center supervisor is responsible for ensuring that operators are made aware of the inherent hazards of operating a hot oil filtering system, particularly the aspects of oil filtration, draining and cleaning procedures.**



### 4.2 Preparing the Filter for Use

1. Rotate the pan-locking rod to either side until it clears the filter pan, then pull the pan out from the cabinet. Remove the crumb tray, hold-down ring. Remove the used filter paper in the pan. Remove the filter paper support screen. Clean all components with a solution of detergent and hot water then dry thoroughly.

The filter pan on the is equipped with rollers in rails, much like a kitchen drawer. The pan may be removed for cleaning or to gain access to interior components by lifting the front of the pan to disengage the front rollers, then pulling it forward until the rear rollers clear the rails. The pan cover must not be removed except for cleaning, interior access, or to allow a shortening disposal unit (SDU) to be positioned under the drain.

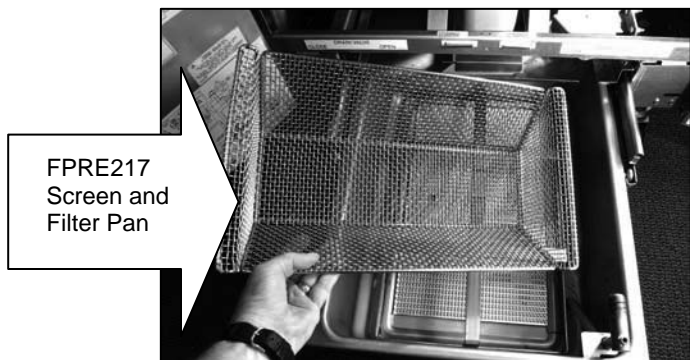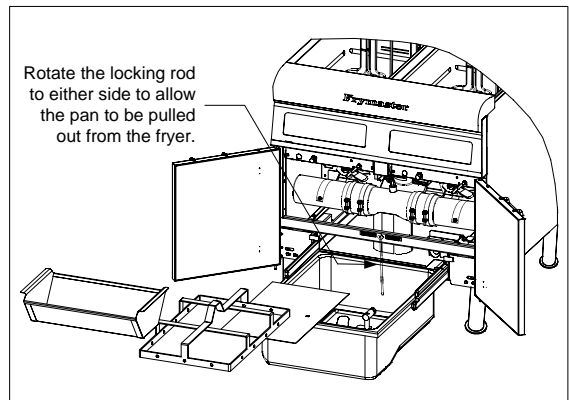

2. Inspect the filter pan connection fitting to ensure that both O-rings are in good condition. The O-rings are located on the tube disconnect inside the filter pan as shown on the drawing down and to the right.
3. Place the metal filter screen in the center of the bottom of the pan, then lay a sheet of filter paper on top of the pan, overlapping on all sides.
4. Position the hold-down ring over the filter paper and lower the ring into the pan, allowing the paper to fold up around the ring as it is lowered to the bottom of the pan.
5. When the hold-down ring is in position, sprinkle one cup of filter powder evenly over the paper.
6. Replace the crumb tray in the filter pan, and then push the filter pan back into the fryer, positioning it under the drain.

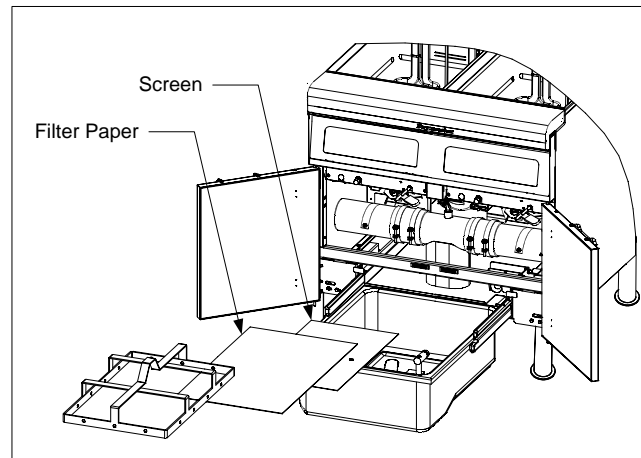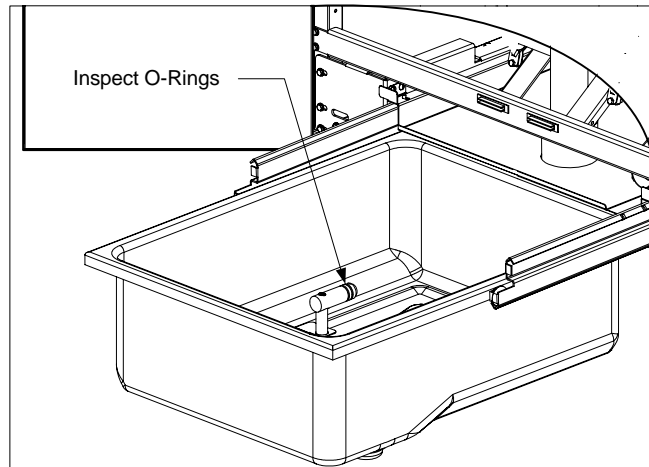

### 4.3 Operation of the Filter

**⚠ DANGER**


Draining and filtering of oil must be accomplished with care to avoid the possibility of a serious burn caused by careless handling. The oil to be filtered is at or near 350°F (177°C). Ensure drain handles are in their proper position before operating any switches or valves. Wear all appropriate safety equipment when draining and filtering oil.

**⚠ DANGER**

**NEVER attempt to drain oil from the fryer with the elements energized! Doing so will cause irreparable damage to the elements and may cause a flash fire. Doing so will also void the Frymaster warranty.**

1. Ensure that the filter is prepared. See Sec. 4.2
2. Make sure the oil is at operating temperature.

3. Turn the fryer power OFF. Drain the frypot into the filter pan. Remove the basket support rack and raise the element assembly to the up position. If necessary, use the *Fryer's Friend* clean-out rod to clear the drain from **inside** the frypot.

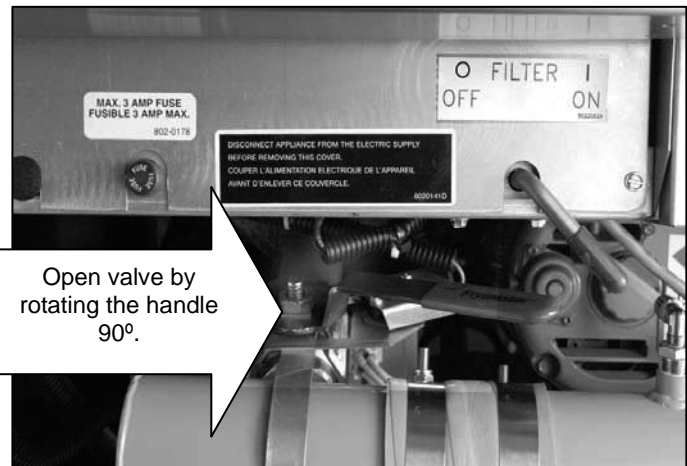


**⚠ DANGER**

Do not drain more than one frypot at a time into the built-in filtration unit to avoid overflow and spillage of hot oil.

**⚠ DANGER**

**NEVER attempt to clear a clogged drain valve from the front of the valve! Hot oil will rush out creating the potential for severe burns. DO NOT hammer on the drain valve with the cleanout rod or other objects. Damage to the ball inside will result in leaks and will void the Frymaster warranty.**


4. After the oil has drained from the frypot, turn the filter handle to the ON position to start the pump and begin the filtering process. Make sure the drain valve is left open. There may be a slight delay before the pump activates.

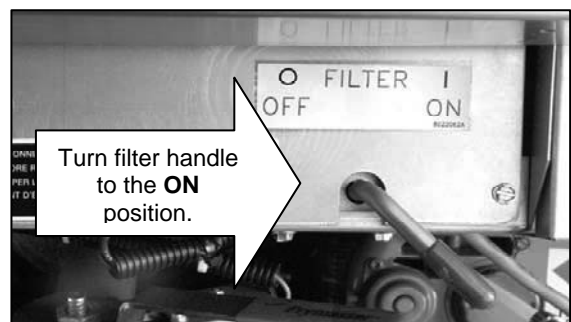

5. The filter pump draws the oil through the filter medium and circulates it through the frypot during a 5-minute process called polishing. Polishing cleans the oil by trapping solid particles in the filter medium.
6. After 5 minutes, close the drain valve and allow the fryer to refill. Let the filter pump run 10 to 12 seconds after the oil begins to bubble. Turn the filter off.

**⚠ WARNING**

**The filter pump is equipped with a manual reset switch (see photo below) in case the filter motor overheats or an electrical fault occurs. If this switch trips, turn OFF power to the filter system and allow the pump motor to cool 20 minutes before attempting to reset the switch.**

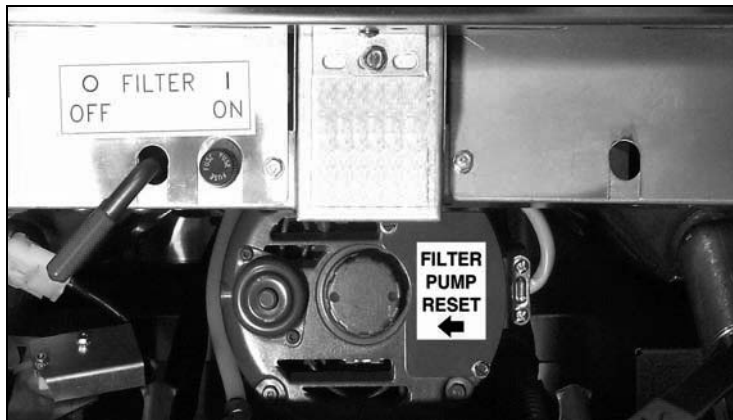

7. Lower the elements into the frypot and reinstall the basket support rack. Ensure the drain valve is fully closed. (If the drain valve is not fully closed, the fryer will not operate.) Turn the fryer ON and allow the oil to reach setpoint.

**⚠ DANGER**

**The crumb tray must be emptied into a fireproof container at the end of frying operations each day. Some food particles can spontaneously combust if left soaking in certain shortening.**

**⚠ WARNING**

**Do not bang fry baskets or other utensils on the fryer's joiner strip. The strip is present to seal the joint between the fry vessels. Banging fry baskets on the strip to dislodge shortening will distort the strip, adversely affecting its fit. It is designed for a tight fit and should only be removed for cleaning.**

#### 4.4 Draining and Disposing of Waste Oil

When your oil has reached the end of its usable life, drain the oil into an appropriate container for transport to the disposal container. Frymaster recommends the use of the Frymaster Shortening Disposal Unit (SDU). Refer to the documentation furnished with the disposal unit for specific operating instructions. If a shortening disposal unit is not available, allow the oil to cool to 100°F (38°C), and then drain the oil into a metal stockpot or similar metal container. When draining is finished, close the fryer drain valve securely.

 **DANGER**

**Allow oil to cool to 100°F (38°C) before draining into an appropriate container for disposal. When draining oil into a disposal unit, do not fill above the maximum fill line located on the container.**

# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 5: PREVENTIVE MAINTENANCE

---

### 5.1 Cleaning the Fryer

 **DANGER**

The crumb tray in fryers equipped with a filter system must be emptied into a fireproof container at the end of frying operations each day. Some food particles can spontaneously combust if left soaking in certain shortening material.

 **DANGER**

Never attempt to clean the fryer during the frying process or when the frypot is filled with hot oil. If water comes in contact with oil heated to frying temperature, it will cause spattering of the oil, which can result in severe burns to nearby personnel.

 **WARNING**

Use a commercial-grade cleaner formulated to effectively clean and sanitize food-contact surfaces. Read the directions for use and precautionary statements before use. Particular attention must be paid to the concentration of cleaner and the length of time the cleaner remains on the food-contact surfaces.

#### 5.1.1 Clean Inside and Outside of the Fryer Cabinet – Daily

Clean inside the fryer cabinet with a dry, clean cloth. Wipe all accessible metal surfaces and components to remove accumulated oil and dust.

DO NOT spray the fryer cabinet with water.

Clean outside the fryer cabinet, with a clean, damp cloth soaked with dishwashing detergent. Wipe with a clean, damp cloth.

#### 5.1.2 Clean the Built-in Filtration System – Daily

 **WARNING**

**Never drain water into the filter pan. Water will damage the filter pump.**

There are no periodic preventive maintenance checks and services required for the FootPrint Pro Filtration System other than daily cleaning of the filter pan and associated components with a solution of hot water and detergent.

 **WARNING**

**Never spray the fryer with water or use water jets to clean this equipment.**

### 5.1.3 Clean the Frypot and Heating Elements – Weekly

**⚠ DANGER**

**Never operate the appliance with an empty frypot. The frypot must be filled with water or oil/shortening before energizing the elements. Failure to do so will result in irreparable damage to the elements and may cause a fire.**

#### **Boiling Out the Frypot using Digital Controllers (For other controllers see the Frymaster Controller Manual PN 819-5916.)**

Before the fryer is first used, it should be boiled out to ensure that residue from the manufacturing process has been eliminated. Also, after the fryer has been in use for a period of time, a hard film of caramelized vegetable oil will form on the inside of the frypot. This film should be periodically removed by following the boil-out procedure that follows.

1. Before switching the fryer(s) ON, close the frypot drain valve(s), then fill the empty frypot with a mixture of cold water and low-sudsing dishwashing detergent (or a commercially available boil-out solution). Follow instructions on the container when mixing.
2. Press the fryer ON/OFF switch to the ON position.
3. Set the temperature to 190°F (88°C).
4. Simmer the solution for 45 minutes to one hour. Do not allow the water level to drop below the bottom oil-level line in the frypot during the boil-out operation.

**⚠ DANGER**

**Never leave the fryer unattended during the boil-out process. If the boil-out solution boils over, turn the fryer off immediately and let the solution cool for a few minutes before resuming the process.**

5. Turn the fryer ON/OFF switch(s) to the OFF position.
6. Add two gallons of water. Drain out the solution into a stockpot and clean the frypot(s) thoroughly.

**⚠ WARNING**

**Do not drain boil-out solution into a shortening disposal unit, a built-in filtration unit, or a portable filter unit. These units are not intended for this purpose, and will be damaged by the solution.**

7. Refill the frypot(s) with clean water. Rinse the frypot(s) twice, drain and dry with a clean towel. Thoroughly remove all water from the frypot and elements before refilling the frypot with oil.



**⚠ DANGER**

**Remove all drops of water from the frypot before filling with oil or shortening. Failure to do so will cause spattering of hot liquid when the oil or shortening is heated to cooking temperature.**

#### **5.1.4 Clean Detachable Parts and Accessories – Weekly**

Wipe all detachable parts and accessories with a clean, dry cloth. Use a clean cloth saturated with detergent to remove accumulated carbonized oil on detachable parts and accessories. Rinse the parts and accessories thoroughly with clean water and wipe dry before reinstalling.

#### **5.2 Annual/Periodic System Inspection**

**This appliance should be inspected and adjusted periodically by qualified service personnel as part of the galley material maintenance management (3M) program.**

**Frymaster recommends that a Factory Authorized Servicer inspect this appliance at least annually as follows:**

##### **Fryer**

- Inspect the cabinet inside and out, front and rear for excessive oil.
- Verify that the heating element wires are in good condition and that leads have no visible fraying or insulation damage and that they are free of oil.
- Verify that heating elements are in good condition with no carbon/caramelized oil build-up. Inspect the elements for signs of extensive dry-firing.
- Verify that the tilt mechanism is working properly when lifting and lowering elements and that the element wires are not binding and/or chafing.
- Verify the heating-element amp-draw is within the allowed range as indicated on the appliance's rating plate.
- Verify that the temperature and high-limit probes are properly connected, tightened and functioning properly, and that mounting hardware and probe guards are present and properly installed.
- Verify that component box and contactor box components (i.e. controller, relays, interface boards, transformers, contactors, etc.) are in good condition and free from oil and other debris.
- Verify that component box and contactor box wiring connections are tight and that wiring is in good condition.
- Verify that all safety features (i.e. contactor shields, drain safety switches, hood shunts, reset switches, etc.) are present and functioning properly.

- Verify that the frypot is in good condition and free of leaks and that the frypot insulation is in serviceable condition.
- Verify that all wiring harnesses and wiring connections are tight and in good condition.

### **Built-In Filtration System**

- Inspect all oil-return and drain lines for leaks and verify that all connections are tight.
- Inspect the filter pan for leaks and cleanliness. If there is a large accumulation of crumbs in the crumb basket, instruct the supervisor that the crumb basket must be emptied into a fireproof container and cleaned daily.
- Verify that all O-rings and seals (including those on quick-disconnect fittings) are present and in good condition. Replace O-rings and seals if worn or damaged.
- Check filtration system integrity as follows:
- Verify that filter pan cover is present and properly installed.
- With the filter pan empty, place each oil return handle, one at a time, in the ON position. Verify that the pump activates and that bubbles appear in the cooking oil of the associated frypot.
- Close all oil return valves (i.e., place all oil return handles in the OFF position). Verify proper functioning of each oil return valve by activating the filter pump using the lever on one of the oil return handle microswitches. No air bubbles should be visible in any frypot.
- Verify that the filter pan is properly prepared for filtering, then drain a frypot of oil heated to 350°F into the filter pan and close the frypot drain valve. Place the oil return handle in the ON position. Allow all oil to return to the frypot (indicated by bubbles in the oil). Return the oil return handle to the OFF position. The frypot should have refilled in no more than 2 minutes and 30 seconds.

# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 6: OPERATOR TROUBLESHOOTING

---

### 6.1 Introduction

This section provides an easy reference guide to some of the common problems that may occur during the operation of this equipment. The troubleshooting guides that follow are intended to help correct, or at least accurately diagnose, problems with this equipment. Although the chapter covers the most common problems reported, you may encounter problems that are not covered. In such instances, the Frymaster Technical Services staff will make every effort to help you identify and resolve the problem.

When troubleshooting a problem, always use a process of elimination starting with the simplest solution and working through to the most complex. Never overlook the obvious – anyone can forget to plug in a cord or fail to close a valve completely. Most importantly, always try to establish a clear idea of why a problem has occurred. Part of any corrective action involves taking steps to ensure that it doesn't happen again. If a controller malfunctions because of a poor connection, check all other connections, too. If a fuse continues to blow, find out why. Always keep in mind that failure of a small component may often be indicative of potential failure or incorrect functioning of a more important component or system.

***Before calling a service agent or the Frymaster HOTLINE (1-800-551-8633) or contacting via e-mail at [service@frymaster.com](mailto:service@frymaster.com):***

- **Verify that electrical cords are plugged in and that circuit breakers are on.**
- **Verify that frypot drain valves are fully closed.**

** DANGER**

**Hot oil will cause severe burns. Never attempt to move this appliance when filled with hot oil or to transfer hot oil from one container to another.**

** DANGER**

**This equipment should be disconnected from the electrical power supply when servicing, except when electrical circuit tests are required. Use extreme care when performing such tests.**

**This appliance may have more than one electrical power supply connection point. Disconnect all power cords before servicing.**

**Inspection, testing, and repair of electrical components should be performed by authorized personnel only.**

## 6.2 Troubleshooting

### 6.2.1 Control and Heating Problems

| Problem  | Probable Causes   | Corrective Action   |
|--|---|---|
| <p><b>Controller won't activate.</b></p>                   | <p>A. Power cord is not plugged in or circuit breaker is tripped.</p> | <p>A. Plug power cord in and verify that circuit breaker is not tripped.</p>  |
|  | <p>B. Controller has failed.</p>                                      | <p>B. If available, substitute a controller known to be working for the suspect controller. If the substitute controller functions correctly, order a new controller.</p>   |
|  | <p>C. Power supply component or interface board has failed.</p>       | <p>C. If any of the components in the power supply system (including the transformer and interface board) fail, power will not be supplied to the controller and it will not function. Determining which component has failed is beyond the scope of operator troubleshooting. Call FAS.</p>  |
| <p><b>Fryer does not heat or heat after filtering.</b></p> | <p>A. Drain valve is open.</p>  | <p>A. This fryer is equipped with a drain safety switch that prevents the heating element from being energized if the drain valve is not fully closed. Verify that the drain valve is fully closed.</p>   |
|  | <p>B. Controller has failed.</p>                                      | <p>B. If available, substitute a controller known to be working for the suspect controller. If the substitute controller functions correctly, order a new controller.</p>   |
|  | <p>C. One or more other components have failed.</p>                   | <p>C. If the circuitry in the fryer control system cannot determine the frypot temperature, the system will not allow the element to be energized or will de-energize the element if it is already energized. If the contactor, element, or associated wiring fails, the element will not energize. Determining which specific component is malfunctioning is beyond the scope of operator troubleshooting. Call FAS.</p> |

| Problem   | Probable Causes   | Corrective Action   |
|---|---|---|
| <p><b>Fryer repeatedly cycles on and off when first started.</b></p>        | <p>Fryer is in melt-cycle mode.</p>                       | <p>This is normal. The standard operational mode for the controller is for the elements to cycle on and off until the temperature in the frypot reaches 180°F (82°C). The purpose of the melt-cycle is to allow controlled melting of solid shortening to prevent scorching and flash fires or damage to the element.</p>   |
| <p><b>Fryer heats until high limit trips with heat indicator ON.</b></p>    | <p>Temperature probe or controller has failed.</p>        | <p>If available, substitute a controller known to be working for the suspect controller. If the substitute controller functions correctly, order a new controller. If substitution of the controller does not resolve the problem, the most likely cause is a failed temperature probe.</p>   |
| <p><b>Fryer heats until high limit trips without heat indicator ON.</b></p> | <p>Contact or controller has failed.</p>                  | <p>If available, substitute a controller known to be working for the suspect controller. If the substitute controller functions correctly, order a new controller. If substitution of the controller does not resolve the problem, the most likely cause is a contactor failed in the closed position.</p>  |
| <p><b>Fryer stops heating with heat indicator ON.</b></p>                   | <p>The high limit thermostat or contactor has failed.</p> | <p>The fact that the heat indicator is ON indicates that the controller is functioning properly and is calling for heat. The hi-limit thermostat functions as a normally closed switch. If the thermostat fails, the "switch" opens and power to the elements is shut off. If the contactor fails to close, no power is supplied to the elements. Determining which component has failed is beyond the scope of operator troubleshooting. Call FAS.</p> |

## 6.2.2 Filtration Problems

| Problem  | Probable Causes  | Corrective Action   |
|--|--|---|
| <p><b>Filter pump won't start.</b></p>   | <p>A. Power cord is not plugged in or circuit breaker is tripped.</p>  | <p>A. Verify that the power cord is fully plugged in. If so, verify that circuit breaker is not tripped.</p>  |
|  | <p>B. Pump motor has overheated causing the thermal overload switch to trip.</p>   | <p>B. If the motor is too hot to touch for more than a few seconds, the thermal overload switch has probably tripped. Allow the motor to cool at least 20 minutes then press the Pump Reset Switch.</p> |
|  | <p>C. Blockage in filter pump.</p> <p><b>Test:</b> Close the drain valve and pull the filter pan out from the fryer. Activate the pump. If the pump motor hums for a short time then stops, the probable cause is blockage of the pump itself.</p> | <p>C. Pump blockages are usually caused by sediment buildup in the pump due to improperly sized or installed filter paper and failure to use the crumb screen.</p>                                      |
| <p><b>Filter pump runs but oil does not return to frypot and there is no bubbling oil.</b></p> | <p>Blockage in filter pan suction tube.</p> <p><b>Test:</b> Close the drain valve and pull the filter pan out from the fryer. Activate the pump. If the air or bubbling oil occurs, there is a blockage in the filter pan suction tube.</p>        | <p>The blockage may be caused by sediment buildup or, if solid shortening is used, solidified shortening in the tube. Use a thin, flexible wire to remove the blockage.</p>                             |
| <p><b>Filter pump runs, but oil return is very slow and bubbling oil occurs.</b></p>           | <p>A. Improperly installed filter pan components.</p>  | <p>A. Verify that filter screen is in bottom of pan with paper top of screen.</p> <p>Verify that O-rings are present and in good condition on filter pan connection fitting.</p>                        |

(continued on the following page)

| <b>Problem</b>   | <b>Probable Causes</b>  | <b>Corrective Action</b>   |
|--|---|--|
| <p><b>Filter pump runs, but oil return is very slow and bubbling oil occurs.</b></p> | <p>B. Attempting to filter with oil or shortening that is not hot enough.</p> | <p>B. In order to properly filter, the oil or shortening should be at or near 350°F (177°C). At temperatures lower than this, the oil becomes too thick to pass through the filter medium easily, resulting in much slower oil return and eventual overheating of the filter pump motor. Make sure oil is at or near frying temperature before draining oil into filter pan.</p> |

# SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 7: SERVICE PROCEDURES

---

### 7.1 General

Before performing any maintenance on this equipment, disconnect the fryer from the electrical power supply.

When electrical wires are disconnected, it is recommended that they be marked in such a way as to facilitate re-assembly.

### 7.2 Replacing a Remote Digital Controller


1. Unplug all power cords.
2. Unplug the 15-pin connector from the back of the controller.
3. Remove the mounting screws.
4. Reassemble in reverse order to complete the replacement and return the fryer to service.

### 7.3 Replacing Component Box Components

1. Disconnect the fryer from the electrical power supply.
2. The front panel bezel is held in place by tabs at the top and bottom. Slide the metal bezel up to disengage the lower tabs. Then slide the bezel down to disengage the upper tabs.
3. Remove the two screws from the upper corners of the front panel bezel and allow the front panel bezel to swing down.
4. Remove the front panel bezel assembly by lifting it from the hinge slots in the panel bezel frame.
5. Disconnect the wiring from the component to be replaced, being sure to make a note of where each wire was connected.
6. Dismount the component to be replaced and install the new component, being sure that any required spacers, insulation, washers, etc. are in place.

**NOTE:** If more room to work is required, the control panel frame assembly may be removed by removing the hex head screws that secure it to the fryer cabinet (see illustration on the following page). If this option is chosen, all front panel assemblies must be removed per steps 2-4 above. The cover plate on the lower front of the component box may also be removed if desired. *Removing the component box itself from the fryer is not recommended due to the difficulty involved in disconnecting and reconnecting the oil-return valve rods, which pass through openings in the component box.*



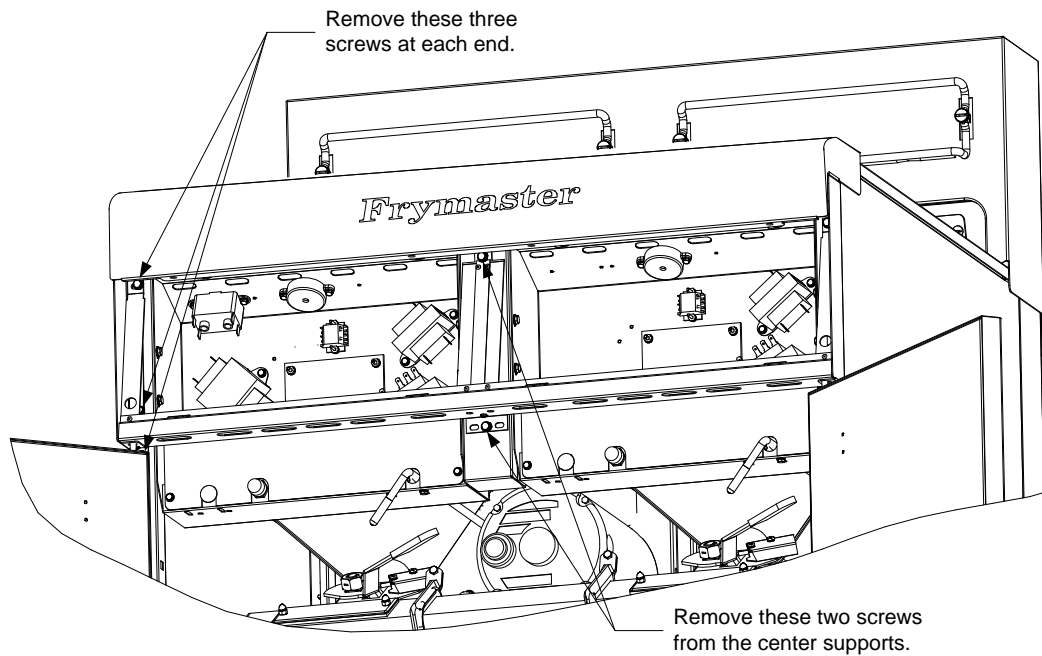

**Removing the Control Panel Frame and Top Cap Assembly**

7. Reconnect the wiring disconnected in Step 5, referring to your notes and the wiring diagrams on the fryer door to ensure that the connections are properly made. Also, verify that no other wiring was disconnected accidentally during the replacement process.
8. Reverse steps 1-4 to complete the replacement and return the fryer to service.

#### **7.4 Replacing a High-Limit Thermostat**


1. Remove the filter pan and lid from the unit. Drain the frypots into a Shortening Disposal Unit (SDU) or other appropriate metal container.



**DO NOT drain more than one full frypot or two split frypots into the SDU at one time.**

2. Disconnect the fryer from the electrical power supply and reposition it to gain access to the rear of the fryer.
3. Remove the four screws from both the left and right sides of the lower back panel.
4. Locate the high-limit that is being replaced and follow the two-black wires to the 12-pin connector C-6. Note where the leads are connected prior to removing them from the connector. Unplug the 12-pin connector C-6 and using a pin-pusher push the pins of the high-limit out of the connector.
5. Using a wrench, carefully unscrew the high-limit thermostat to be replaced.
6. Apply Loctite™ PST 567 or equivalent sealant to the threads of the replacement and screw it securely into the frypot.

7. Insert the leads into the 12-pin connector C-6 (see illustration below). For full-vat units or the left half of a dual-vat unit (as viewed from the rear of the fryer) the leads go into positions 1 and 2 of the connector. For the right half of a dual-vat unit (as viewed from the rear of the fryer), the leads go into positions 7 and 8. In either case, polarity does not matter.

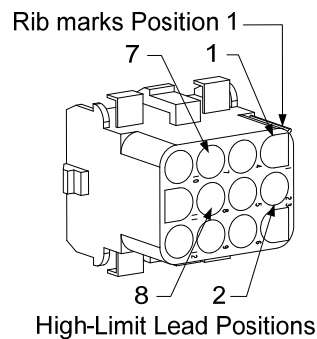

8. Reconnect the 12-pin connecting plug C-6. Use wire ties to secure any loose wires.
9. Reinstall the back panels reposition the fryer under the exhaust hood, and reconnect it to the electrical power supply to return the fryer to service.

## 7.5 Replacing a Temperature Probe


1. Remove the filter pan and lid from the unit. Drain the frypots into a Shortening Disposal Unit (SDU) or other appropriate metal container.

**⚠ DANGER**


**DO NOT drain more than one full frypot or two split frypots into the SDU at one time.**

2. Disconnect the fryer from the electrical power supply and reposition it to gain access to the rear of the fryer.
3. Remove the four screws from both sides of the lower back panel. Then remove the two screws on both the left and right sides of the back of the tilt housing. Lift the tilt housing straight up to remove from the fryer.
4. Locate the red and white wires of the temperature probe to be replaced. Note where the leads are connected prior to removing them from the connector. Unplug the 12-pin connector C-6 and using a pin-pusher push the pins of the temperature probe out of the connector.

5. Raise the element and remove the securing probe bracket and metal tie wraps that secure the probe to the element (see illustration below).

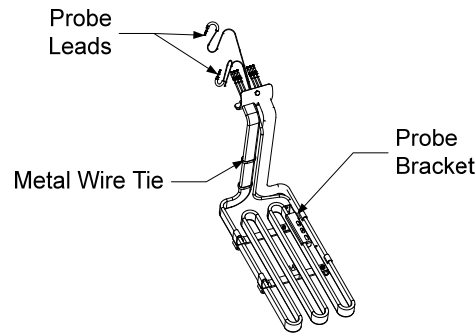

6. Gently pull on the temperature probe and grommet. Pulling the wires up the rear of the fryer and through the element tube assembly.
7. Insert the replacement temperature probe (wires first) into the tube assembly ensuring that the grommet is in place. Secure the probe to the elements using the bracket which was removed in Step 5 and the metal tie wraps which were included in the replacement kit.
8. Route the probe wires out of the tube assembly following the element wires down the back of the fryer through the Heyco bushings to the 12-pin connector C-6. Secure the wires to the sheathing with wire ties ensuring that the metal sheathing is secured with grounding clip .
9. Insert the temperature probe leads into the 12-pin connector C-6 (see illustration below). For full-vat units or the right half of a dual-vat unit (as viewed from the rear of the fryer) the red lead goes into position 3 and the white lead into position 4 of the connector. For the left half of a dual-vat unit (as viewed from the rear of the fryer), the red lead goes into position 9 and the white lead into position 10. **NOTE: *Right* and *left*** refer to the fryer as viewed from the rear.

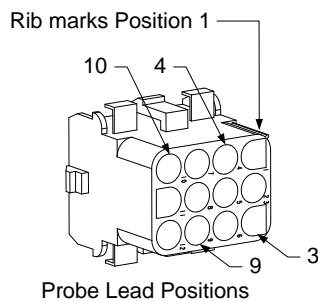


10. Secure any loose wires with wire ties making sure that the lead wires will not interfere with the movement of the springs. Rotate the elements up and down making sure that movement is not restricted and that the wires are not pinched.
11. Reinstall the tilt housing and back panels, reposition the fryer under the exhaust hood, and reconnect it to the electrical power supply to return the fryer to service.

## 7.6 Replacing a Heating Element


1. Perform steps 1-3 of section 7.5, *Replacing a Temperature Probe*.

2. On dual-vat fryers, and on full-vat fryers where the temperature probe is attached to the element being replaced, disconnect the wire harness containing the probe wiring. Using a pin pusher, disconnect the probe wires from the 12-pin connector C-6.
3. In the rear of the fryer directly behind the frypot disconnect the 6-pin connector for the left element (as viewed from the front of the fryer) or the 9-pin connector for the right element. Press in on the tabs on each side of the connector while pulling outward on the free end to extend the connector and release the element leads (see photo below). Pull the leads out of the connector and out of the wire sleeving.

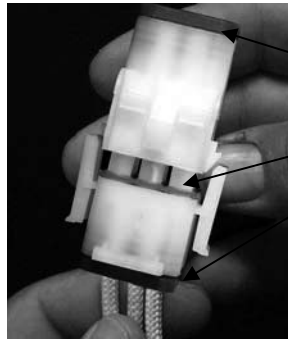


Note: Liquid resistant seals.

4. Raise the element to the full up position and support the elements.
5. Remove the hex head screws and nuts that secure the element to the tube assembly and pull the element out of the frypot. **NOTE:** Full-vat elements consist of two dual-vat elements clamped together. For full-vat units, remove the element clamps before removing the nuts and screws that secure the element to the tube assembly.
6. If applicable, recover the probe bracket and probe from the element being replaced and install them on the replacement element, then install the replacement element in the frypot, securing it with the nuts and screws removed in Step 5 to the tube assembly ensuring the gasket is between the tube and element assembly.
7. Route the element leads through the element tube assembly and into the wire sleeving to prevent chafing. Ensure that the wire sleeving is routed back through the Heyco bushing keeping it clear from the lift springs. Also ensure that the wire sleeving extends into the tube assembly to protect the edge of the tube assembly from chafing the wires. Press the pins into the connector in accordance with the diagram below, and then close the connector to lock the leads in place. **NOTE:** It is critical that the wires be routed through the sleeving to prevent chafing.

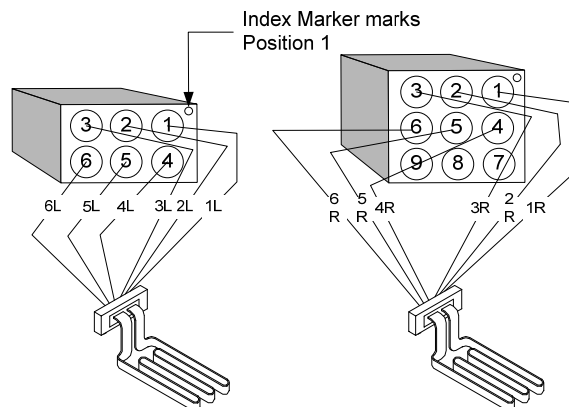

8. Reconnect the element connector it was removed from directly behind the frypot, ensuring that the latches lock.
9. Insert the temperature probe leads into the 12-pin wiring harness connector C-6 (see illustration below). For full-vat units or the right half of a dual-vat unit, the red lead goes into position 3 and the white into position 4. For the left half of a dual-vat unit, the red lead goes into position 9 and the white into position 10. **NOTE: *Right* and *left* refer to the fryer as viewed from the rear.**

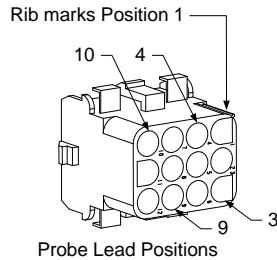

10. Reconnect the 12-pin connector C-6 of the wiring harness disconnected in Step 2.
11. Lower the element down onto the basket rack.
12. Reinstall the tilt housing and back panels, reposition the fryer under the exhaust hood, and reconnect it to the electrical power supply.


## 7.7 Replacing Contactor Box Components

1. If replacing a contactor box component above the built-in filter system, remove the filter pan and lid from the unit. Drain the frypots into a Shortening Disposal Unit (SDU) or other appropriate metal container. If replacing a contactor box component in a non-filter unit or a frypot that's not over the filter pan, drain the frypot above the box into a Shortening Disposal Unit (SDU) or other appropriate metal container.

### ⚠ DANGER


**DO NOT drain more than one full frypot or two split frypots into the SDU at one time.**

2. Disconnect the fryer from the electrical power supply.
3. Remove the two screws securing the cover of the contactor box. The contactor boxes above the filter pan are accessed by sliding under the fryer. They are located to the left and right above the guide rails (see photo below). The contactor boxes of non-filter units or frypots not over the filter pan are accessed by opening the fryer door directly under the affected frypot.

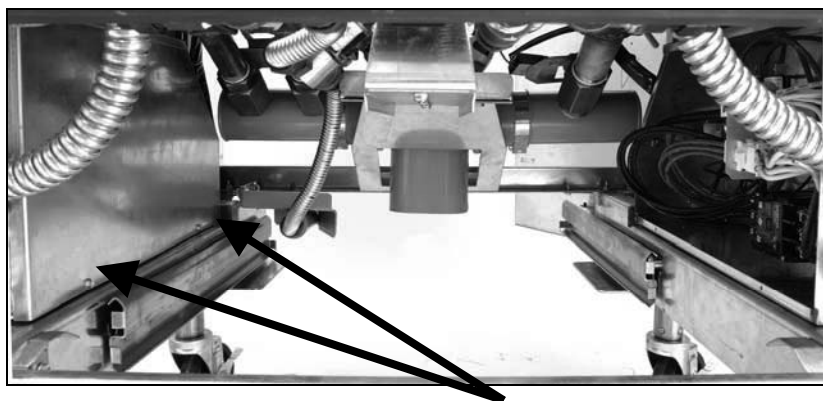

Remove two screws to access contactor box components above the filter pan.

4. The contactors and relays are held on by threaded pin studs so that only removal of the nut is required to replace the component.
5. After performing necessary service, reverse steps 1-4 to return the fryer to operation.

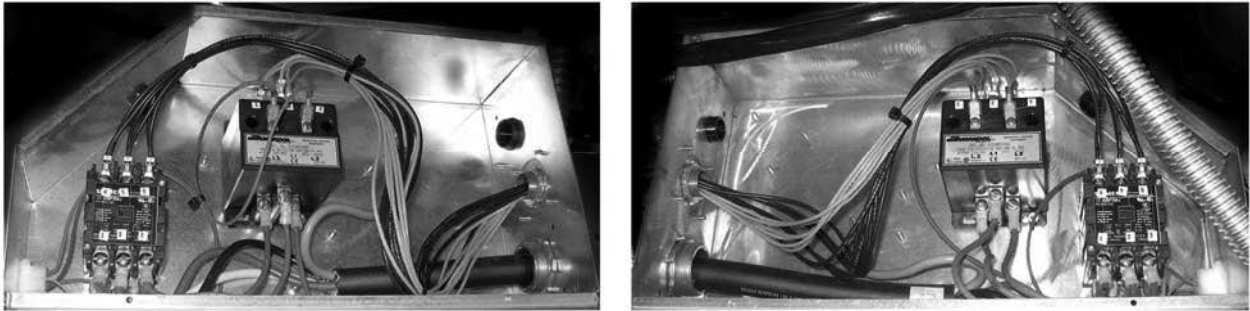

Left and right views of mechanical contactor box components.

## 7.8 Replacing a Frypot


1. Drain the frypot into the filter pan or, if replacing a frypot over the filter system, into a Shortening Disposal Unit (SDU) or other appropriate metal container. If replacing a frypot over the filter system, remove the filter pan and lid from the unit.

### **⚠ DANGER**

**DO NOT drain more than one full frypot or two split frypots into the SDU at one time.**

2. Disconnect the fryer from the electrical power supply and reposition it to gain access to both the front and rear.
3. Slide the metal bezel up to release the bottom tabs, then slide the bezel down to disengage the upper tabs.
4. Remove the two screws from the upper corners of the control panels and allow them to swing down (see illustration and photo on page 1-1).
5. Unplug the wiring harnesses and ground wires from the backs of the controllers. Remove the controllers by lifting them from the hinge slots in the control panel frame.
6. Remove the tilt housing and back panels from the fryer. The tilt housing must be removed first in order to remove the upper back panel.
7. To remove the tilt housing remove the hex head screws from the rear edge of the housing. The housing can be lifted straight up and off the fryer.
8. Remove the control panel by removing the screw in the center and the nuts on both sides.
9. Loosen the component boxes by removing the screws, which secure them in the cabinet.
10. Dismount the top cap by removing the nuts at each end that secure it to the cabinetry.
11. Remove the hex head screw that secures the front of the frypot to the cabinet cross brace.

12. Remove the top-connecting strip that covers the joint with the adjacent frypot.
13. Unscrew the Teflon vent/vacuum-breaker tube fitting, unscrew the nut located on the front of each section of drain tube, and remove the tube assembly from the fryer.
14. Remove the covers from the drain safety switch(es) and disconnect the switch wiring at the switch(es).
15. At the rear of the fryer, unplug the 12-pin connector C-6 and, using a pin pusher, disconnect the high-limit thermostat leads.
16. Disconnect the oil return flexline(s) at the frypot end(s).
17. Raise the elements to the “up” position and disconnect the element springs.
18. Remove the machine screws and nuts that secure the element tube assembly to the frypot. Carefully lift the element assembly from the frypot and secure it to the cross brace on the rear of the fryer with wire ties or tape.
19. Carefully lift the frypot from the fryer and place it upside down on a stable work surface.
20. Recover the drain valve(s), oil return flexline connection fitting(s), and high-limit thermostat(s) from the frypot. Clean threads and apply Loctite™ PST 567 or equivalent sealant to the threads of the recovered parts and install them in the replacement frypot.
21. Carefully lower the replacement frypot into the fryer. Reinstall the hex head screw removed in step 7 to attach the frypot to the fryer.
22. Position the element tube assembly in the frypot and reinstall the machine screws and nuts removed in step 14.
23. Reconnect the oil return flexlines to the frypot, and replace aluminum tape, if necessary, to secure heater strips to the flexlines.
24. Insert the high-limit thermostat leads disconnected in step 13 (see illustration on page 1-3 for pin positions).
25. Reconnect the drain safety switch wiring to the switch(es) in accordance with the diagram below then reinstall the switch covers.

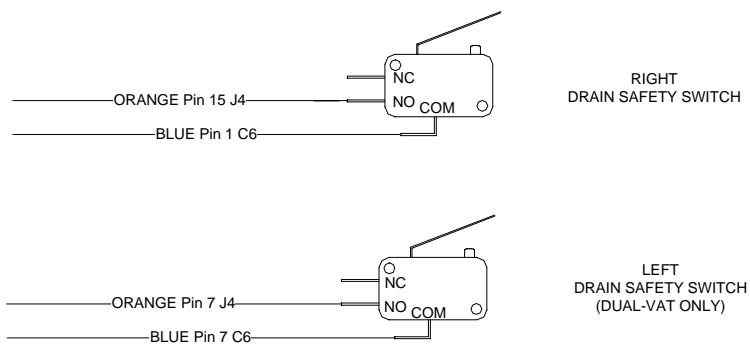

26. Reinstall the drain tube assembly.

27. Reinstall the top connecting strips, top cap, control box and panel, tilt housing and back panels.
28. Reinstall controllers in the control panel frame and reconnect the wiring harnesses and ground wires.
29. Reposition the fryer under the exhaust hood and reconnect it to the electrical power supply.

## 7.9 Built-in Filtration System Service Procedures

### 7.9.1 Filtration System Problem Resolution

One of the most common causes of filtration problems is placing the filter paper on the bottom of the filter pan rather than over the filter screen.

**⚠ CAUTION**  
**Ensure that filter screen is in place prior to filter paper placement and filter pump operation. Improper screen placement is the primary cause of filtration system malfunction.**


Whenever the complaint is “the pump is running, but no oil is being filtered,” check the installation of the filter paper, and ensure that the correct size is being used. While you are checking the filter paper, verify that the O-ring on the bottom of the filter pan is present and in good condition. A missing or worn O-ring allows the pump to take in air and decreases its efficiency. Also, oil leaks on the floor each time a vat is drained.

If the pump motor overheats, the thermal overload will trip and the motor will not start until it is reset. If the pump motor does not start, press the red reset switch (button) located on the rear of the motor.

If the pump starts after resetting the thermal overload switch, then something is causing the motor to overheat. A major cause of overheating is when several frypots are filtered sequentially, overheating the pump and motor. Allow the pump motor to cool at least 30 minutes before resuming operation. Pump overheating can be caused by:

- Solidified shortening in the pan or filter lines, or
- Attempting to filter unheated oil (cold oil is more viscous, overloading the pump motor and causing it to overheat).

If the motor runs but the pump does not, there is a blockage in the pump. Incorrectly sized or installed paper/pads will allow food particles and sediment to pass through the filter pan and into the pump. When sediment enters the pump, the gears bind, causing the motor to overload, again tripping the thermal overload. Shortening that has solidified in the pump will also cause it to seize, with the same result.

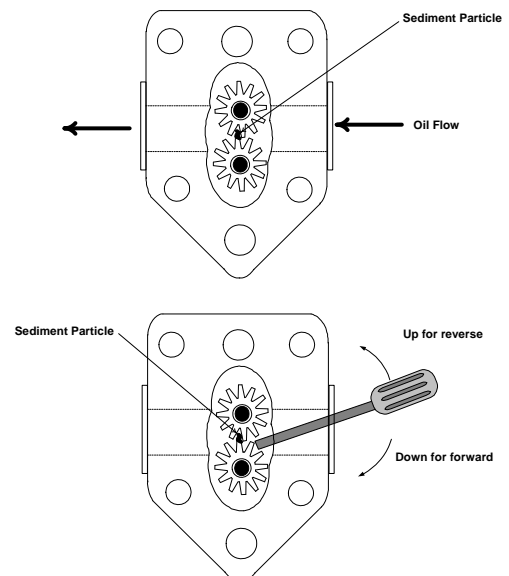



A pump seized by debris or hard shortening can usually be freed by manually moving the gears with a screwdriver or other instrument.

Disconnect power to the filter system, remove the input plumbing from the pump, and use a screwdriver to manually turn the gears.

- Turning the pump gears in reverse will release a hard particle.
- Turning the pump gears forward will push softer objects and solid shortening through the pump and allow free movement of the gears.


Incorrectly sized or installed paper/pads will also allow food particles and sediment to pass through and clog the suction tube on the bottom of the filter pan. Particles large enough to block the suction tube may indicate that the crumb tray is not being used. Pan blockage can also occur if shortening is left in the pan and allowed to solidify. Blockage removal can be accomplished by forcing the item out with an auger or drain snake. Compressed air or other pressurized gases should not be used to force out the blockage.

### 7.9.2 Replacing the Filter Motor, Filter Pump and Related Components

1. Remove the filter pan and lid from the unit. Drain the frypots into a Shortening Disposal Unit (SDU) or other appropriate metal container.


**⚠ DANGER**  
**DO NOT drain more than one full frypot or two split frypots into the SDU at one time.**

2. Disconnect the fryer from the electrical power supply and reposition it to gain access to both the front and rear.
3. Disconnect the two flexlines running to the oil-return manifold at the rear of the fryer as well as the pump suction flexline at the end of the filter pan connection (see photo below).

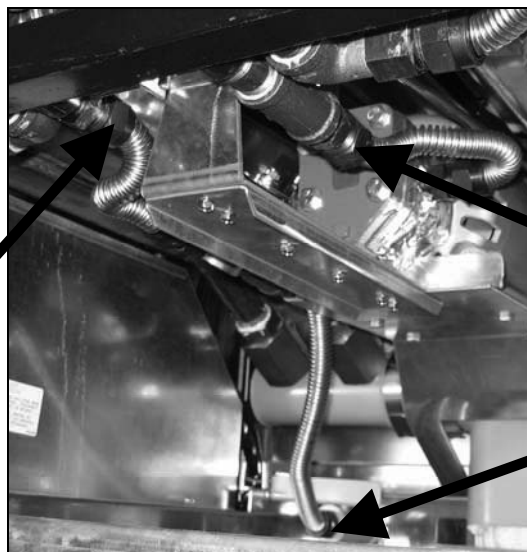

Disconnect flexlines indicated by the arrows.


4. Loosen the nut and bolt that secures the bridge to the oil-return manifold.
5. Remove the cover plate from the front of the motor and disconnect the motor wires.
6. Unplug the pump motor assembly 6-pin connector C-2 and, using a pin pusher, disconnect the vent vacuum-breaker solenoid (pins 2 and 5) that is attached to the oil return manifold.
7. Remove the two nuts and bolts that secure the front of the bridge to the cross brace and carefully slide the bridge rearward off the cross brace until its front end can be lowered to the floor. Undo the single nut holding it in place in back. Be careful not to let the rear of the bridge slip off the manifold at this point.
8. Get a good grip on the bridge, carefully pull it forward off the oil-return manifold, and lower the entire assembly to the floor. Once on the floor, pull the assembly out the front of the fryer.
9. When required service has been completed, reverse steps 6-12 to reinstall the bridge. **NOTE:** The black motor wires go on the top terminal, the white on the bottom. The pump solenoid valve wires go in positions 1 and 4 of the 6-pin connector C-2; the vent vacuum-breaker solenoid valve wires go in positions 2 and 5; the red/black heater tape wires go into position 3 and the violet/white wires go into position 6 (see illustration below).

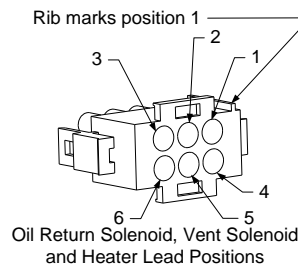

10. Reconnect the unit to the electrical power supply, and verify that the pump is functioning correctly (i.e., when a filter handle is placed in the ON position, the motor should start and there should be strong suction at the intake fitting and outflow at the rear flush port.)
11. When proper operation has been verified, reinstall the back panels and the filter pan and lid.
12. Reposition the fryer under the exhaust hood and reconnect it to the electrical power supply to return the fryer to service.


### 7.9.3 Replacing the Filter Transformer or Filter Relay

Remove the left controller from the fryer to expose the interior of the left component box. The filter transformer and relay are located as shown in the illustration below. **NOTE:** The right component box is identical to the left except that the filter transformer and relay are not present.

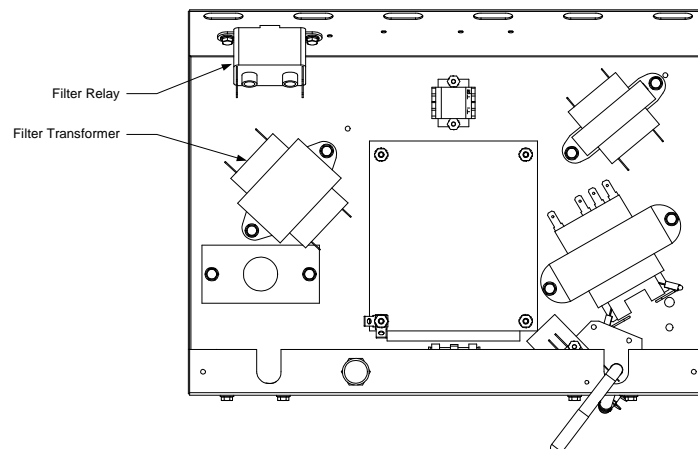

## 7.10 Interface Board Diagnostic Chart

The following diagram and charts provide ten quick system checks that can be performed using only a multimeter.

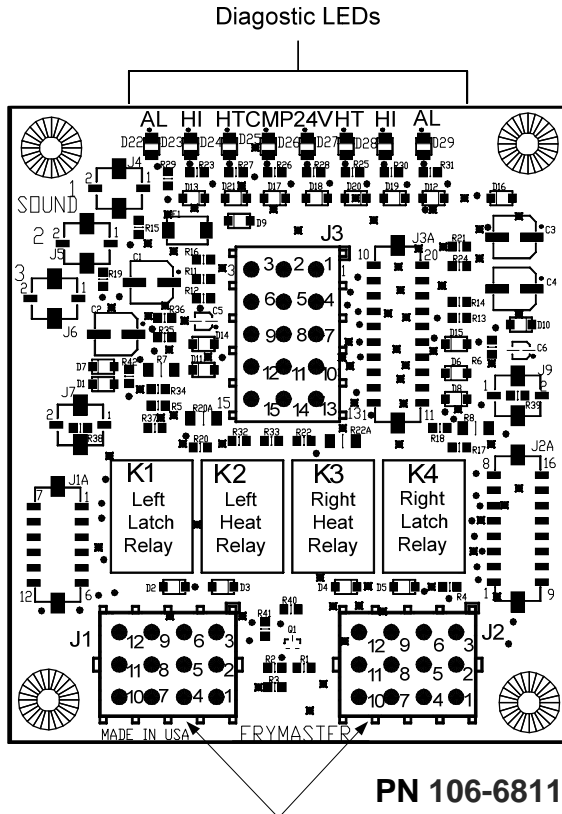

Test Points  
J1 Left J2 Right

| Diagnostic LED Legend |  |
|-----------------------|--|
| <b>CMP</b>            | indicates power from 12V transformer             |
| <b>24</b>             | indicates power from 24V transformer             |
| <b>HI (RH)</b>        | indicates output (closed) from right latch relay |
| <b>HI (LH)</b>        | indicates output (closed) from left latch relay  |
| <b>HT (RH)</b>        | indicates output from right heat relay           |
| <b>HT (LH)</b>        | indicates output from left heat relay            |
| <b>AL (RH)</b>        | indicates output (open) from right latch relay   |
| <b>AL (LH)</b>        | indicates output (open) from left latch relay    |

**NOTE** – When testing the test points on J1 and J2 test use the illustration above depicting the location of Pin 1. Pin 1 is located in the bottom right corner of Both J1 and J2. These test points are **ONLY** for RE Series boards with J1 and J2 plugs on the front of the board.


| Meter Setting              | Test          | Pin      | Pin      | Results    |
|----------------------------|---------------|----------|----------|------------|
| 12 VAC Power               | 50 VAC Scale  | 3 of J2  | 1 of J2  | 12-16 VAC  |
| 24 VAC Power               | 50 VAC Scale  | 2 of J2  | Chassis  | 24-30 VAC  |
| *Probe Resistance (RH)     | R X 1000 OHMS | 11 of J2 | 10 of J2 | See Chart  |
| *Probe Resistance (LH)     | R X 1000 OHMS | 1 of J1  | 2 of J1  | See Chart  |
| High-Limit Continuity (RH) | R X 1 OHMS    | 9 of J2  | 6 of J2  | 0 - OHMS   |
| High-Limit Continuity (LH) | R X 1 OHMS    | 6 of J1  | 9 of J1  | 0 - OHMS   |
| Latch Contactor Coil (RH)  | R X 1 OHMS    | 8 of J2  | Chassis  | 3-10 OHMS  |
| Latch Contactor Coil (LH)  | R X 1 OHMS    | 5 of J1  | Chassis  | 3-10 OHMS  |
| Heat Contactor Coil (RH)   | R X 1 OHMS    | 7 of J2  | Chassis  | 18-25 OHMS |
| Heat Contactor Coil (LH)   | R X 1 OHMS    | 4 of J1  | Chassis  | 18-25 OHMS |

\* **Disconnect 15-Pin harness from the computer/controller before testing the probe circuit.**

## 7.11 Probe Resistance Chart

| <h3 style="text-align: center;">Probe Resistance Chart</h3> <p style="text-align: center;"><i>For use with fryers manufactured with Minco Thermistor probes only.</i></p> |      |    |     |      |    |     |      |     |     |      |     |     |      |     |  |  |  |
|---|------|----|-----|------|----|-----|------|-----|-----|------|-----|-----|------|-----|--|--|--|
| F   | OHMS | C  | F   | OHMS | C  | F   | OHMS | C   | F   | OHMS | C   | F   | OHMS | C   |  |  |  |
| 60  | 1059 | 16 | 130 | 1204 | 54 | 200 | 1350 | 93  | 270 | 1493 | 132 | 340 | 1634 | 171 |  |  |  |
| 65  | 1070 | 18 | 135 | 1216 | 57 | 205 | 1361 | 96  | 275 | 1503 | 135 | 345 | 1644 | 174 |  |  |  |
| 70  | 1080 | 21 | 140 | 1226 | 60 | 210 | 1371 | 99  | 280 | 1514 | 138 | 350 | 1654 | 177 |  |  |  |
| 75  | 1091 | 24 | 145 | 1237 | 63 | 215 | 1381 | 102 | 285 | 1524 | 141 | 355 | 1664 | 179 |  |  |  |
| 80  | 1101 | 27 | 150 | 1247 | 66 | 220 | 1391 | 104 | 290 | 1534 | 143 | 360 | 1674 | 182 |  |  |  |
| 85  | 1112 | 29 | 155 | 1258 | 68 | 225 | 1402 | 107 | 295 | 1544 | 146 | 365 | 1684 | 185 |  |  |  |
| 90  | 1122 | 32 | 160 | 1268 | 71 | 230 | 1412 | 110 | 300 | 1554 | 149 | 370 | 1694 | 188 |  |  |  |
| 95  | 1133 | 35 | 165 | 1278 | 74 | 235 | 1422 | 113 | 305 | 1564 | 152 | 375 | 1704 | 191 |  |  |  |
| 100   | 1143 | 38 | 170 | 1289 | 77 | 240 | 1432 | 116 | 310 | 1574 | 154 | 380 | 1714 | 193 |  |  |  |
| 105   | 1154 | 41 | 175 | 1299 | 79 | 245 | 1442 | 118 | 315 | 1584 | 157 | 385 | 1724 | 196 |  |  |  |
| 110   | 1164 | 43 | 180 | 1309 | 82 | 250 | 1453 | 121 | 320 | 1594 | 160 | 390 | 1734 | 199 |  |  |  |
| 115   | 1174 | 46 | 185 | 1320 | 85 | 255 | 1463 | 124 | 325 | 1604 | 163 | 395 | 1744 | 202 |  |  |  |
| 120   | 1185 | 49 | 190 | 1330 | 88 | 260 | 1473 | 127 | 330 | 1614 | 166 | 400 | 1754 | 204 |  |  |  |
| 125   | 1195 | 52 | 195 | 1340 | 91 | 265 | 1483 | 129 | 335 | 1624 | 168 | 405 | 1764 | 207 |  |  |  |

### 7.12 Wiring Diagram, Simplified RE17/22 Delta

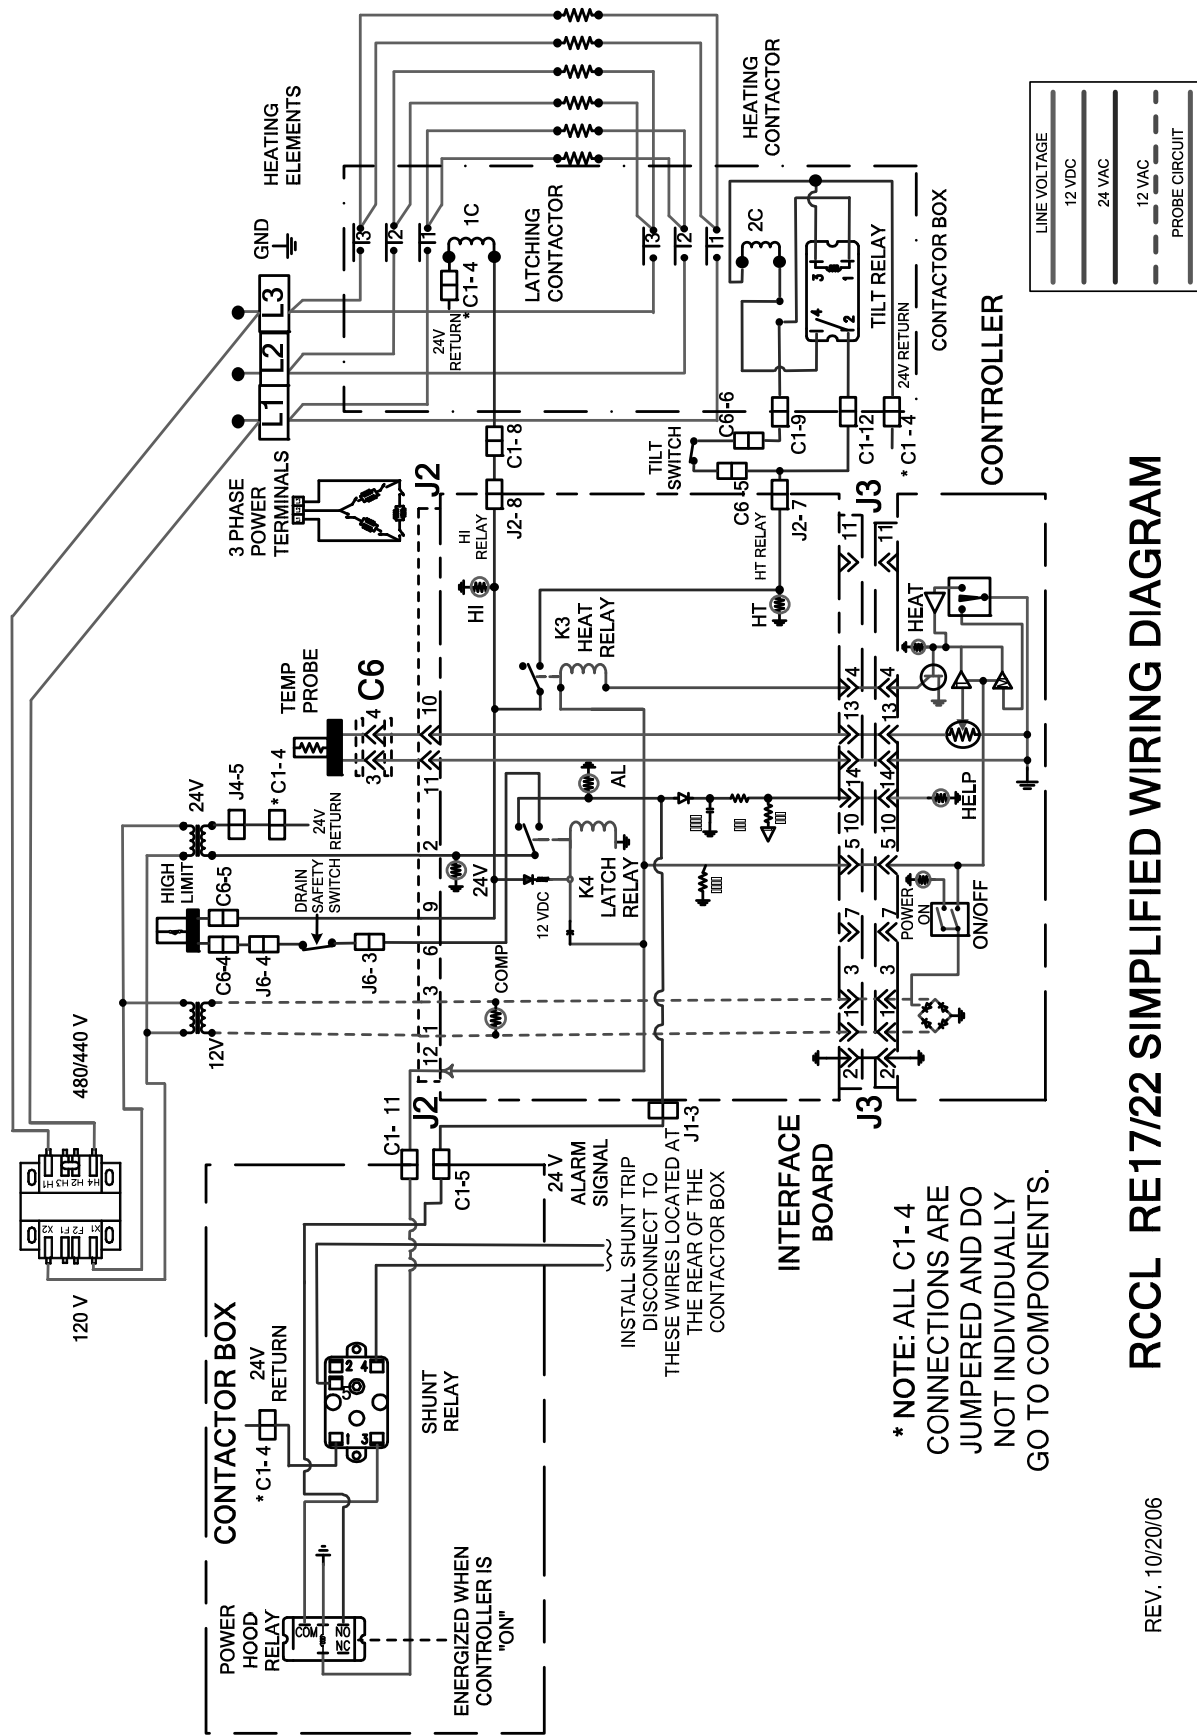


**RCCL RE17/22 SIMPLIFIED WIRING DIAGRAM**

service@frymaster.com


REV. 10/20/06



# 7.14 Wiring Diagram, System RCCL

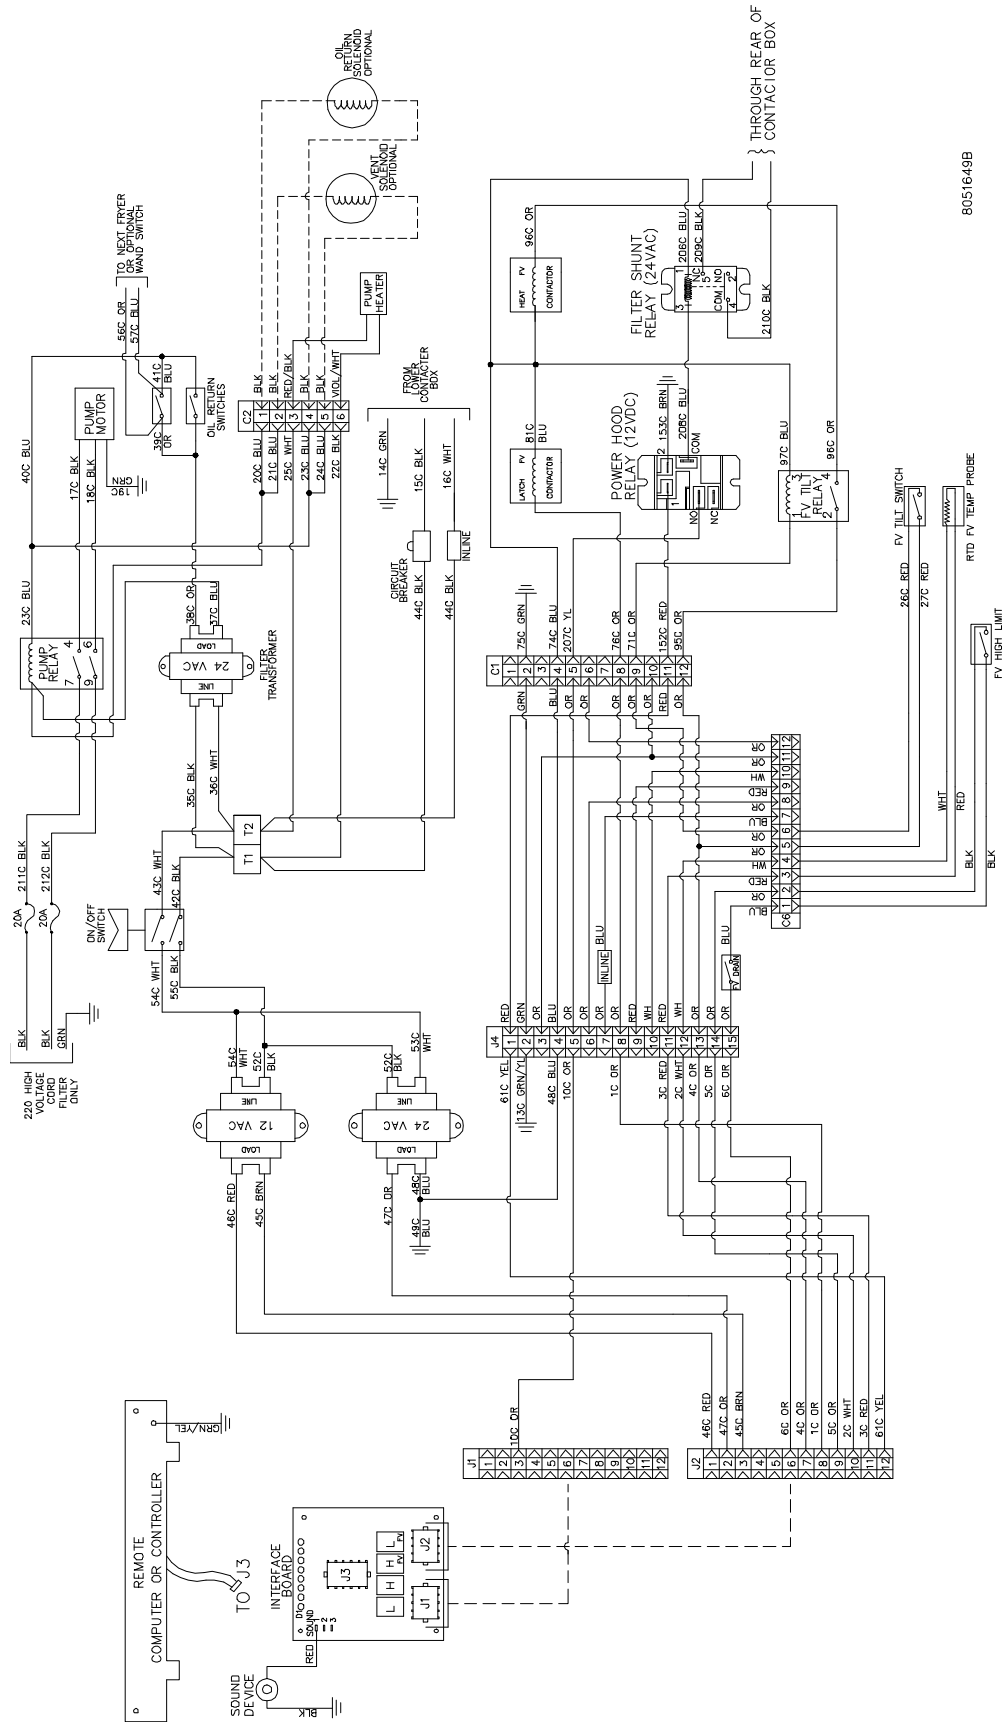


### 7.15 Wiring Diagram, Contactor Box Wiring WYE Export Full Vat 14kW

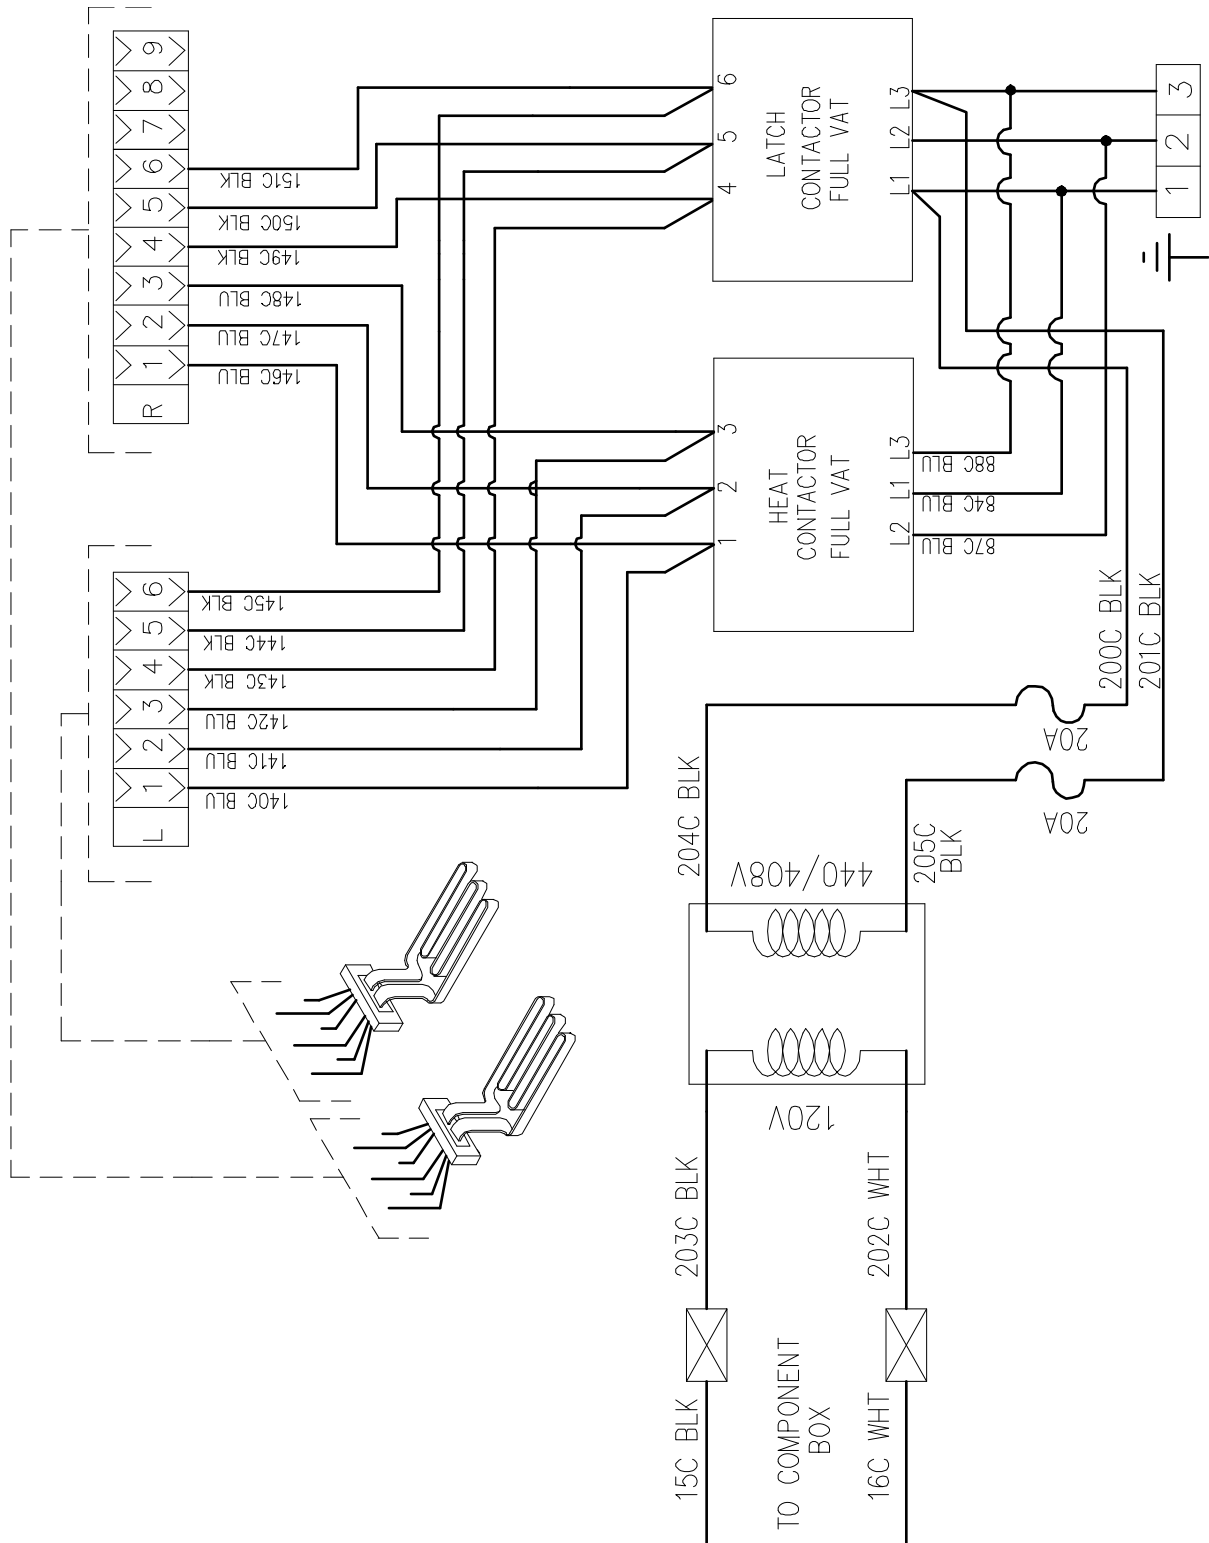

8051641A




# 7.16 Wiring Diagram, Contactor Box Wiring WYE Export Full Vat 22kW

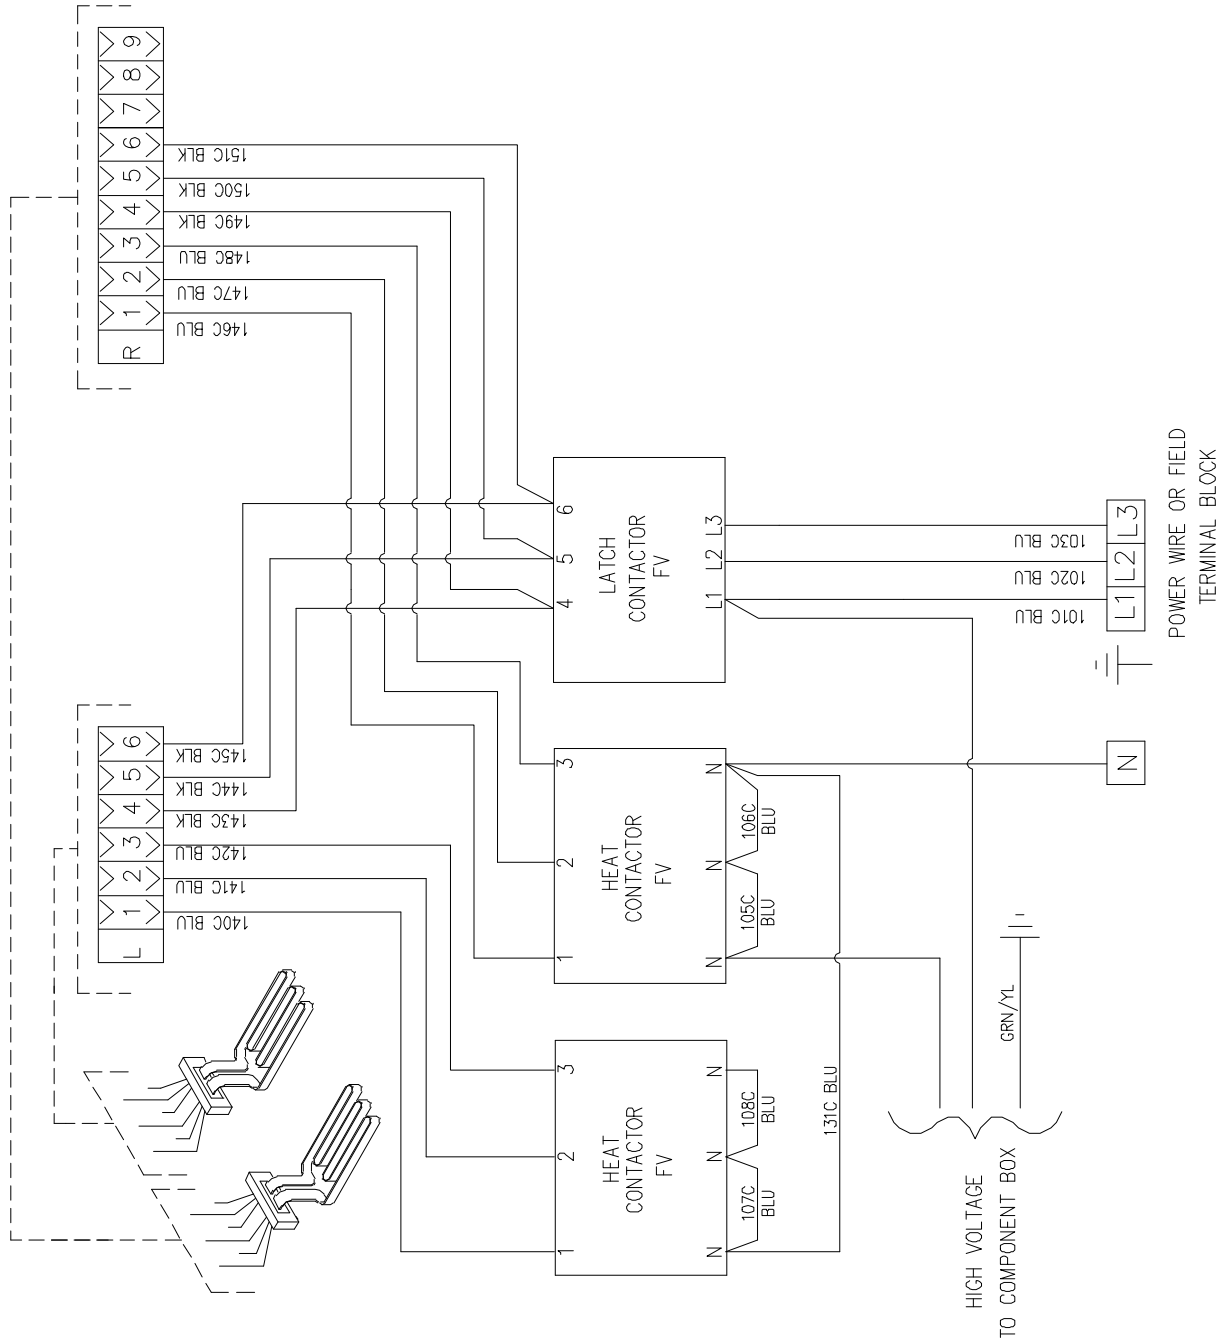


8051890A

# 7.17 Wiring Diagram, Wiring Harness

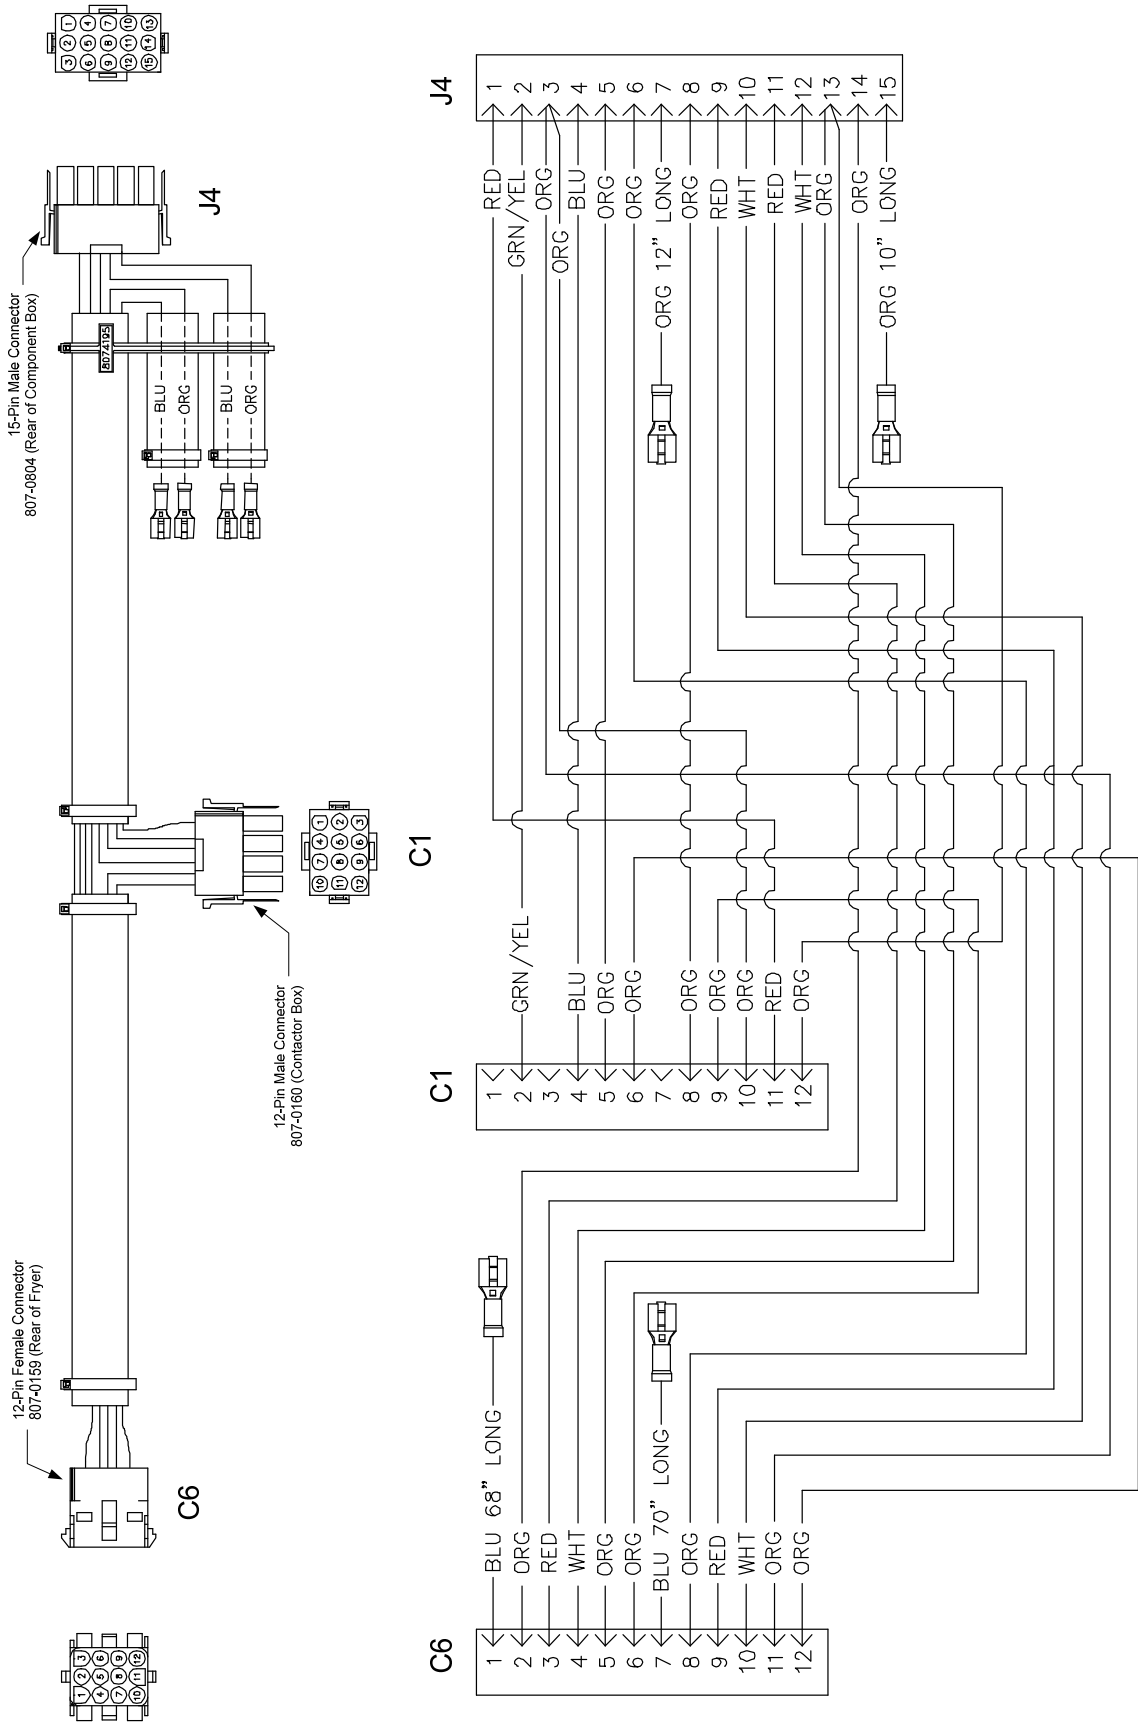


**WIRING HARNESS  
807-4195**

# 7.18 Wiring Diagram, Remote Cable

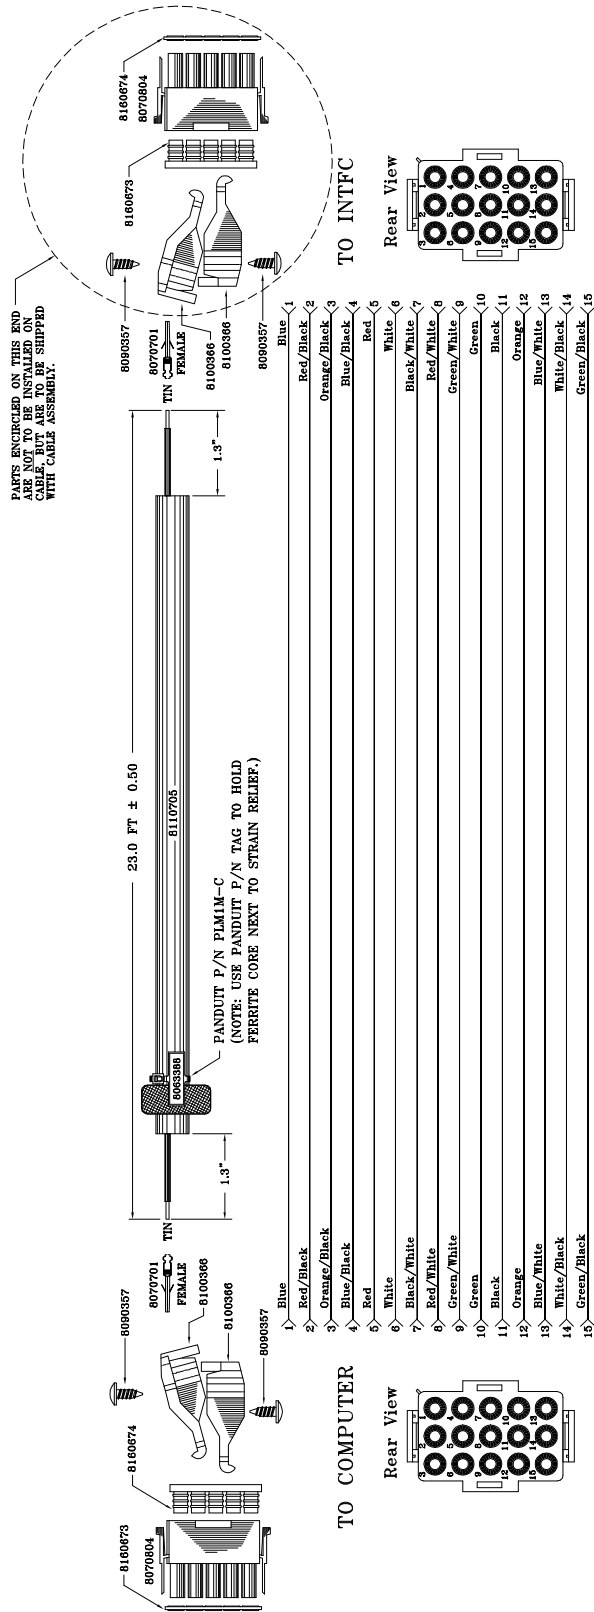

1065142A

# 7.19 Wiring Diagram, Basket Lift 208-250V

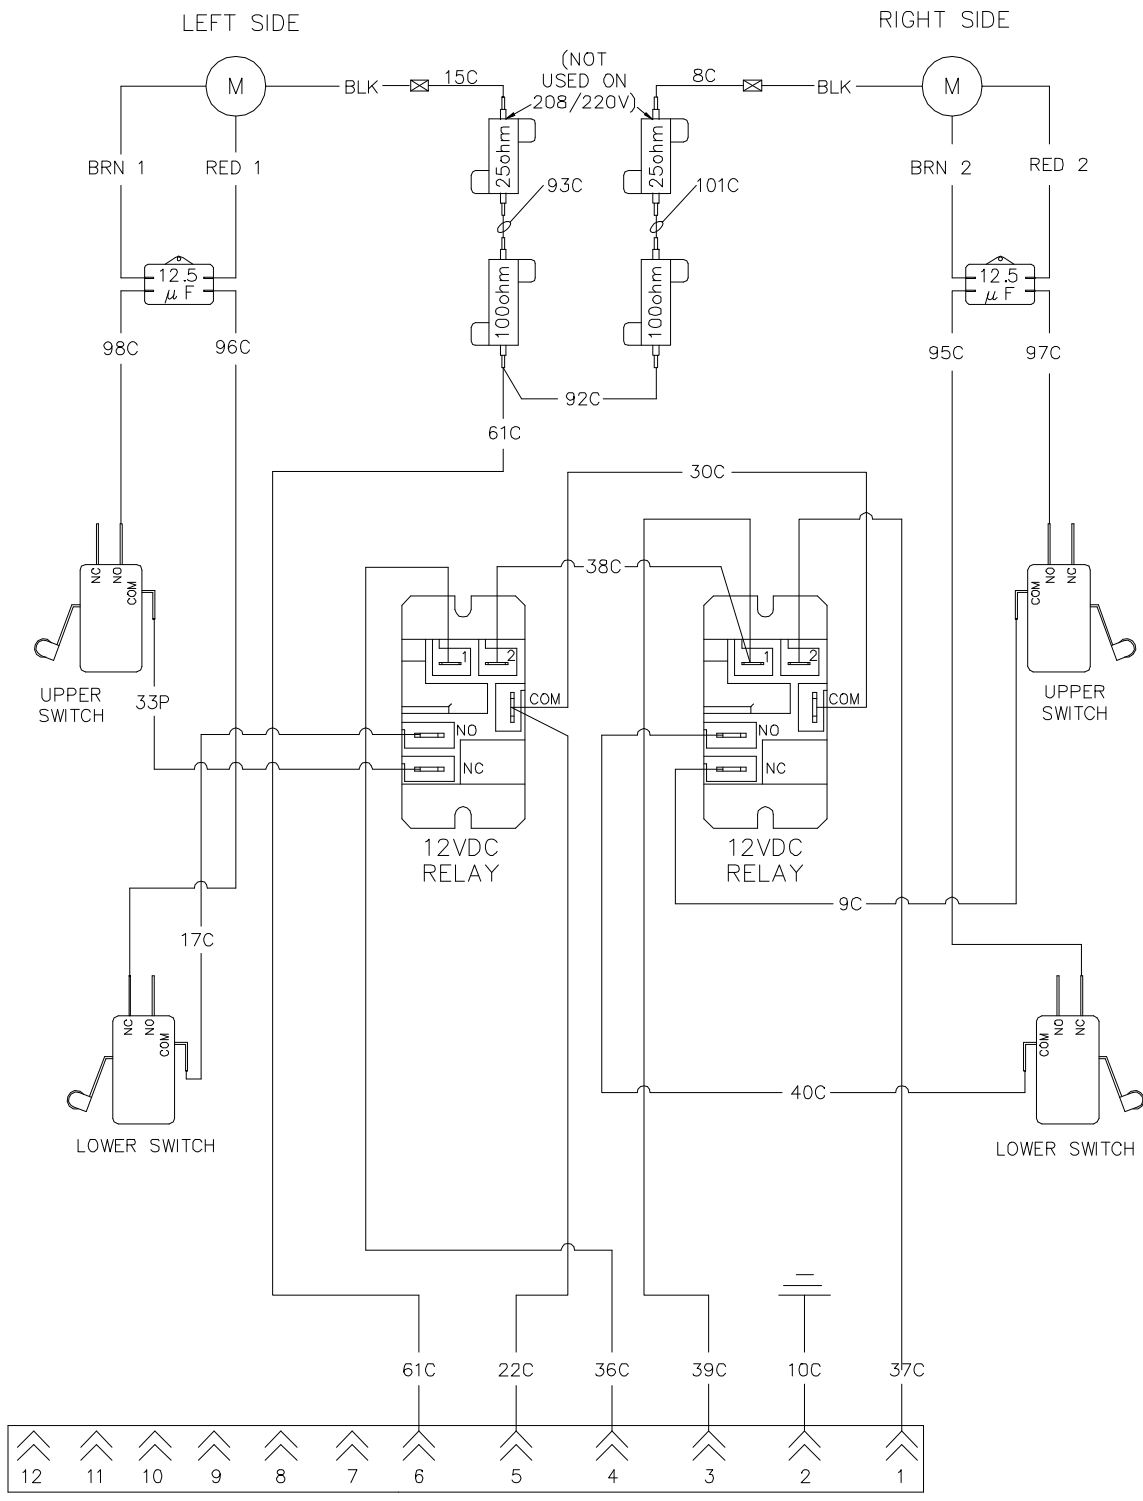


REFERENCES TO LEFT & RIGHT ARE FROM THE REAR OF THE FRYER

8050888D

# RE SERIES MARINE E<sup>4</sup> ELECTRIC FRYERS

## CHAPTER 8: PARTS LIST

### 8.1 Accessories

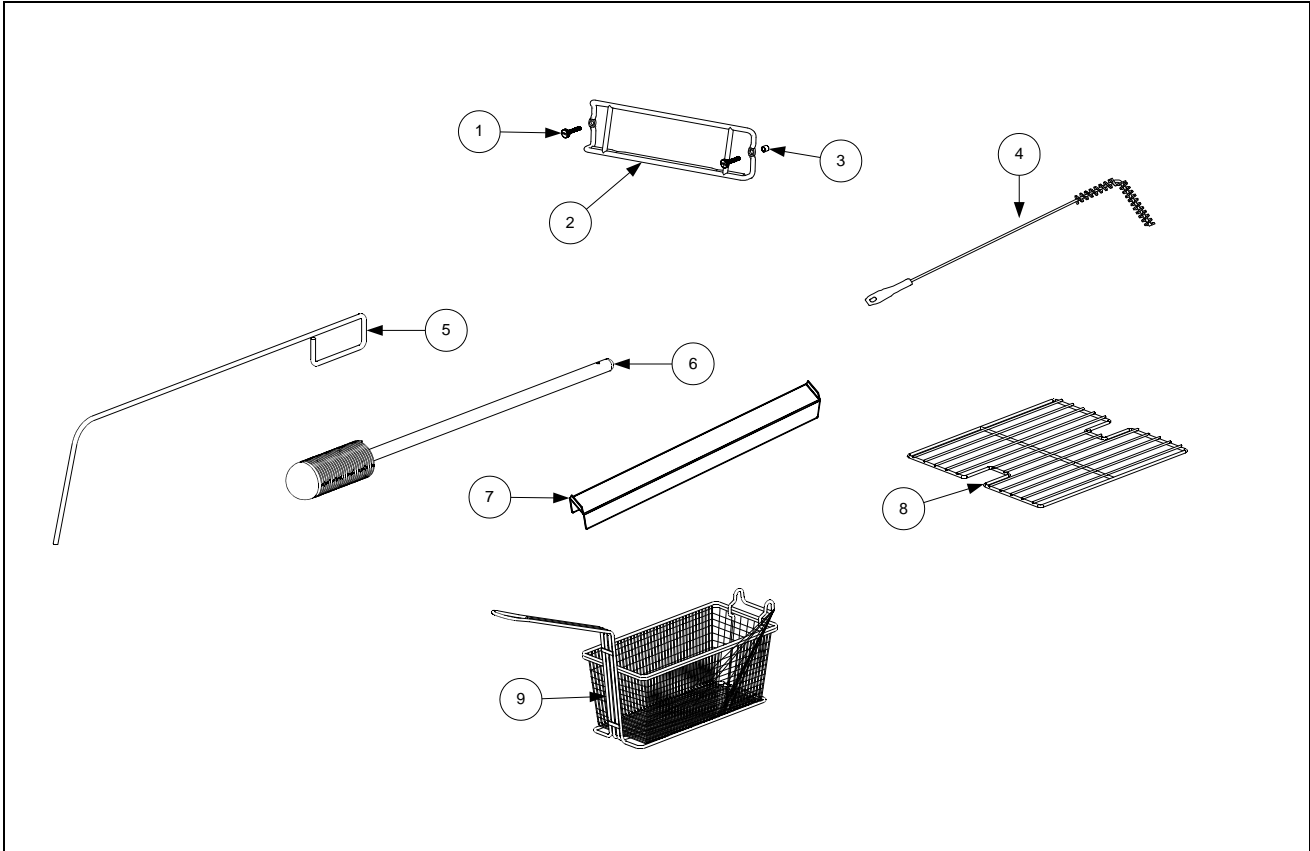


| ITEM | PART #   | COMPONENT                            |
|------|----------|--------------------------------------|
| 1    | 809-0989 | Thumbscrew, ¼ -20 X 1-inch           |
| 2    | 810-2793 | Hanger, Wireform Basket              |
| 3    | 809-0921 | Spacer, Basket Hanger                |
| 4    | 803-0278 | L-Shaped Brush                       |
| 5    | 803-0197 | Cleanout Rod, 27-inch                |
| 6    | 803-0209 | Brush, Frypot                        |
| 7    | 210-9083 | Connecting Strip, Frypot             |
| 8    | 803-0132 | Rack, Full-Vat Basket Support        |
| 9    | 803-0271 | Basket, Twin                         |
| *    | 803-0352 | 5/16" Nut Driver                     |
| *    | 803-0293 | Gloves, Hot Oil Neoprene             |
| *    | 803-0002 | Powder, Filter (80-8oz Applications) |
| *    | 803-0170 | Paper, Filter (100-Sheet Pack)       |

\* Not illustrated.

## 8.2 Cabinetry

### 8.2.1 Backs, Panels, Doors, Handles, Sides, Tilt Housings & Top Caps

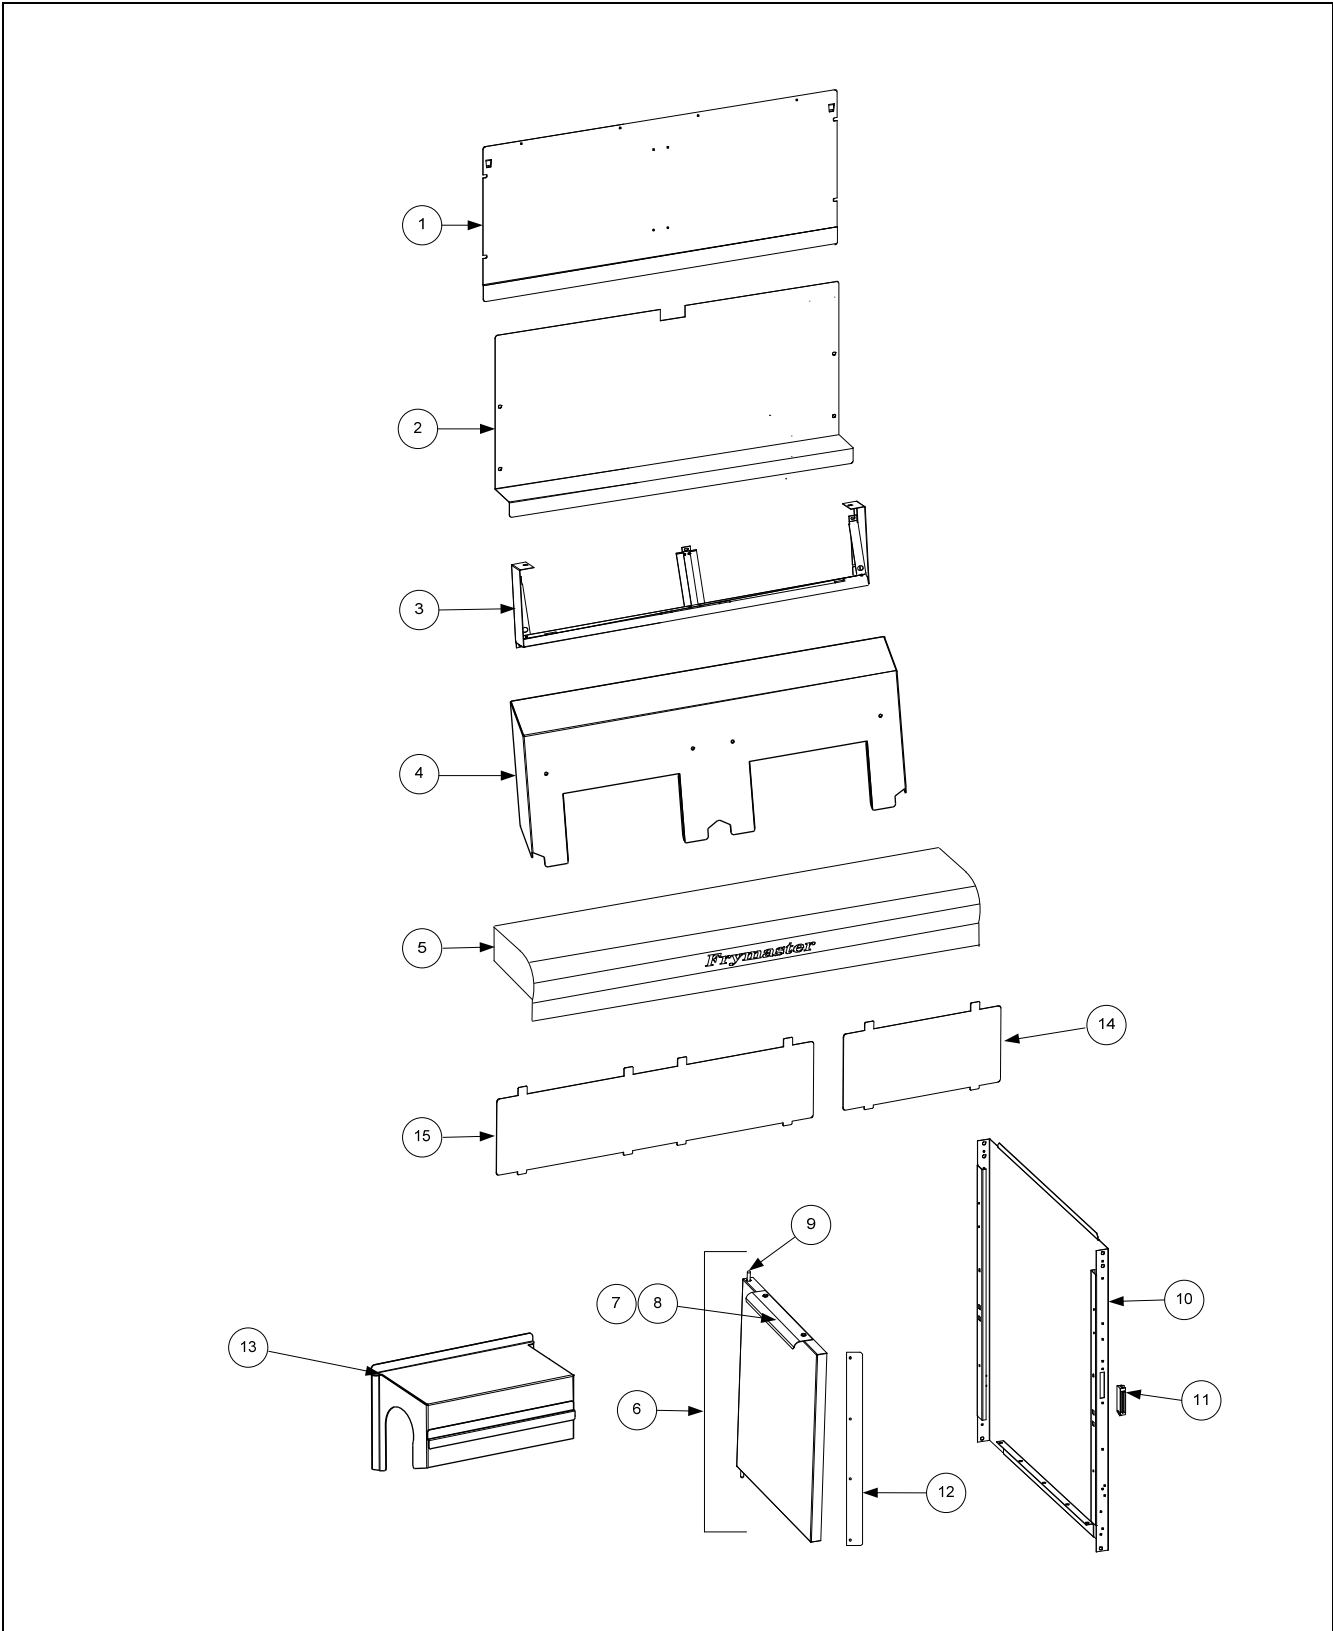


### 8.2.1 Backs, Panels, Doors, Handles, Sides, Tilt Housings & Top Caps

| ITEM | PART #     | COMPONENT   |
|------|------------|---|
| 1    | 230-0675   | Back Panel, Upper Single FPRE117/122  |
|      | 230-0676   | Back Panel, Upper 2-Station FPRE217/222   |
| 2    | 230-0672   | Back Panel, Center Single FPRE117/122   |
|      | 230-0673   | Back Panel, Center 2-Station FPRE217/222  |
| 3    | 106-5016   | Frame, Control Panel, Single FPRE117/122  |
|      | 106-5221   | Frame, Control Panel, 2-Station FPRE217/222   |
| 4    | 823-5567   | Tilt Housing, Single FPRE117/122  |
|      | 823-5484   | Tilt Housing, 2-Station FPRE217   |
|      | 823-6398   | Tilt Housing, 2-Station FPRE222   |
| 5    | 106-5195   | Top Cap, Single FPRE117/122   |
|      | 106-5196   | Top Cap, 2-Station FPRE217/222  |
| *    | 200-9614   | Heat Shield, Single FPRE117/122   |
| *    | 200-9610   | Heat Shield, 2-Station FPRE217/222  |
| 6    | 106-4979   | Door Assembly Single FPRE117/122 (includes items below plus 210-9214)                           |
| *    | 210-9213   | Panel, Door Universal Single FPRE117/122  |
| *    | 210-9215   | Liner, Door Universal Single FPRE117/122  |
| *    | 809-0500   | Screw, #10 – ½ Hex TR HD SS   |
| *    | 826-1343   | Spring, Door Pin Hinge Single FPRE117/122 and FPRE217/222 (Pkg. of 10)                          |
|      | 106-4769   | Door, Left or Right 2-Station FPRE217/222 (Left shown – move handle to opposite side for Right) |
| 7    | 809-0500   | Screw, #10 X ½-inch Hex Head FPRE217/222  |
| 8    | 210-9214   | Handle, Door  |
| 9    | 106-4067SP | Pin Assembly, Door FPRE117/122, FPRE217/222   |
| 10   | 231-1588   | Side, Cabinet Left, Single FPRE117/122  |
|      | 231-0326   | Side, Cabinet Left, 2-Station FPRE217/222   |
|      | 232-1588   | Side, Cabinet Right, Single FPRE117/122   |
|      | 232-0326   | Side, Cabinet Right, 2-Station FPRE217/222  |
| 11   | 810-1105   | Magnet, Door  |
| 12   | 210-9086   | Door Tab  |
| *    | 809-0123   | Screw, #10 –3/4 Truss Slotted Head  |
| *    | 826-1376   | Nut KEPS 10-32 HX ZP (Pkg. of 10)   |
| *    | 210-9188   | Hinge, Door Single FPRE117/122  |
| *    | 809-0970   | Retaining Ring – Door Hinge Pin   |
| 13   | 823-5656   | Cove, Element Tilt Housing  |
| 14   | 210-5623   | Bezel, Insert for Remote Single-Controller  |
| 15   | 210-9085   | Bezel, Insert for Remote Double-Controller  |

\* Not illustrated.

## 8.2.2 Cabinet Bases, Braces, and Associated Parts

### 8.2.2.1 FPRE117/122 Single

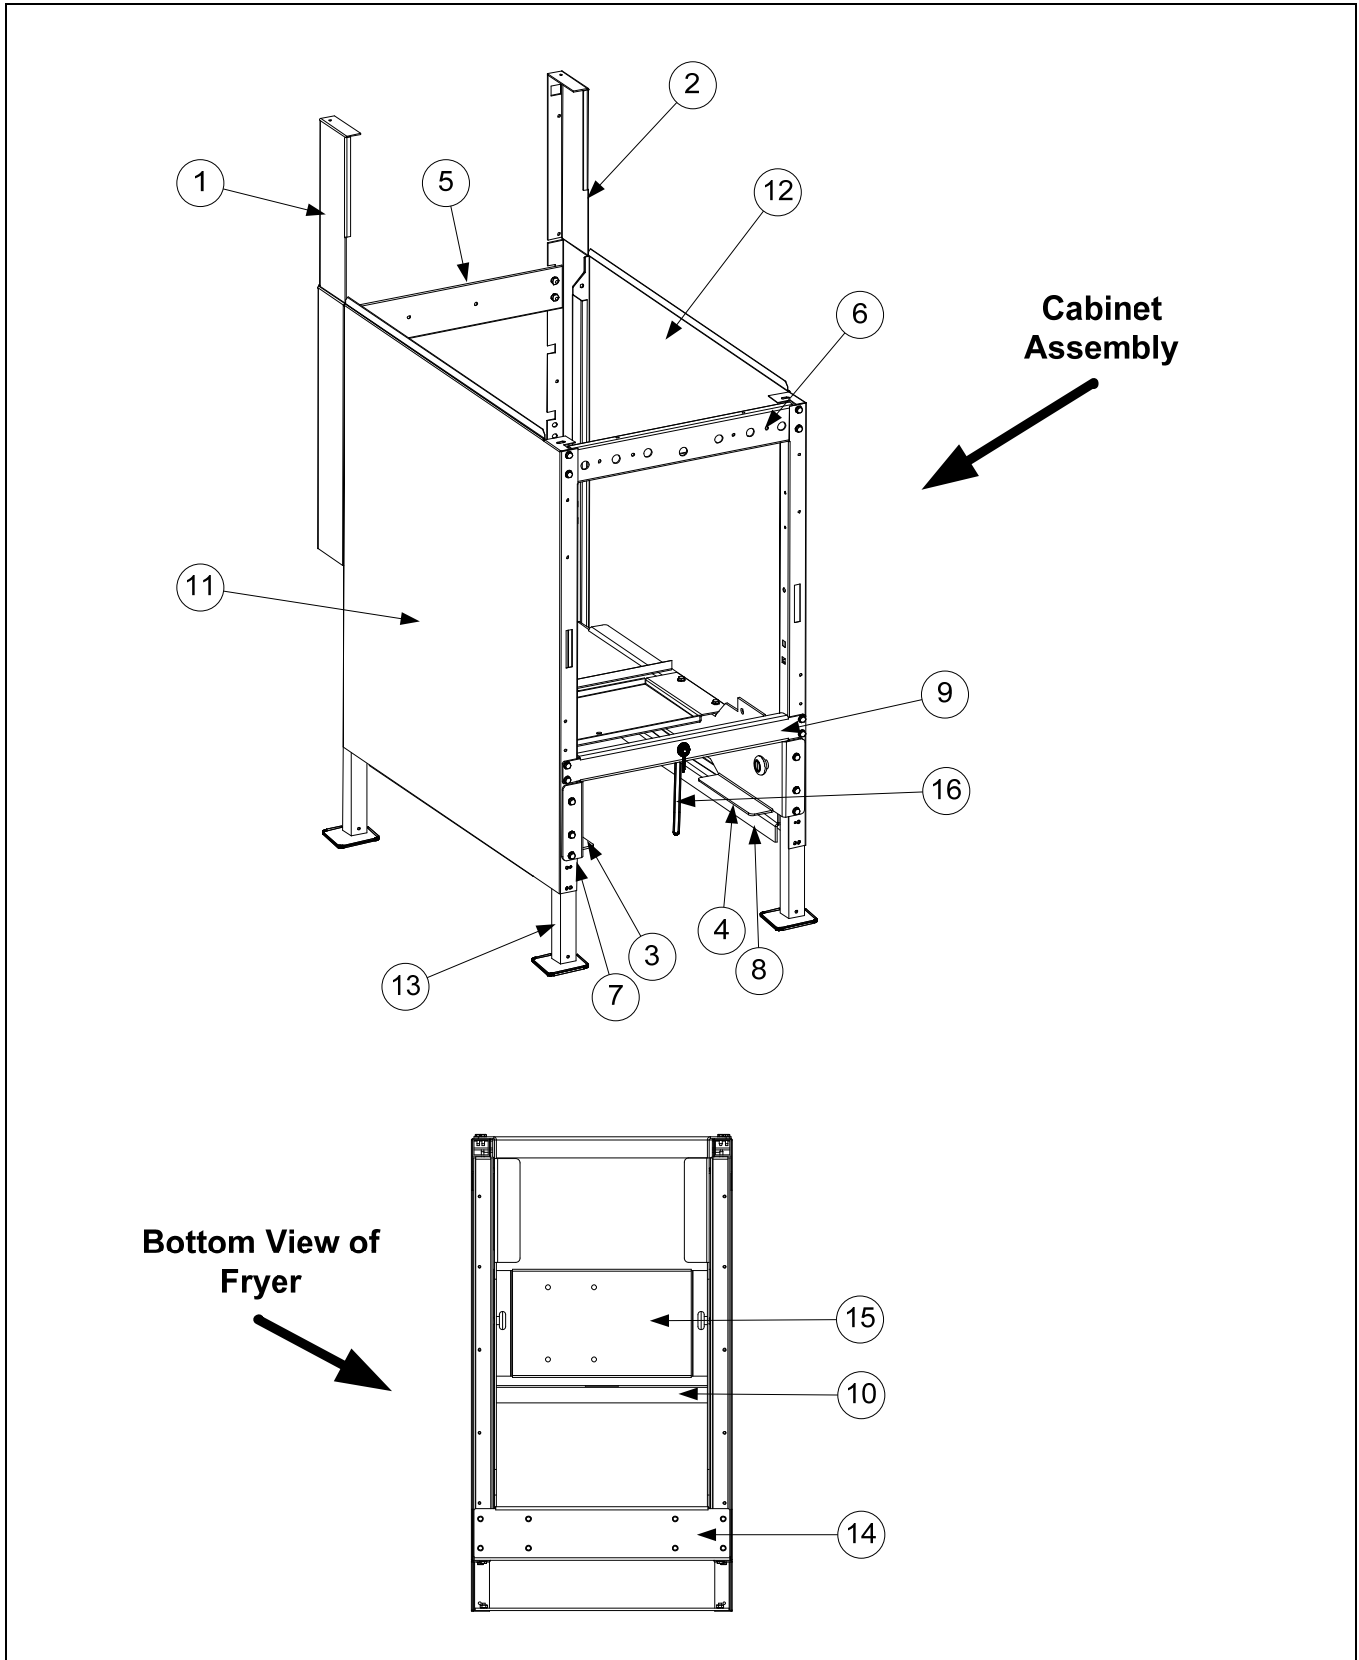




### 8.2.2.1 FPRE117/122 Single

| ITEM | PART #   | COMPONENT                                |
|------|----------|--|
|      | 106-6452 | Cabinet Assembly Single Footprint Marine |
| 1    | 106-4947 | Upright Assembly, Enclosure Left         |
| 2    | 106-4946 | Upright Assembly, Enclosure Right        |
| 3    | 106-6457 | Support Assembly, Left                   |
| 4    | 106-6458 | Support Assembly, Right                  |
| 5    | 230-1502 | Brace, Single Rear Horizontal            |
| 6    | 230-1503 | Brace, Single Front Horizontal           |
| 7    | 230-1510 | Channel, Left Side                       |
| 8    | 230-1509 | Channel, Right Side                      |
| 9    | 230-1505 | Support, Cabinet Cross                   |
| 10   | 230-1515 | Brace, Contactor Box Locking             |
| 11   | 231-1588 | Side, Cabinet Left                       |
| 12   | 232-1588 | Side, Cabinet Right                      |
| 13   | 823-5877 | Leg                                      |
| 14   | 823-5589 | Channel, Rear Cabinet                    |
| 15   | 824-1716 | Bridge, Pump/Motor                       |
| 16   | 823-5313 | Filter Pan Stop                          |
| *    | 809-0782 | Washer, 5/16 SS Flat                     |
| *    | 810-0783 | Cotter Pin                               |
| *    | 826-1362 | Nut, 1/4-20 Hex (Pkg. of 10)             |
| *    | 809-0191 | Washer, 1/4 Lock Spring ZP               |
| *    | 809-0500 | Screw, #10 - 1/2 Hex Head SS             |
| *    | 809-0417 | Nut, Flange 1/4 - 20                     |
| *    | 809-0508 | Bolt, 14 - 20 x 1 1/4 AT HX HD SS        |

\* Not illustrated.

### 8.2.2.2 FPRE217/222 Double Station Fryer

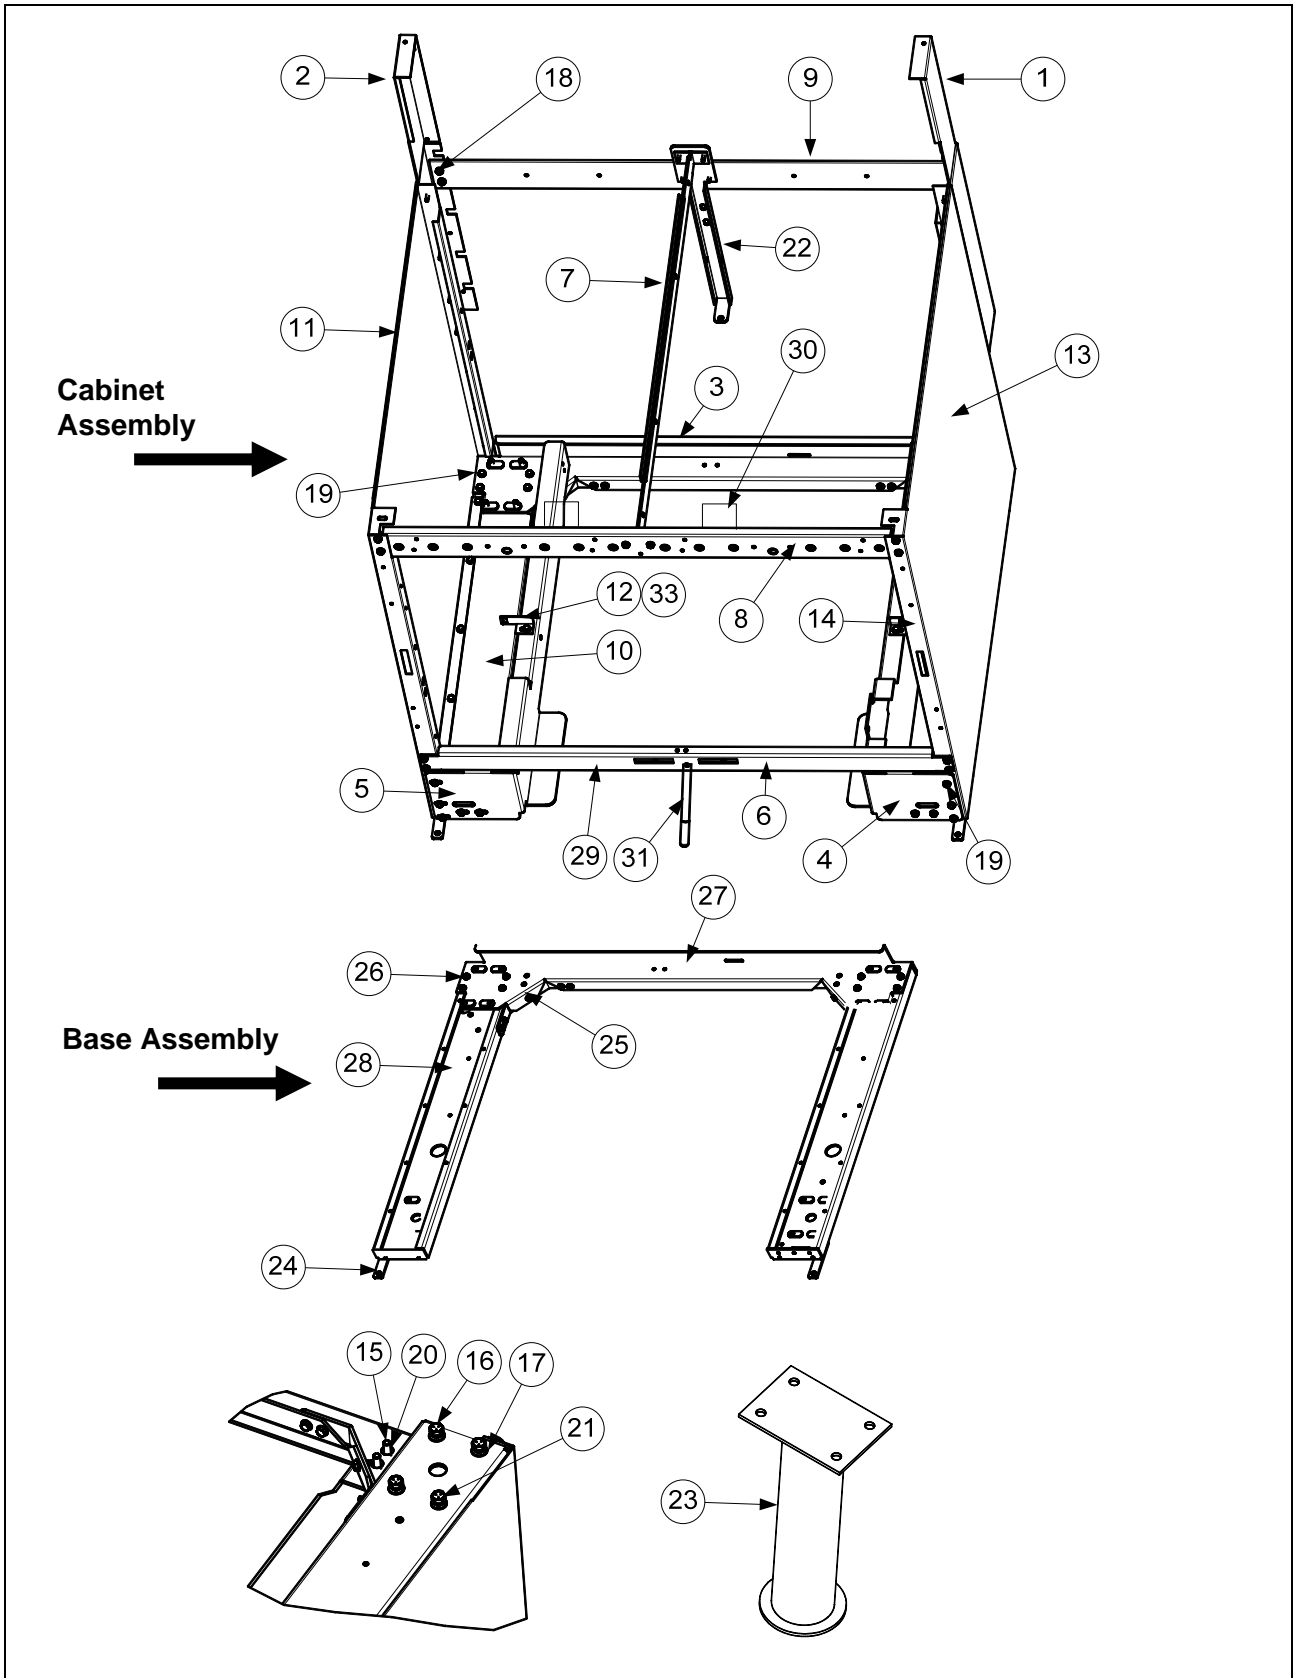


### 8.2.2.2 FPRE217/222 Double Station Fryer

| ITEM | PART #   | COMPONENT   |
|------|----------|---|
|      | 106-4919 | Cabinet Assembly, FPRE Electric Double S/S          |
| 1    | 106-4946 | Upright Assembly, Right                             |
| 2    | 106-4947 | Upright Assembly, Left                              |
| 3    | 106-4767 | Base Assembly, FPRE Double Electric                 |
| 4    | 210-8978 | Support, Right Filter Pan                           |
| 5    | 210-8979 | Support, Left Filter Pan                            |
| 6    | 210-8984 | Support, Cross Cabinet                              |
| 7    | 210-8986 | Divider, Cabinet                                    |
| 8    | 210-8987 | Brace, Front Horizontal Two-Station Fryer           |
| 9    | 210-8989 | Brace, Rear Horizontal Two-Station Fryer            |
| 10   | 210-9116 | Shield, Channel                                     |
| 11   | 231-0326 | Side, Left Cabinet                                  |
| 12   | 231-0811 | Bracket, RE LH Contactor Box Mounting Station 1     |
| 13   | 232-0326 | Side, Right Cabinet                                 |
| 14   | 232-0811 | Bracket, RE RH Contactor Box Mounting Station 2     |
| 15   | 826-1389 | Screw, Hex Head 1/4"-20x 3/4" (Pkg. of 10)          |
| 16   | 809-0190 | Washer, Flat 1/4" SS                                |
| 17   | 809-0191 | Washer, 1/4" Lock Spring                            |
| 18   | 826-1376 | Nut, 10-32 Keps Hex (Pkg. of 10)                    |
| 19   | 826-1374 | Screw, #10x 1/2-inch Hex Washer Head (Pkg. of 25)   |
| 20   | 809-0417 | Nut, 1/4" -20 Hex Flange                            |
| 21   | 809-0429 | Bolt, 1/4"-20 x 2-inch Hex Head                     |
| 22   | 824-1488 | Bracket, Rear Support                               |
| 23   | 823-5241 | Leg, Marine Shipboard (Mounts with Items 20 and 21) |
| 24   | 210-9033 | Hinge, Door   |
| 25   | 210-8993 | Brace, Rear Channel Corner                          |
| 26   | 809-0500 | Screw, #10 X 1/2-inch Hex Washer Head SS            |
| 27   | 823-5105 | Channel, Base Rear Two-Station Fryer                |
| 28   | 823-5106 | Channel, Base Side                                  |
| 29   | 810-2346 | Magnet, Door  |
| 30   | 210-9023 | Bracket, Frypot                                     |
| 31   | 823-5313 | Filter Pan Stop                                     |
| *    | 809-0782 | Washer, 5/16 SS Flat                                |
| *    | 810-0783 | Cotter Pin  |

\* Not illustrated.

### 8.3 Drain System Components

#### 8.3.1 FPRE217/222 Euro-Look Drain Tube Sections and Associated Parts

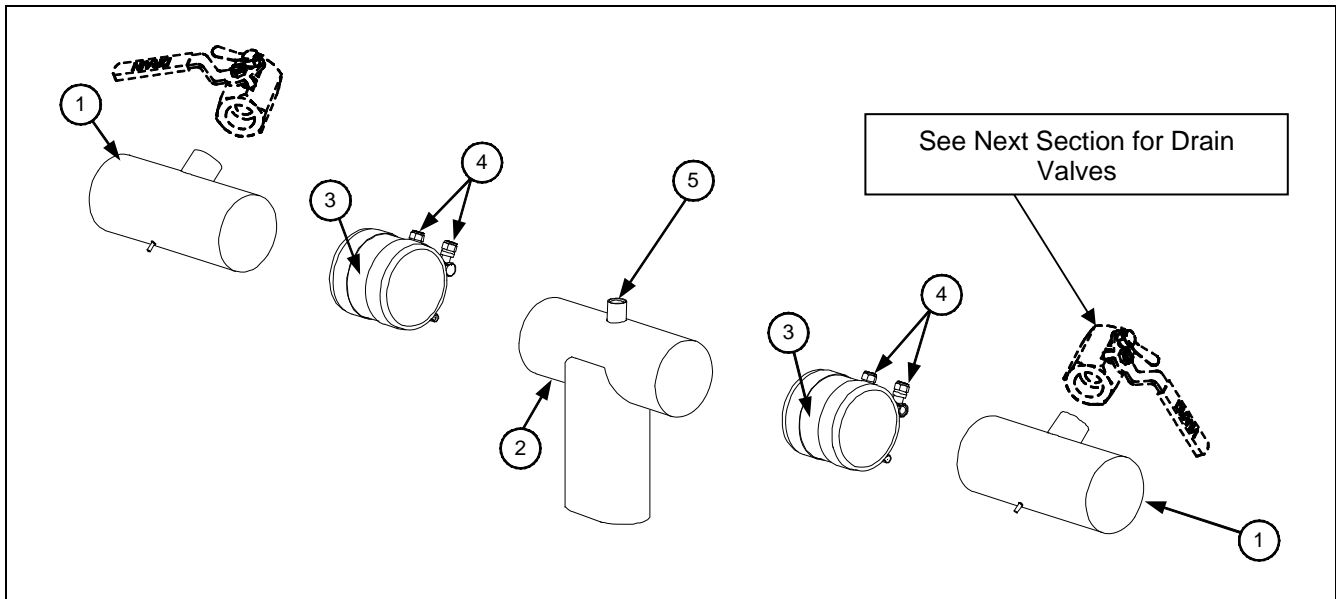


| ITEM | EURO-LOOK PART # | COMPONENT   |
|------|------------------|---|
| 1    |                  | Drain Tube, Left/Right End Short                            |
|      | 823-5048         | Full-Vat  |
| 2    | 823-5049         | Drain Outlet  |
| 3    | 816-0625         | Sleeve  |
| 4    | 809-0969         | Clamp   |
| 5    | 810-2492         | Fitting, Quick-Connect Straight (receives Teflon vent tube) |
| *    | 811-1071         | Tube, Teflon Vent (sold by the foot)                        |

Not illustrated.

### 8.3.2 Drain Valve Assembly and Component Parts


#### 8.3.2.1 FPRE117/122 Single Drain Valve Assembly

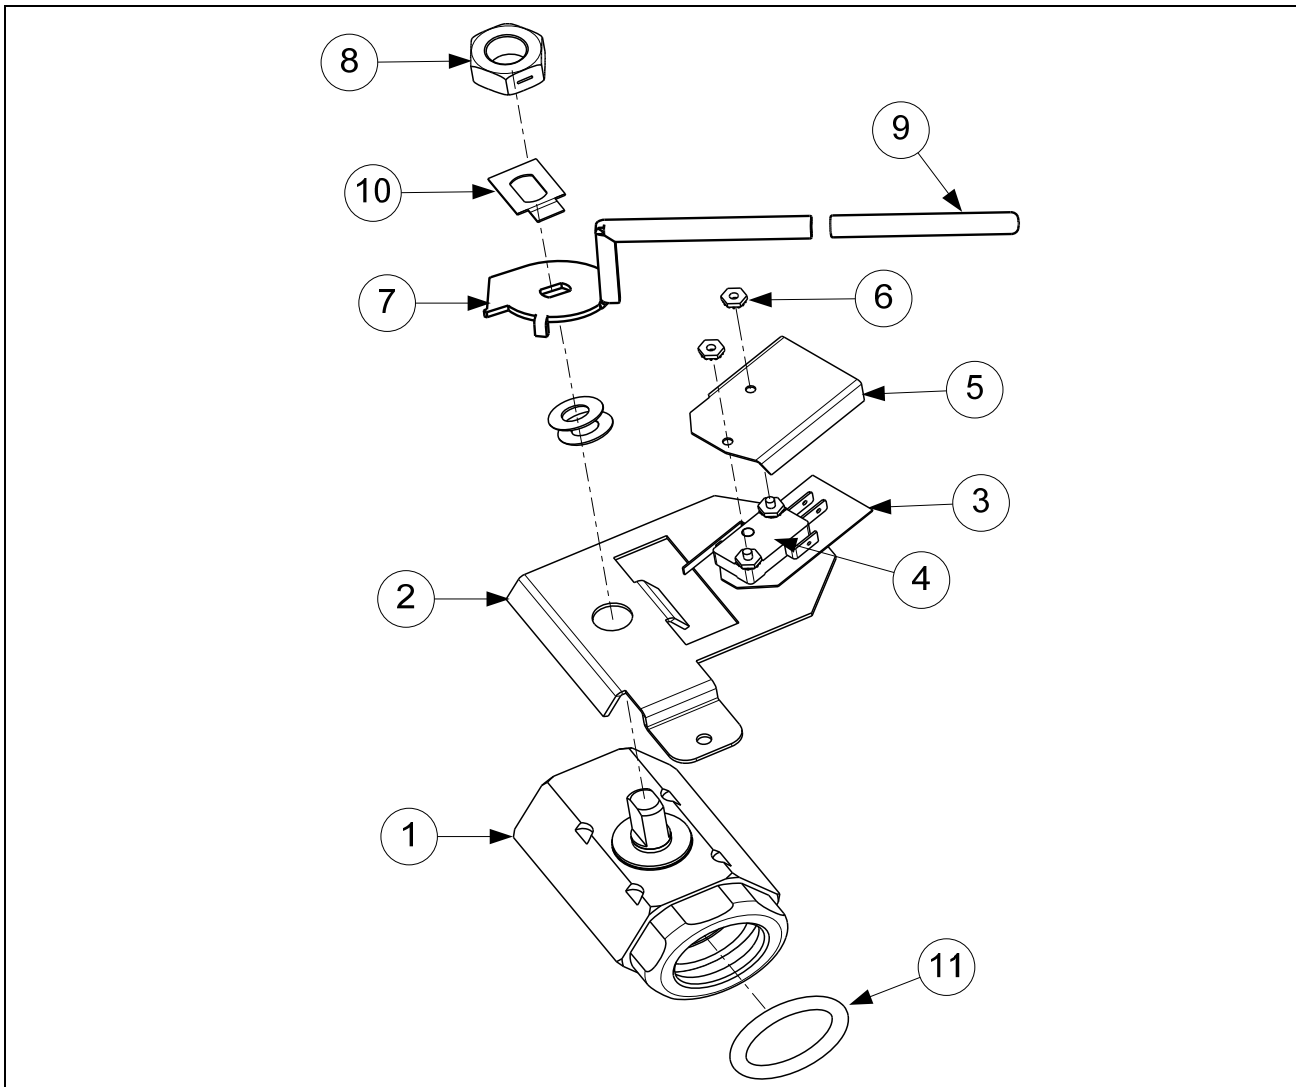

| ITEM | PART #   | COMPONENT   |
|------|----------|---|
|      | 106-4962 | Valve Assembly, Full Vat Drain                    |
| 1    | 810-2946 | Valve, 1¼-inch Full-Vat Drain Single SS           |
| 2    | 106-5391 | Bracket Assembly, Full-Vat Drain Safety Switch    |
| 3    | 816-0220 | Insulation, Drain Safety Switch                   |
| 4    | 807-2103 | Microswitch, CE Straight Lever                    |
| 5    | 210-9178 | Cover, Dual Vat Drain Safety Switch               |
| 6    | 826-1366 | Nut, 4-40 Keps Hex (Pkg. of 25)                   |
| 7    | 824-1602 | Handle, Full-Vat Drain Valve                      |
| 8    | 210-9203 | Nut, ½-13 2-Way Hex Lock SS                       |
| 9    | 816-0639 | Cap, Red Handle                                   |
| 10   | 210-9177 | Retainer, Nut Drain Valve FV                      |
| 11   | 816-0135 | O-Ring, Round Drain                               |
| *    | 823-5592 | Tube, Drain Single Station Fryer Only with Filter |

\* Not illustrated.

### 8.3.2.2 FPRE217/222 Drain Valve Assembly and Component Parts

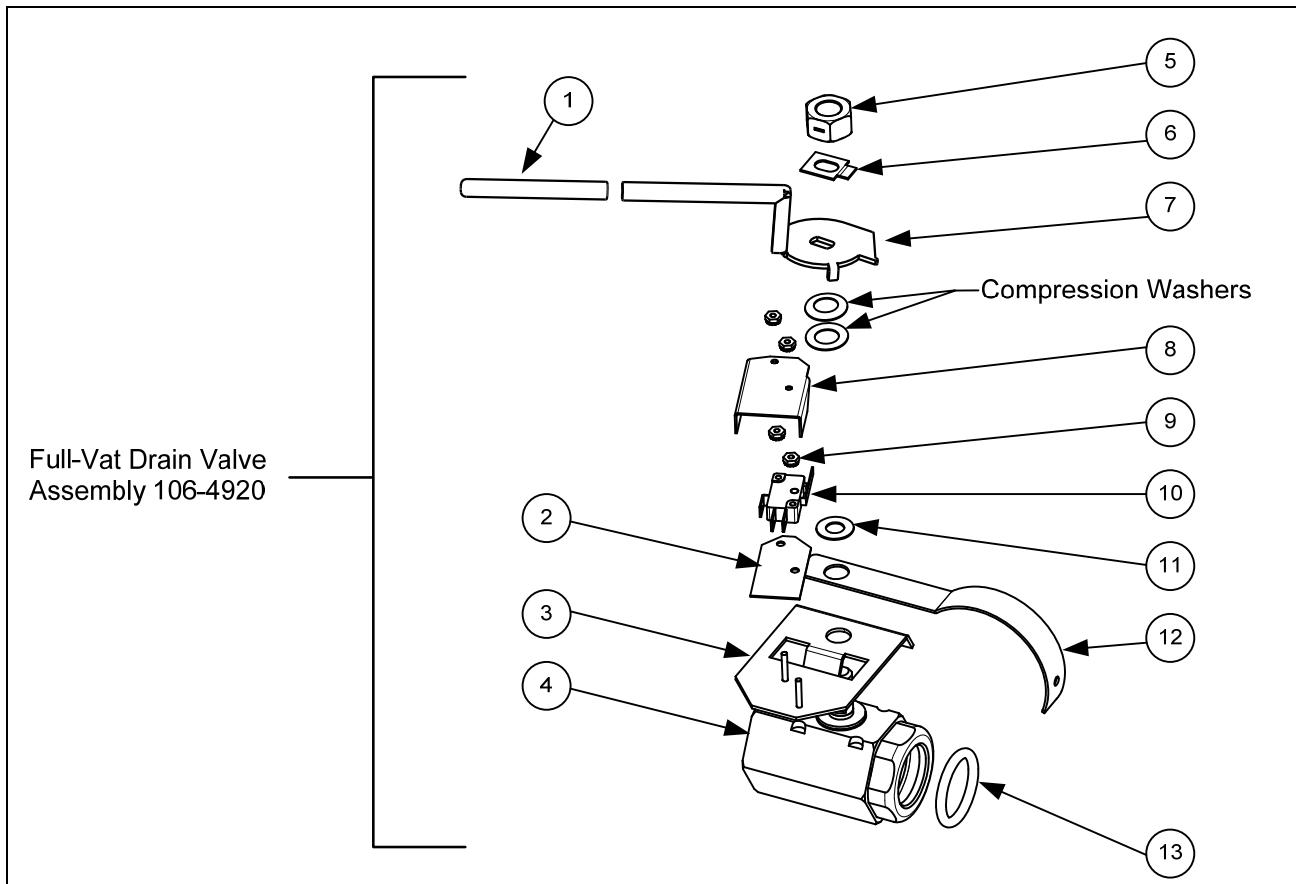


| ITEM | PART #   | COMPONENT                                      |
|------|----------|--|
|      | 106-4920 | Valve Assembly, Full Vat Drain                 |
| 1    | 816-0639 | Cap, Red Handle                                |
| 2    | 816-0220 | Insulation, Drain Safety Switch                |
| 3    | 806-8137 | Bracket Assembly, Full-Vat Drain Safety Switch |
| 4    | 810-2946 | Valve, 1.25-inch Full-Vat Drain                |
| 5    | 809-0540 | Nut, ½-13 2-Way Hex Lock                       |
| 6    | 210-9177 | Retainer, Full-Vat Drain Valve Nut             |
| 7    | 824-1602 | Handle, Full-Vat Drain Valve                   |
| 8    | 210-9178 | Cover, Dual Vat Drain Safety Switch            |
| 9    | 826-1366 | Nut, 4-40 Keps Hex (Pkg. of 25)                |
| 10   | 807-2103 | Microswitch, CE Straight Lever                 |
| 11   | 810-1165 | Washer, Teflon Drain Valve                     |
| 12   | 210-8966 | Support, 3" Drain                              |
| 13   | 816-0135 | O-Ring, Round Drain                            |
| *    | WIR0572  | Wire Bundle, Drain Safety Switch               |

\* Not illustrated.

## 8.4 Electronics and Wiring Components

### 8.4.1 Component Boxes

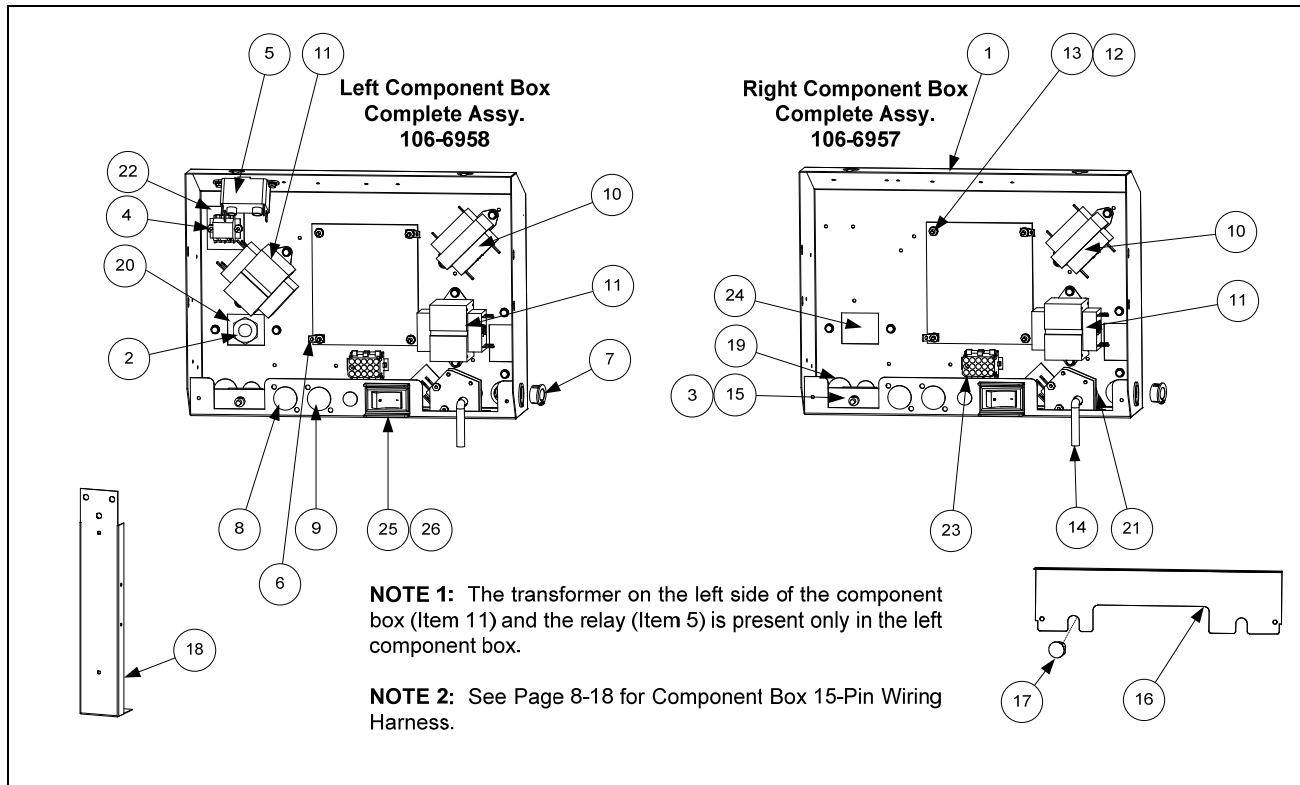


| ITEM | PART #     | COMPONENT  |
|------|------------|--|
| 1    | 106-5846   | Box Assembly, Component  |
| 2    | 809-0582   | Washer, Locking  |
| 3    | 230-1057   | Bracket, Circuit Breaker   |
| 4    | 806-9495SP | Terminal Block and Wire Assembly   |
| 5    | 807-0012   | Relay, Filter 18 Amp 1/3 HP 24V Coil   |
| 6    | 826-1337   | Terminal, 1/4-inch Push-on (Pkg. of 5)   |
| 7    | 810-0045   | Bushing, .875 Dia. Hole 11/16"   |
| 8    | 807-1947   | Plug, .875   |
| 9    | 810-2446   | Plug, .50 Heyco Double "D"   |
| 10   | 807-0855   | Transformer, 100-120V/12V 20VA   |
| 11   | 807-2180   | Transformer, 208-240V/24V 50VA Filter ( <i>used with 220V Motors</i> )                             |
|      | 807-0800   | Transformer, 100-120V/24V 50VA Filter ( <i>used with 120V Motors</i> )                             |
| 12   | 809-0349   | Spacer, 4mm X 6mm Aluminum   |
| 13   | 106-6811   | Interface Board ( <i>on SMT boards the relays are not replaceable</i> )                            |
|      | 807-3932   | Relay, Heat/Latch 12VDC SPDT 12 Amp Sealed ( <i>on SMT boards the relays are not replaceable</i> ) |
| 14   | 106-5848   | Handle Assembly, Oil Flush FV  |
| 15   | 807-0069   | Circuit Breaker, 10 Amp  |
| 16   | 230-0812   | Guard, Finger  |
| 17   | 810-2445   | Plug, Button .625 Heyco Double "D"   |
| 18   | 210-8995   | Brace, Component Box   |
| 19   | 807-1083   | Bushing, Heyco   |

*continued on the following page....*

### 8.4.1 Component Boxes cont.

| ITEM | PART#    | COMPONENT   |
|------|----------|---|
| 20   | 807-3868 | Strain Relief   |
| 21   | 807-0121 | Bushing, Heyco SB-625-500   |
| 22   | 816-0217 | Paper, Insulating Terminal Block CE   |
| 23   | 106-5750 | Harness, Full Vat Assembly  |
| 24   | 220-0083 | Plate, Strain Relief  |
| 25   | 807-4036 | Switch  |
|      | 807-3575 | Plug, Carling Switch Hole <i>(used in place of a switch on some models)</i> |
| 26   | 230-0834 | Guard, RE Box Switch  |

### 8.4.2 Contactor Boxes

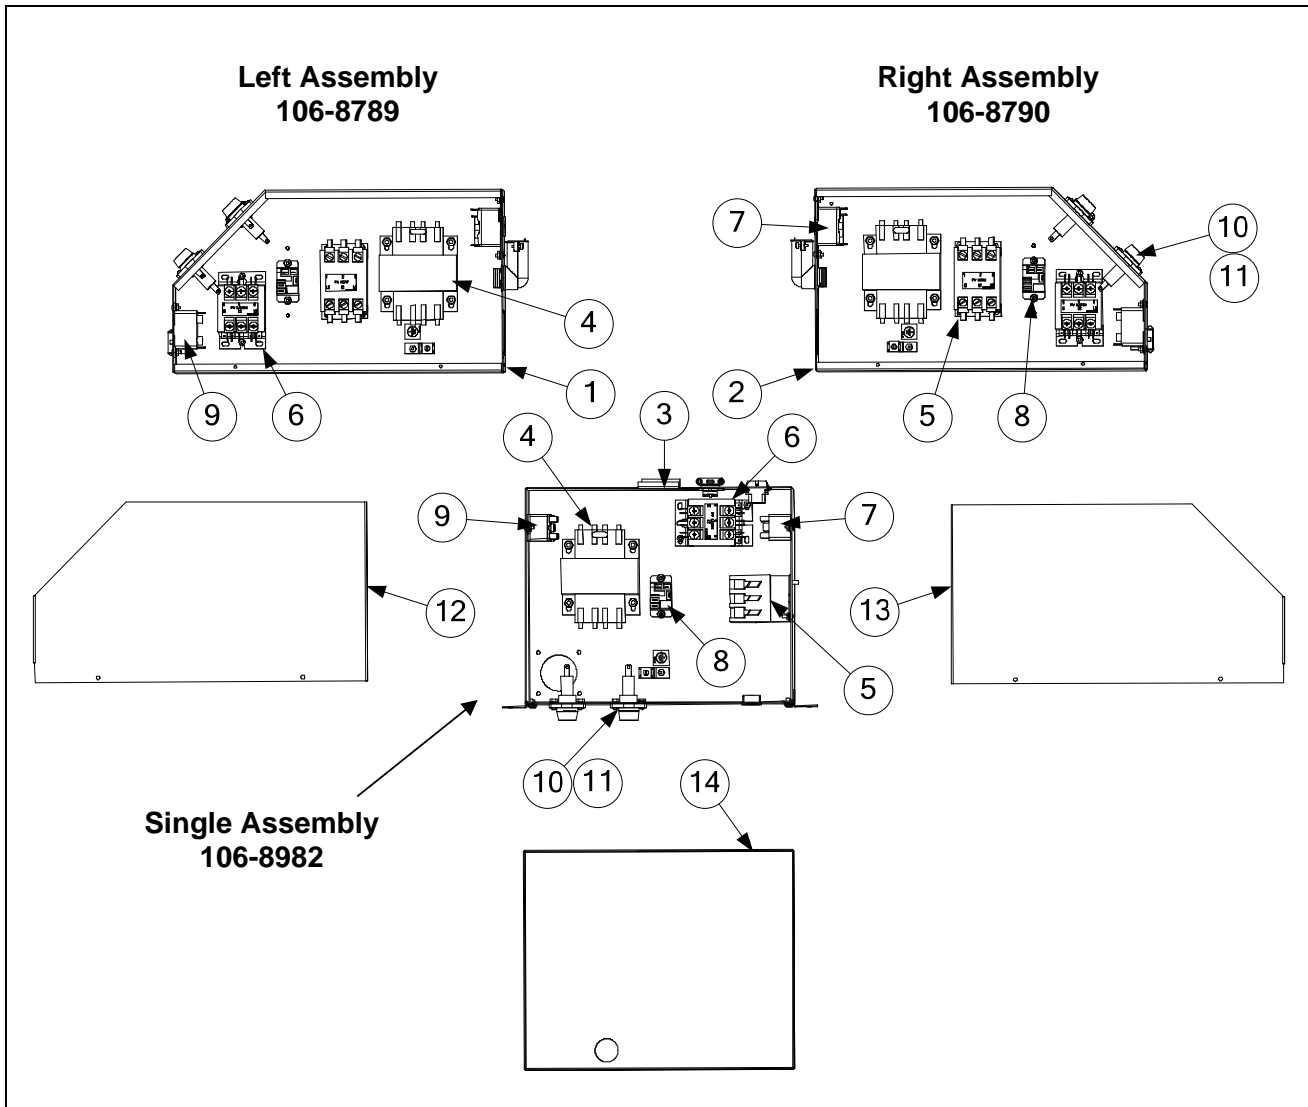

**NOTE 1:** Left and right contactor box assemblies are mirror images of one another. With the exception of the box itself, all components of a left-hand assembly, are the same as those in the corresponding right-hand assembly and vice versa.

**NOTE 2:** See Page 8-17 for Contactor Box Wiring Assembly

*continued on the following page...*




#### 8.4.2 Contactor Boxes cont.

| ITEM | PART #   | COMPONENT                                     |
|------|----------|---|
| 1    | 106-8789 | Box Assembly, FPRE Left Contactor             |
| 2    | 106-8790 | Box Assembly, FPRE Right Contactor            |
| 3    | 106-8982 | Box Assembly, Single Foot Print Contactor     |
| 4    | 807-0331 | Transformer, 480V/120V 150VA                  |
| 5    | 807-2284 | Contactor, 24V 50 Amp Mechanical              |
| 6    | 810-1202 | Contactor, 24V 40 Amp Mechanical              |
| 7    | 807-2434 | Relay, Shunt 24V Coil 18 Amp                  |
| 8    | 807-1683 | Relay, Power 12 VDC                           |
| 9    | 807-0012 | Relay, Tilt 18 Amp 1/3 HP 24V Coil            |
| 10   | 807-0922 | Holder, Bus Fuse                              |
| 11   | 807-2278 | Fuse, 20 Amp                                  |
| 12   | 231-1135 | Cover, RE Left Hand                           |
| 13   | 232-1135 | Cover, RE Right Hand                          |
| 14   | 230-4012 | Cover, RE Single Foot Print                   |
| *    | 231-0811 | Bracket, Left Hand Contactor Box Mounting RE  |
| *    | 232-0811 | Bracket, Right Hand Contactor Box Mounting RE |
| *    | WIR0751  | Wire Assembly, Filter Shunt Relay             |
| *    | WIR0726  | Wire Assembly, Hood Relay                     |
| *    | WIR0712  | Wire Assembly, Latch and Hood Relay           |


\* Not illustrated.

### 8.4.3 Terminal Blocks

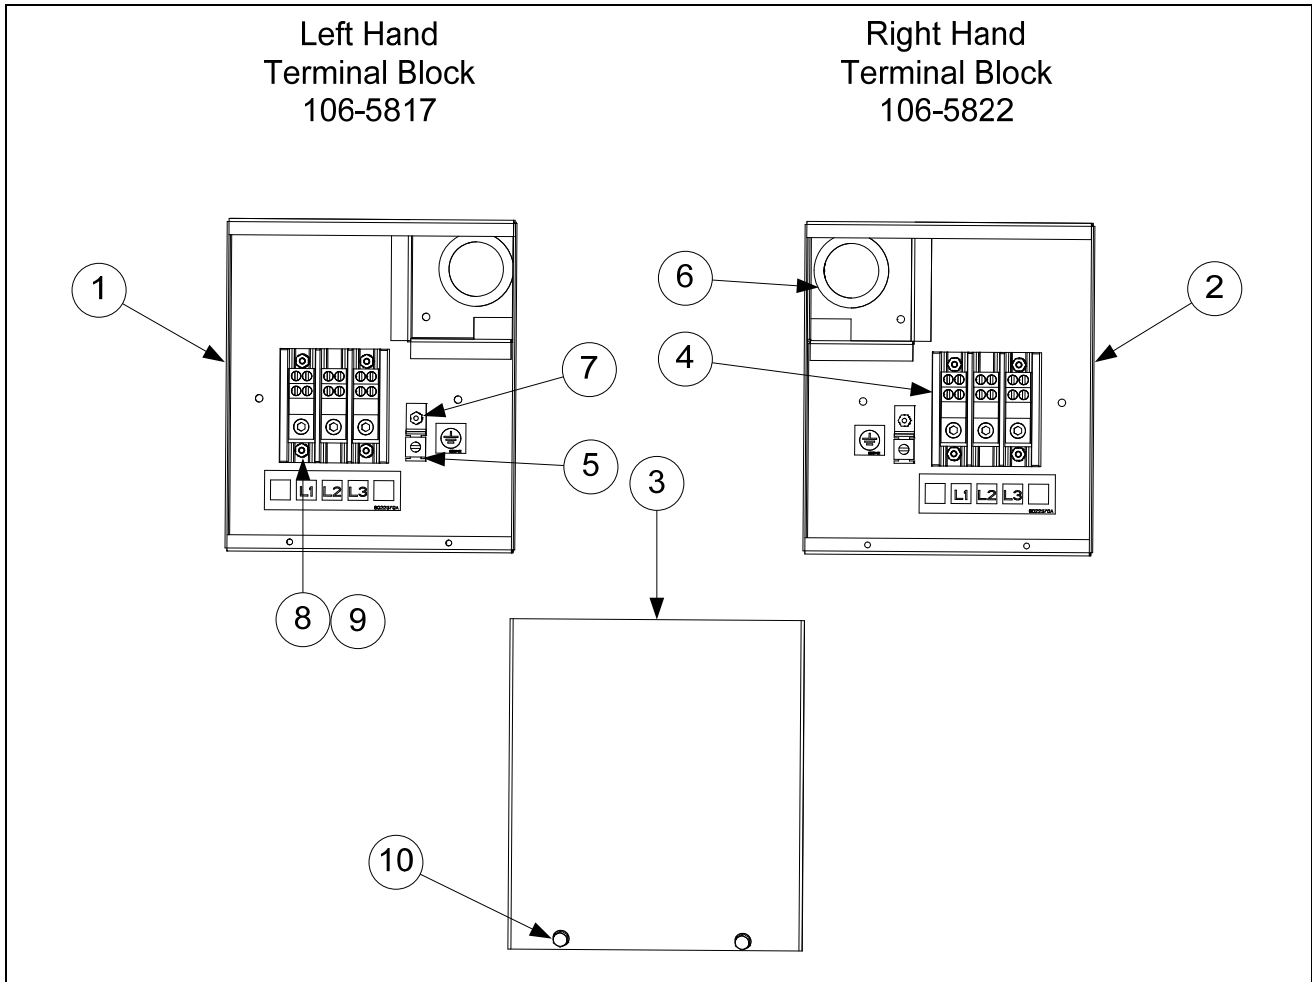

| ITEM | PART #   | COMPONENT                                |
|------|----------|--|
| 1    | 823-5631 | Box, LH Rear Terminal Block              |
| 2    | 823-5632 | Box, RH Rear Terminal Block              |
| 3    | 220-0801 | Cover, Rear Terminal Block Box           |
| 4    | 807-3970 | Block, 3 Pole 600V 175A                  |
| 5    | 807-0070 | Terminal, Ground Lug                     |
| 6    | 807-0128 | Bushing, Insulating Heyco                |
| 7    | 809-0247 | Nut, #8-32 Hex                           |
| 8    | 809-0250 | Nut, #6-32 Hex                           |
| 9    | 826-1363 | Screw, #8-32 x 1/2 Hex Head (Pkg. of 25) |
| 10   | 826-1374 | Screw, #10 - 1/2" Hex Head (Pkg. of 25)  |

### 8.4.4 Heating Element Assembly and Associated Parts

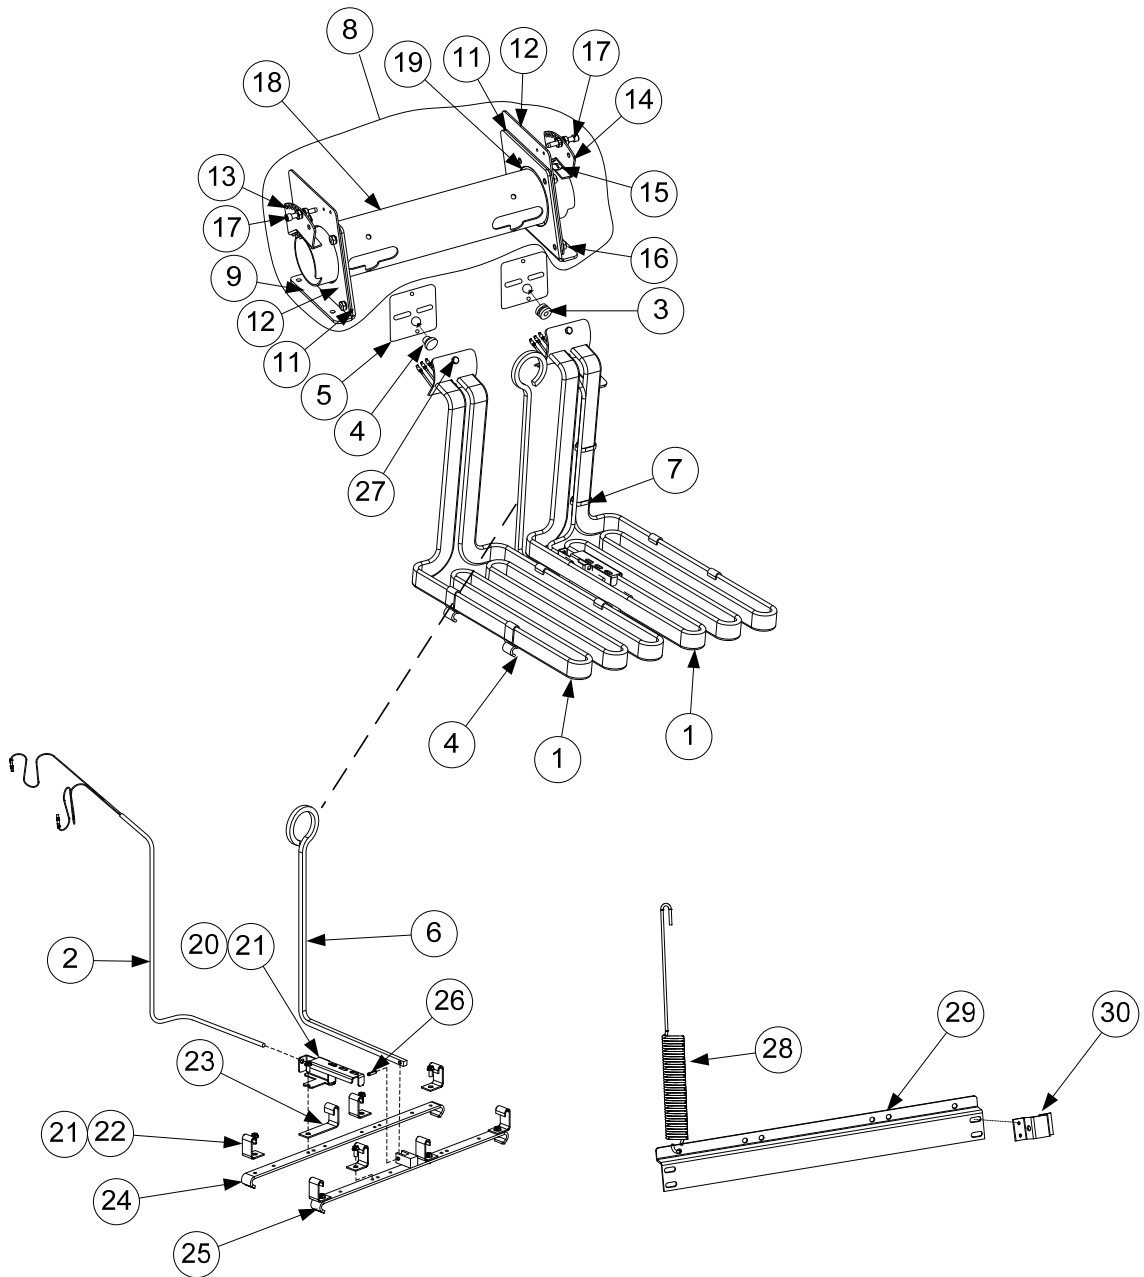

**NOTES:**

The only difference between element assemblies for different voltage and kW ratings is the element itself (Item 1).

Items 28, 29 and 30 are shown as associated parts. They are not part of either assembly.


**This manual references only the new “RE” elements. For previous model fryers and related parts prior to May 2006 see manual 819-6118.**

#### 8.4.4 Heating Element Assembly and Associated Parts cont.

| ITEM | PART #   | COMPONENT  |
|------|----------|--|
|      | 106-5554 | Element Assembly FV 440V 17kW w/ Lift Handle Single FPRE117      |
|      | 106-5558 | Element Assembly FV 480V 17kW w/ Lift Handle FPRE217             |
|      | 108-1715 | Element Assembly FV 230/400V 22 kW w/ Lift Handle FPRE122        |
|      | 106-8547 | Element Assembly FV 440V 22 kW w/ Lift Handle FPRE122            |
|      | 106-8546 | Element Assembly FV 480V 22 kW w/ Lift Handle FPRE222            |
| 1    | 826-2202 | Element, 440V 8.5kW  |
|      | 826-2203 | Element, 480V 8.5kW  |
|      | 826-2206 | Element, 230/400V 11kW   |
|      | 826-2211 | Element, 440V 11kW   |
|      | 826-2209 | Element, 480V 11kW   |
| 2    | 826-2212 | Probe, Temperature Kit RE (includes tie wraps and grommet)       |
| 3    | 816-0681 | Grommet, Probe   |
| 4    | 816-0480 | Plug, .375-inch Dome   |
| 5    | 816-0688 | Gasket, Element  |
| 6    | 810-1233 | Handle, Element Lift SS  |
| 7    | 809-0567 | Tie-Wrap, Metal  |
| 8    | 106-5590 | Tube Assembly RE Element, Full-Vat                               |
| 9    | 106-5588 | Bracket Assembly, LH Element Tube Support                        |
| 10   | 106-5589 | Bracket Assembly, RH Element Tube Support                        |
| 11   | 230-0554 | Plate, Element Tube Support Inner                                |
| 12   | 230-0553 | Plate, Element Tube Support Outer                                |
| 13   | 106-6569 | Bracket Assembly, LH Upper Spring                                |
| 14   | 106-6570 | Bracket Assembly, RH Upper Spring                                |
| 15   | 826-1330 | Screw, 10-32 X 3/8-inch Slotted Truss Head SS (Pkg. of 25)       |
| 16   | 809-0766 | Nut, 10-32 Hex HD SS   |
| 17   | 809-1000 | Screw, 10-32 x 1/4-inch Hex                                      |
| 18   | 106-6037 | Tube, FV Element Mounting  |
| 19   | 810-2993 | Bushing, Tube End Teflon   |
| 20   | 230-0850 | Bracket, Temperature Probe                                       |
| 21   | 809-0518 | Screw, 8-32 X 3/8-inch Slotted Hex Head SS                       |
| 22   | 210-9180 | Clamp, Element (Short)   |
| 23   | 230-0781 | Clamp, Element (Long)  |
| 24   | 230-0849 | Bracket RE, Full-Vat Element Rear                                |
| 25   | 823-5657 | Bracket RE, Full-Vat Element Front                               |
| 26   | 826-1364 | Pin, .125 X .5-inch Split (Pkg. of 25)                           |
| 27   | 809-1003 | Screw, 10-32 X 3/8-inch Hex Head SS (uses 809-0766 Nut 10-32 SS) |
| 28   | 810-3030 | Spring, Element Lift Left  |
|      | 810-3031 | Spring, Element Lift Right                                       |
|      | 810-3339 | Spring, Element Lift Left (22 kW)                                |
|      | 810-3340 | Spring, Element Lift Right (22 kW)                               |
| 29   | 220-1190 | Bracket, Lower Spring Single Foot Print                          |
|      | 220-0464 | Bracket, Lower Spring  |
| 30   | 220-0733 | Bracket, Lower Spring Mating                                     |
| *    | 106-6587 | Magnetic Position Sensor   |
| *    | 810-3007 | Magnet   |
| *    | 230-0794 | Bracket, Magnetic Position Sensor Wire                           |


\* Not illustrated.

### 8.4.5 Remote Digital Controller

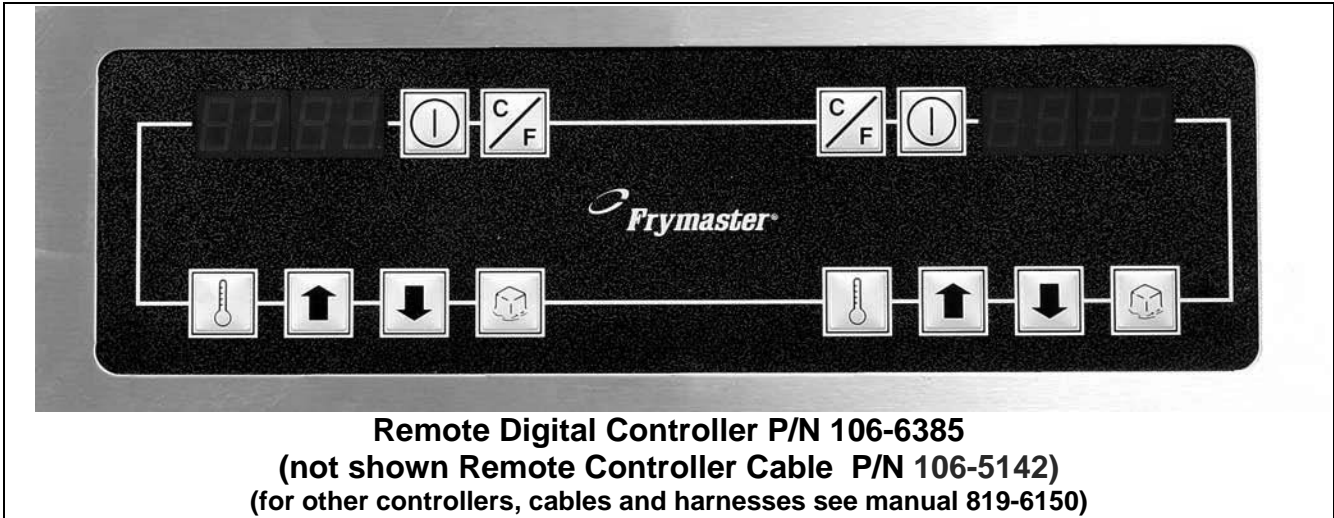


### 8.4.6 Wiring Assemblies and Harnesses


#### 8.4.6.1 Contactor Box Wiring Assembly – 12-Pin Full-Vat C-1

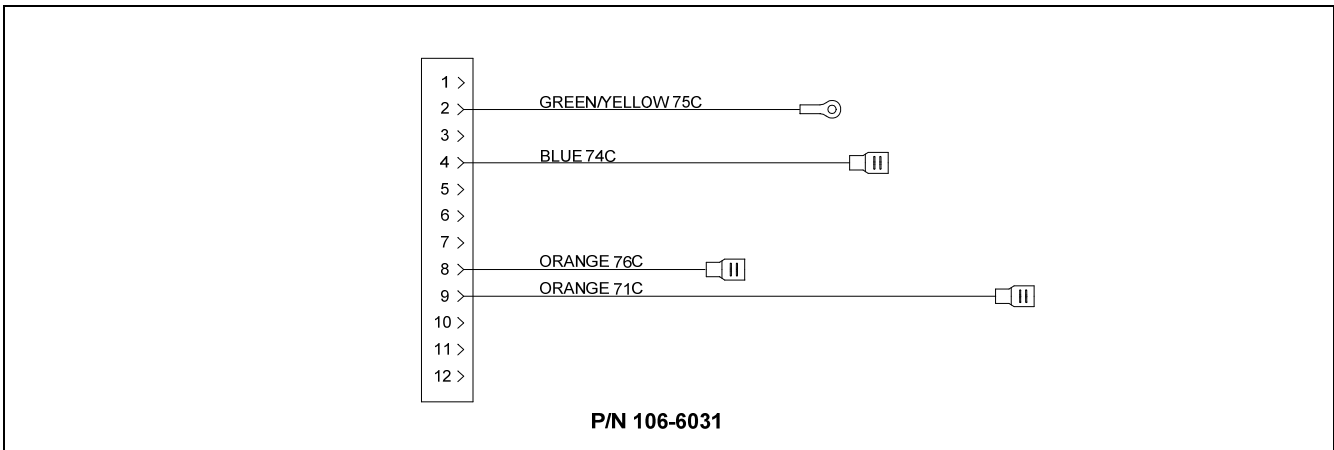


#### 8.4.6.2 Contactor Box Wiring Assemblies – 6-Pin (Left Element)

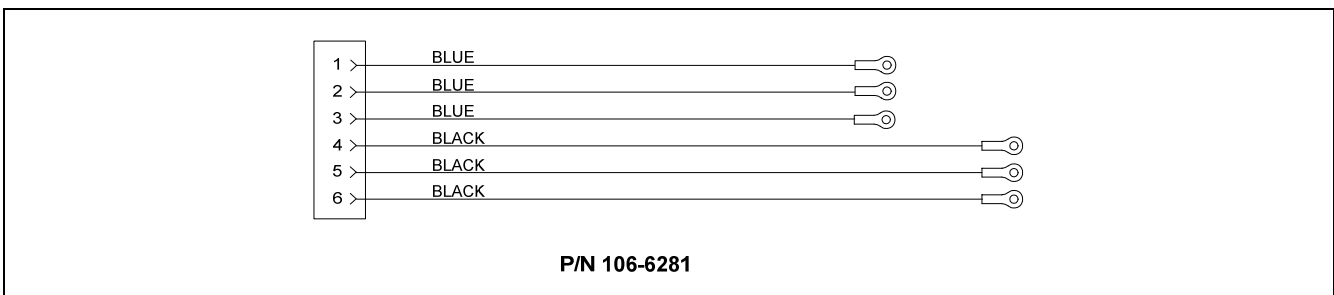


### 8.4.6.3 Contactor Box Wiring Assemblies – 9-Pin (Right Element)

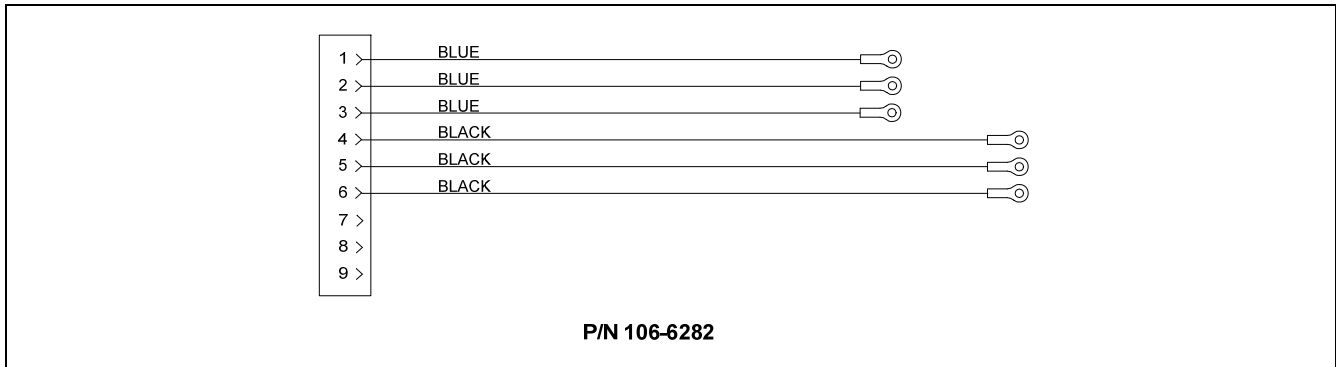

### 8.4.6.4 Main Wiring Harness

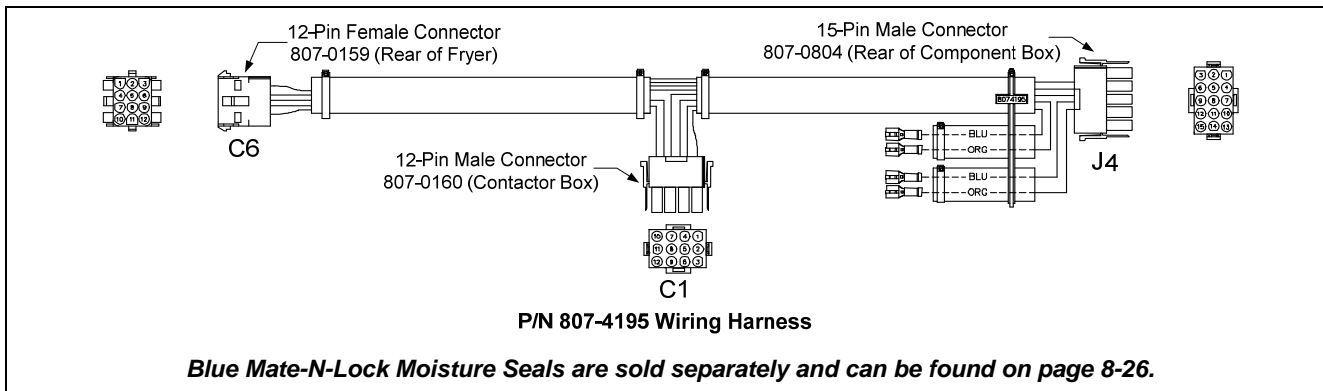


### 8.4.6.5 Component Box and Filter Pump Wiring Harnesses

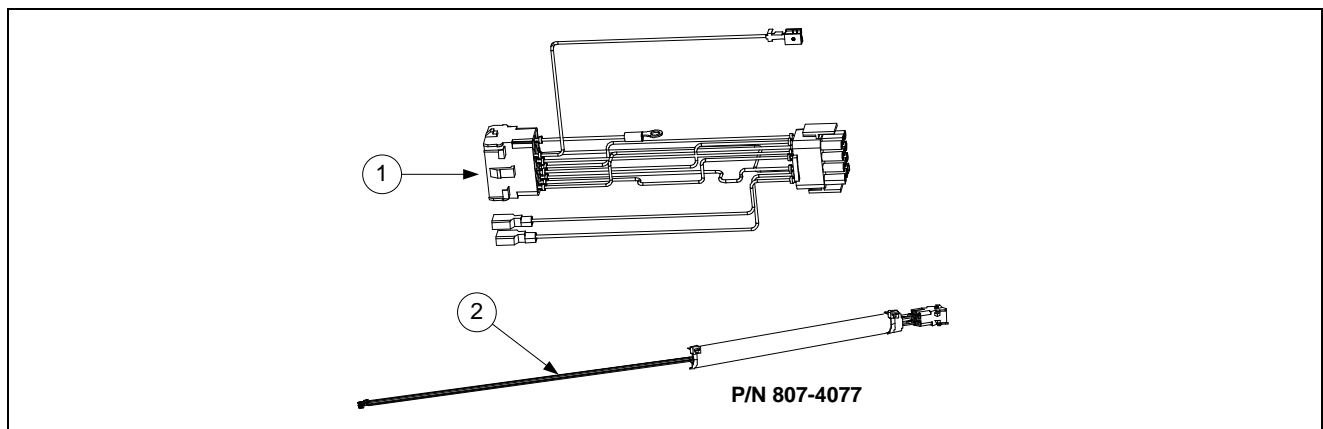

| ITEM | PART #   | COMPONENT   |
|------|----------|---|
| 1    | 106-5750 | Full Vat Control Harness J4 to J2 ( <i>WIR0765 required with this harness</i> ) |
| 2    | 106-5935 | Filter Pump C2 to Component Box Wiring Harness                                  |

## 8.5 Filtration System Components

### 8.5.1 FPRE117/122 Single Filtration Components

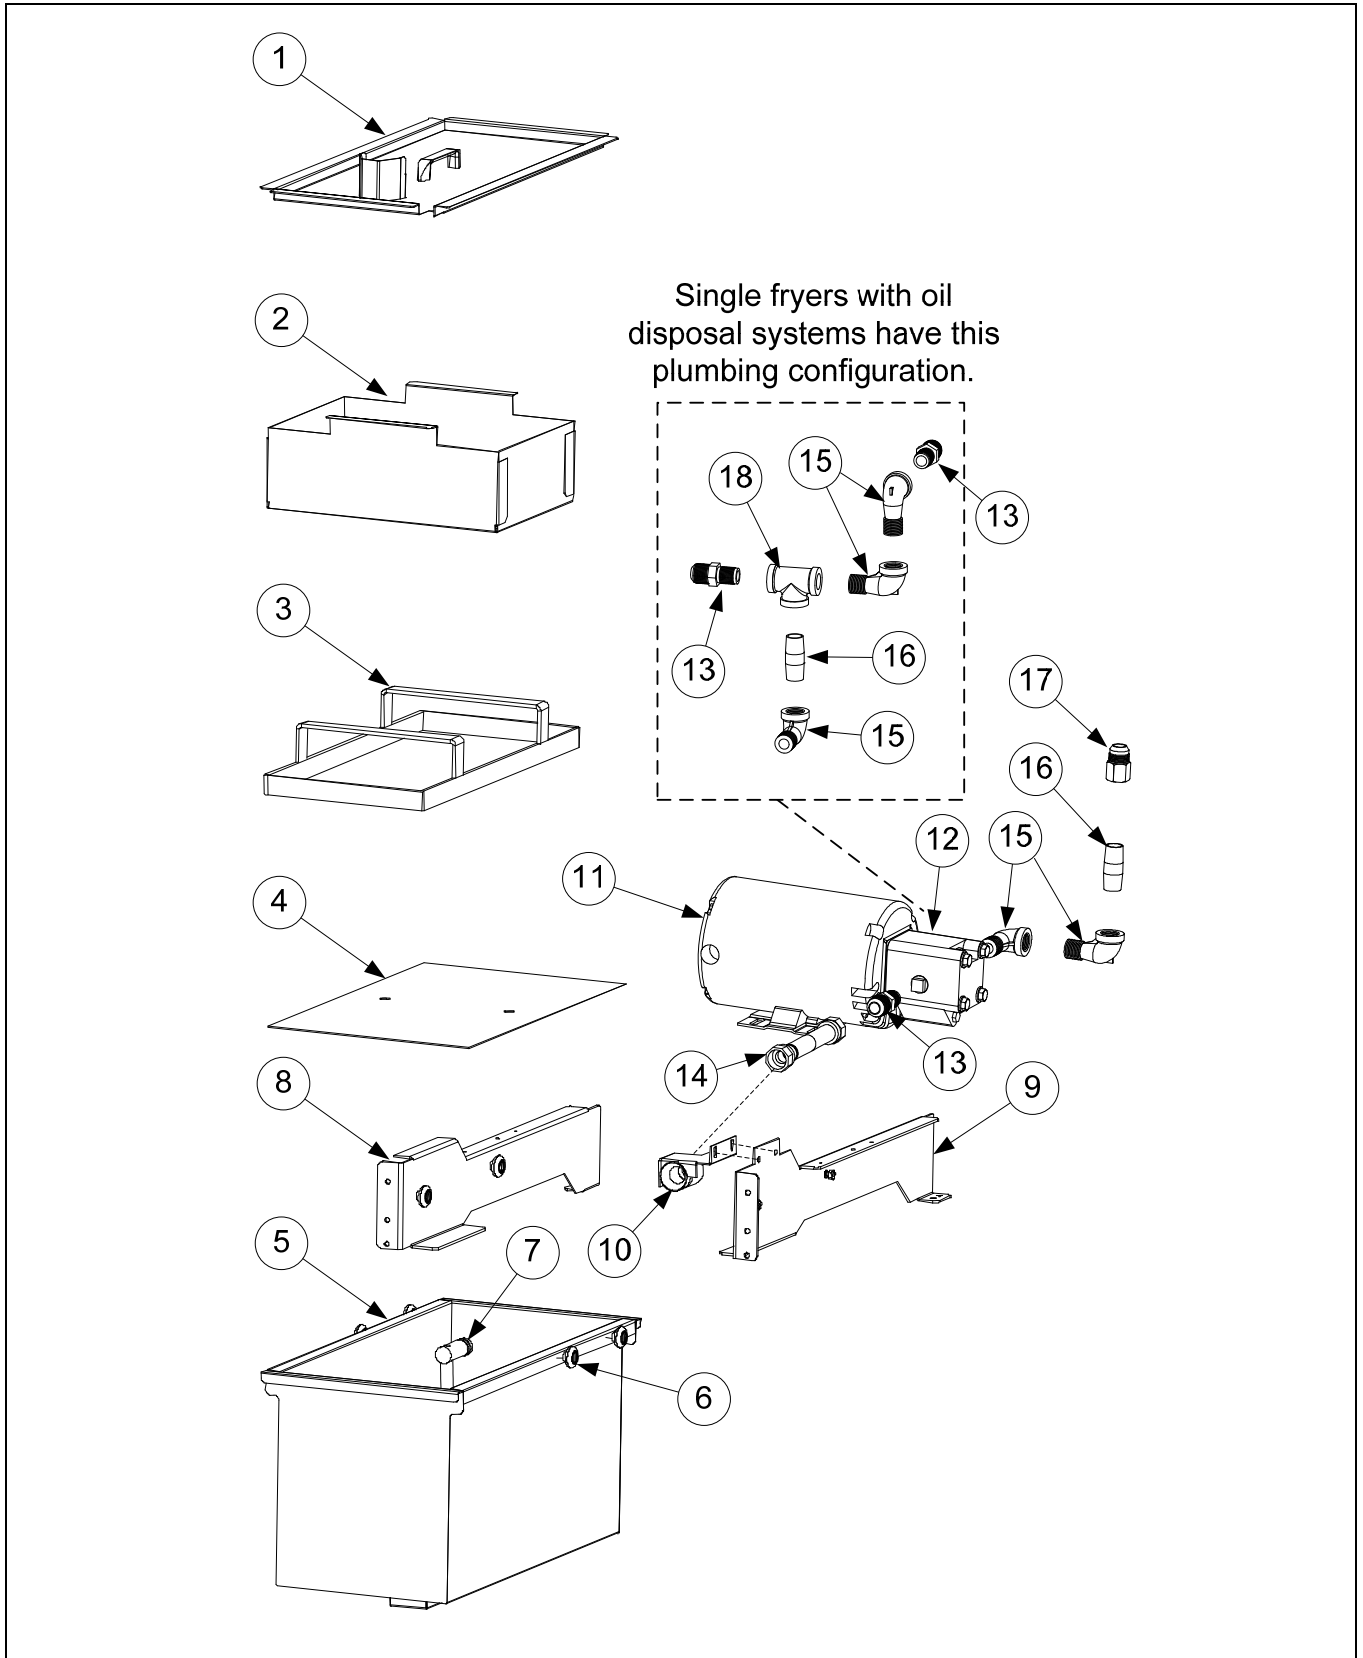


### 8.5.1 FPRE117/122 Single Filtration Components cont.

| ITEM | PART #     | COMPONENT   |
|------|------------|---|
|      | 106-6519   | Assembly, Filter Pan Single FPRE117/122 includes pan and lid  |
| 1    | 106-6516   | Lid, Assembly Single FPRE117/122                              |
| 2    | 824-1707   | Crumb Tray  |
| 3    | 823-5774   | Hold Down Ring - Paper  |
| 4    | 220-1316   | Sana Grid Filter Screen                                       |
| 5    | 823-5879   | Pan, Filter   |
| 6    | 810-2198   | Roller, Filter Pan Rail (used with Item 8 and 9)              |
| *    | 826-1979   | Filter Pan Roller Kit (four each of Items 6 and 826-1372)     |
| *    | 826-1372   | Nut, ¼-20 Hex (Pkg. of 10)                                    |
| *    | 810-2012   | Rail Set, Filter Pan Roller (includes one left and one right) |
| 7    | 826-1392   | O-Ring (Pkg. of 5; used with Item 5)                          |
| 8    | 106-5981   | Support, Assy. Left Filter Pan                                |
| 9    | 106-5982   | Support, Assy. Right Filter Pan                               |
| 10   | 823-5862   | Fitting, Female Suction Tube                                  |
| 11   | 826-1270   | Motor and Gasket Kit, 220-240V 50/60Hz                        |
|      | 826-1712   | Motor and Gasket Kit, 110-120V 50/60Hz                        |
| 12   | 826-1264   | Pump and Gasket Kit   |
| *    | 807-11973  | Viking Pump Seal Kit  |
| 13   | 810-1668   | Adapter, ⅝-inch to ½-inch NPT Male                            |
| 14   | 810-1680   | Flexline, 6.5-inch Oil Return                                 |
| 15   | 813-0616   | Elbow, ST ½-inch x ½-inch NPT 90° SS                          |
| 16   | 813-0912   | Nipple, ½-inch 2.0-inch SS                                    |
| 17   | 810-1669   | Adapter, ⅝-inch to ½-inch NPT Female                          |
| 18   | 810-2343   | Tee, ½-inch SS  |
| *    | 803-0170   | Filter Paper  |
| *    | 106-2852SP | Heater Strip Assembly, 208-250V 25W 18"                       |
| *    | 806-5933SP | Heater Strip Assembly, 100-120V 25W 18"                       |

\* Not illustrated.



## 8.5.2 FPRE217/222 Filtration Components

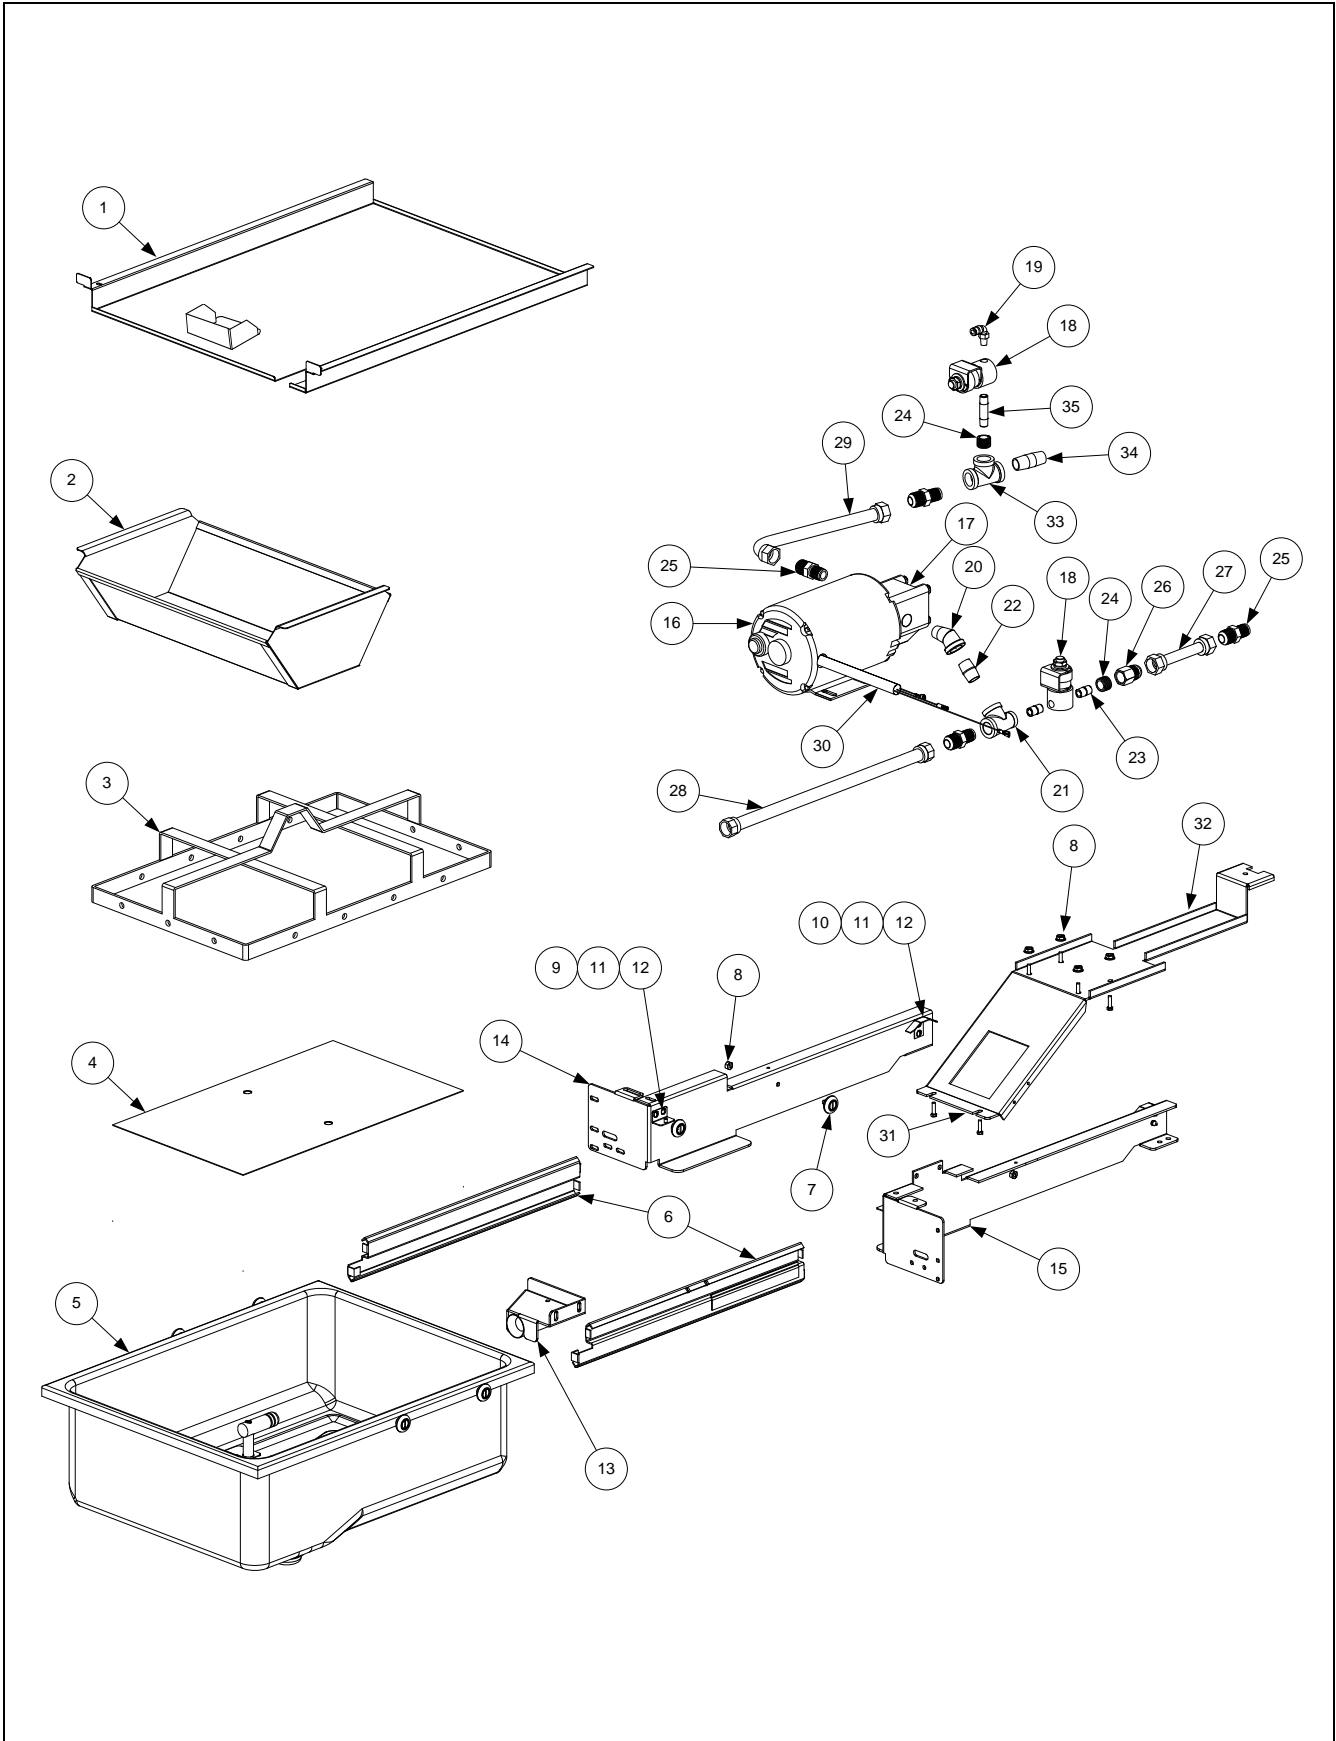


### 8.5.2 FPRE217/222 Filtration Components cont.


| ITEM | PART #     | COMPONENT   |
|------|------------|---|
| *    | 826-1979   | Filter Pan Roller Kit (four each of Items 7 and 8)                        |
| *    | 826-1980   | Service Filter Pan (Item 5 minus Item 2)                                  |
| *    | 826-1981   | Service Filter Pan Assembly (Service Filter Pan above plus Items 3 and 4) |
| *    | 826-1392   | O-Ring (Pkg. of 5; used with Item 5)                                      |
| *    | 813-0568   | Plug, 1/8-inch Socket Head Pipe (component of Item 5; two required)       |
| *    | 811-1071   | Tubing, 1/4-inch OD Teflon Vent (sold by the foot)                        |
| *    | 106-2852SP | Heater Strip Assembly, 208-250V 25W 18"                                   |
| *    | 806-5933SP | Heater Strip Assembly, 100-120V 25W 18"                                   |
| 1    | 823-5130   | Lid, Filter Pan   |
| 2    | 810-3161   | Crumb Tray (component of Item 5)  |
| 3    | 810-2091   | Hold Down Ring  |
| 4    | 200-2124   | Sana Grid Filter Screen   |
| 5    | 106-4925   | Pan, One-Piece Filter (includes Item 2,)                                  |
| 6    | 810-2012   | Rail Set, Filter Pan Roller (includes one left and one right)             |
| 7    | 810-2198   | Roller, Filter Pan and Rail (includes screws)                             |
| 8    | 826-1372   | Nut, 1/4-20 Hex (Pkg. of 10) (use 809-0191 for Washer, Lock 1/4-inch)     |
| 9    | 823-4675   | Bracket, Lid Support  |
| 10   |            | Guide, Filter Pan Lid   |
|      | 210-9000   | Left  |
|      | 210-9005   | Right   |
| 11   | 809-0503   | Screw, 8-32 X 1/2-inch Slotted Truss Head                                 |
| 12   | 809-0247   | Nut, 8-32 Hex Keps  |
| 13   | 823-5133   | Suction Tube  |
| 14   | 210-8979   | Rail, Left Filter   |
| 15   | 210-8978   | Rail, Right Filter  |
| 16   | 826-1270   | Motor and Gasket Kit 220-240V 50/60Hz                                     |
|      | 826-1712   | Motor and Gasket Kit 110-120V 50/60Hz                                     |
| 17   | 826-1264   | Pump and Gasket Kit 4 GPM 2-piece   |
|      | 816-0093   | Gasket, Pump/Motor  |
| *    | 807-11973  | Viking Pump Seal Kit  |
| 18   | 807-2484   | Valve, 1/4-inch Solenoid  |
| 19   | 810-2493   | Fitting, 1/4 -inch x 90° Quick Connect                                    |
| 20   | 813-0342   | Elbow, 1/2-inch 45° Street  |
| 21   | 813-0530   | Tee, 1/2-inch X 1/4-inch X 1/2-inch Reducing                              |
| 22   | 813-0087   | Nipple, 1/2-inch Close  |
| 23   | 813-0838   | Nipple, 1/4-inch Close  |
| 24   | 813-0304   | Bushing, 1/2-inch to 1/4-inch Flush                                       |
| 25   | 810-1668   | Adapter, 5/8-inch to 1/2-inch NPT Male                                    |
| 26   | 810-1669   | Adapter, 5/8-inch to 1/2-inch NPT Female                                  |
| 27   | 810-1680   | Flexline, 6.5-inch Oil Return   |
| 28   | 810-1057   | Flexline, 13.0-inch Oil Return  |
| 29   | 810-1043   | Flexline, 11.5-inch Oil Return  |
| 30   | 807-3828   | Cable, FootPrint Pro Pump Motor   |
| 31   | 826-1375   | Screw, 10-32 X 3/4-inch Hex Trim Head (Pkg. of 5)                         |
| 32   | 210-9016   | Bridge, Filter Motor  |
| 33   | 813-0003   | Tee, 1/2-Inch   |
| 34   | 813-0298   | Nipple, 1/2-inch 2.0-inch   |
| 35   | 813-0537   | Nipple, 1/4-inch 2.0-inch   |
| *    | 810-1043   | Flexline, 9.5-inch Oil Return   |
| *    | 803-0170   | Filter Paper  |

\* Not illustrated

## 8.6 Frypot Assembly and Thermostat

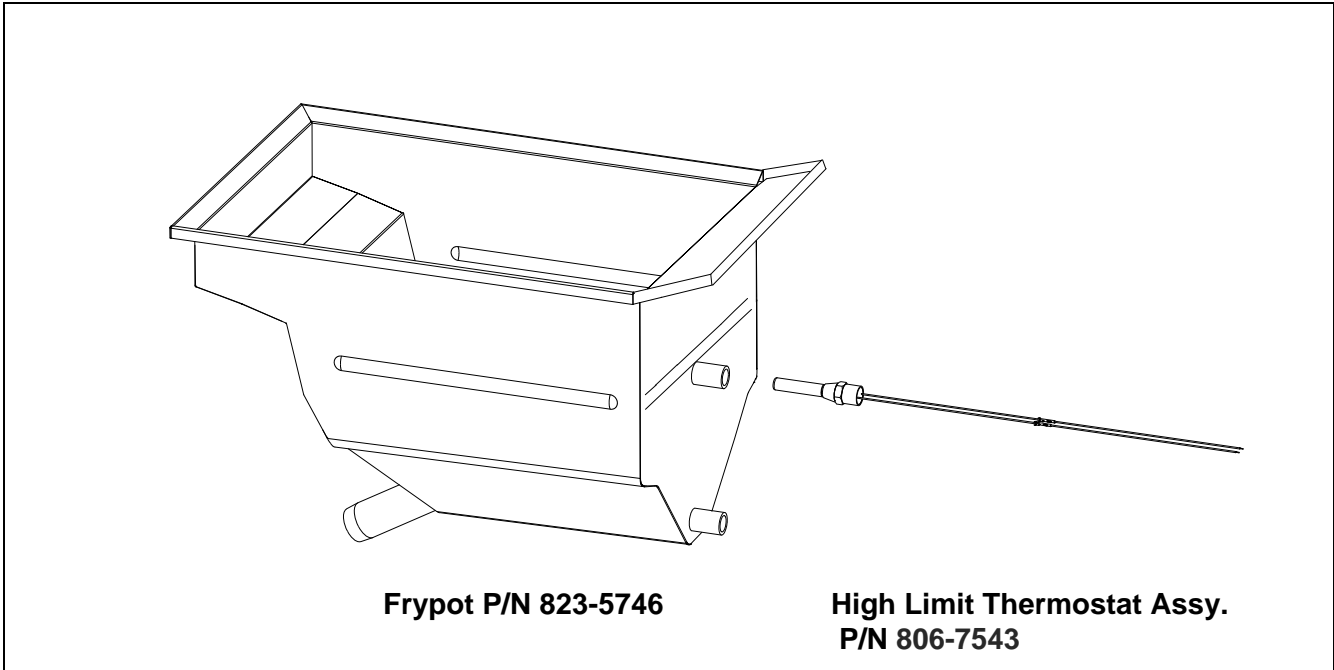


## 8.7 Oil Return System Components

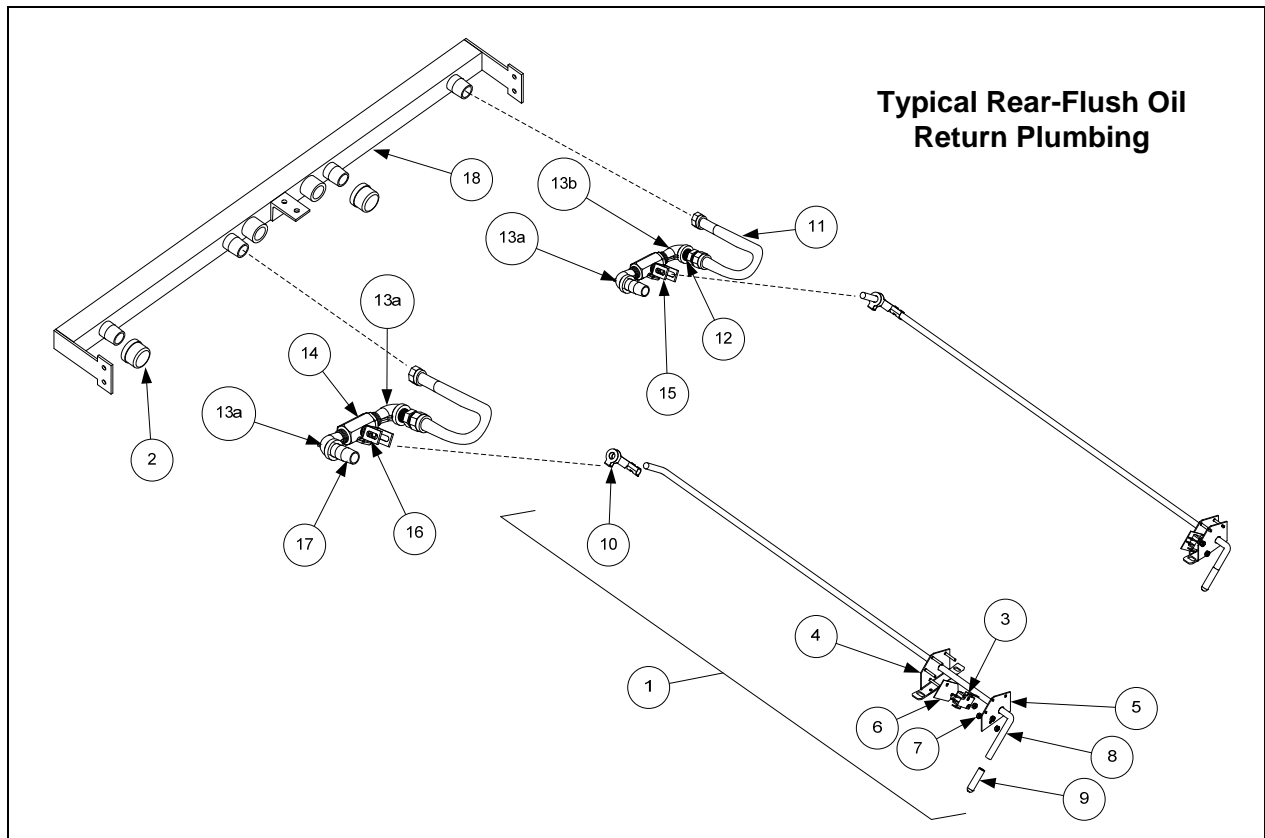

## 8.7 Oil Return System Components cont.


| ITEM | PART #   | COMPONENT  |
|------|----------|--|
| 1    | 106-5848 | Handle Assembly, Rear Flush  |
| 2    | 813-0907 | Cap, 15/16-inch Valve Safety   |
| 3    | 807-2103 | Microswitch, Straight Lever  |
| 4    | 106-5847 | Bracket Assembly   |
| 5    | 210-8998 | Bracket, Handle Retainer   |
| 6    | 816-0220 | Insulation, Oil Return Microswitch   |
| 7    | 826-1366 | Nut, 4-40 Keps Hex (Pkg. of 25)  |
| 8    | 810-3105 | Rod, Handle  |
| 9    | 816-0643 | Grip, Oil Return Valve Handle  |
| 10   | 809-0601 | Clip, Clevis   |
| 11   | 810-2532 | Flexline, 7.0-inch   |
| *    | 810-1057 | Flexline, 13.0-inch  |
| 12   | 810-1668 | Adapter, 5/8-inch to 1/2-inch NPT Male                                     |
| 13a  | 813-0616 | Elbow, 1/2-inch X 90° SS   |
| *    | 813-0899 | Elbow, 1/2-inch X 90° SS ( <i>used with 813-0905</i> )                     |
| *    | 813-0905 | Nipple, 1/2-inch x 1.50 SS NPT   |
| 13b  | 813-0908 | Adapter, 1/2-inch NPT M/T 90° ( <i>used only on side next to cabinet</i> ) |
| 14   | 810-2944 | Valve, 1/2-inch Ball   |
| 15   | 210-8999 | Handle, Rear Flush Valve   |
| 16   | 210-9203 | Retainer, Oil Return Valve Nut   |
| 17   | 813-0913 | Nipple, 1/2-inch x 3.0-inch SS   |
| 18   | 810-3015 | Manifold, Rear Oil Return Two-Station Fryer                                |

## 8.8 Oil Disposal Plumbing

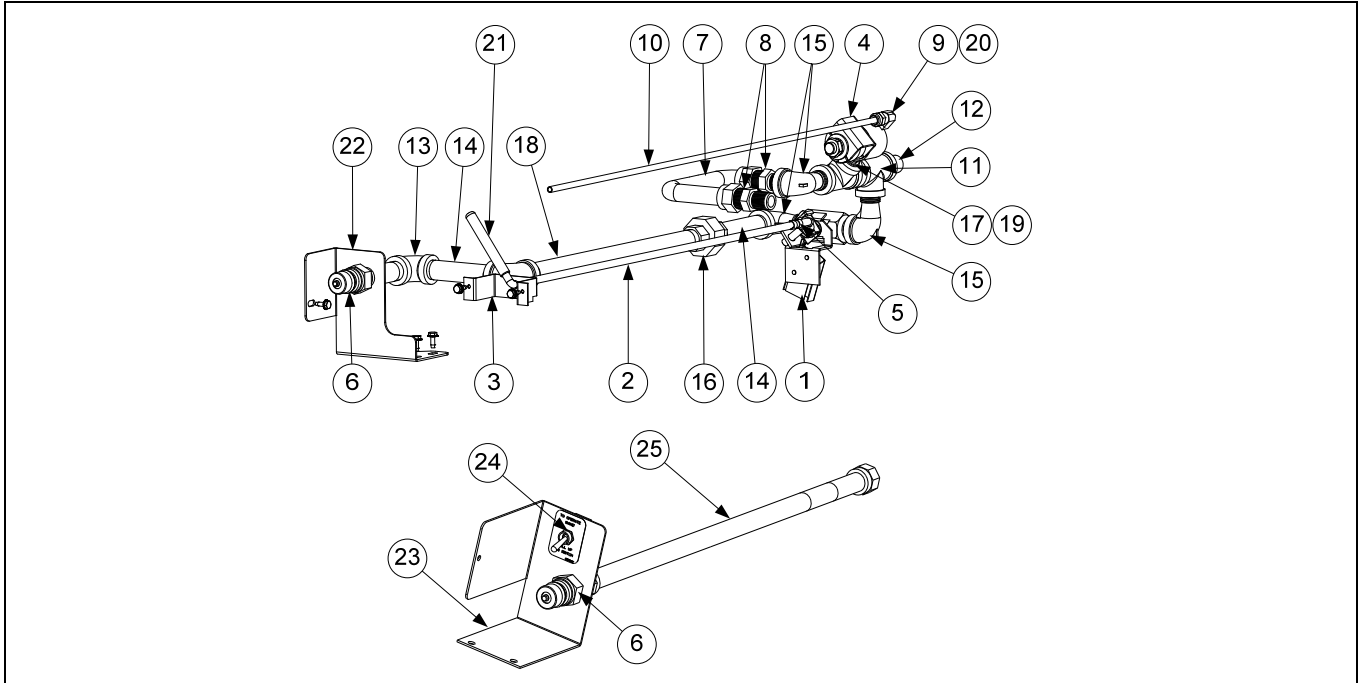

| ITEM | PART #   | COMPONENT  |
|------|----------|--|
| 1    | 106-5975 | Plumbing, Front Oil Disposal ( <i>use 106-6472 for Singles</i> ) |
|      | 106-5974 | Valve Assembly, Oil Disposal                                     |
|      | 810-2944 | Valve ½-inch Ball SS   |
|      | 807-2103 | Microswitch  |
| 2    | 230-0985 | Rod, Oil Disposal  |
| 3    | 230-0986 | Bracket, Oil Disposal Rod  |
| 4    | 807-2484 | Valve, Solenoid ¼-inch NPT                                       |
| 5    | 809-0601 | Clip, Clevis Right Rod End                                       |
| 6    | 810-0487 | Coupling, Male, Quick Disconnect                                 |
| 7    | 810-1043 | Flexline, ½-inch ID x 9.50"                                      |
| 8    | 810-1668 | Adaptor, Male ⅝-inch OD x ½-inch                                 |
| 9    | 810-2493 | Fitting, 90° Quick Connect Tube                                  |
| 10   | 812-1803 | Tubing, ¼-inch OD x 24.50" Teflon                                |
| 11   | 813-2343 | Tee, ½-inch x ½-inch x ½-inch SS                                 |
| 12   | 813-0900 | Nipple, ½-inch x Close SS  |
| 13   | 813-0889 | Elbow, ½-inch 90° SS   |
| 14   | 813-0901 | Nipple, ½-inch x 4.0" SS   |
| 15   | 813-0616 | Elbow, Street ½-inch x ½-inch NPT 90° SS                         |
| 16   | 813-0902 | Union, ½-inch NPT SS   |
| 17   | 813-0903 | Bushing, ½-inch x ¼-inch SS Flush                                |
| 18   | 813-0904 | Nipple, ½-inch x 13.0" NPT SS                                    |
| 19   | 813-0905 | Nipple, ¼-inch x 1½-inch SS                                      |
| 20   | 813-0807 | Bushing, ¼-inch x ⅛-inch   |
| 21   | 816-0637 | Cap, Vinyl Blue 5/16-inch x 3.0"                                 |
| 22   | 823-5693 | Bracket, Assembly Quick Disconnect                               |
| 23   | 823-5858 | Bracket Mount Single RCCL  |
| 24   | 807-2106 | Switch Toggle Single   |
| 25   | 810-1068 | Flexline, ⅝-inch O.D. x 21.50-inch                               |

## 8.9 Wiring Connectors, Pin Terminals, Seals, and Power Cords

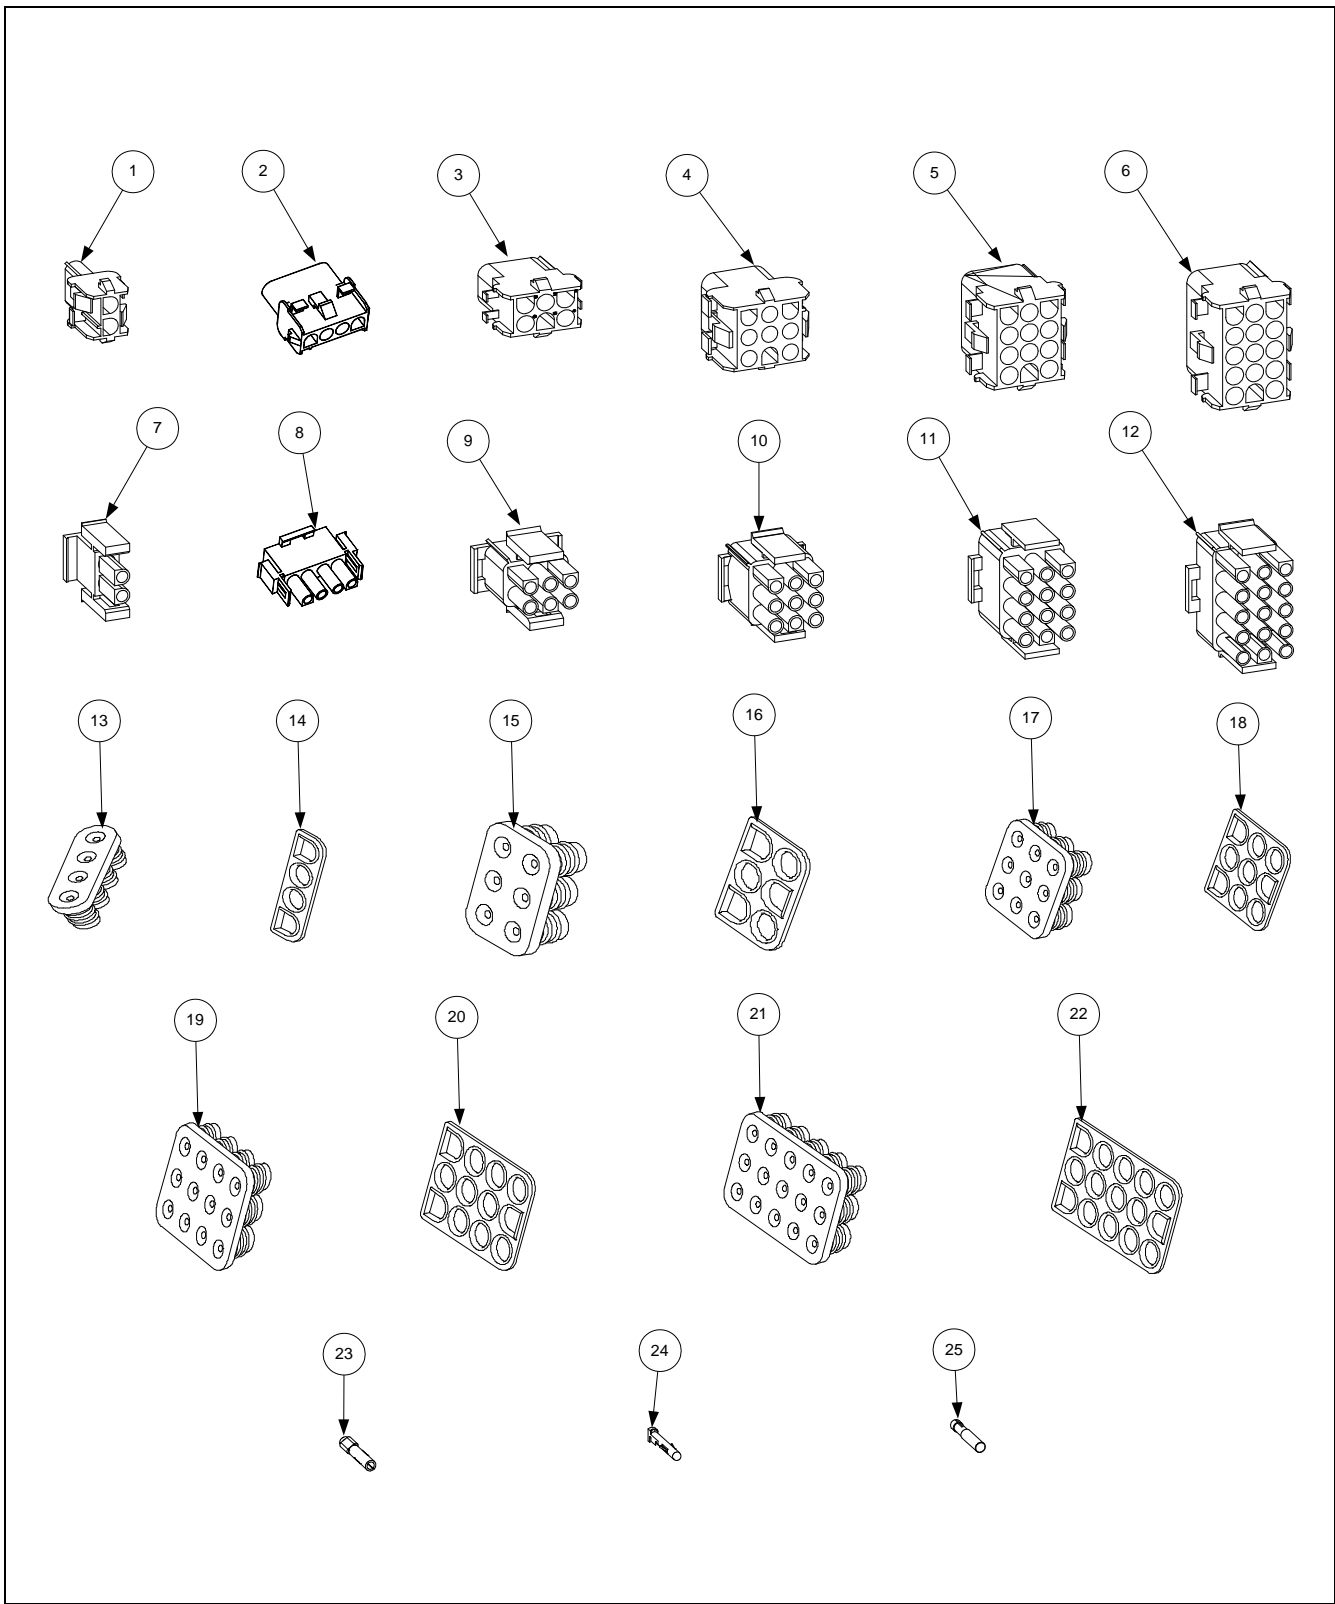

### 8.9 Wiring Connectors, Pin Terminals, Seals, and Power Cords cont.

| ITEM | PART #   | COMPONENT                                 |
|------|----------|---|
|      |          | <b>Power Cords</b>                        |
| *    | 807-3834 | Cable, 3-Phase 4-Wire (Fryer Power Cable) |
| *    | 106-6530 | Cord, Filter System Power 220V 15A        |
|      |          | <b>Connectors</b>                         |
| 1    | 807-1068 | 2-Pin Female                              |
| 2    | 807-3232 | 4-Pin Female                              |
| 3    | 807-0158 | 6-Pin Female                              |
| 4    | 807-0156 | 9-Pin Female                              |
| 5    | 807-0159 | 12-Pin Female                             |
| 6    | 807-0875 | 15-Pin Female                             |
| 7    | 807-1067 | 2-Pin Male                                |
| 8    | 807-2078 | 4-Pin Male                                |
| 9    | 807-0157 | 6-Pin Male                                |
| 10   | 807-0155 | 9-Pin Male                                |
| 11   | 807-0160 | 12-Pin Male                               |
| 12   | 807-0804 | 15-Pin Male                               |
|      |          | <b>Universal Mate-N-Lock Seals</b>        |
| 13   | 816-0675 | 4-Pin Wire Seal                           |
| 14   | 816-0676 | 4-Pin Interface Connector Seal            |
| 15   | 816-0667 | 6-Pin Wire Seal                           |
| 16   | 816-0668 | 6-Pin Interface Connector Seal            |
| 17   | 816-0669 | 9-Pin Wire Seal                           |
| 18   | 816-0670 | 9-Pin Interface Connector Seal            |
| 19   | 816-0671 | 12-Pin Wire Seal                          |
| 20   | 816-0672 | 12-Pin Interface Connector Seal           |
| 21   | 816-0673 | 15-Pin Wire Seal                          |
| 22   | 816-0674 | 15-Pin Wire Seal                          |
| 23   | 826-1341 | Terminal, Female Split Pin (Pkg of 25)    |
| 24   | 826-1342 | Terminal, Male Split Pin (Pkg of 25)      |
| 25   | 807-2518 | Plug, Mate-N-Lock (Dummy Pin)             |

\* Not illustrated.

## 8.10 Fasteners

| ITEM | PART #   | COMPONENT   |
|------|----------|---|
| *    | 809-0429 | Bolt, 1/4-inch – 20 x 2.00-inch Hex Head ZP Tap                     |
| *    | 809-0514 | Capscrew, 5/16-inch-18 NC Hex                                       |
| *    | 809-0448 | Clip, Tinnerman   |
| *    | 826-1366 | Nut, 4-40 Keps Hex (Pkg. of 25) (809-0237)                          |
| *    | 826-1358 | Nut, 6-32 Keps Hex (Pkg. of 25) (809-0049)                          |
| *    | 809-0247 | Nut, 8-32 Keps Hex  |
| *    | 826-1376 | Nut, 10-32 Keps Hex (Pkg. of 10) (809-0256)                         |
| *    | 809-0766 | Nut, 10-32 Keps Hex SS  |
| *    | 809-0581 | Nut, 1/2 NPT Locking  |
| *    | 809-0020 | Nut Cap 10-24 NP  |
| *    | 826-1372 | Nut Grip 1/4-inch 1/4-20 Hex NP (Pkg. of 10) (809-0059)             |
| *    | 809-0417 | Nut Flange 1/4-inch 1/4-20 Serr                                     |
| *    | 809-0535 | Nut, "T" 1/4-inch-20 x 7/16 SS                                      |
| *    | 809-0540 | Nut, Lock 1/2-inch-13 Hex 2-Way ZP                                  |
| *    | 826-1359 | Screw, 4-40 x 3/4-inch Slotted Round Head (Pkg. of 25) (809-0354)   |
| *    | 826-1365 | Screw, 6-32 x 3/8-inch Slot Head (Pkg. of 25) (809-0095)            |
| *    | 809-0357 | Screw, 6 x 3/8-inch Phillips Head NP                                |
| *    | 809-0359 | Screw, 8 x 1/4-inch Hex Washer Head                                 |
| *    | 809-0360 | Screw, 8 x 3/8-inch Hex Washer Slot Head                            |
| *    | 826-1371 | Screw, 8 x 1/2-inch Hex Head ZP (Pkg. of 25) (809-0361)             |
| *    | 809-0364 | Screw, 8 x 5/8-inch Hex Washer Head ZP                              |
| *    | 809-0518 | Screw, 8-32 x 3/8-inch Hex Washer Slotted Head SS                   |
| *    | 809-0104 | Screw, 8-32 x 1/2-inch Slotted Head ZP                              |
| *    | 826-1363 | Screw, 8-32 x 1/2-inch NP (Pkg. of 25) (809-0103)                   |
| *    | 826-1360 | Screw, 10-24 x 5/16-inch Round Slot Head ZP (Pkg. of 25) (809-0024) |
| *    | 826-1330 | Screw, 10-32 x 3/8-inch Slot Head SS (809-0117)                     |
| *    | 809-1003 | Screw, 10-32 x 3/8-inch Hex Trim Head SS                            |
| *    | 826-1375 | Screw, 10-32 x 3/4-inch Hex Trim Head SS (Pkg. of 5) (809-0401)     |
| *    | 809-1000 | Screw, 10-32 x 1 1/4-inch Hex Sck C/S                               |
| *    | 826-1374 | Screw, 10 x 1/2-inch Hex Head (Pkg. of 25) (809-0412)               |
| *    | 809-0266 | Screw, 10 x 1/2-inch Phillips Head ZP                               |
| *    | 809-0434 | Screw, 10 x 3/8-inch Hex Washer Head NP                             |
| *    | 809-0123 | Screw, 10 x 3/4-inch Slot Head                                      |
| *    | 826-1389 | Screw, 1/4-20 x 3/4-inch Hex Head ZP (Pkg. of 10) (809-0131)        |
| *    | 809-0582 | Washer 1/2 NPT Locking  |
| *    | 809-0184 | Washer, #10 LK ZP   |
| *    | 809-0190 | Washer, .625 X .275 X 40 Flat SS                                    |
| *    | 809-0191 | Washer, Lock 1/4 Spring ZP  |
| *    | 809-0193 | Washer, Flat 1/4 Nylon  |
| *    | 809-0194 | Washer, Flat 5/16 ZP  |



**THIS PAGE INTENTIONALLY LEFT BLANK**



Shipping Address: 8700 Line Avenue, Shreveport, Louisiana 71106

TEL 1-318-865-1711

FAX (Parts) 1-318-688-2200

(Tech Support) 1-318-219-7135

Email: [service@frymaster.com](mailto:service@frymaster.com)

SERVICE HOTLINE  
1-800-551-8633

819-6202  
OCTOBER 2013