

# Parts Catalog



Model GPG14D

## ELECTRIC SANDWICH GRILLS

MODELS: GPG14D, GSG14D, GPGDUE14D, GSGDUE14D  
CANADIAN MODELS: GPG14D-C & GSG14D-C

1-21-16

IMPORTANT!

TO EXPEDITE SHIPMENT OF PARTS, ALWAYS SPECIFY MODEL, REV,  
PART NUMBER, AND SERIAL NUMBER OF UNIT.

### **GLOBE FOOD EQUIPMENT COMPANY**

2215 East River Road  
Dayton, Ohio 45439

#### **Parts Department**

Toll Free 1-800-745-6238 · Fax (937) 290-0585

E-Mail: [info@globefoodequip.com](mailto:info@globefoodequip.com)

Website: [www.globefoodequip.com](http://www.globefoodequip.com)


Not for resale



## TABLE OF CONTENTS

	<u>PAGE</u>
GPG14D/GSG14D/GPG14D-C/GSG14D-C 14 Inch Sandwich Grill	3
GPGDUE14D/GSGDUE14D 14 Inch Double Sandwich Grill	5
Wiring Diagram, GPG14D/GSG14D/GPG14D-C/GSG14D-C	7
Wiring Diagram, GPGDUE14D/GSGDUE14D	8


# GPG14D/GSG14D/GPG14D-C/GSG14D-C 14 INCH GRILL COMPONENTS

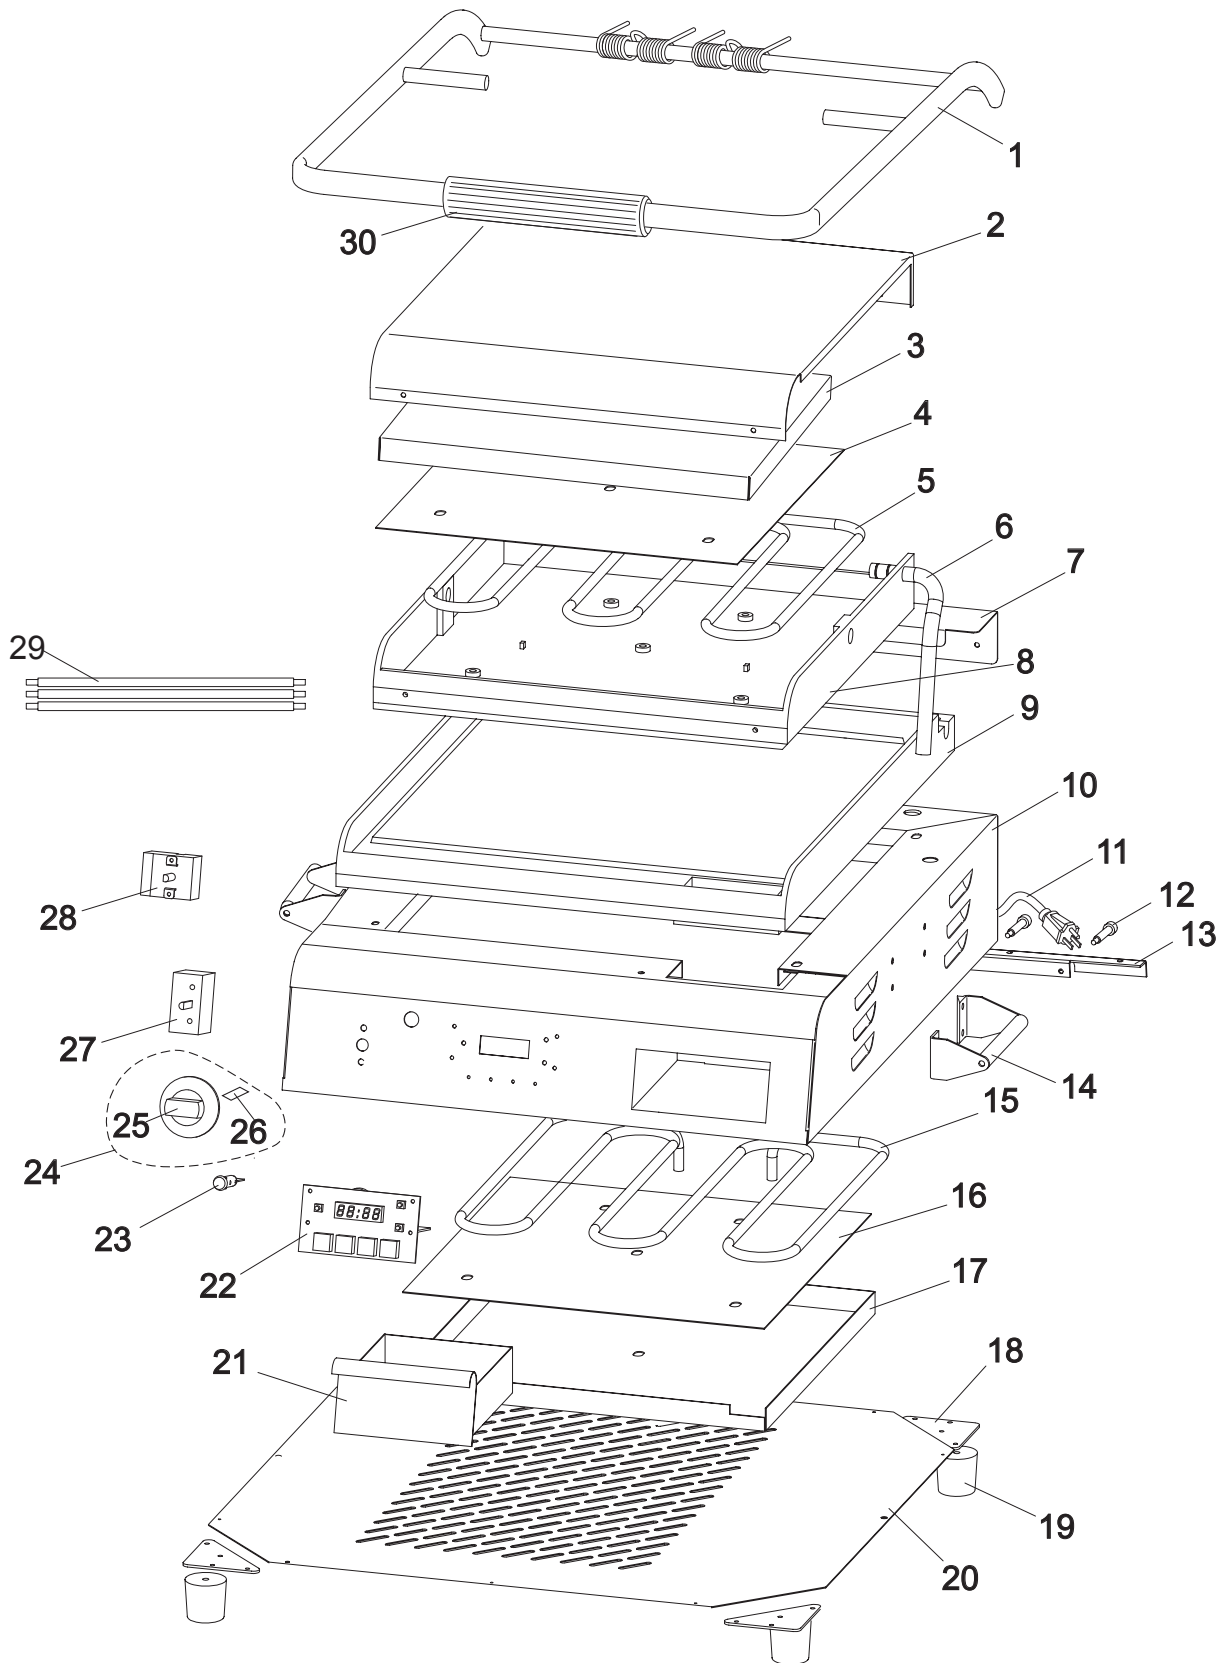

## GPG14D/GSG14D/GPG14D-C/GSG14D-C 14 INCH GRILL PARTS LIST

Item	Description	Part Number	Qty	Hardware
1	Handle Assembly	U00681	1	
2	Top Cover	U00682	1	
3	Upper Insulating Plate	U01071040244	1	
4	Upper Press Plate	U00684	1	
5	Upper Element	U03061225118	1	
6	Wiring Cover	U01021005045	1	
7	Back Baffle	U00685	1	
8	Upper Cast Iron - Sandwich Grill (Smooth)	U00688	1	
	Upper Cast Iron - Panini Grill (Grooved)	U00686		
9	Lower Cast Iron - Sandwich Grill (Smooth)	U00692	1	
	Lower Cast Iron - Panini Grill (Grooved)	U00691		
10	Body Assembly	U00702	1	
11	Cord & Plug	U03021205012	1	
	Cord & Plug, GPG14D-C & GSG14D-C Only	U03021205010	1	
12	Adjust Nut	U00690	2	
13	Hardware Plate	U00695	1	
14	Side Handle	U01141065037	2	
15	Lower Element	U03061225119	1	
16	Lower Press Plate	U00696	1	
17	Lower Insulating Plate	U00697	1	
18	Triangle Plate	U00519	4	
19	Foot	U02121165003	4	
20	Base Plate	U01071040242	1	
21	Drip Tray	U06051471181	1	
22	Timer	U03991290111	1	
23	Indicator Light	U03091240005	1	
24	Knob Assembly	U01033	1	
25	Dial	-	1	
26	Spring Plate	-	1	
27	Power Switch	U03041215033	1	
28	Thermostat	U03051220022	1	
29	Wiring Kit	U00813	1	
30	Handle Grip	U00035	1	


# GPGDUE14D/GSGDUE14D 14 INCH DOUBLE GRILL COMPONENTS

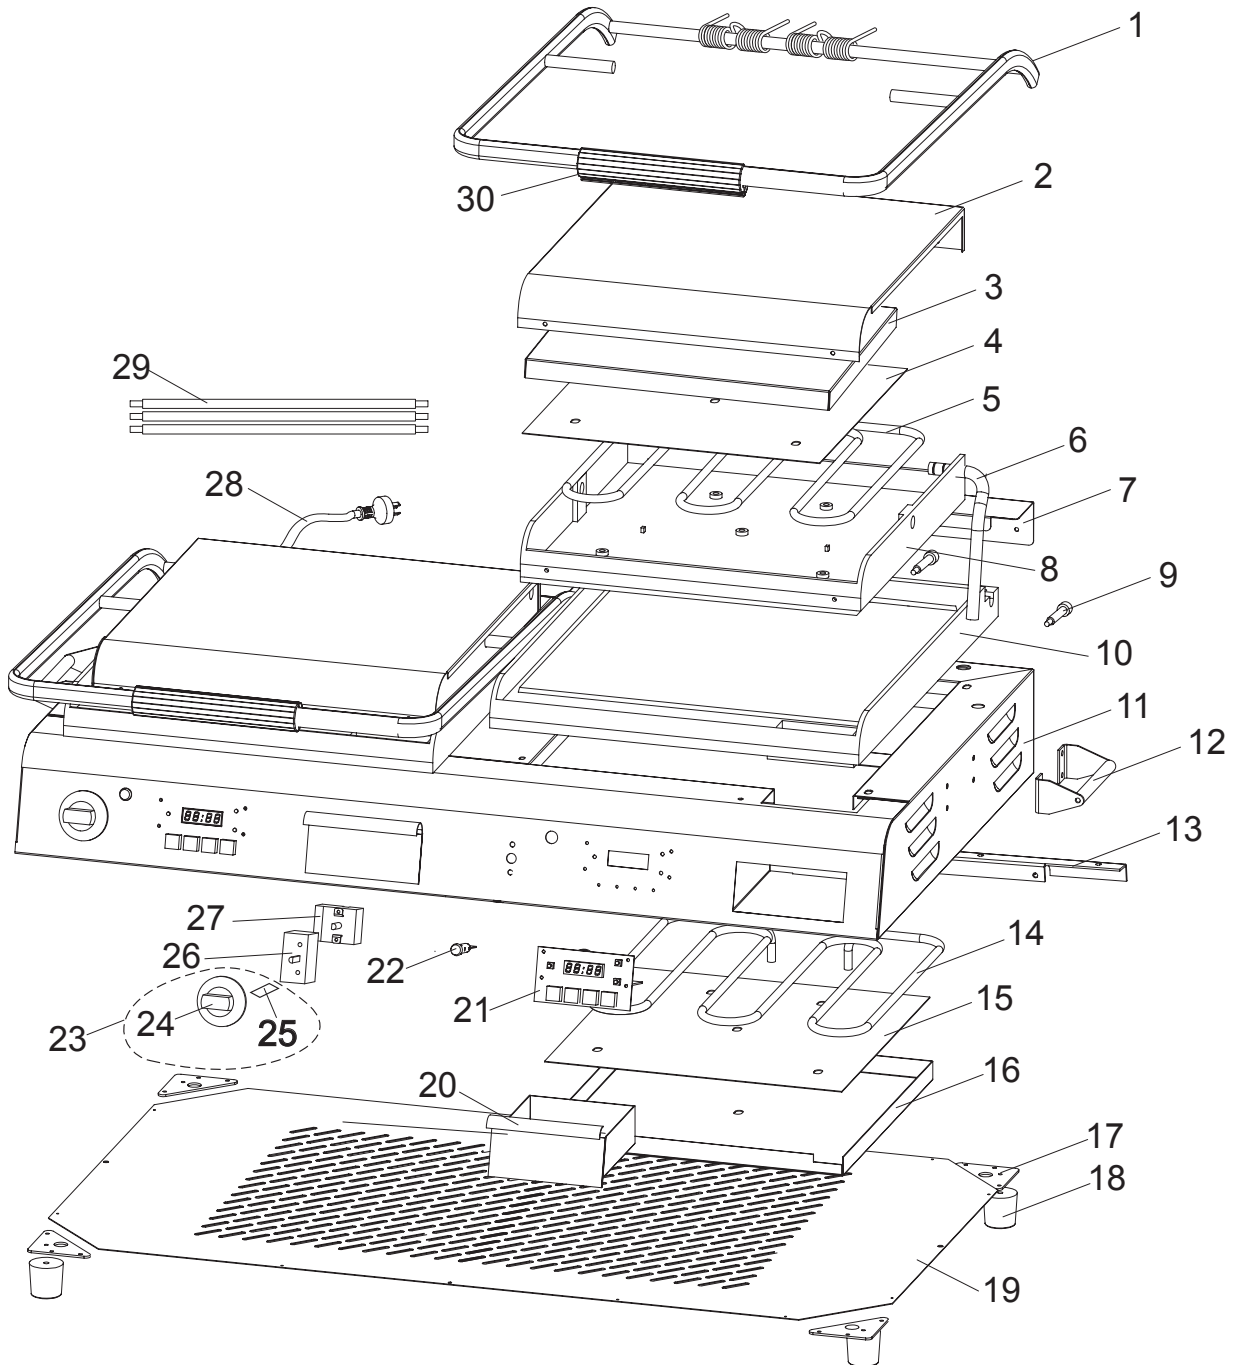

## PGGDUE14D/GSGDUE14D 14 INCH DOUBLE GRILL PARTS LIST

Item	Description	Part Number	Qty	Hardware
1	Handle Assembly	U00681	2	
2	Upper Cover	U00682	2	
3	Upper Insulating Plate	U01071040244	2	
4	Upper Press Plate	U00684	2	
5	Upper Element	U03061225116	2	
6	Wiring Cover, Right	U01021005045	1	
	Wiring Cover, Left	U00701	1	
7	Hardware Assembly, Rear	U00685	2	
8	14" Upper Right Plate (Grooved)	U00686	1	
	14" Upper Left Plate (Smooth)	U00687	1	
	14" Upper Right Plate (Smooth)	U00688	1	
	14" Upper Left Plate (Grooved)	U00689	1	
9	Adjust Nut	U00690	4	
10	14" Lower Cast Plate (Grooved)	U00691	2	
	14" Lower Cast Plate (Smooth)	U00692	2	
11	Main Body Assembly	U00693	1	
12	Side Handle Assembly	U00694	2	
13	Hardware Plate	U00695	2	
14	Lower Element	U03061225117	2	
15	Lower Press Plate	U00696	2	
16	Lower Insulating Plate	U00697	2	
17	Triangle Plate	U00519	4	
18	Feet	U02121165003	4	
19	Base Cover	U00698	1	
20	Drip Tray Assembly	U06051471181	2	
21	Timer	U03991290110	2	
22	Indicator Light	U03091240006	2	
23	Knob Assembly	U01033	2	
24	Dial	-	2	
25	Spring Plate	-	2	
26	Switch	U03041215033	2	
27	Thermostat	U03051220022	2	
28	Cord & Plug	U00699	1	
29	Wiring Kits	U00700	2	
30	Handle Grip	U00035	2	

WIRING DIAGRAM, 14 INCH GRILLS: GPG14D/GSG14D/GPG14D-C/GSG14D-C

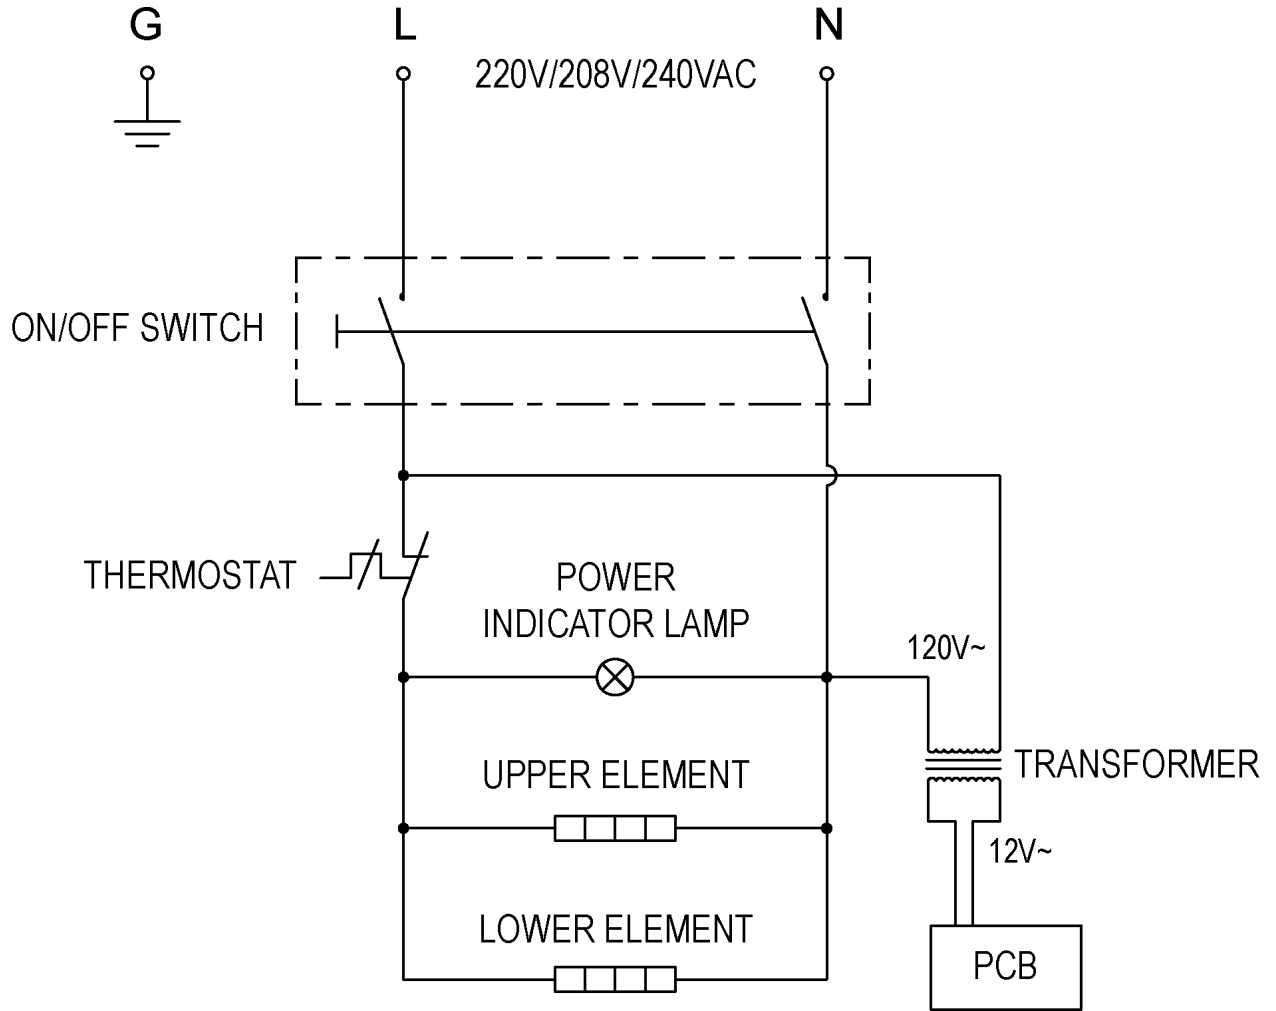



# WIRING DIAGRAM, 14 INCH DOUBLE GRILLS: GPGDUE14D/GSG1DUE4D

