



OPERATOR'S M A N U A L

EVOLUTION ELITE™ (Electric)

REDUCED OIL CAPACITY OPEN FRYER

MODEL

EEE-141

EEE-142

EEE-143

EEE-144



HENNY PENNY
Engineered to Last

REGISTER WARRANTY ONLINE AT WWW.HENNYPENNY.COM

TABLE OF CONTENTS

Section		Page
Section 1.	INTRODUCTION	1-1
	1-1 Introduction	1-1
	1-2 Features.....	1-1
	1-3 Proper Care.....	1-1
	1-4 Assistance.....	1-2
	1-5 Safety.....	1-2
Section 2.	INSTALLATION	2-1
	2-1 Introduction	2-1
	2-2 Unpacking.....	2-1
	2-3 Selecting the Fryer Location	2-2
	2-4 Leveling the Fryer	2-2
	2-5 Ventilation of Fryer.....	2-3
	2-6 Electrical Requirements	2-3
	2-7 Dimensions	2-5
Section 3.	OPERATION	3-1
	3-1 Operating Components.....	3-1
	3-2 Set-Up Mode	3-5
	3-3 Filling or Adding Oil	3-6
	3-4 Morning Start-Up Procedures	3-7
	3-5 Basic Operation	3-8
	3-6 Idle Mode.....	3-8
	3-7 Oil Guardian™ (Auto Top-Off)	3-9
	3-8 Selecting a Product with a Different Setpoint	3-9
	3-9 Replacing the JIB	3-9
	3-10 Model EEE-141 Oil Reservoir	3-10
	3-11 SmartFilter Express™	3-11
	3-12 Daily Filtering	3-13
	3-13 Discarding Oil from Vat Using Optional Discard Shuttle.....	3-16
	3-14 Discarding Oil from Vat Using Optional Front Dispose System	3-17
	3-15 Discarding Oil from Vat Using Optional Bulk Oil Dispose System	3-19
	3-16 Changing the Filter Pad.....	3-20
	3-17 Removing and Cleaning Basket Rest	3-23
	3-18 Clean-Out Mode	3-23
	3-19 Check/Replace Filter Drain Pan O-Rings.....	3-26
	3-20 Filter Button Stats.....	3-27
	3-21 Info Button Stats.....	3-28
	3-22 Preventive Maintenance Schedule.....	3-28

TABLE OF CONTENTS (Continued)

Section		Page
Section 4.	INFORMATION MODE	4-1
	4-1 Information Mode Details	4-1
Section 5.	PRODUCT PROGRAM MODE	5-1
	5-1 Modifying Product Settings.....	5-1
Section 6.	LEVEL 2 PROGRAMMING.....	6-1
	6-1 Special Program Mode.....	6-1
	6-2 Do Not Disturb.....	6-10
	6-3 Clock Set.....	6-11
	6-4 Data Logging, Heat Control, Tech, Stat, & Filter Control Mode.....	6-11
Section 7.	TROUBLESHOOTING.....	7-1
	7-1 Troubleshooting Guide	7-1
	7-2 Error Codes.....	7-3

SECTION 1. INTRODUCTION

1-1. INTRODUCTION

The Henny Penny open fryer is a basic unit of food processing equipment designed to cook foods better and easier. The micro computer-based design helps make this possible. This unit is used only in institutional and commercial food service operations, and operated by qualified personnel.

NOTICE



- As of August 16, 2005, the Waste Electrical and Electronic Equipment directive went into effect for the European Union. Our products have been evaluated to the WEEE directive. We have also reviewed our products to determine if they comply with the Restriction of Hazardous Substances directive (RoHS) and have redesigned our products as needed in order to comply. To continue compliance with these directives, this unit must not be disposed as unsorted municipal waste. For proper disposal, please contact your nearest Henny Penny distributor.
- Noise generated from this equipment is less than 70 dB(A).

1-2. FEATURES

- Easily cleaned
- Uses 40% less oil
- Full vat or split vat
- Computer control
- Stainless steel construction
- Automatic oil top off
- Self-diagnostic system built into controls
- Built in filter with automatic filtration
- Electric Immersion Heaters

1-3. PROPER CARE

As in any unit of food service equipment, the Henny Penny open fryer does require care and maintenance. Requirements for the maintenance and cleaning are contained in this manual and must become a regular part of the operation of the unit at all times.

NOTICE

Contact a qualified service technician in case of major maintenance or repairs to the unit.

1-4. ASSISTANCE

Should you require outside assistance, call your local independent distributor in your area, or call Henny Penny Corp. at 1-800-417-8405 or 1-937-456-8405.

1-5. SAFETY

The Henny Penny open fryer has many safety features incorporated. However, the only way to ensure a safe operation is to fully understand the proper installation, operation, and maintenance procedures. The instructions in this manual have been prepared to aid you in learning the proper procedures.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Where information is of particular importance or safety related, the words DANGER, WARNING, CAUTION, and NOTICE are used. Their usage is described below.



SAFETY ALERT SYMBOL is used with DANGER, WARNING, or CAUTION which indicates a personal injury type hazard.



NOTICE is used to highlight especially important information.



CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



CAUTION used with the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



DANGER INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.


1-5. SAFETY (Continued)



Equipotential Ground Symbol



Waste Electrical and Electronic Equipment (WEEE) Symbol

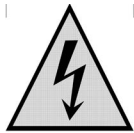

OR



Shock Hazard Symbols



OR



Hot Surface Symbols



Pinch-Point Symbol (Auto-Lift Fryers)

SECTION 2. INSTALLATION

2-1. INTRODUCTION

This section provides the installation and unpacking instructions for the Henny Penny Evolution Elite® fryer.

NOTICE

Installation of this unit should be performed only by a qualified service technician.



Do not puncture the fryer with any objects such as drills or screws as component damage or electrical shock could result.

2-2. UNPACKING

NOTICE

Any shipping damage should be noted in the presence of the delivery agent and signed prior to his or her departure.

1. Cut and remove the metal bands from the carton.
2. Remove carton lid and lift the main carton off the fryer.
3. Remove corner packing supports (4).
4. Cut the stretch film from around the carrier/rack box and remove it from the top of the fryer lid.
5. Cut and remove the metal bands holding the fryer to the pallet, and remove fryer from pallet.

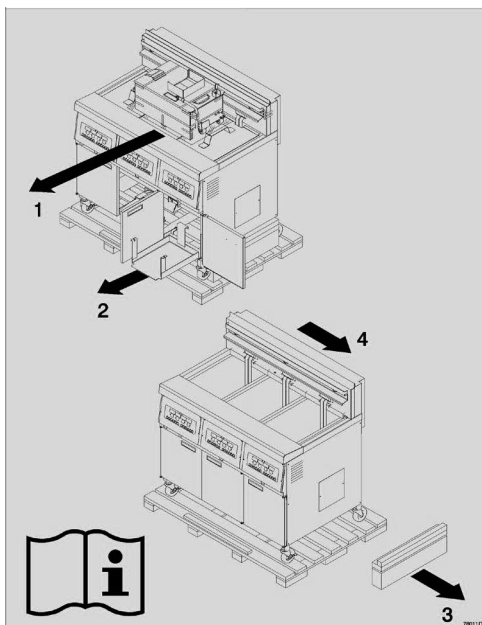


Figure 1

CAUTION

Remove filter drain pan and JIB shelf from fryer before removing fryer from pallet or damage to the unit could result. Figure 1.



Take care when moving the fryer to prevent personal injury. The fryer weighs approximately 600 lbs. (272 kg) to 800 lbs. (363 kg).

2-3. SELECTING THE FRYER LOCATION

The proper location of the fryer is very important for operation, speed, and convenience. The location of the open fryer should allow clearances for servicing and proper operation. Choose a location which will provide easy loading and unloading without interfering with the final assembly of food orders. Operators have found that frying from raw to finish, and holding the product in warmers provides fast continuous service. Keep in mind, the best efficiency will be obtained by a straight line operation, i.e. raw in one side and finished out the other side. Order assembly can be moved away with only a slight loss of efficiency.



To avoid fire and ruined supplies, the area under the fryer should not be used to store supplies.



To prevent severe burns from splashing hot oil, position and install fryer to prevent tipping or movement. Restraining ties may be used for stabilization.

2-4. LEVELING THE FRYER

For proper operation, the open fryer should be level from side-to-side and front to back. Using a level placed on the flat areas around the vat collar, on the middle well, and then adjust the casters until the unit is level.

2-5. VENTILATION OF FRYER

The fryer should be located with provision for venting into an adequate exhaust hood or ventilation system. This is essential to permit efficient removal of the steam exhaust and frying odors. Special precaution must be taken in designing an exhaust canopy to avoid interference with the operation of the fryer. We recommend you consult a local ventilation or heating company to help in designing an adequate system.

NOTICE

Ventilation must conform to local, state, and national codes. Consult your local fire department or building authorities.

2-6. ELECTRICAL REQUIREMENTS

Check the data plate, mounted on the inside of the doors, to determine the correct power supply.



To avoid electrical shock, do not disconnect the ground (earth) plug. This fryer must be adequately and safely grounded (earthed). Refer to local electrical codes for correct grounding (earthing) procedures or in absence of local codes, with The National Electrical Code, ANSI/NFPA No. 70-(the current edition). In Canada, all electrical connections are to be made in accordance with CSA C22.2, Canadian Electrical Code Part 1, and/or local codes.

To avoid electrical shock, this appliance must be equipped with an external circuit breaker which will disconnect all ungrounded (unearthed) conductors. The main power switch on this appliance does not disconnect all line conductors.

(FOR EQUIPMENT WITH CE MARK ONLY!)

To prevent electric shock hazard, this appliance must be bonded to other appliances or touchable metal surfaces in close proximity to this appliance with an equipotential bonding conductor. This appliance is equipped with an equipotential lug for this purpose. The equipotential lug is marked with the following symbol.




2-6. ELECTRICAL
REQUIREMENTS
(Continued)

An all pole, separate disconnect switch, with proper capacity fuses or breakers must be installed at a convenient location between the fryer and the power source, and must be installed according to national and local codes. It should be an insulated copper conductor rated for 600 volts and 90° C. For runs longer than 50 feet (15.24 m), use the next larger wire size. CE units require a minimum wire size of 6 mm to be wired to the terminal block.

It is recommended that a 30 mA rated protective device such as a residual current circuit breaker (RCCB), or ground fault circuit interrupter (GFCI), be used on the fryer circuit.

CABLE RESTRAINT

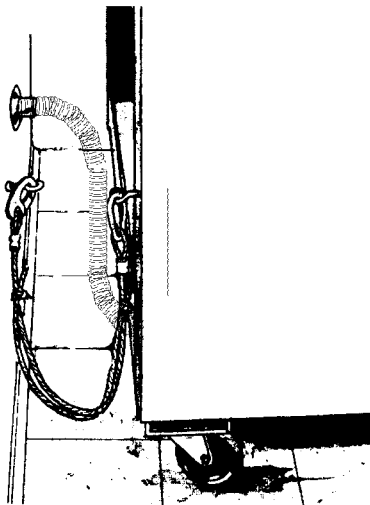

Permanently connected electric fryers with casters must be installed with flexible conduit and a cable restraint, when installed in the United States. See illustration at left. Holes are available in the rear fryer frame for securing the cable restraint to the fryer. The cable restraint does not prevent the fryer from tipping.

I-bolt is to be secured to the building using acceptable building construction practices.



DRYWALL CONSTRUCTION
Secure I-bolt to a building stud. Do not attach to drywall only. Preferred installation is approximately six inches to either side of service. Cable restraint must be at least six inches shorter than flexible conduit.

Each vat has its own power cord assembly, and uses either NEMA 15-50 Straight Plug or NEMA 15-60P.



The supply power cords shall be oil-resistant, sheathed flexible cable, no lighter than ordinary polychloroprene or other equivalent synthetic elastomer-sheathed cord.







2-7. DIMENSIONS

NOTICE

Auto-Lift Fryers

Front to rear dimension is 36-7/8" (93.66 cm).

For doorways 36 in. (91.44 cm) or less, the protective bumper bar on the rear of the fryer must be temporarily removed. See photo below.

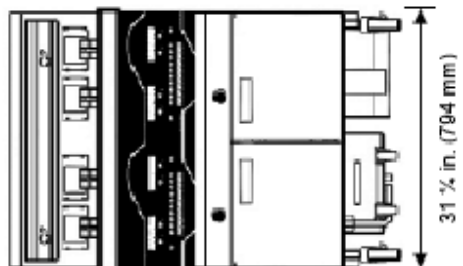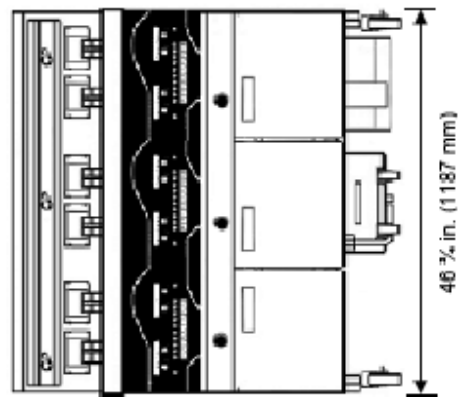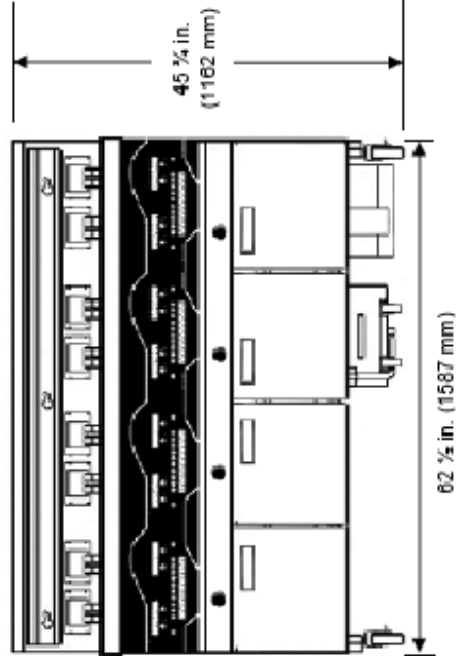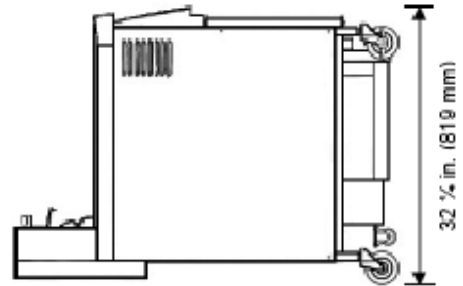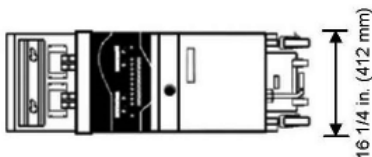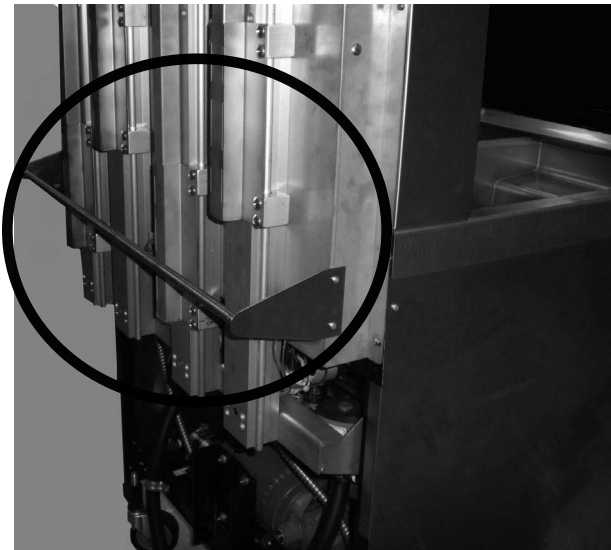

SECTION 3. OPERATION

3-1. OPERATING COMPONENTS Refer to explanations on the next pages.

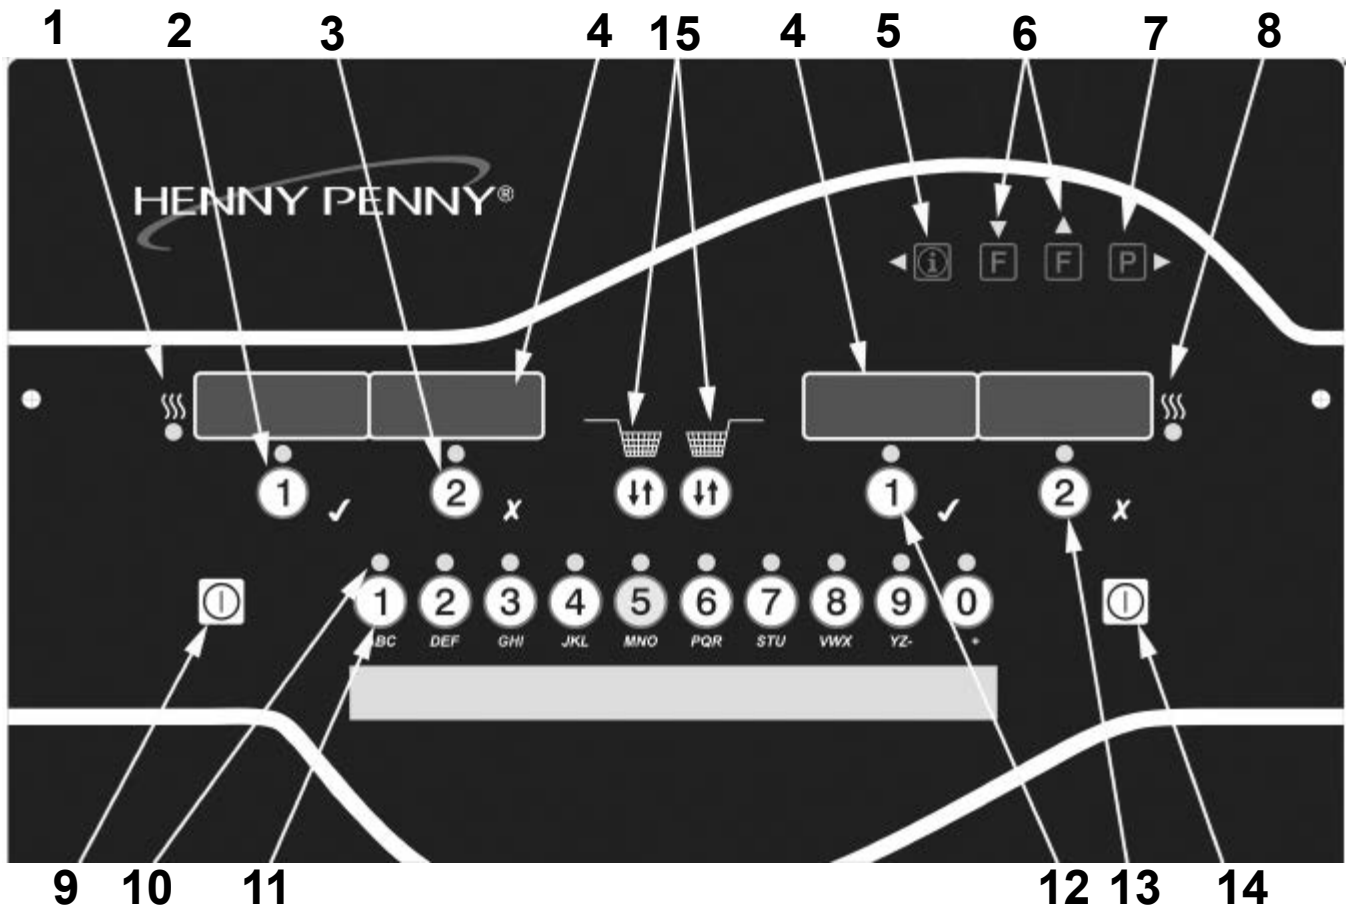


Figure 3-1

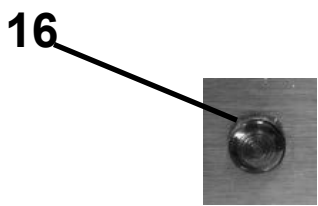


Figure 3-2

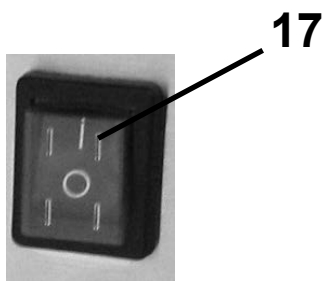


Figure 3-3

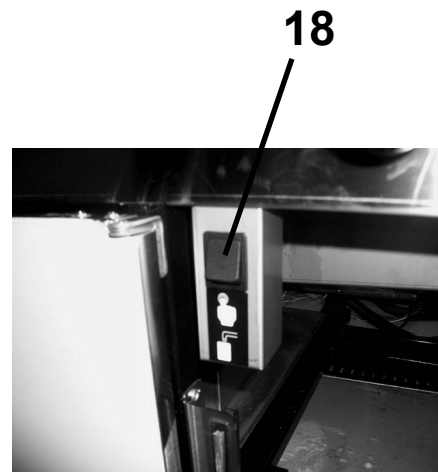











Figure 3-4
(Bulk Oil Supply Fryers Only)

3-1. OPERATING COMPONENTS
(Continued)

Refer to Figures 3-1, 3-2 & 3-3 in conjunction with the description of the functions below.

Fig. No.	Item No.	Description	Function
3-1	1		This LED lights when the control calls for heat for the left vat(s), and the elements come on and heat the oil
3-1	2		During normal operation, press this button to start and stop cook cycles for the left basket; press to change displayed product; also used for ✓ to indicate YES or to confirm
3-1	3		During normal operation, press this button to start and stop cook cycles for the left basket; press to change displayed product; also used for X to indicate NO or cancel
3-1	4	Digital Display	Shows the product codes; shows the timer countdown during cook cycles; shows the prompts during the filter modes; shows the selections in the Program Mode; shows the temperature of the oil by pressing  ; shows error codes (also displays in several languages)
3-1	5		Press once to view actual oil temperature; press twice to view oil set-point temperature; and press three times to view recovery information for each vat. Used in Programming Modes; used as ◀ button to back-up to a previous parameter in Program and Filter Modes.
3-1	6		Used to access the Filter Menu; left button used for left split vat and right button used for right split vat; also used for ▲ or ▼ buttons; press once to view the number of cook cycles before next filter-Global Filter or the mode or percentage of filter allowance-Mixed Filter; press twice to view the time and date of the most recent filter on each vat; or press three times to view the number of hours of use of the filter pad presently in the drain pan.
3-1	7		Used to access the Program Modes; used as ▶ button to advance to the next parameters in Program and Filter Modes; press to select 2nd languages and volumes
3-1	8		This LED lights when the control calls for heat for the right vat(s), and the elements come on and heat the oil
3-1	9		Press to turn on and off the heat system for the left vat(s); on full vats either button can be used

3-1. OPERATING COMPONENTS

(Continued)












Fig. No.	Item No.	Description	Function
3-1	10 & 11		<p>Each product button LED lights when that particular product has been selected, or when it is compatible with cook temperature</p> <p>Press to select the desired product; press to place the letters under the button, during naming a product in Program Mode</p> <p>The  can be used to start an Idle Mode if enabled in Special Program Mode</p>
3-1	12		<p>During normal operation, press this button to start and stop cook cycles for the right basket; press to change displayed product; press to confirm prompts in the filter modes; also used for ✓ to indicate YES or confirmation</p>
3-1	13		<p>During normal operation, press this button to start and stop cook cycles for the right basket; press to change displayed product; press to deny prompts in the filter modes; also used for X to indicate NO or cancel</p>
3-1	14		<p>Press to turn on and off the heat system for the right vat(s)</p>
3-1	15		<p>Auto-lift equipped fryers ONLY. Press to raise or lower baskets.</p>
3-2	16		<p>A Filter Beacon[®] is found beside each black drain knob; when lit blue  , indicates the oil should be filtered at this time;  beacon flashes when the drain needs opened or closed</p>
3-3	17		<p>When the power switch is turned to the ON position, power is supplied to the controls and pumps</p>
3-4	18		<p>For fryers with a bulk oil supply, press this button to fill the JIB</p>






Figure 3-5


Fig. No.	Item No.	Description	Function
3-5	1	Filter Drain Pan Assy.	Oil is drained into this pan and then is pumped through filters to help prolong the use of the oil
3-5	2	Basket Rest	The baskets hang on this when not in use, or to drain the product after a cook cycle
3-5	3	Vat Covers	Covers the vat when not in use
3-5	4	Drain Valve Knob	Pull-out on black knobs to open drain valve and oil drains from vat; Push-in to close drain valve and oil can be pumped into vat
3-5	5	JIB	Jug-in-a-Box; holds oil to be pumped into vats to top-off the oil level by the Oil Guardian™ process


 


3-2. SET-UP MODE

Upon initial start-up, the controls will ask to confirm the settings for the fryer.



When main power switch is turned on, “OFF” shows in both displays. Press  on either side and *SETUP* *ENTER CODE* shows in display. Press 1, 2, 3, and “LANGUAGE” shows on the left display, “ENGLISH” on the right display.

Use  or  buttons to change the operation display to: Greek “ΕΛΛΗΝΙΚΑ”, Russian “РУССКИЙ”, Swedish “SVENSKA”, German “DEUTSCHE”, Portuguese “PORTUG.”, Spanish “ESPANOL”, or French “FRANCAIS”.

Press  to continue with the other set-up items which include:

- TEMP FORMAT - °F or °C
- TIME FORMAT - 12-HR or 24-HR
- ENTER TIME - Time of day (use product buttons to change)
- ENTER TIME - AM or PM
- DATE FORMAT - MM-DD-YY or DD-MM-YY
- ENTER DATE - Today’s date (use product buttons to change)
- DAYLIGHT SAVING TIME - 1.OFF; 2.US (2007 & after); 3.EURO; 4.FSA (US before 2007)
- FRYER TYPE - ELEC or GAS
- VAT TYPE - FULL OR SPLIT
- AUTOLIFT ENABLED? - NO LIFT or YES LIFT
- BULK OIL SUPPLY - YES or NO
- BULK OIL DISPOSE? - YES or NO
- S/N - Shows serial number of the unit or can be recorded (THIS SERIAL NUMBER SHOULD MATCH THE SERIAL NUMBER ON THE DATA PLATE, ON THE DOORS.)
- 2nd LANGUAGE - By setting a second language in the controls, 2 languages can now be easily chosen by pressing  during normal operation. One language shows in the left display and the second language shows in the right display. Pressing the  button under desired language, selects that language seen in displays.
- 2nd VOLUME - By setting a second volume in the controls, 2 volumes can now be easily chosen by pressing  twice during normal operation. One volume setting shows in left display (NONE to 10; 10 being the loudest) and a second volume shows in right display. To select volume, press  button under desired volume .
- SETUP COMPLETE - OFF is displayed and unit shuts down.

NOTICE

Unless otherwise indicated, use  or  to change settings.

Setup Mode can also be accessed by re-initializing the controls, in Special Program Mode, in Level 2 programming (SP-3).

**3-3. FILLING OR
ADDING OIL**

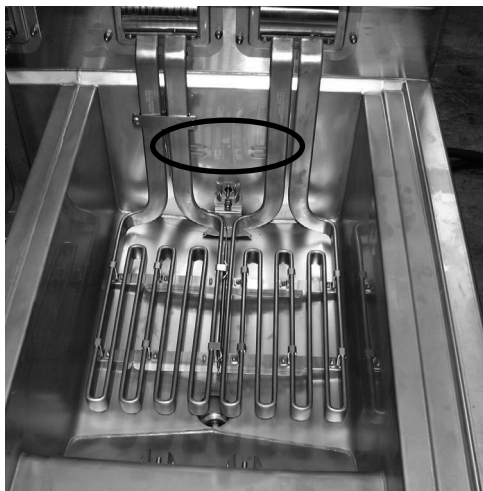


Figure 1



Figure 2



Figure 3

CAUTION

The oil level must always be above the heater elements when fryer is heating and at the oil level indicators on the rear of vat. Failure to follow these instructions could result in a fire and/or damage to the fryer.

Solid oil is not recommended. Solid oil could cause clogging and pump failures.

1. It is recommended that a high quality frying oil be used in the open fryer. Some low grade oils have a high moisture content and cause foaming and boiling over.

**WARNING
BURN RISK**

Wear gloves to avoid severe burns when pouring hot oil into vat. Oil and all metal parts that are in contact with the oil are extremely hot; take care to avoid splashing.

2. **Oil Capacities:**

Full-size vats = 15 quarts/30 lbs (14.2 liters/13.6 kg)

Split-vats = 7.5 quarts/15 lbs (7.1 liters/6.8 kg).

All vats have 2 level indicator lines inscribed on the rear wall of the vat. The upper-most line shows the oil at the proper level when heated. Figure 1.

3. Place basket support inside of vat and fill vat with cold oil to the lower indicator. Figure 2.

Filling Vat from Bulk Supply (Must be equipped with optional accessories & controls set to “YES” for “Bulk Oil Supply?” in Set-Up Mode)

1. Turn the main power switch to the ON position.
2. Place basket support inside of vat. Figure 2.
3. Press and hold **F** (on either side) until display shows *FILTER MENU*, along with 1.EXPRESS FILTER?
4. Press and release **▶** button 6 times until display shows “7. FILL FROM BULK”.
5. Press **√** button and display shows “FILL VAT” and then “√=PUMP” “X=DONE”. Press and hold **√** button again to fill vat and display shows “FILLING”.
6. Once oil is to the lower fill line, release **√** button and display returns to “FILL VAT” “√=PUMP” “X=DONE”. Press **X** button twice to return to normal operation.


NOTICE

Press and hold the black button behind the right door to fill the JIB from the Bulk Supply as needed. Figure 3.

3-4. MORNING START-UP PROCEDURES

1. Make sure basket support is in vat and vat is filled with oil to the proper level.

Model EEG-141, fill the oil reservoir. See Section 3-10.

2. Move power switch to the ON position and then press  to turn on heat for the desired vat. If display shows “IS POT FILLED?” make sure oil is at the proper level (see Section 3-2) and then press \checkmark button for “YES”.

Unit automatically goes into the Melt Cycle until the oil temperature reaches 180°F (82°C) and then control automatically exits the Melt Cycle.

NOTICE

The Melt Cycle may be bypassed, if desired, by pressing \checkmark button or X button and holding it for 5 seconds.

The control then shows “EXIT MELT” and “YES NO”. Press \checkmark button for “YES” and vat heats continuously until the set-point temperature is reached.

CAUTION

Do not leave fryer unattended and do not bypass the Melt Cycle unless enough oil has melted to completely cover all of the elements. If the Melt Cycle is bypassed before the elements are covered, excessive smoking of oil, or a fire will result.





DO NOT OVERLOAD, OR PLACE PRODUCT WITH EXTREME MOISTURE CONTENT INTO THE BASKETS. 3 LBS. (1.4 KG.) IS THE MAXIMUM AMOUNT OF PRODUCT PER FULL VAT AND 1-1/2 LBS. (.68 KG.) FOR THE SPLIT VATS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN OIL OVERFLOWING THE VAT WHICH COULD CAUSE SERIOUS BURNS, PERSONAL INJURY, FIRE AND/OR PROPERTY DAMAGE.

IF THE SHORTENING TEMPERATURE EXCEEDS 420°F (216°C), IMMEDIATELY SHUT OFF THE POWER AT THE MAIN CIRCUIT BREAKER AND HAVE THE FRYER REPAIRED. IF OIL TEMPERATURE EXCEEDS ITS FLASHPOINT, FIRE WILL OCCUR, RESULTING IN SEVERE BURNS AND/OR PROPERTY DAMAGE.



3-5. BASIC OPERATION

The Evolution Elite fryer is available as non-auto-lift and auto-lift models. The auto-lift controls, allow the baskets to be automatically lowered into the shortening at the beginning of the cook cycle, and raised from the shortening at the end of the cycle.


1. Once out of the Melt Cycle, LOW TEMP flashes until the setpoint temperature has been reached. Once the setpoint temperature has been reached, the product name now shows in the display, ex: FRY, and product now can be placed in the oil.
2. Press a timer button  or . (Auto-lift fryers, the basket automatically lowers into the shortening.)
3. Display shows the name of the product cooking (ex: “FRY”) and the timer counting down.
4. When cook cycle is complete, and alarm sounds and display shows “DONE”.
5. Press the timer button under “DONE” to stop the alarm, and lift basket from vat. (Auto-lift fryers, the basket automatically rises out of the shortening.)
6. If a Quality Timer (hold timer) has been programmed, the hold time starts automatically when the user presses the timer button to end the cook cycle. While the quality timer counts down, the display shows the three-digit product abbreviation followed by “Qn”, where “n” is the number of minutes remaining. ex: “FRY” / “Q5” / “FRY” / “Q5” / “FRY” / “Q4”, etc.


At the end of the timer countdown, control beeps and the display shows “QUAL” followed by the three-digit product name: “QUAL” / “FRY” / “QUAL” / “FRY”. Press the timer button to cancel the timer.

NOTICE

To stop a cook cycle at any time, press and hold the timer button  or .

3-6. IDLE MODE

Once programmed, the Idle Mode help saves on oil and utility costs by lowering the set-point of the oil when the vat is not being used. To activate the Idle Mode, press the  button, or can be programmed to activate automatically after “X” minutes of inactivity on the vat.

The oil is maintained at a lower temperature until the  button is pressed, and then the oil is heated to cooking temperature. See Special Program Modes, SP-7, SP-7A, SP-7B, & SP-7C.

3-7. OIL GUARDIAN™
(Auto Top-Off)

During normal operation, the control automatically monitors vat oil level. If the control senses oil level is too low, unit automatically pumps oil from JIB into vat to keep oil at proper level.

Manual Top-Off

If oil level is a little low, oil can be added to vat at any time from JIB to raise oil level to proper level by following steps below. This procedure is NOT to be used to fill an empty vat.

1. Press and hold **F** (either one-full vat) until display shows “*FILTER MENU*” followed by “1.EXPRESS FILTER”.
2. Press **▶** 5 times until “6.FILL FROM JIB” shows in display.
3. Press **√** button; “FILL VAT” “√=PUMP” “X=EXIT” is displayed.
4. Press and hold **√** button; display shows “FILLING” and oil is pumped from the JIB to the vat.
5. Once vat is full, release **√** button; “FILL VAT” “√=PUMP” “X=EXIT” displays. Press **X** button twice for normal operation.

3-8. SELECTING A PRODUCT WITH A DIFFERENT SETPOINT

When selecting a product, if “XXX XXX” shows in the display, the setpoint temperature is not correct for this product. To change the setpoint temperature for the desired product:

1. Press product button, for ex: **1 ABC** (FRY).
2. Display shows “XXX XXX”.
3. Press and hold a timer button **1 ✓** or **2 ✕** for 5 seconds and then “FRY” shows in display.
4. Allow oil temperature to reach setpoint temperature before dropping product.

3-9. REPLACING THE JIB



Figure 1

1. Control displays “JIB IS LOW” and an alarm sounds.
2. Open right door, pull JIB from unit, pull cap from JIB top, discard empty JIB, and replace with full one. Figure 1.

NOTICE

Model EEE-141 (single-well) see next section.

3-10. MODEL EEE-141 OIL RESERVOIR

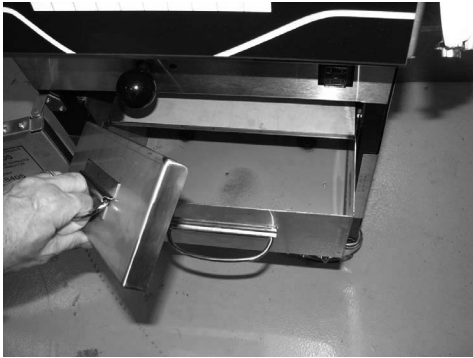


Figure 1



Figure 2



Figure 3



Figure 4

Filling Oil Reservoir

1. Control displays “JIB IS LOW” and an alarm sounds.
2. Open door and pull reservoir forward and remove reservoir cover. Figure 1.
3. Place reservoir cover on bracket on door. Figure 2.
4. Pour oil into reservoir up to fill lines (13 lbs. (6.12 kg.)) and then replace cover and push reservoir back into position. Figure 3.

Removing/Cleaning Reservoir

1. Open door and pull reservoir forward.
2. Slide reservoir to the left and lift from fryer. Figure 4.
3. Clean reservoir at a sink with soap and water.

NOTICE

Before placing the reservoir back into position, lubricate the o-rings (below) on the filter tube with cold oil. Check o-rings for tears or nicks and replace if necessary. To replace o-ring, use a small, flat-bladed screwdriver, pry up on the o-ring and pull off of end of tube. See below.



3-11. SMARTFILTER EXPRESS™



Figure 1



Figure 2



Figure 3

1. During normal operation and after a certain number of cook cycles, the Filter Beacon® illuminates on the front of the fryer (Figure 1), and the control periodically shows “FLTR NOW?” “YES NO”.

If X for NO is pressed, fryer resumes normal operation and control suggests filter later.

2. **Check Filter Pan:** If the filter drain pan or cover is not in place, the display shows “CHK PAN”. Make sure that the filter pipe is tightly connected, and that the filter drain pan is as far back under fryer as it will go and the filter pan cover is in place.

3. Press √ button for YES and display shows *SKIM VAT* followed by “CONFIRM” “YES NO”. Skim vat, press √ button for YES and display shows “OPEN DRAIN”. Pull drain knob (Figure 2) out, display shows “DRAINING” and oil drains from the vat.



To avoid overfilling the drain pan, drain only 1 vat at a time. The drain pan holds 1 full vat, or 2 split vats of oil. Overfilling the drain pan may cause slippery floors, which may result in personal injury.



If filtering is NOT desired, press [⏸], the display shows “STOPPED” followed by “CONTINUE FILTER” “YES NO”. Press X button, display shows “QUIT FILTER” “YES NO”, press √ button; SmartFilter is cancelled, the blue light goes out, and controls return to normal operation. Controls will suggest filtering after several more cook cycles.

If the drain is clogged by food soil, the display will show “VAT EMPTY”, followed by “YES NO”. Use straight white brush to clear drain, press the √ button, and display shows “DRAINING”. Controls will proceed with filtering process.

4. At end of drain cycle, “VAT EMPTY” followed by “YES NO” is displayed. Visually check vat is empty and press √ button, “WASHING” is displayed. Once filter process is complete, display shows “CLOSE DRAIN”. Push-in on drain knob to close drain (Figure 3). Display shows “FILLING” and vat re-fills with oil.

3-11. SMARTFILTER EXPRESS™
(Continued)

5. Once vat is filled, display shows “IS POT FILLED?” “YES NO”. Make sure vat is full and then press √ button for YES and the control turns “OFF”.
6. If the oil has not pumped back to the proper level in the vat during the SmartFilter Express™ process, press X button for NO and pump runs for another 30 seconds.
7. Display shows “IS POT FILLED?” “YES NO”. Make sure vat is full and then press √ button and display shows and the control returns to normal operation. Press X button and pump runs for another 30 seconds. You can try to fill the vat 3 times.

Filter Error

8. After trying to fill the vat 3 times without success, the display shows “*CHANGE* *FILTER* *PAD* CLOGGED?”. Press √ button and controls turn OFF. Change filter pad following procedures in Changing the Filter Pad Section.

If filter pad is not changed, the “CHANGE FILTER PAD?” reminder will display every 4 minutes until pad is changed.

9. During the next SmartFilter Express™ with a new filter pad, if the vat is not filled after 3 tries, the display shows “FILTER SERVICE REQUIRED-SEE TROUBLE-SHOOTING GUIDE” followed by “YES”. Press √ button and controls turn unit OFF.

NOTICE

To help ensure vat fills completely, clean the filter pan at least once a day, change the filter pad at least once a day, and make sure JIB is full and that “O” rings on the filter pan are in good condition. If your store operates 24 hours a day, clean the filter pan and change the filter pad twice a day.

3-12. DAILY FILTERING

This filtering procedure allows for a more thorough cleaning of the vat and should be done once a day. The vat can be filtered during any non-frying times.



To avoid burns from hot oil, use approved safety equipment including, apron, face shield and gloves before starting filtering procedure.

Also, to avoid overfilling the drain pan, drain only 1 vat at a time. The drain pan holds 1 full vat, or 2 split vats of oil. Overfilling the drain pan may cause slippery floors, which may result in personal injury.



Figure 1

1. **Check Filter Pan:** A new filter pad should be used on the first filter of each day, but the same filter pad can be used the rest of the day, except for fish vats. **After filtering a fish vat, be sure to change the filter pad.**

Make sure that filter pan cover is in place, filter drain tube is secured, and filter drain pan is pushed in and locked into place. If filter drain pan and cover are not latched into place, the display shows “CHK PAN”.

2. Press and hold **F** until display shows “1.EXPRESS FILTER?” Split vat units, use the left **F** button for the left vat and the right **F** button for the right vat.
3. Press **▶** button and display shows “2.DAILY FILTER?”
4. Press **√** button for YES and display shows “CONFIRM”, followed by “YES NO”.
5. Press **√** button for YES; display shows “OPEN DRAIN”. Pull-out on the drain knob (Figure 1), the display shows “DRAINING” and the oil drains from the vat, **or** press **X** button for NO and controls return to normal operation.
6. Once oil has drained from vat, remove basket support from vat. Figure 2.



Figure 2



Use protective cloth or gloves when lifting the basket support. Support may be hot and burns could result.

3-12. DAILY FILTERING
(Continued)

7. Use the lift tool and lift the hinged element from the vat to clean the bottom of the vat. Figure 4.



Use protective cloth or gloves when lifting the element with the lift tool. The element may be hot and severe burns could result.



Avoid putting the lift tool in the center of the elements, at the same area as the high limit bulb, or damage to the high limit could result.

8. Scrape or brush the sides and the bottom of the vat. Be careful not to damage the sensing probes.



Do not use steel wool, other abrasive cleaners or cleaners/sanitizers containing chlorine, bromine, iodine or ammonia chemicals, as these will deteriorate the stainless steel material and shorten the life of the unit.

Do not use a water jet (pressure sprayer) to clean the unit, or component damage could result.

9. Once the vat is clean and the display shows "SCRUB VAT COMPLETE?" "YES NO". Press \checkmark button for YES and the display shows "WASH VAT" "YES NO".

10. Press \checkmark button, display shows "WASHING" and oil circulates through vat for several minutes. When wash cycle is complete, display shows "WASH AGAIN?" "YES NO".



The Wash step of the first filter on a new filter pad last an extra 45 seconds to "break in" the pad.

11. Press \checkmark button for YES if another wash is needed, otherwise press X button for NO and the display shows "CLOSE DRAIN". Push-in on drain knob to close drain (Figure 3), the display shows "RINSING" and vat fills with oil.

12. Once the vat is filled, "OPEN DRAIN" shows in display. Pull-out on drain knob to open the drain (Figure 4) and display shows "RINSING". When rinsing is complete, display shows "RINSE AGAIN?" "YES NO".



Figure 3



Figure 4

3-12. DAILY FILTERING
(Continued)

13. Press \checkmark button for YES if another rinse is needed, otherwise press **X** button for NO. Display shows "POLISH?" "YES".
14. Press \checkmark button for YES and oil is "polished" by circulating it through the filtering system. The display shows "5:00 X=STOP". If desired, press **X** button to stop the polishing, otherwise the oil is polished for 5 minutes.
4. Once the oil is polished, the display shows "FILL VAT?" "YES". Press \checkmark button and display shows "CLOSE DRAIN". Push-in on drain knob to close drain (Figure 3), display shows "FILLING" and vat then re-fills with oil.
15. Once full, display shows "IS POT FILLED?" "YES NO". Press \checkmark button for YES; fryer returns to normal operation.

If **X** button is pressed, display shows "FILLING". You can try to fill vat 4 times and then control shows "ADD QUIT". Press \checkmark button and JIB pump runs 60 seconds, filling vat from JIB. When vat is full, press **X** button and display shows "IS POT FILLED?" "YES NO". Press \checkmark button for YES and fryer returns to normal operation.

3-13. DISCARDING OIL FROM VAT USING OPTIONAL OIL DISCARD SHUTTLE



WITH PROLONGED USE, THE FLASHPOINT OF OIL IS REDUCED. DISCARD OIL IF IT SHOWS SIGNS OF EXCESSIVE SMOKING OR FOAMING. SERIOUS BURNS, PERSONAL INJURY, FIRE, AND/OR PROPERTY DAMAGE COULD RESULT.



Figure 1



Figure 2



Figure 3

1. Open the door, lift-up on the drain pan stop and pull-out the drain pan assembly, using the handle on the drain pan. Figures 1 & 2.
2. Press and hold **F** (either one) until display shows “*FILTER MENU*”, along with “1.EXPRESS FILTER?”.
3. Press and release **▶** button twice until display shows “3.DISPOSE”. Press **√** button and display shows “DISPOSE?” “YES NO”.
4. Press **√** button and “IS DISPOSAL UNIT IN PLACE?” “YES NO” shows in display.
5. With discard shuttle rolled into place (Figure 3), press **√** button and display shows “OPEN DRAIN”. Pull-out on drain knob to open drain and display shows “DRAINING”. Oil now drains from the vat into the shuttle.
6. Display shows “VAT EMTY “YES NO”. Verify that vat is empty, and press **√** button.
7. Display shows “CLEAR OLD OIL FROM OIL LINES” “**√**=PUMP” “X= DONE”. Press and hold **√** button for a few seconds to clear old oil from lines. Once cleared, press **X** button.
8. Display shows “CLN VAT COMPLETE” “YES NO”. Once vat is clean, press **√** button and display shows “CLOSE DRAIN”. Push-in on the drain knob.
9. Display shows “MANUAL FILL POT”, followed by “IS POT FILLED?”, along with “YES NO”. Fill vat to the lower indicator line on the rear of the vat. See Filling or Adding Oil instructions from Section 3-3.

Press **√** button and fryer returns to normal operation.

10. Remove the discard shuttle from under fryer and replace with the filter pan assembly.

3-14. DISCARDING OIL FROM VAT USING OPTIONAL FRONT DISPOSE SYSTEM

NOTICE

“BULK OIL DISPOSE?” in the Special Program Mode or Set-Up Mode, must to set to “FRONT” for the Front Dispose System to operate.



Figure 1



Figure 2

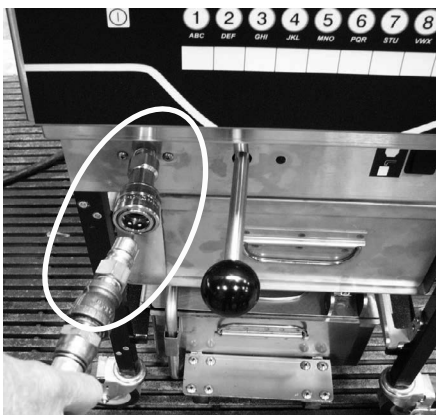


Figure 3

1. Locate dispose hose. Figure 1.
2. Press and hold **F** until display shows “*FILTER MENU*”, along with “1.EXPRESS FILTER?”.
3. Press and release **▶** button twice until display shows “3.DISPOSE?”. Press **√** button; display shows “DISPOSE?” “YES NO”.
4. Press **√** button; “DRAIN VAT? YES NO” shows in display.

Press **X** button if draining the vat is not desired and skip to step 7.
5. Press **√** button and Filter Beacon flashes & display shows “OPEN DRAIN”. Pull-out on drain knob to open drain and display shows “DRAINING”. Figure 2.
6. Oil drains from vat into drain pan and then display shows “VAT EMTY” “YES NO”. Verify that vat is empty, and press **√** button.
7. Display shows “CLEAR OLD OIL FROM OIL LINES” “**√**=PUMP” “**X**=DONE. Press and hold **√** button for a few seconds to clear old oil. Once cleared, press **X** button.
8. Display shows “CLN VAT COMPLETE” “YES NO”. Once vat is clean, press **√** button.
9. Attach hose to quick-disconnect on front of fryer. Figure 3.

**3-14. DISCARDING OIL
FROM VAT USING
OPTIONAL FRONT
DISPOSE SYSTEM
(Continued)**



Figure 4



Figure 5

10. Display shows “HOLD DISPOSE SWITCH” and “X=DONE”. While holding the wooden handle, make sure hose nozzle is pointed into the disposal container and then press and hold dispose switch to pump oil from drain pan. Figure 4.

NOTICE

The dispose switch will not run the pump motor until this step in the Oil Dispose Mode.

**WARNING
BURN RISK**

Use care to prevent burns caused hot surfaces and by splashing of hot oil.

11. Once oil is no longer pumping from drain pan, release dispose switch and press **X** button. Filter Beacon flashes and display shows “CLOSE DRAIN” and push-in the drain knob to close drain. Figure 5.
12. Display shows “MANUAL FILL VAT” (or “FILL VAT FROM BULK if so equipped), followed by “IS POT FILLED?”, along with “YES NO”. Fill the vat to the lower indicator line on the rear of the vat. See Filling or Adding Oil instructions from Section 3-3 in Operator’s Manual.
- Press \checkmark button and fryer returns to normal operation.

**3-15. DISCARDING OIL
FROM VAT USING
OPTIONAL BULK OIL
DISPOSE SYSTEM**

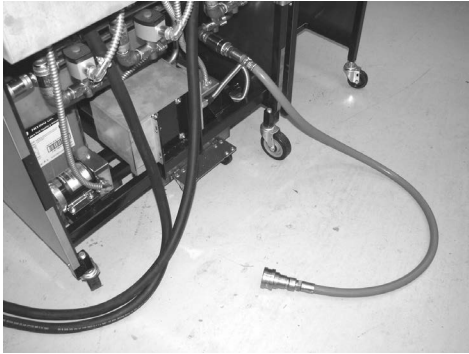


Figure 1



Figure 2

1. Connect female quick disconnect attached to the hose at the rear of fryer, to the correct male quick disconnect at the wall. Once attached, the hose can remain connected unless the fryer is moved. Figures 1 & 2.

NOTICE

“BULK OIL DISPOSE?” in the Special Program Mode or Set-Up Mode, must to set to “YES” for the Bulk Oil Dispose System to operate. Also, a password code step (1, 2, 3) can be added in Special Programming, SP-27.

2. Press and hold **F** (left or right for split vats) until display shows “*FILTER MENU*”, along with “1.EXPRESS FILTER?”.
3. Press and release **▶** button twice until display shows “3.DISPOSE”. Press **√** button; display shows “DISPOSE?” “YES NO”, or enter code 1, 2, 3, if SP-27 is set to YES.
4. Press **√** button; “DRAIN VAT? YES NO” shows in display. Press **X** button if drain pan has oil in it. Skip to step 8.
5. Press **√** button and display shows “OPEN DRAIN”. Pull-out on drain knob to open drain and display shows “DRAINING”. Oil drains from vat into drain pan.
6. Display shows “VAT EMTY” “YES NO”. Verify that vat is empty, and press **√** button.
7. Display shows “CLEAR OLD OIL FROM OIL LINES” “√=PUMP” “X=DONE. Press and hold **√** button for a few seconds to clear old oil. Once cleared, press **X** button.

3-15. DISCARDING OIL FROM VAT USING OPTIONAL BULK OIL DISPOSE SYSTEM (Continued)

8. Display shows “CLN VAT COMPLETE” “YES NO”. Once vat is clean, press √ button.
9. Display shows “DISPOSE” and then “√=PUMP” “X=DONE”. Press √ button.
10. Display shows “DISPOSING...” “X=STOP and oil is pumped from drain pan to bulk oil container. When all oil is pumped from pan, press X button (STOP).
11. Display shows “DISPOSE” and then “√=PUMP” “X=DONE”. Press X button; display shows “CLOSE DRAIN”. Close drain.
12. Display shows “MANUAL FILL VAT” (or “FILL VAT FROM BULK if so equipped), followed by “IS POT FILLED?”, along with “YES NO”. Fill the vat to the lower indicator line on the rear of the vat. See Filling or Adding Oil instructions from Section 3-3.

Press √ button and fryer returns to normal operation.

3-16. CHANGING THE FILTER PAD

In order to assure good oil pumping performance, the filter pad (or paper) should be changed at least once per day. However, in stores open 24 hours a day, the pad should be changed twice a day.



Figure 1



Figure 2

NOTICE

If filter pad has not been changed, a reminder shows on the display, “CHANGE PAD”. Press √ button to cancel the message, but it reappears every 4 minutes until the filter pad has been changed.

1. Make sure the main power switch is in the ON position.
2. Open the door, lift-up on the drain pan stop and pull-out the drain pan assembly, using the handle on the drain pan. Figures 1 & 2.

WARNING
BURN RISK

This pan could be hot! Use protective cloth or glove, or severe burns could result.

If the filter pan is moved while full of oil, use care to prevent splashing, or burns could result.

**3-16. CHANGING THE FILTER
PAD (Continued)**

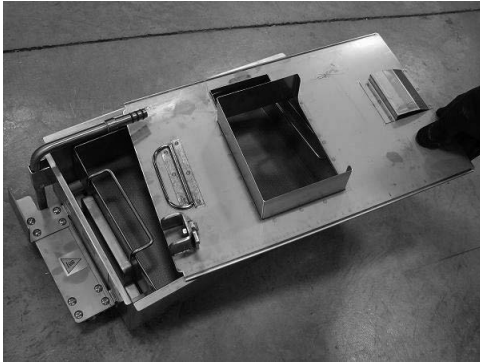


Figure 3

3. Lift the pan cover from the drain pan. Figure 3.

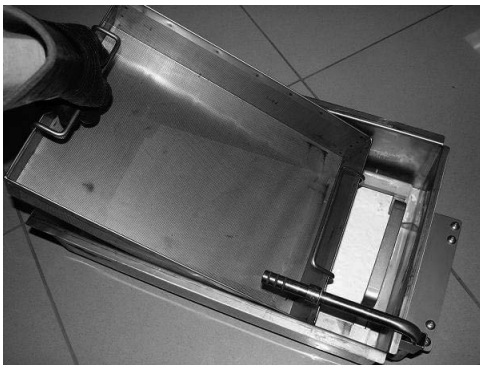


Figure 4

4. Lift the crumb basket from the drain pan. Wipe the oil and crumbs from the crumb basket. Clean the crumb basket with soap and water, then thoroughly rinse with hot water. Figure 4.

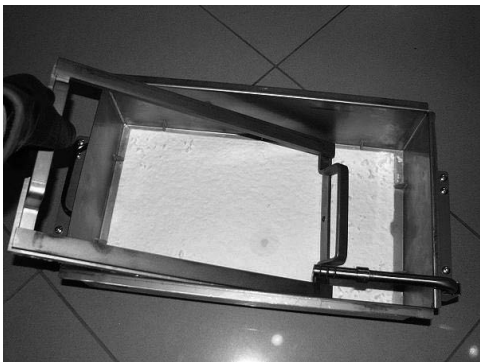


Figure 5

5. Remove the filter pad retaining ring and clean thoroughly with soap and water. Rinse thoroughly with hot water. Figure 5.



Figure 6

6. Pull the filter pad from the pan and discard pad. Figure 6.

**3-16. CHANGING THE FILTER
PAD (Continued)**

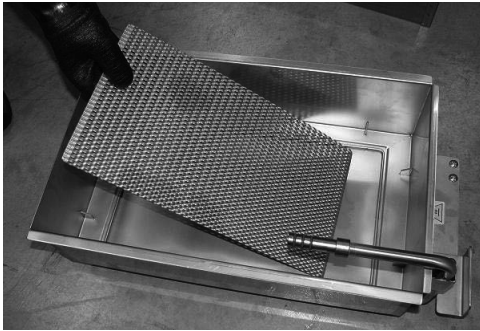


Figure 7



Figure 8



Figure 9



Figure 10

7. Remove the bottom screen from pan and clean thoroughly with soap and water. Rinse thoroughly with hot water. Figure 7.

8. Wipe the oil and crumbs from the drain pan. Clean the drain pan with soap and water, then thoroughly rinse with hot water. Figure 8.

NOTICE

Be sure that drain pan, bottom screen, crumb catcher, and the retaining ring are thoroughly dry before placing filter pad into pan as water will dissolve the filter pad.

9. Reassemble in reverse order, placing the bottom screen into the filter pan first, followed by the filter pad, retaining ring and the crumb catcher.
10. Push the filter pan assembly back underneath the fryer, making sure the filter tube on the pan makes a good connection with the fitting underneath the fryer. Figure 9.

11. Make sure the drain pan stop is engaged and the fryer is now ready for normal operation. Figure 10.

**3-17. REMOVING AND
CLEANING BASKET
REST**



The basket rest, on the rear shroud of the fryer, should be removed and cleaned periodically.



Use protective gloves when removing the basket rest. The basket rest may be hot and burns could result.

1. Grasp basket rest with 2 hands; lift and pull off the studs.
2. Wash rest in a sink with soap and water. Dry thoroughly.
3. Clean the area behind the basket rest and then reinstall it.



The filter drain pan must be as far back under fryer as it will go, and the cover in place. Be sure the filter drain pan is latched into place and the hole in the cover lines up with the drain before opening the drain. Failure to follow these instructions causes splashing of shortening and could result in personal injury.

Moving the fryer or filter drain pan while containing hot shortening is not recommended. Hot shortening can splash out and severe burns could result.

Always wear chemical splash goggles or face shield and protective rubber gloves when cleaning the frypot as the cleaning solution is high in alkaline. Avoid splashing or other contact of the solution with your eyes or skins. Severe burns may result. Carefully read the instructions on the cleaner. If the solution comes in contact with your eyes rinse thoroughly with cool water and see a physician immediately.



**CHEMICAL
SPLASH
GOGGLES**



**CHEMICAL
RESISTANT
GLOVES**

Also, to avoid overfilling the drain pan, drain only 1 vat at a time. The drain pan holds 1 full vat, or 2 split vats of oil. Overfilling the drain pan may cause slippery floors which may result in personal injury.

1. Cover adjoining vats to avoid accidentally contaminating oil with fryer cleaning solution.



Do not cook product in adjoining vat when clean-out mode is in progress to avoid contaminating oil and/or product.

3-18. CLEAN-OUT MODE
(Continued)

2. Press and hold **F** until display shows “1.EXPRESS FILTER?”. Split vat units, use the left **F** button for the left vat and the right **F** button for the right vat.
3. Press and release **▶** button several times until display shows “CLEAN-OUT”.
4. Press **√** button; display shows “OIL RMVD” “YES NO.”
5. If oil has already been removed, press **√** button and control skips down to “Solution Added?” step.

If vat still has oil, press **X** button; display shows “DISPOSE” “YES NO”. Press **√** button to dispose of the oil, or press **X** button to exit Clean-Out Mode.

Display shows “IS DISPOSAL UNIT IN PLACE?” “YES NO”. If “NO” is selected, display shows “INSERT DISPOSAL UNIT”. Once disposal unit is in place, press **√** button for YES; display shows “OPEN DRAIN”. Open drain, display shows “DRAINING”; oil drains from vat. Display shows “VAT EMTY” “YES NO”. Press **√** button when ready; display shows “CLOSE DRAIN”; close drain.

Bulk Oil Systems Only! Display shows “CHK PAN” if the filter drain pan is missing. Once pan is in place, display shows “OPEN DRAIN”. Pull-out drain knob and display shows “DRAINING” and oil drains from vat. Display then shows “**√**=PUMP” “**X**=DONE. Press **√** button, display shows “DISPOSING” and oil is pumped from drain pan. Once pan is empty, press **X** button twice and close drain.

6. Display shows “SOLUTION ADDED?” “YES NO”. Fill vat to 1 in. (25 mm) above top fill line with hot water, add 4 ozs. (0.12 liters) of open fryer cleaner, and mix thoroughly. Press **√** button and display shows “START CLEAN” “YES NO”.
7. Press **√** button, display shows “CLEANING” and a countdown timer. Heat regulates to 195°F (91°C) for this step for one hour.

Add water as needed during cleaning process to keep solution 1 in. (25 mm) above the top fill line.

To stop cleaning cycle early, press **X** button; display shows “QUIT CLEANING” “YES NO”. Press **√** button to cancel the rest of countdown time and proceed to rinse steps.

3-18. CLEAN-OUT MODE
(Continued)

8. Using the open fryer brush (never use steel wool), scrub the inside of the vat. At the end of the one hour, display shows “CLN DONE” and beeps. Press √ button and display shows “REMOVE SOLUTION FROM VAT”.
9. Empty filter drain pan of internal filtering components and move components to a sink to be cleaned. Return empty filter drain pan and cover to fryer, making sure it is pushed securely into place and the latch fully engaged.
10. Pull-out drain knob and drain vat contents into filter drain pan. Remove drain pan from unit and dispose of cleaning solution.



To avoid burns when pouring hot solution, wear gloves and protective gear and take care to avoid splashing.

11. Return empty filter drain pan to fryer and press √ button. Display then shows “VAT EMTY” “YES NO”.
12. Once vat is empty, press √ button and display shows “SCRUB VAT COMPLETE” “YES NO”. Use brush to clean element and scour pad to clean vat, if needed.

CAUTION

Do not scrape the electric fryer elements, or use scouring pads on elements. This produces scratches on the surface of the element causing breading to stick and burn.

Do not use steel wool, other abrasive cleaners, or cleaners/sanitizers containing chlorine, bromine, iodine, or ammonia chemicals as these will deteriorate the stainless steel material and shorten the life of the unit.

Do not use a water jet (pressure sprayer) to clean unit or component damage could result.

NOTICE

Use lift tool and lift the elements from the vats as needed. (Auto-lift fryers, hinge back the basket hooks over the top of fryer before lifting the elements.)

13. Once vat is clean, press the √ button and display shows “RINSE VAT”. (If drain is not open, display shows “OPEN DRAIN”. Open the drain.)

3-18. CLEAN-OUT MODE
(Continued)

14. Pour clean water and approximately 8 ozs. (0.24 liters) of distilled vinegar solution into vat to rinse vat and allow rinse water to drain into drain pan. Rinse at least 3 times, but be careful not to overfill the drain pan. Display now shows “RINSE COMPLETE” “YES NO”
15. Once vat is completely rinsed, press the √ button and display shows “CLEAR SOLUTION FROM OIL LINES” “√ =PUMP” “X =DONE”

To make sure no cleaning solution remains in oil lines, press and hold √ button for a few seconds. Once lines are clear, press X button and display shows “VAT DRY?” “YES NO”. Press button and display shows “CLOSE DRAIN”. Push drain knob in and close drain. Controls turn to OFF.

16. Pull drain pan from under fryer and dispose of rinse water.
17. Thoroughly dry the vat with a towel, and then press the √ button. Controls return to normal operations.

CAUTION

Make sure the inside of the vat, the drain valve opening, and all the parts that come in contact with the new oil are as dry as possible.

18. Make sure drain is closed and return filter pan assembly, with new filter pad, to the fryer. Fill vat with oil following **Filling or Adding Oil** instructions from Section 3-3.

3-19. CHECK/REPLACE FILTER
DRAIN PAN O-RINGS

To prevent oil leaking, and to keep filtering process operating properly, the filter drain pan o-rings should be inspected for nicks and tears at least every 3 months. Figure 1



Figure 1

3-19. CHECK/REPLACE FILTER DRAIN PAN O-RINGS
(Continued)



Figure 2



Figure 3

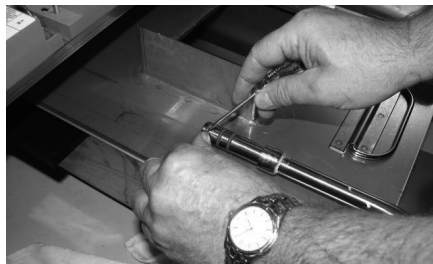


Figure 4

3-20. FILTER BUTTON STATS

1. Open the door, lift-up on the drain pan stop and pull-out the filter drain pan assembly, using the handle on the drain pan. Figures 2 & 3



This pan could be hot! Use protective cloth or glove, or severe burns could result.

2. Visually check the 3 o-rings on the tube of the filter drain pan for any cracks or breaks and replace if necessary.
3. To replace o-ring, use a small, flat-bladed screwdriver, pry up on o-ring and pull off of end of tube. Roll new o-ring into notch on tube. Lubricate o-rings on filter tube with fresh, cold oil and push filter drain pan into position. Figure 4

Cook Cycles Remaining before Filtering

1. Press and release either **F** button and the left display shows “COOKS REMAINING” and the right display shows the number of cook cycles before the next auto filter. For example,

REMA	INING	3	6
------	-------	---	---


 means after 3 more cook cycles on the left vat, the controls asks the operator if they are ready to filter or not. But, 6 more cook cycles remain on the right vat.

Time and Date


2. Press either **F** twice and “FILTERED” shows in the displays, along with time-of-day and date of the last filter.
3. Press either **F** button three times and “FLTR PAD” “XX HOURS” shows in displays to indicate the number of hours the existing filter has been used.

3-21. INFO BUTTON STATS


Actual Oil Temperature

1. Press  and the actual oil temperature shows in the display, for each vat.

Set-point Temperature

2. Press  twice and SP shows in the display, along with the set-point (preset) temperature of each vat.

Recovery Information for each Vat

3. Press  3 times and REC shows in the left display and the recovery time that oil temperature went from 250°F (121°C) to 300°F (149°C) shows in the right display. For example,

REC	5:30
-----	------

 means it took 5 minutes and 30 seconds for the oil temperature to recover to 300°F (149°C) from 250°F (121°C).

NOTICE

If no buttons are pressed within 5 seconds in any of stats modes, the controls revert back to normal operation.

As in all food service equipment, the Henny Penny open fryer does require care and proper maintenance. The table below provides a summary of scheduled maintenance procedures to be performed by the operator.

3-22. PREVENTIVE MAINTENANCE SCHEDULE

<u>Procedure</u>	<u>Frequency</u>
Filtering of shortening (Section 3-11)	Daily
Changing the filter pad (Section 3-13)	Daily
Lubricate filter pan o-rings (Section 3-18)	Every filter pad change
Lubricate EEE-141 oil reservoir o-rings	When reservoir is removed
Changing of oil	When oil smokes, foams up violently, or tastes bad
Cleaning the vat (Section 3-15)	Every change of oil
Inspect filter pan o-rings (Section 3-18)	Quarterly
Inspect EEE-141 reservoir o-rings (Section 3-10)	Quarterly

SECTION 4. INFORMATION MODE

This historic information can be recorded and used for operational and technical help and allows you to view the following:



- 1. E-LOG
- 2. LAST LOAD
- 3. DAILY STATS
- 4. OIL STATS
- 5. REVIEW USAGE
- 6. INPUTS
- 7. OUTPUTS
- 8. OIL TEMP
- 9. CPU TEMP
- 10. COMMUNICATION INFO
- 11. ANALOG INFO
- 12. ACTIVITY LOG
- 13. OIL LEVELS
- 14. PUMP VALVE INFO
- 15. AIF INFO

NOTICE

Not all Information Mode functions are discussed in this section. To ensure proper operation of fryer, please consult Henny Penny Corp. before changing any of these settings. For more information on these functions, contact Technical Support at 1-800-417- 8405, or 1-937-456-8405.


4-1. INFORMATION MODE DETAILS


1. E-LOG (error code log)


Press  and  buttons at the same time and “*INFO MODE*” shows in the display, followed by “1. E-LOG”.

NOTICE

Press  and  to exit Information Mode at any time.

Press  and “A. (date & time) *NOW* show in displays. This is the present date and time.

Press  and if an error was recorded, “B. (date, time, and error code information)” shows in display. This is the latest error code that the controls recorded. Sometimes the characters “L:” and “R:” appear in front of the error code on the display which refers to the left or right vat of a split vat.



Press  and the next latest error code information can be seen.


Up to 10 error codes (B to K) can be stored in the E-LOG section.

4-1. INFORMATION MODE
DETAILS (Continued)


2. LAST LOAD (Information on recent cook cycles)


Press  and “2. LAST LOAD” shows in displays.

Press a timer button  or  for the product you want to view the cook data and the LED flashes.

Press  button to start viewing the cook data.

For example, if the left  LED is flashing, “PRODUCT FRY L1” shows in displays.

If the right  LED is flashing, “PRODUCT FRY R2” shows in displays.


Press  button to start viewing the cook data.


FUNCTION	DISPLAY EX:
Product (Last product cooked)	PRODUCT FRY L1
Time of day the last Cook Cycle was started	STARTED FEB-06 2:25P
Actual Elapsed cook Time (Real seconds)	ACTUAL TIME 1:06
Programmed cook Time	PROG TIME 1:00
Max Temp during Cook Cycle	MAX TEMP 350°F
Min Temp during Cook Cycle	MIN TEMP 313°F
Avg Temp during Cook Cycle	AVG TEMP 322°F
Heat On (percentage) during Cook Cycle	HEAT ON 45%
Ready? (Was fryer Ready before start?)	READY? YES
When Cook Cycle was stopped: Early	QUIT AT0:10 REM
After complete Cook Cycle	OR *DONE* +6 SEC
Difference (%) between actual and programmed cook time	ACT/PROG1%

4-1. INFORMATION MODE
DETAILS (Continued)

3. DAILY STATS (Operational info of fryer for last 7 days)

Press  and “3. DAILY STATS” shows in displays.

Press  button to start viewing the cook data.

Press the right  to view data for other days of week.


FUNCTION **DISPLAY EX:**

Day for which this data was recorded	APR-30	TUE	
Number of Hours:Minutes the fryer was on	(L/R) ON HRS	TUE	3:45
Number of times filtered	(L/R) FILTERD	TUE	4
Number of times filter skipped	(L/R) SKIPPED	TUE	4
Number of times oil added	(L/R) ADD OIL	TUE	4
Number of times oil discarded	(L/R) DISPOSE	TUE	0
Oil temperature recovery time	(L/R) RECOVERY	TUE	1:45
Total number of cook cycles that day	(L/R) TOT CK	TUE	38
Number of cycles stopped before *DONE*	QUIT CK	TUE	2
Cook Cycles for Product #1	COOK -1-	TUE	17
Cook Cycles for Product #2	COOK -2-	TUE	9
Cook Cycles for Product #3	COOK -3-	TUE	5
Cook Cycles for Product #4	COOK -4-	TUE	0
Cook Cycles for Product #5	COOK -5-	TUE	0
Cook Cycles for Product #6	COOK -6-	TUE	6
Cook Cycles for Product #7	COOK -7-	TUE	0
Cook Cycles for Product #8	COOK -8-	TUE	0
Cook Cycles for Product #9	COOK -9-	TUE	1
Cook Cycles for Product #0	COOK -0-	TUE	0

4-1. INFORMATION MODE
DETAILS (Continued)

4. OIL STATS (info of current oil and avg. of last 4 batches of oil)

Press  and “4. OIL STATS” shows in displays.


Press  button to start viewing the cook data.


FUNCTION


DISPLAY EX:


Start date of new oil	(L/R) NEW OIL	MAR-23
Number of days oil in use	(L/R) OIL USE	4 DAYS
Number of filters on this oil	(L/R) FILTERD	4
Number of times filter skipped	(L/R) SKIPPED	0
Number of cook cycles on this oil	(L/R) TOT CK	38
Average number of days per oil change	(L/R) AVG DAYS PER OIL CHANGE	13.8 DAYS
Average number cook cycles per oil change	(L/R) AVG CKS PER OIL CHANGE	388 CKS

Press and hold a product button (1 to 4) to view the data from one of the previous 4 batches of oil used.

Press  to view oldest oil data: Ex: OIL-4 14 DAYS

Press  to view 3rd oldest oil data: Ex: OIL-3 12 DAYS

Press  to view 2nd oldest oil data: Ex: OIL-2 15 DAYS

Press  to view previous batch of oil: Ex: OIL-1 13 DAYS

4-1. INFORMATION MODE
DETAILS (Continued)

5. REVIEW USAGE(accumulated info since the data was reset)

Press **▶** and “5. REVIEW USAGE” shows in displays.

Press **▼** button to start viewing the cook data.

FUNCTION

DISPLAY EX:


Day the usage data was previously reset	SINCE	APR-23 2011
Number of Hours the fryer was on	(L/R) ON HRS	4
Number of times filtered	(L/R) FILTERD	4
Number of times filter skipped	(L/R) SKIPPED	0
Number of times oil added	(L/R) ADD OIL	4
Number of times oil discarded	(L/R) DISPOSE	1
Total number of cook cycles	(L/R) TOT CK	38
Number of cycles stopped before *DONE*	QUIT CK	2
Cook Cycles for Product #1	COOK -1-	17
Cook Cycles for Product #2	COOK -2-	9
Cook Cycles for Product #3	COOK -3-	5
Cook Cycles for Product #4	COOK -4-	0
Cook Cycles for Product #5	COOK -5-	0
Cook Cycles for Product #6	COOK -6-	6
Cook Cycles for Product #7	COOK -7-	0
Cook Cycles for Product #8	COOK -8-	0
Cook Cycles for Product #9	COOK -9-	1
Cook Cycles for Product #0	COOK -0-	0
Reset usage data: Enter the Usage Code - 1, 2, 3 on this step to zero out all the usage information	RESET USAGE / ENTER CODE	-----

SECTION 5. PRODUCT PROGRAM MODE


 

This mode allows you to program the following:


- Change Product Name
- Assign Button
- Change Times & Temp
- Change Cook ID
- Alarms
- Quality Timers
- Include in Filter Count (Global)
- Filter at X no. of loads (Mixed)
- Load Compensation
- Load Compensation Reference
- Full Heat
- PC Factor


5-1. MODIFYING PRODUCT SETTINGS

1. Press and hold  button until “PROG” shows in the display, followed by “ENTER CODE”.
2. Enter code 1, 2, 3 (first 3 product buttons). “PRODUCT” and “PROGRAM” show in the displays, followed by “SELECT PRODUCT” and “-P 1-” (ex: NUG).


Change Product Names

3. Use the ▲ and ▼ buttons to scroll through the 40 products, or press the desired product button.
4. Press  button and “NAME” shows in the left display and the product (ex: NUGGETS) shows in the right display.
5. Press  button and the first letter in the name flashes. Press a product button and the flashing letter changes to the first letter under the product button that was pressed. For example, if  is pressed, the flashing letter changes to an “A”.

Press the same button again and the flashing letter changes to a “B”. Press it again and flashing letter changes to a “C”. Once the desired letter shows in display, press  button to continue to next letter and repeat the procedure.

Press and hold the right **X** button to exit Program Mode, or press  button to continue on to “COOK TIME”.

Assign Button

6. Press  button until “ASSIGN BTN” shows in the display, along with the product (ex: NUGGETS). If this product already has a product button assigned to it, that LED will be lit. To assign other product buttons to that product, press and hold the product button for 3 seconds and that LED stays lit. To remove a product from a button, press and hold the product button with a lit LED and the LED goes out.

5-1. MODIFYING PRODUCT SETTINGS (Continued)

To Change Times and Temperatures

7. Press ► button until “COOK TIME” shows in the display, and then use the product buttons, or the ▲ and ▼ buttons, to change the time in minutes and seconds, to a maximum of 59:59.
8. Press ► button and “TEMP” shows in the display, along with the preset temperature on the right side of the display.

Press the product buttons, or the ▲ and ▼ buttons, to change the temperature. The temperature range is 190°F (88°C) to 375°F (191°C).

Cook ID Change

9. Press ► button until “COOK ID” shows in the display along with the product ID. For example, NUG would be the ID for nuggets. Use the product buttons, or the ▲ and ▼ buttons, to change the ID.

Alarms (1 & 2)

10. Press ► button until “ALRM 1” shows in the left display, and an alarm time in the right display. Press the product buttons, or the ▲ and ▼ buttons, to set an alarm.

Ex., If a Cook Cycle was set at 3 minutes, and an alarm was to go off after 30 seconds into the Cook Cycle, “2:30” would be set in the display at this time. When the timer counts down to 2:30 the alarm sounds.

After alarm time is set, press ► button and “ALRM 2” shows in display, and a second alarm can be programmed.

Quality Timer (hold time)

11. Press ► button until “QUAL TMR” shows in the display along with the preset holding time. Press the product buttons, or the ▲ and ▼ buttons, to adjust holding time, up to 2 hours:59 minutes.

Global Filter Tracking




Include in Filter Count

- 12a. Press ► button until “INCL IN FLTR CNT” flashes in display along with “YES” or “NO”. Using ▲ and ▼ buttons, change the display to “YES” if that product’s Cook Cycles are to be counted as part of the recommended filter process. Set to “NO” if it is not to be included.


5-1. MODIFYING PRODUCT SETTINGS (Continued)



Mixed Filter Tracking




Filter After X Number of Loads




12b. Press  button until “FILTER AFTER...” flashes in the left display along, and the number of cook cycles between filters shows in the right display. Press the product buttons, or the  and  buttons, to change this value of 0 to 99 loads. This needs set for each product.




>Load Compensation, Load Compensation Reference, Full Heat, PC Factor<

13. Press  button until “LD COMP” shows in the display, along with the load compensation value. This automatically adjusts the time to account for the size and temperature of the cooking load.




Press the product buttons, or the  and  buttons, to change this value of 0 to 20.

14. Press  button until “LCMP REF” shows in the display along with the load compensation average temperature (if load compensation is set to “OFF”, then “_ _ _” shows in display and setting cannot be programmed). This is the average cooking temperature for each product. The timer speeds up at temperatures above this setting and slows down at temperatures below this setting. Press the product button, or the  and  buttons, to change this value.

15. Press  button until “FULL HT” shows in the display along with the full heat value in seconds, which means the heat is on as soon as a timer button is pressed, for the programmed length of time. Press the product buttons, or the  and  buttons, to change this value of 0 to 90 seconds.

16. Press  button until “PC FACTR” shows in the display along with the proportional temperature, which helps to keep the oil from over-shooting the setpoint temperature. Press the product buttons, or the  and  buttons, to change this value of 0 to 50 degrees.

NOTICE

- Use  button to go back to previous menu items.
- Press the  button when finished with current product, to return to the “SELECT PRODUCT” step.
- Press and hold  button to exit PRODUCT PROGRAM Mode.

SECTION 6. LEVEL 2 PROGRAMMING

Used to access the following:

- Special Program Mode
- Clock Set
- Data Communication
- Heat Control
- Tech Mode
- Stats
- Filter Control

6-1. SPECIAL PROGRAM MODE

The Special Program Mode is used to set more detailed programming, such as:

- SP-1** • Degrees Fahrenheit or Celsius
- SP-2** • Language: English, Greek “ΕΛΛΗΝΙΚΑ”, Russian “РУССКИЙ”, Swedish “SVENSKA”, German “DEUTSCHE”, Portuguese “PORTUG.”, Spanish “ESPANOL”, or French “FRANCAIS”.
- SP-3** • System Initialization (Factory Presets)
- SP-4** • Audio Volume
- SP-5** • Audio Tone
- SP-6** • Melt Cycle Select - 1.LIQUID; 2.SOLID
- SP-7** • Idle Mode Enabled - YES or NO
- SP-7A** • Use “0” for IDLE
- SP-7B** • Auto Idle Minutes
- SP-7C** • Idle Set-point Temperature
- SP-8** • Filter Tracking Mode - 1.MIXED or 2.GLOBAL
- SP-8A** • Suggest Filter At... - 75% to 100% (**MIXED**)
- SP-8B** • Filter Lockout Enabled? - YES or NO (**MIXED**)
- SP-8A** • Left Vat Filter Cycles - 0 to 99 (**GLOBAL**)
- SP-8B** • Right Vat Filter Cycles - 0 to 99 (**GLOBAL**)
- SP-8C** • Filter Lockout Enabled? - YES or NO (**GLOBAL**)
- SP-9** • Polish Time Duration - X:XX M:SS
- SP-10** • Change Pad Reminder Time - XX HRS
- SP-11** • Clean-Out Time - XX MIN
- SP-12** • Clean-Out Temperature - XXX °F or C
- SP-13** • Cooking User IO - After Cook Cycle, display shows previous menu item or “----”
- SP-14** • Number of Baskets - 2-BASKETS or 4-BASKETS
- SP-15** • Show Cooking Indicator - YES or NO
- SP-16** • 2nd Language: English, Greek “ΕΛΛΗΝΙΚΑ”, Russian “РУССКИЙ”, Swedish “SVENSKA”, German “DEUTSCHE”, Portuguese “PORTUG.”, Spanish “ESPANOL”, or French “FRANCAIS”.
- SP-17** • 2nd AudioVolume
- SP-18** • Energy Save Enabled? - YES or NO
- SP-19** • Fryer Type - GAS or ELECTRIC
- SP-20** • Vat Type - SPLIT or FULL
- SP-21** • Autolift Enabled? - NO LIFT or YES LIFT
- SP-22** • Bulk Oil Supply? - YES SUPL or NO SUPL
- SP-23** • Direct Oil Dispose? - YES DISP or NO DISP

6-1. SPECIAL PROGRAM
MODE (Continued)

- SP-24** • Serial No. of Fryer
- SP-25** • Change Mgr. Code- 1 = YES
- SP-26** • Change Usage Code - 1 = YES
- SP-27** • Dispose Requires Code ? - YES or NO
- SP-28** • Longer Fill Time Enabled - YES or NO
- SP-29** • Let User Exit Fill? - YES or NO
- SP-30** • Skip 'SKIM' Prompt? - YES or NO
- SP-31** • 2-Stage Wash Enabled? - YES or NO

Press and hold the **P** button for 5 seconds until “LEVEL 2” followed by, “SP PROG” and “ENTER CODE” show in the display.

Enter code 1,2,3, and “SP-1” “TEMP” “FORMAT” show in the displays.

NOTICE

If a bad code is entered, a tone sounds and “BAD CODE” shows on the display. Wait a few seconds, the controls revert back to the cook mode, and repeat the above steps.

To exit from the Special Program Mode at any time, press and hold **P** button for 2 seconds.

Degrees Fahrenheit or Celsius (SP-1)

The left display flashes “SP-1” and “TEMP”, “FORMAT”. Press the ▲ or ▼ buttons to choose °F or °C.

NOTICE

- Use ◀ button to go back to previous menu items
- Press ▶ button when finished with current Level 2 step

Language (SP-2)




Press ▶ button and “SP-2” and “LANGUAGE” flash on the left display. Press the ▲ or ▼ buttons to select the desired language.

System Initialization (SP-3)




Press ▶ button and “SP-3” and “DO SYSTEM INIT” flash in the display, along with “INIT” on the right display. To reset the controls to factory default settings, press and hold √ button and control counts down “IN 3”, “IN2”, “IN 1”. Once display shows “-INIT-” & *DONE* the controls are reset to factory defaults.

**6-1. SPECIAL PROGRAM
MODE (Continued)**


Audio Volume (SP-4)



Press  button and “SP-4” and “VOLUME” flash in left display. Press  or , or use product buttons, to adjust speaker volume, 10 being loudest and 1 is the most quiet.

Audio Tone (SP-5)

Press  button and “SP-5” and “TONE” flash in the left display. Press the  or , or use product buttons, to adjust the tone of the speaker, 2000 being the maximum value and 50 the minimum.




Liquid or Solid Cooking Oil Used (SP-6)



 

Press  button until “SP-6 MELT CYCLE SELECT” scrolls in the left display. Unless solid oil is being used in the vats the right display should show “1.LIQUID”.




If solid oil is used, the unit **MUST BE** equipped to handle solid oil. Use the  and  buttons to change the right display to “2.SOLID”

Idle Mode Enabled (SP-7)




An Idle Mode allows the oil temperature to drop to a lower temperature when not in use. This saves on oil and utilities.

Press  button and “SP-7” and “IDLE MODE ENABLED?” flash in the left display. Press the  or  buttons to choose “YES” or “NO”.

With “YES” in the display, press  button and “SP-7A” and “USE ‘0’ FOR IDLE” flash on the left display. Press the  or  buttons to select “YES” or “NO”. If “YES” is selected, an Idle Mode can be programmed in product button  .

Press  button and “SP-7B” and “AUTOIDLE MINUTES” flash in the left display. Press the  or , or use product buttons, to set the time (0 to 60 minutes) fryer stays idle before the auto-idle is enabled.




Ex., “30” means, if product is not cooked in that vat for 30 minutes, the control automatically cools the oil down to the idle setpoint temperature

Press  button and “SP-7C” and “IDLE SETPT” flash in left display. Press the  or , or use product buttons, to set idle temperature 200° to 375° F (93 to 191° C) .

**6-1. SPECIAL PROGRAM
MODE (Continued)**

Filter Tracking Mode (SP-8)

Filter Tracking signals the operator when the oil needs filtering by counting the number Cook Cycles between filters.

Press  button and “SP-8” and “FILTER TRACKING MODE” show in display. Use the  and  buttons to choose either “1.MIXED” filter tracking or “2.GLOBAL”.




NOTICE

GLOBAL means all the products have the same number of cook cycles between filters.




MIXED means each product may be set with different number of cook cycles between filters. The controls add the cycle counts (see example at left) and when the counts equal 1 or greater, filtering is suggested. Ex: 1 load of fish, 2 loads of french fries, a load of chicken equals 1. $1/2 + 1/8 + 1/8 + 1/4 = 1$.

Product	No. Cook Cycles	Cycle Count
Fish	2	1/2
French Fries	8	1/8
Chicken	4	1/4




MIXED

If MIXED is selected, press  button and “SP-8A” and “SUGGEST FILTER AT ...” shows in the left display, and a value between 75% and 100% shows on the right display. Press the  and  buttons to change this value.

The lower the value, the sooner the control recommends to filter. Ex: If set to 75%, the control suggest filtering after 3/4 of the programmed cook cycles is met, whereas at 100%, all the cook cycles must be completed before the control suggest filtering.

Press  and “SP-8B” and “LOCKOUT ENABLED?” shows in the left display. Press the  and  buttons to choose YES or NO.

If set to YES, when controls suggest filtering, “FILTER LOCKOUT”/”YOU *MUST* FILTER NOW”, shows in display; more cook cycles are refused until vat is filtered.

Press  and “SP-8C” and “FILTER LOCKOUT AT...” shows in left display and a value between 100% and 250% shows on right display. Press  and  buttons to change this value. The lower the value, the sooner the “lockout” occurs.

Ex: If set at 100%, “lockout” occurs when the cycle counts reaches 1 or greater. Set at 200%, twice as many cycles are counted before “lockout” occurs. See example above.



**6-1. SPECIAL PROGRAM
MODE (Continued)**


Filter Tracking Mode (SP-8) (Continued)




GLOBAL




If GLOBAL is selected, press  button.




Split Vat

If unit is a split vat, “SP-8A” and “LEFT VAT FILTER CYCLES” shows in left display, and the number of cook cycles between filters shows on right display (0 to 99). Use  and  to change this number, or product buttons.

Press  button and “SP-8B” and “RIGHT VAT FILTER CYCLES” shows in the left display, and the number of cook cycles between filters shows on the right display (0 to 99).



Press  button and “SP-8C” and “FILTER LOCKOUT ENABLED?” shows in the left display. Press the  and  buttons to choose YES or NO.




If set to YES, press  button and the left display shows “SP-8D” and “LEFT VAT LOCKOUT CYCLES” and the number of cook cycles before filter lock-out shows on the right display (0 to 99). Use  and  to change this number, or product buttons.



 
Press  button and left display shows “SP-8E” and “RGHT VAT LOCKOUT CYCLES” and number of cook cycles before filter lock-out shows on right display (0 to 99). Use  and  to change this number, or product buttons.

Once this number of cook cycles is reached, “FILTER LOCKOUT”/”YOU *MUST* FILTER NOW”, shows in display; more cook cycles are refused until vat is filtered.

Full Vat

If unit is a full vat, “SP-8A” and “FULL VAT FILTER CYCLES” shows in the left display, and the number of cook cycles between filters shows on the right display (0 to 99). Use  and  to change this number, or product buttons.

Press  button and “SP-8B” and “FILTER LOCKOUT ENABLED?” shows in left display. Press  and  buttons to choose YES or NO.

If set to YES, press  button and the left display shows “SP-8C” and “FULL VAT LOCKOUT CYCLES” and the number of cook cycles before filter lock-out shows on the right display (0 to 99). Use  and  to change this number, or product buttons.

Once this number of cook cycles is reached, “FILTER LOCKOUT”/”YOU *MUST* FILTER NOW”, shows in display; more cook cycles are refused until vat is filtered.

6-1. SPECIAL PROGRAM
MODE (Continued)

Polish Duration (SP-9)

Press ► button and “SP-9 POLISH TIME” flashes in the left display. Press the ▲ or ▼ , or use product buttons, to change polish time, from 0 to 10 minutes.

Change Filter Pad Reminder Time (SP-10)

Press ► button and “SP-10 CHANGE PAD REMINDER” flashes in the left display. Press the ▲ or ▼ , or use product buttons, to change the time from 0 to 100 hours.

Clean-Out Time (SP-11)

Press ► button and “SP-11 CLEAN-OUT TIME” flashes in left display. Press the ▲ or ▼ , or use product buttons, to change the time from 0 to 99 minutes.

Clean-Out Temperature (SP-12)

Press ► button and “SP-12 CLEAN-OUT TEMP” flashes in the left display. Press the ▲ or ▼ , or use product buttons, to change the temperature from 0 to 195° F (90° C).

Cooking User IO (SP-13)

Press ► button and “SP-13 COOKING USER IO” flashes in the display. Press the ▲ or ▼ buttons to choose “SHOWPREV” or “SHOW----”.

Setting SP-13 to SHOWPREV means after a cook cycle the display shows the last menu item cooked. SHOW---- means after a cook cycle “----” shows in the display and a menu item needs selected before starting the next cook cycle.

Number of Baskets (SP-14)




Press ► button and “SP-14 NUMBER OF BASKETS” flashes in the left display. Press the ▲ or ▼ buttons to choose 2 or 4 baskets per well.


Cooking Indicator (SP-15)

 
Press ► button and “SP-15 SHOW COOKING INDICATR” flashes in the left display. Press the ▲ or ▼ buttons to choose YES, and during a cook cycle, “*” shows which timer is counting-down. Choose NO and “*” will not show during a cook cycle.

6-1. SPECIAL PROGRAM MODE (Continued)




2nd Language (SP-16)


Press  button and “SP-16 2ND LANGUAGE” flashes on the left display. Press the  or  buttons to select the desired 2nd language.


By setting a 2nd language in the controls, 2 languages can now be chosen by pressing  button during normal operation.

One language shows in the left display and the second language shows in the right display. Pressing the  button selects the language in the displays.




2nd Volume (SP-17)

Press  button and “SP-17 2ND VOLUME” flashes on the left display. Press the  or  buttons, or the product buttons to select the desired 2nd volume.

By setting a 2nd volume in the controls, 2 volumes can now be chosen by pressing  button twice during normal operation.




One volume setting shows in the left display (NONE to 10; 10 being the loudest) and the second volume shows in the right display. To select the volume, press the  button under the desired volume .

Energy Save Mode (SP-18)




Press  button and “SP-18 ENERGY SAVE ENABLED?” flashes in the left display. Press the  or  buttons to choose “YES” or “NO”.

If set to YES, during times of non-use the fryer automatically starts an Energy Save Mode, which turns-off the blowers. Then once a product is selected to start a cook cycle, the blowers and heat come back on. If set to NO, the blowers are on constantly.

Fryer Type (SP-19)




Press  button and “SP-19 FRYER TYPE” flashes in the left display. Press the  or  buttons to choose “GAS” or “ELEC”.

Vat Type (SP-20)

Press  button and “SP-20 VAT TYPE” flashes in the left display. Press the  or  buttons to choose “SPLIT” or “FULL”.




6-1. SPECIAL PROGRAM
MODE (Continued)

Autolift Enabled (SP-21)

Press  button and “SP-21 AUTOLIFT ENABLED?” flashes in the left display. Press the  or  buttons to choose “YES LIFT” or “NO LIFT”.




If fryer is fitted with the auto-lift option, SP-21 must be set to “YES LIFT”, otherwise, set SP-21 to “NO LIFT”.

Bulk Oil Supply (SP-22)

Press  button and “SP-22 BULK OIL SUPPLY?” flashes in the left display. Press the  or  buttons to choose “YES SUPL” or “NO SUPL”.



Set to YES if the oil is pumped into the vats from an outside oil reservoir. Otherwise, set SP-22 to NO.

Bulk Oil Disposal (SP-23)

Press  button and “SP-23 BULK OIL DISPOSE?” flashes in the left display. Press the  or  buttons to choose “YES DISP” or “NO DISP”.



Set to “YES DISP” if the oil is pumped from the vats to an outside oil reservoir when disarding the oil. Otherwise, set SP-23 to “NO DISP”.


Serial Number Log (SP-24)

Press  button and “SP-24 S/N  EDIT” flashes in the displays, along with the serial number of the unit. THIS SERIAL NUMBER SHOULD MATCH THE SERIAL NUMBER ON THE DATA PLATE, ON THE DOORS. IF NOT, IT CAN BE RECORDED.

Program Code Change (SP-25)

This allows the operator to change the program code (factory set at 1, 2, 3) used to access Product Programming and Level 2 Program Mode.

Press  button and “SP-25 CHANGE MGR CODE? 1=YES” flash in the display. Press  and “ENTER NEW CODE, P=DONE, I=QUIT show scrolls through the display. Press the product buttons for new code.

If satisfied with code, press  and “REPEAT NEW CODE, P=DONE, I=QUIT, shows in display. Press same code buttons.

**6-1. SPECIAL PROGRAM
MODE (Continued)**

Program Code Change (SP-25) (Continued)

If satisfied with code, press **P** and “*CODE CHANGED*” shows in display.

If not satisfied with code, press **i** and “*CANCEL” shows in display, then reverts back to “SP-25” and “CHANGE, MGR CODE? 1=YES”. Now the above steps can be repeated.

Usage Code Change (SP-26)

This allows the operator to change the reset usage code (factory set at 1, 2, 3) to reset the usage amounts of each product. See Review Usage step in Information Mode.

Press **▶** button and “SP-26 CHANGE USAGE CODE? 1=YES” flashes in the display. Press **1** and “ENTER NEW CODE, P=DONE, I=QUIT show scrolls through display. Press product buttons for new code.

If satisfied with code, press **P** and “REPEAT NEW CODE, P=DONE, I=QUIT, shows in display. Press same code buttons.

If satisfied with code, press **P** “*CODE CHANGED*” shows in display.

If not satisfied with code, press **i** and “*CANCEL” shows in display, then reverts back to “SP-26” and “CHANGE, USAGE CODE? 1=YES”. Now the above steps can be repeated.

Dispose Requires Code ? (SP-27)

Press **▶** button and “SP-27 DISPOSE REQUIRES CODE ?” flashes in the left display. Press the **▲** or **▼** buttons to choose YES or NO. If set to YES, code 1, 2, 3 must be entered to discard the oil from the vat, using the Dispose Mode.

Longer Fill Time (SP-28)




Press **▶** button and “SP-28 LONGER FILLTIME ENABLED?” flashes in the left display. Press the **▲** or **▼** buttons to choose YES or NO.

Let User Exit Fill (SP-29)




Press **▶** button and “SP-29 LET USER EXIT FILL” flashes in the left display. Press the **▲** or **▼** buttons to choose YES or NO. If YES is chosen, the user can exit the Express Filter™ fill operation.

**6-1. SPECIAL PROGRAM
MODE (Continued)**

Skip 'SKIM' Prompt (SP-30)







 





Press  button and "SP-30 SKIP 'SKIM' PROMPT?" flashes in the left display. Press the  or  buttons to choose YES or NO.

2-Stage Wash Enabled (SP-31)

Press  button; "SP-31 2-STAGE WASH ENABLED?" flashes in the left display. Press the  or  buttons to choose YES or NO.

6-2. DO NOT DISTURB

Time periods of peak operations during which the "FILTER NOW?" message will not appear, may be programmed into the fryer. There are three groupings of days - Monday thru Friday (M-F), Saturday (SAT), and Sunday (SUN). Within each day grouping, up to 4 time periods (M-F 1 thru M-F 4, SAT 1 thru SAT 4, and SUN 1 thru SUN 4) may be programmed. A time period may be anywhere from 1 to 180 minutes in length.

1. Press and hold the  button for 5 seconds until "LEVEL 2", followed by, "SP PROG" and "ENTER CODE" show in the display.
2. Press  button once more and "DO NOT DISTURB" and "ENTER CODE" flash in the left display.
3. Enter code 1, 2, 3 (first 3 product buttons).
4. "DO NOT DISTURB ENABLED?" flashes in the left display and YES or NO appears in the right display. Press the  or  buttons to choose YES or NO.
5. Press  button and "M-F 1" shows in the left display and the time flashes in the right display. Press the  or , or use product buttons, to change the time.
6. Press  button and "M-F 1" shows in the left display and "A" or "P" flashes in the right display. Use the  or  buttons to choose AM or PM.
7. Press  button and "M-F 1" shows in left display and far right character display flashes. Press product buttons to enter amount of time (up to 180 minutes) during which filtering will be inhibited, after time entered in step 5.
8. Press  button to move to the next timer period, M-F 2.
9. Repeat steps 5, 6, 7, and 8 for other desired time periods.

6-3. CLOCK SET



1. Press and hold the **P** button for 5 seconds until “LEVEL 2”, followed by, “SP PROG” and “ENTER CODE” show in the display.
2. Press the **P** button again and “CLK SET” and “ENTER CODE” flash in the left display.
3. Enter code 1, 2, 3 (first 3 product buttons).
4. “CS-1 ENTER DATE MM-DD-YY” flashes in the left display. Use the product buttons to set the date in the right display.
5. Press **▶** button and “CS-2 ENTER TIME” flashes in the left display and the time flashes in the right display. Press the **▲** or **▼**, or use product buttons, to change the time.
6. Press **▶** button and “CS-2 ENTER TIME” flashes in the left display and “AM” or “PM” flashes in the right display. Use the **▲** or **▼** buttons to choose AM or PM.
7. Press **▶** button and “CS-3 TIME FORMAT” flashes in the left display and “12-HR” or “24-HR” shows in the right display. Use the **▲** or **▼** buttons to choose a 12 hour time format or a 24 hour time format.
8. Press **▶** button and “CS-4 DAYLIGHT SAVING TIME” flashes in the left display. Use the **▲** or **▼** buttons to choose daylight saving time for your area: 1.OFF; 2.US (2007 & after); 3.EURO; or 4.FSA (US before 2007).
9. Press and hold **P** button to exit.

6-4. DATA LOGGING, HEAT CONTROL, TECH, STAT, AND FILTER CONTROL MODES


The Data Logging, Heat Control, Tech, Stat and Filter Control Modes are advanced diagnostic and program modes, mainly for Henny Penny use only. For more information on these modes, contact the Service Department at 1-800-417- 8405 or 1-937-456-8405.

SECTION 7. TROUBLESHOOTING

7-1. TROUBLE SHOOTING GUIDE

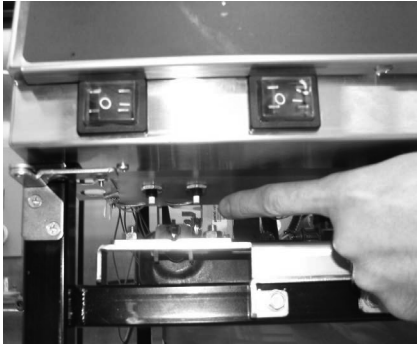
Problem	Cause	Correction
POWER switch ON but fryer completely inoperative	<ul style="list-style-type: none"> Open circuit 	<ul style="list-style-type: none"> Plug fryer in Check breaker or fuse at supply box (Non-US/some Int'l. locations only) Breakers in fryer tripped-open left door and reset breaker on fryer; See below 
Oil will not heat but lights are on	<ul style="list-style-type: none"> All power cords not plugged-in 	<ul style="list-style-type: none"> Unit has 2 power cords; make sure both are plugged-in
Control error code "E-10"	<ul style="list-style-type: none"> Open high limit circuit 	<ul style="list-style-type: none"> Let unit cool down (15-20 minutes), reset the high limit using the high limit tool on the inside of the LH door and gently pushing it into the hole in the heating element hinge; if high limit does not reset, high limit must be replaced 
Vat is under-filled	<ul style="list-style-type: none"> JIB is low or empty JIB oil line is clogged or collapsed Filter pan needs cleaned 	<ul style="list-style-type: none"> Fill the JIB Check JIB line Clean filter pan and change paper or pad

7-1. TROUBLE SHOOTING GUIDE
(Continued)

Problem	Cause	Correction
Oil foaming or boiling over top of vat	<ul style="list-style-type: none"> • Water in oil • Improper or bad oil • Improper filtering • Improper rinsing after cleaning the vat 	<ul style="list-style-type: none"> • Drain and clean oil • Use recommended oil • Refer to filtering procedures • Clean and rinse vat and then dry thoroughly
Oil will not drain from vat	<ul style="list-style-type: none"> • Drain valve clogged with crumbs • Drain trough clogged 	<ul style="list-style-type: none"> • Open valve, force cleaning brush through drain • Remove right side panel and remove plug from end of trough and clean trough
Filter motor runs but pumps oil slowly	<ul style="list-style-type: none"> • Filter line connections loose • Filter paper or pad clogged 	<ul style="list-style-type: none"> • Tighten all filter line connections • Change filter paper or pad
Bubbles in oil during entire filtering process	<ul style="list-style-type: none"> • Filter pan not completely engaged • Filter pan clogged • Damaged O-ring on filter line receiver on fryer 	<ul style="list-style-type: none"> • Make sure filter pan return line is pushed completely into the receiver on the fryer • Clean pan and change paper or pad Change O-ring
Control error code "E-31"	<ul style="list-style-type: none"> • Elements are up 	<ul style="list-style-type: none"> • Lower elements back into vat
Filter motor will not run	<ul style="list-style-type: none"> • Power cord for vat #1 is not plugged-in • Open circuit • the thermal reset button on the rear of the pump motor is tripped 	<ul style="list-style-type: none"> • Plug power cord into receptacle • Breakers in fryer tripped; open left door and reset breaker on fryer • Allow time for the motor to cool and then, using a screwdriver, press hard against the button until it clicks 

7-2. ERROR CODES

In the event of a control system failure, the digital display shows an error message. The message codes are shown in the DISPLAY column below. A constant tone is heard when an error code is displayed, and to silence this tone, press any button.

DISPLAY	CAUSE	CORRECTION
"E-4"	Control board overheating	Turn switch to OFF position, then turn switch back to ON; if display shows "E-4", the control board is getting too hot; check the louvers on each side of the unit for obstructions
"E-5"	Oil overheating	Turn switch to OFF position, then turn switch back to ON; if display shows "E-5", the heating circuits and temperature probe should be checked
"E-6A"	Temperature probe open	Turn switch to OFF position, then turn switch back to ON; if display shows "E-6A", the temperature probe should be checked
"E-6B"	Temperature probe shorted	Turn switch to OFF position, then turn switch back to ON; if display shows "E-6B", the temperature probe should be checked
"E-10"	High limit	Let unit cool down (15-20 minutes), using the high limit tool on the inside of the LH door and gently pushing it into the hole in the heating element hinge; if high limit does not reset, high limit must be replaced 
"E-15"	Drain Switch	Make sure drain knob is completely pushed-in; if E-15 persists, have drain switch checked
"E-18-A" "E-18-B" "E-18-C"	Left level sensor open Right level sensor open Both level sensors open	Turn switch to OFF position, then turn switch back to ON; if display still indicates a failed sensor, have the connections checked the control board; have sensor checked & replaced if necessary

7-2. ERROR CODES
(Continued)

DISPLAY	CAUSE	CORRECTION
"E-21"	Slow heat recovery	Have a certified service technician check the fryer for correct voltage to the unit; have heat circuit checked; have unit checked for loose or burnt wire
"E-22" "NO HEAT" "CHECK PWR CORD AND BREAKER"	Elements not heating	Have power cord and heat circuit checked
"E-31"	Elements are up	Lower elements completely back into the vat
"E-41", "E-46"	Programming failure	Press power button to vat off and back on again, if any of the error codes, have the controls re-initialized; if error code persists, have the control board replaced
"E-47"	Analog converter chip or 12 volt supply failure	Press power button to vat off and back on again, if "E-47" persists, have the I/O board, or the PC board replaced; if speaker tones are quiet, probably I/O board failure; have the I/O board replaced
"E-48"	Inpute system error	Have PC board replaced
"E-54C"	Temperature inpute error	Turn switch to OFF, then back to ON; have control PC board replaced if "E-54C" persists
"E-60"	AIF PC board not communicating with PC board	Press power button to turn vat off, wait 15 seconds, and turn back on again. If "E-60" persists, have connector between the PC boards checked; replace AIF PC board or control PC board, if necessary
"E-93-A" "24 VDC SUPPLY TRIPPED"	Autolift motor malfunction or failure	If AutoLift feature is not operating, have each of the Autolift motors checked



Henny Penny Corporation
P.O.Box 60
Eaton, OH 45320

1-937-456-8400
1-937-456-8402 Fax

Toll free in USA
1-800-417-8417
1-800-417-8434 Fax

www.hennypenny.com

* FM05 - 053 - H* Henny Penny Corp., Eaton, Ohio 45320, Revised 6-26-13