


- 14176** AS-101K-1 = 120 Volt / 1/2-2 HP / 1 Phase
- 14176A** AS-101K-2 = 208-230 Volt / 1/2-2 HP / 1 Phase
- 14176B** AS-101K-3 = 208-230 Volt / 1/2-10 HP / 3 Phase
- 14176C** AS-101K-4 = 380-460 Volt / 1/2-10 HP / 3 Phase

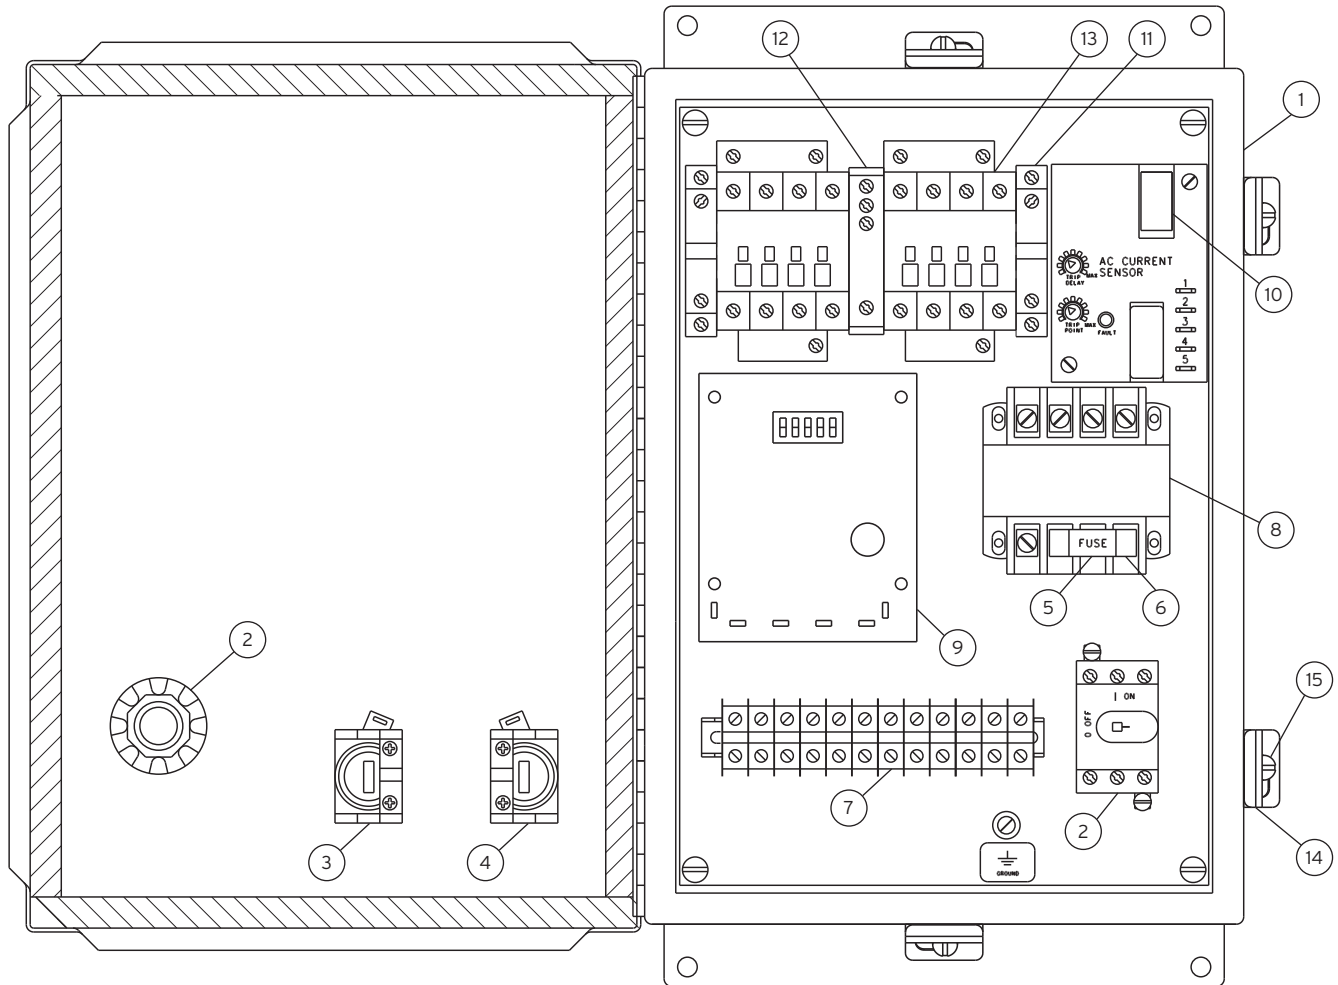

Order By Part Number, Not Code Number

| CODE # | PART # | QTY | DESCRIPTION |
|--------|--------|-----|--|
| 1 | N/A | 1 | Stainless Steel Enclosure |
| 2 | 14728 | 1 | Door Disconnect Kit |
| 3 | 14158 | 1 | Pushbutton Stop (N.C. Red) |
| 4 | 14159 | 1 | Pushbutton Start (N.O. Black) |
| 5 | 13466 | 1 | Fuse (2 Amp - 125 Volts) (FNA-2 or FNM-2) |
| 6 | 14165 | 2 | Fuse Holder |
| 7 | 14166 | 4 | Terminal Block - 3 Phase |
| | | 5 | Terminal Block - 1 Phase |
| 8 | 14185 | 1 | Transformer - 3 Phase |
| | 14161 | 1 | Transformer - 1 Phase |
| 9 | 14395 | 1 | Circuit Board, Printed |

| CODE # | PART # | QTY | DESCRIPTION |
|--------|--------|-----|---|
| 10 | 13930 | 1 | Current Sensor - 2-20 Amp (AS-101K-1) |
| | 14413 | 1 | Current Sensor - .5-10 Amp (AS-101K-2, 3 & 4) |
| 11 | 14163 | 2 | Auxiliary Contact Block (Used On 1 Phase Units Only) |
| 12 | 14169 | 1 | Mechanical Interlock |
| 13 | 14160 | 1 | Reversing Contactor - 3 Phase |
| | 14162 | 1 | Reversing Contactor - 1 Phase* *(Includes Code 6) |
| 14 | 13935 | 4 | Top Cover Retainer |
| 15 | 13942 | 4 | Screw |
| | 13625 | 4 | Tamperproof Screw (Not Shown) |
| | 14494 | 2 | Solenoid Valve - 24 Volt Coil (Not Shown) |