CM1000 Parts List

Table of Contents

Cabinet

Air Cooled Refrigeration


Water Cooled Refrigeration


Water System

Control Box


Wiring Diagrams

CM1000 THE PARTS ILLUSTRATIONS AND PARTS LISTS

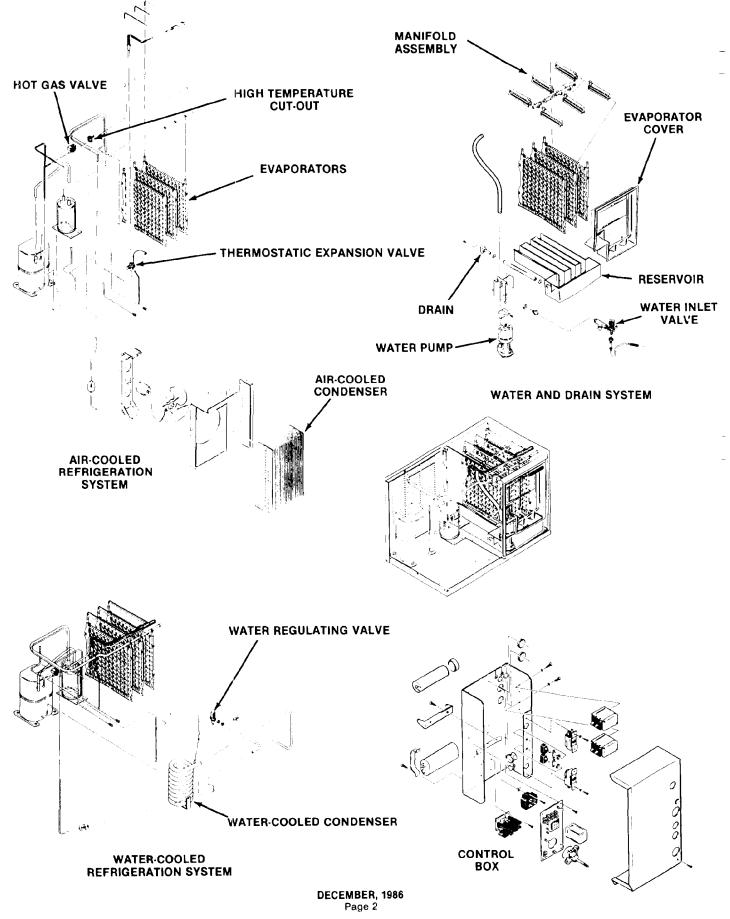


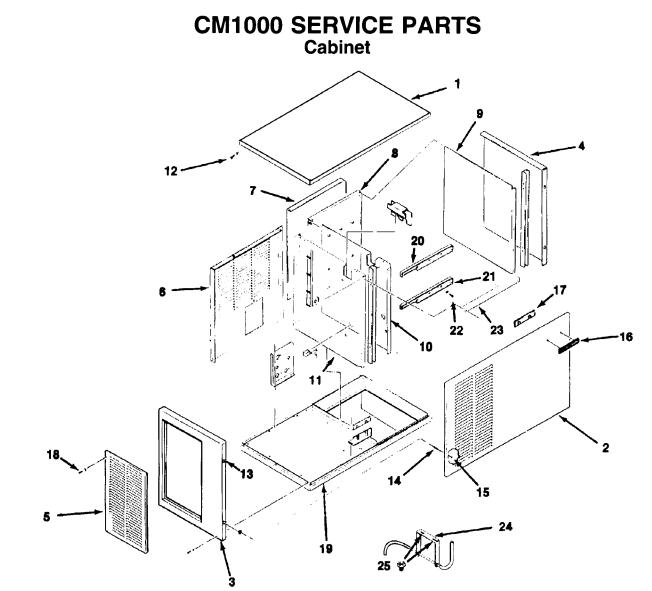

ITEM	PART		ITEM	PART	
NUMBER	NUMBER	DESCRIPTION	NUMBER	NUMBER	DESCRIPTION
1	A32461-001	Top panel, enamel	11	A32454-001	Retainer
	A32461-002	Top panel, S.S.	12	03-1531-01	Screw, top panel
2.	A32457-001	Front panel, enamel	13	02-0836-00	Cabinet catch
	A32457-002	Front panel, S.S.	14	15-0411-00	Strike
3	A32435-001	End panel left. enamel	15	03-1406-01	Nut
	A32435-002	End panel left, S.S.	16	15-0711-01	Emlem for enamel
4	A35453-001	End panel right, enamel		15-0711-02	Emblem for S.S.
	A35453-002	End panel right, S.S.	17	03-0721-00	Speed clip
5	A32161-001	Service panel, enamel	18	03-1404-12	Screw
	A33946-002	Service panel for S.S.	19	A32434-001	Base
6	A32448-001	Back panel, Left painted	20	A32587-001	Upper brace, evap
	A32448-002	Back panel, left, SS	21	A32467-001	Lower brace, evap
7	A32452-001	Back panel, Right paintec	22	A32464-001	Screw, lower brace
	A32452-002	Back panel, right SS	23	A32469-001	Upper brace, cabinet
8	02-2888-01	Back liner	24	A35245-001	Bin thermostat bracket
9	02-2887-01	Right liner	25	03-0727-05	Bin thermostat thumb nut
10	02-2885-01	Left liner			

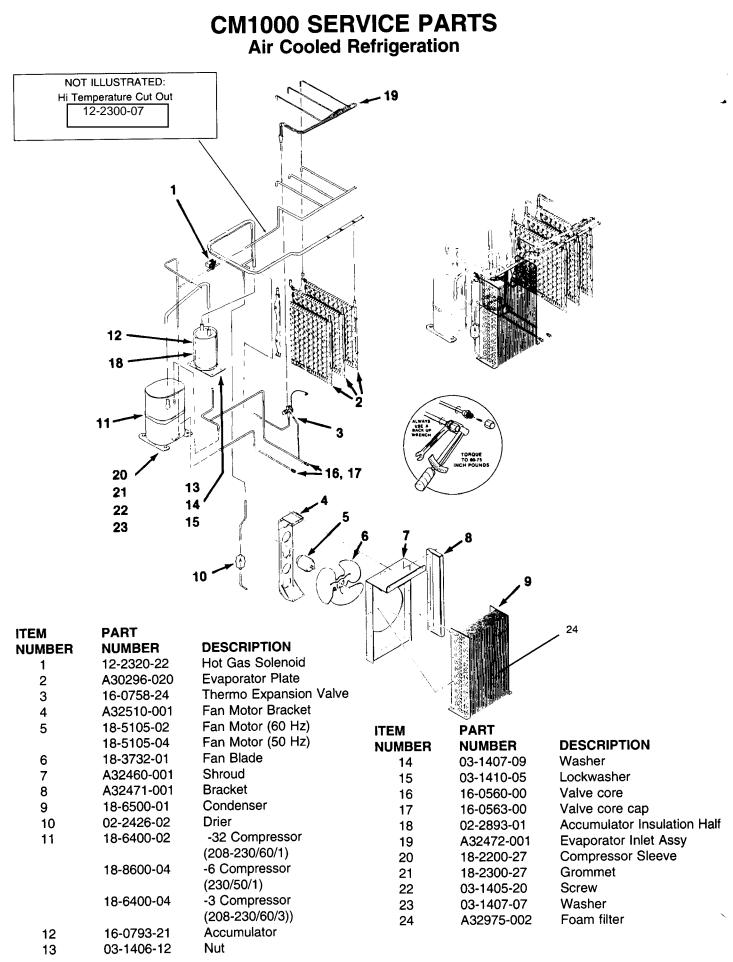


CM1000 SERVICE PARTS Water Cooled Refrigeration

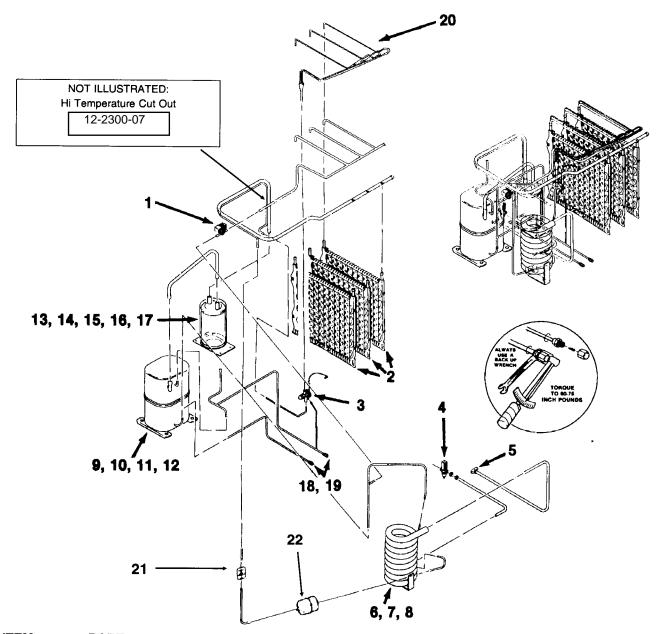


ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
1	12-2320-22	Hot Gas Solenoid	10	18-2200-27	Compressor Sleeve
2	A30296-020	Evaporator Plate	11	18-2300-27	Grommet
3	16-0758-24	Thermo Expansion Valve	12	03-1405-20	Screw
4	11-0424-21	Water Regulator Valve	13	16-0793-21	Accumulator
5	A31828-003	Drain Adaptor	14	03-1406-12	Nut
6	18-6900-01	Condenser, WC	15	03-1407-09	Washer
7	03-1645-01	Condenser Screw	16	03-1410-05	Lockwasher
8	03-1407-05	Condenser Washer	17	02-2893-01	Accumulator Insulation Half
9	18-6400-02	-32 Compressor	18	16-0560-00	Valve Core
		(208-230/60/1)	19	16-0563-00	Valve Cap
	18-6400-04	-3 Compressor	20	A32472-001	Evaporator Inlet Assy
		(208-230/60/3))	21	02-2426-02	Dryer
			22	02-2628-02	Receiver, on all units

after date code 06W

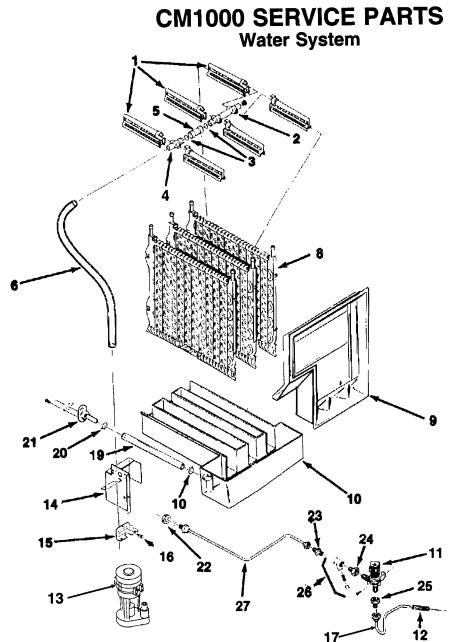


			17-	14		
ITEM	PART		ITEM	PART	DESCRIPTION	
NUMBER	NUMBER	DESCRIPTION	NUMBER	NUMBER	DESCRIPTION	
1	02-2527-01	Water distributor tube	15	no number	Pump bracket (included	
2	02-2521-01	Manifold, water			with replacement pump)	
3	13-0617-48	O-ring	16	03-0727-00	Thumb screw	
4	A29703-001	Water manifold	17	A32474-001	Inlet tube	
5	02-2895-01	Water restrictor	18	no number	Not used	
6	13-0617-07	Hose, 30"	19	13-0674-07	Drain hose, 16.5"	
7	02-1358-01	Hose clamp	20	02-1358-01	Hose clamp	
8	A30296-020	Evaporator	21	A31757-002	Drain	
9	02-2890-02	Evaporator cover	22	03-1394-01	Pal nut	
10	02-2889-01	Sump	23	16-0791-01	Coupling	
11	12-1646-04	Water valve	24	16-0794-01	Adpator	
12	13-0674-01	Hose, 3"	25	16-0631-02	Connector, female	۲
13	12-2419-62	Water pump	26	16-0162-00	Strainer	
14	A32462-001	Pump housing	27	no number	Water line	
			+ 1003			

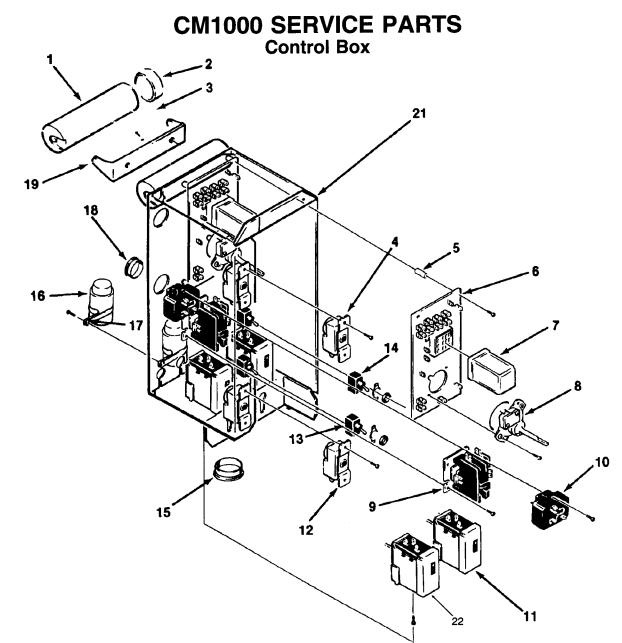

ITEM	PART		ITEM	PART	
NUMBER	NUMBER	DESCRIPTION	NUMBER	NUMBER	DESCRIPTION
1	18-1901-48	Start Capacitor	14	12-0426-01	Switch
2	18-4300-50	Start Capacitor Cap	15	12-2311-01	Snap bushing
3	03-1419-05	Screw	16	18-1902-55	Run Capacitor
4	11-0436-21	Cube Size Control	17	A09388-002	Run Cap Brace
5	02-2242-02	Stand off	18	02-2790-01	Snap Bushing
6	12-1912-01	Circuit board	19	no number	Bracket
7 -	12-1979-03	Relay	20	A31799-001	Control Box Cover
8	12-1980-22	Timer	21	no number	Control Box
9	12-2048-01/2	Contactor, single phase	22	11-0426-21	Fan Control (AC)
	12-0739-02	Contactor, three phase			
10	18-1903-46	Potential relay			
11	11-0425-21	Hi pressure control, AC			
	11-0410-22	Hi pressure control, WC			
12	11-0427-22	Bin Thermostat			

CM1000 THE PARTS ILLUSTRATIONS AND PARTS LISTS

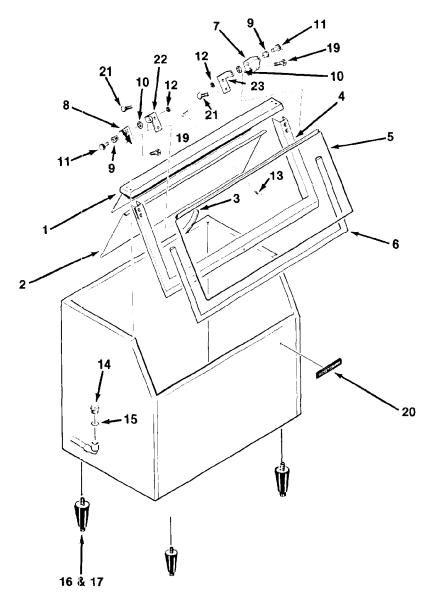

BH800

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
1	A32408-001	Canopy	12	03-1539-09	E-Clip
2	A32410-001	Baffle	13	03-0727-06	Thumb Screw Baffle
3	19-0503-04	Gasket - order per ft.	14	02-2809-01	Drain Top
4	A32418-020	Door Frame	15	13-0617-11	O-Ring
5	A32419-020	Door	16	KLP2E	Legs - Enamel
6	13-0595-00	Door Gasket -	17	KLP2S	Legs - S.S.
		order per ft. (10')	18	03-1404-06	Screw (Not Shown)
7	A32396-002	Hinge Rt.	19	03-1360-02	Screw
8	A32396-001	Hinge Lt.	20	15-0711-01	Emblem
9	02-2380-01	Hinge Bushing	21	03-1418-41	Screw
10	02-2380-02	Hinge Spacer	22	A32456-001	Door Hinge Lt.
11	02-2806-01	Shoulder Screw	23	A32456-002	Door Hinge Rt.


CM1000 WIRING DIAGRAMS

MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT. **USE COPPER CONDUCTORS ONLY** 5 MASTER Сонтастоя HI PRESS HI TENP CUTOUT SWITCH THERMO l ₹ TIMER POT RELAV COMPRESSOR HI PRESS Q TIMER RELAY CUBE SIZE STICK POWER SUPPLY POT RELAY WATER V Tents H RUN CAP CONTACTOR START CAP HOT GAS CAUTION: 5 ¥(§ 12(5) TIMER / 3 LINE VOLTAGE 208-230-60/1]_JUNCTION SEE NAMEPLATE FOR _______ SOLENOID WATER ž ž MI-PRESSURE Control Ъ ž SAFET 2 ٢٦ * LIWER CONTACTOR ž 2 F **WWOJ** ON1 n Г -(1010) 2 3 2 SOLENOID HOT GAS Ô NSIN 3 Þ - 88 HI-PRESSURE CONTROL P 1 ž THERMO CUBE THIS UNIT MUST BE GROUNDED @ | T=3 SWITCH POTENTIAL ٢ RELAY SWITCH MASTER Le Mot THERMO BIN THIS UNIT SHOWN IN THE TIMED PORTION OF THE FREEZING CYCLE. TERMINAL A32446-001 80 X 6 HI TEMP CUTOUT SIAR) **M** COMPRESSOR RUN CAP ø MOT PROTECTOR INTERNAL-み

Wiring Diagram CM1000AE-32A (208-230/60/1) Air-Cooled

DECEMBER, 1986 Page 9

CM1000 WIRING DIAGRAMS

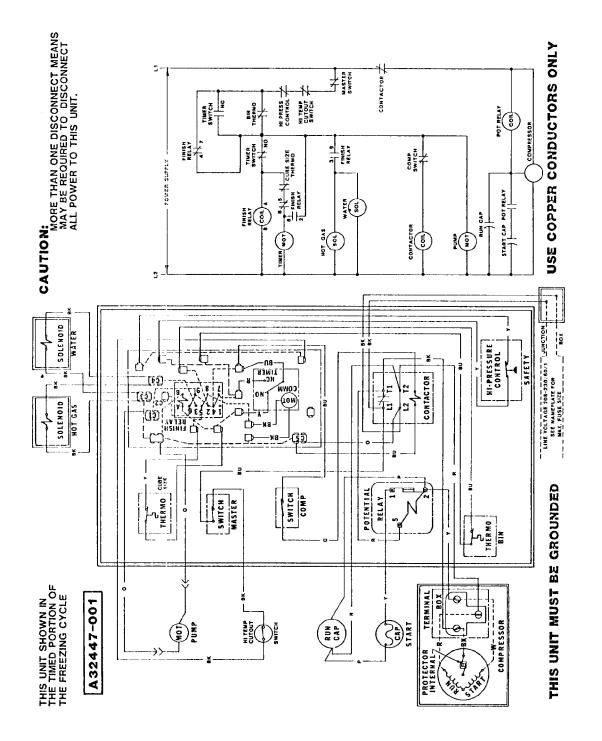


Wiring Diagram CM1000WE-32A (208-230/60/1) Water-Cooled


DECEMBER, 1986 Page 10

CM1000 WIRING DIAGRAMS

CM1000 AE-3A (208-230/60/3) Air Cooled

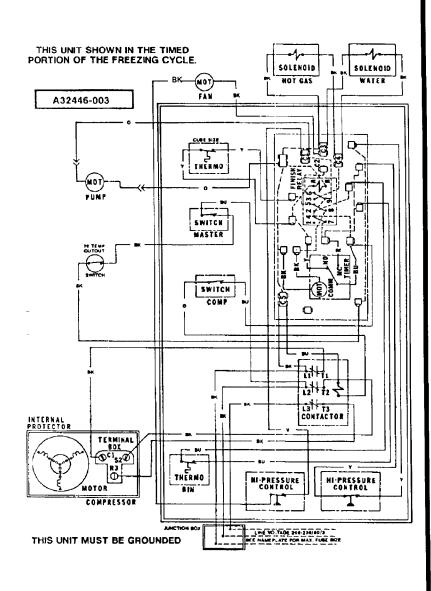

CAUTION: MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO THIS UNIT.

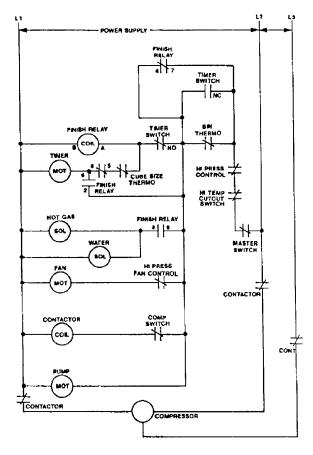

USE COPPER CONDUCTORS ONLY

CM1000 WIRING DIAGRAMS CM1000WE-3A (208-230/60/3) Water Cooled

