


PARTS LIST

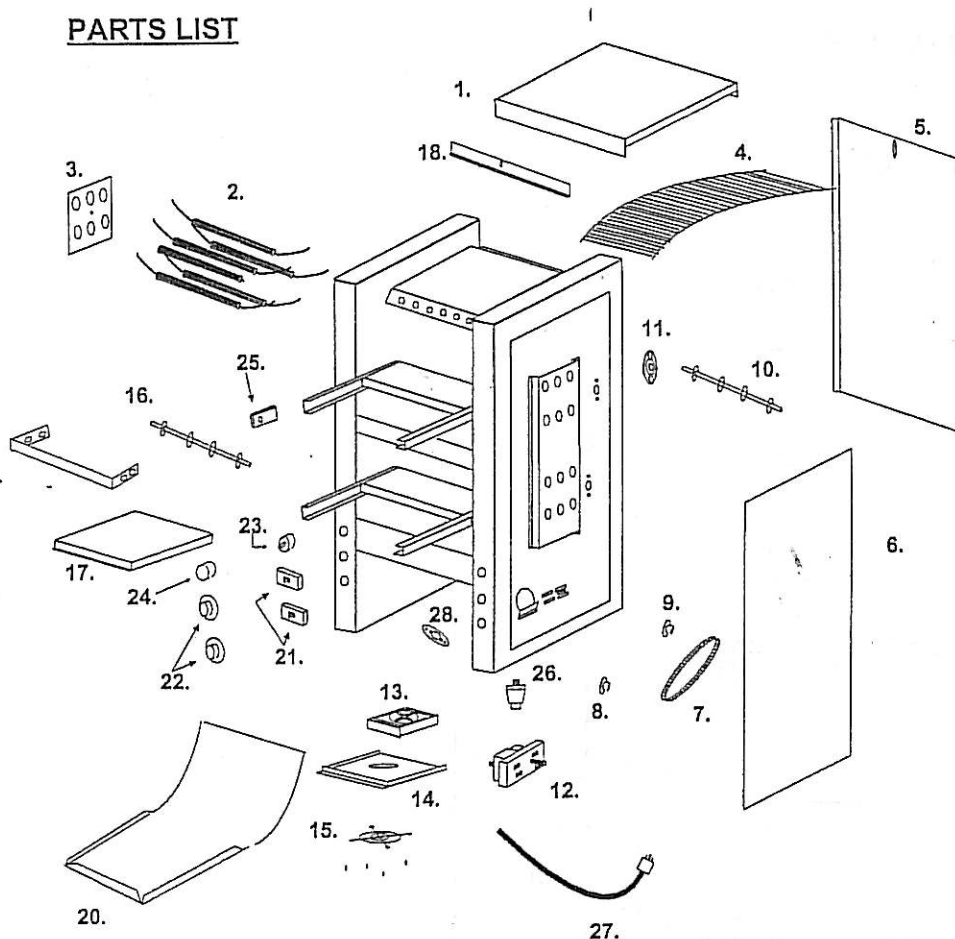

<u>PART NO.</u>	<u>QTY.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1. 401125	1	Top Cover	13. 200561	1	Fan Motor
2. 197903	12	Heater Tubes, 220 Volt	14. 100316	1	Control Box Cover
3. 401543	4	Retainer, Heater Tubes	15. 200562	1	Fan Grill
4. 160004	2	Conveyor Belt	16. 202905	2	Idler Shaft
5. 401544	1	Back Cover	17. 100543	2	Crumb Tray
6. 101362	1	Side Panel, Right	18. 400899	1	Heat Shutter
6a. 101361	1	Side Panel, Left	19. 401089	2	Guard, Extension
7. 150001	1	Drive Chain, Right	20. 401022	1	Toast Chute
7a. 150027	1	Drive Chain, Left	21. 200538	4	Infinite Switch
8. 200645	4	Sprocket	22. 200702	4	Knob, Infinite Switch
200535	1	Contactora (not shown)	23. 118040	2	Speed Control
			23a. 118042	2	Speed Control
10. 202902	2	Drive Shaft Assembly	24. 200703	2	Knob, Speed Control
11. 112261	4	Rear Bearing	25. 200693	4	Bearing, Extension
12. 200521	1	Drive Motor, Right Side	26. 200709	4	Leg, 1"
12a. 200508	1	Drive Motor, Left Side	27. 140028	1	Cord/Plug Set
			28. 115146	1	High Limit/Reset