
Pro-Max TWO-SIDED GRILLS MODEL CG101T4

CG10IT4 GR10IT4 GR14ITTC-240

Installation and Operation Instructions

2M-Z7885 Rev. E 11/18/09

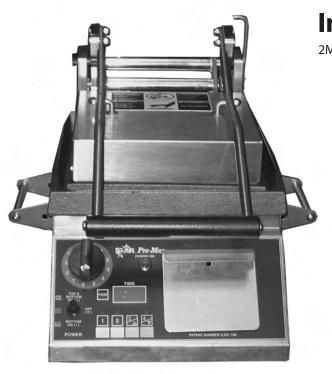

GR10IT4









These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star International Holdings Inc., Company exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.

MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance.

Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.

Model No.	Authorized Service Agent Listing Reference the listing provided with the unit		
Serial No.	or		
Voltage	for an update Website: E-mail	ed listing go to: www.star-mfg.com Service@star-mfg.com	
. 4.5.1455 24.6	Service Help		
	Business Hours:	8:00 am to 4:30 p.m. Central Standard Time	
	Telephone:	(314) 678-6303	
	Fax:	(314) 781-2714	
	E-mail	Parts@star-mfg.com Service@star-mfg.com Warranty@star-mfg.com	
	Website:	www.star-mfg.com	
	Mailing Address:	Star International Holdings Inc., Company 10 Sunnen Drive St. Louis, MO 63143 U.S.A	

ELECTRICAL SPECIFICATIONS

Model No.	Volts	Rated Wattage	Amps	NEMA Plug
CG10IT4-120V	120	1800	15.0	5-15P
CG10IT4-120C	120	1800	15.0	5-20P
GR10IT4-120V	120	1800	15.0	5-15P
GR10IT4-120C	120	1800	15.0	5-20P
GR14ITTC-240	240	3600	15.0	6-20P

120C = Canada

GENERAL INSTALLATION DATA



CAUTION

This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations.

All shipping containers should be checked for freight damage both visible and concealed. This unit has been tested and carefully packaged to insure delivery of your unit in perfect condition. If equipment is received in damaged condition, either apparent or concealed, a claim must be made with the delivering carrier.

Concealed damage or loss - if damage or loss is not apparent until after equipment is unpacked, a request for inspection of concealed damage must be made with carrier within 15 days. Be certain to retain all contents plus external and internal packaging materials for inspection. The carrier will make an inspection and will supply necessary claim forms.

VENTILATION AND CLEARANCES

The installation of any components such as a vent hood, grease extractors, and/or fire extinguishing systems, must conform to their applicable nationally recognized installation standards and/or local building codes.

ELECTRICAL CONNECTION



WARNING

Before making any electrical connection be sure to read the data plate located at the bottom of the unit.



WARNING

CONNECT/PLUG UNIT INTO DEDICATED A.C. LINE ONLY SPECIFIED ON THE DATA PLATE OF THE UNIT.

ELECTRICAL GROUNDING INSTRUCTIONS



WARNING

This unit is equipped with a 3-prong (grounding) plug for your protection against shock hazard and must be plugged directly into a properly grounded 3-prong receptacle.

DO NOT CUT OR REMOVE THIS PLUG OR GROUNDING PRONG FROM THE PLUG.

INITIAL START UP

Level unit using the adjustable feet under the unit (approximately 1/2" adjustment).

Unpack the grill and put the owner's manual in a safe place for future reference. If rust is visible on the grill, use a non-metallic scouring pad and scrub off the surface rust. Wipe down the exterior and grilling area with a damp cloth. Take the grill to a ventilated area and turn the thermostat to 8-9 to burn off the factory oil. The "burn off" is complete when the smoke is gone (approximately 30 minutes). Brush any debris from the grill surfaces. Allow the grill to cool and place it in its permanent position.

SEASONING THE COOKING SURFACES (Non-Chrome Only)

FIRST TIME SEASONING

Follow your company/corporate guidlines for seasoning cooking surfaces. or

- 1. Bring the grill to 300°F and leave it on while doing the next three steps.
- 2. Brush the cooking surfaces with a release agent. If using an aerosol agent, first apply into a cup and then brush onto cooking surface.
- 3. Let sit for 20 minutes, and then wipe clean using a warm damp cloth.

DAILY SEASONING

The grill should not require much seasoning while in use. In most cases, brush a light coating of the baking release agent in the morning and occasionally throughtout the day will be enough to prevent any sticking. It is not necessary to spray before grilling each item.

SETTING THE TEMPERATURE

The thermostat control knob is used to set the temperature to your requirements. The maximum set point is 550°F (288°C), the minimum set point is 175°F (79°C).

Knob Position	Approx. Temp
1-2	175°F / 79°C
3	200°F / 93°C
4	250°F / 121°C
5	300°F / 148°C
6	350°F / 176°C
7	400°F / 204°C
8	450°F / 232°C
9	500°F / 260°C
10	550°F / 287°C

PROGRAMMING THE TIMER

The timer may be factory pre-set. If changes are required follow these steps:

- 1. Press and hold the PGM button located on the left side of the display.
- 2. Press and hold one of the buttons (1 through 4) that needs to be programmed. After approximately 1 second, the display window will show "___." When this is displayed, let go of the buttons.
- Enter the 3-digit security code. As the digits are entered, the corresponding horizontal bar will move from the bottom to the center. The security code will not be displayed. Once the correct security code is entered, the display will be the current time of the selected button.
- 4. Change the time by pressing and holding the button to increase the time or the button to decrease the time.
- 5. Once the correct time is displayed, press the PGM button to save the time.
- 6. One can now change the time by pressing another button and repeating steps 3 and 4.
- 7. When programming is complete, exit the programming mode by not pressing any buttons for 15 seconds.

ON/OFF/ON TOGGLE SWITCH (CG10IT & GR10IT ONLY)

The switch turns the unit on and off. The switch has three positions:



With the switch in this position, both top and bottom platens will heat.



With the switch in this position, neither platen will heat; the unit is OFF.



With the switch in this position only the bottom platen will heat.

DAILY OPERATION

Make sure the unit is plugged into the proper voltage and amp specified on the nameplate.

- 1. Turn the electrical power of the unit ON by placing the switch in either the up or down position. **IMPORTANT:** The heat will not start until the thermostat is also turned to the heating position, approximately 2 or higher on the dial.
- 2. To start heating, turn the temperature knob to the desired setting. Initial start-up heating time is approximately 30 minutes.
- 3. Place product(s) on the bottom cooking surface.
- 4. Close the lid if the top if also ON. If the top is OFF, the unit can be operated similar to a griddle.
- 5. Press the desired button (1 through 4) on the timer.
 The timer countdown will begin regardless of what button is pressed.
- 6. When the countdown reaches 0:00, the display will flash and the unit will beep. To turn off the beeping, press the same button (1 through 4) used to start the countdown.

NOTE: If one wants to end a countdown, the same button (1 through 4) can be pressed at any time in the countdown cycle. The display will return to the programmed time for that button.

- 7. Raise the lid to the open position and remove the product(s).
- 8. For best performance, keep the lid closed when products are not being cooked.

OPERATING HINTS AND SAFETY

Disconnect power to the unit with the switch at the end of each day of operation. Do not leave the unit in operation without an attendant.

Turn the thermostat down to 200°F (93°C) during idle periods. It will take only a few minutes to regain operating temperature. Use a spatula to push excess grease into the grease drawer after each load of food is cooked. This will reduce smoking of hot grease and carbonizing.

Do not leave the unit at high temperatures when not in use or during idle periods. This will cause food particles and grease film to carbonize.

"Season" cooking surfaces with non-salted vegetable oil to reduce product sticking.

MONTHLY LUBRICATION/INSPECTION

Apply two (2) drops of non-toxic mineral or vegetable oil to counter balance shoulder rivets and plastic spacers.

Check and clean rollers to make sure they are rolling and not sliding on the cam surfaces of the counterbalance. Check the bolts, screws and nuts; tighten if necessary.

CLEANING

Begin cleaning procedure by using the operating procedures within your organization, or follow the steps below:

- If particles adhere to the cooking surface during the day, scrape them off with a spatula.
 NOTE: It is best not to let food cook onto the grill, as food build-up on the grill will increase sticking and smoking. In addition, carbon may build up on the grill surface and reduce the cooking efficiency.
- **CARBON BUILDUP:** A black matter that forms on or near the cooking surface. Generally this is a combination of: releasing agents, oils, food particles etc. that has cooked itself to the surface. After a period of time without cleaning, this will reduce performance and material may start flaking off. When that happens, follow the "Carbon Cleaning" procedures.
- 2. At the end of the day, wipe down all surfaces with a warm, damp cloth and mild detergent, then dry.

CARBON CLEANING

When carbon build up occurs, use a carbon removal agent according to the instructions provided with the cleaner. When this process is complete, you must re-season the grill according to your company/corporate guidelines, or the seasoning instructions in this manual.



CAUTION

DO NOT IMMERSE OR LET THE UNIT STAND IN WATER.

DO NOT HOSE DOWN THE UNIT OR THE TABLE/COUNTER ON WHICH THE UNIT IS LOCATED.

KEEP AWAY FROM RUNNING WATER.



CAUTION

DO NOT USE SHARP OBJECTS TO REMOVE CARBON BUILD-UP.

BEFORE CLEANING MAKE SURE POWER IS TURNED OFF, UNIT IS UNPLUGGED AND IS NOT TOO HOT.

While holding top lid with one hand, apply only cleaners which are safe for aluminum and iron surfaces. Wipe with clean sponge or towel until unit is clean.



CAUTION

DO NOT SPLASH FRONT CONTROL PANEL!

DO NOT SPLASH THE FLEX CONDUIT CONNECTING THE TOP AND BOTTOM OF THE UNIT.

Remove and empty the grease catcher drawer, to clean using mild detergent and water.



CAUTION

Do not use ice or cold water to clean the cooking surfaces when the unit is hot. The surfaces are cast aluminum or cast iron and may crack or deform under the shock of rapid temperature change.

OPERATION TROUBLESHOOTING

- A. Unit is not heating.
 - 1. Check if the unit is plugged into the correct receptacle.
 - 2. Check the incoming power line.
 - 3. Check that the switch is in the correct position.
 - 4. Check that the thermostat is set to the proper temperature.
- B. The top platen is not heating.
 - 1. Check that the switch is in the correct position.
- C. The counter balance roller is not rolling.
 - 1. Clean the rollers.

If the unit still does not operate, contact the factory, one of its authorized representatives, or a local service company for service or required maintenance.

THOROUGHLY INSPECT YOUR UNIT ON ARRIVAL

This unit has been tested for proper operation before leaving our plant to insure delivery of your unit in perfect condition. However, there are instances in which the unit may be damaged in transit. In the event you discover any type of damage to your product upon receipt, you must immediately contact the transportation company who delivered the item to you and initiate your claim with same. If this procedure is not followed, it may affect the warranty status of the unit.

LIMITED EQUIPMENT WARRANTY

All workmanship and material in Star products have a one (1) year limited warranty on parts & labor in the United States and Canada. Such warranty is limited to the original purchaser only and shall be effective from the date the equipment is placed in service. Star's obligation under this warranty is limited to the repair of defects without charge, by the factory authorized service agency or one of its sub-agencies. Models that are considered portable (see below) should be taken to the closest Star service agency, transportation prepaid.

- > Star will not assume any responsibility for loss of revenue.
- > On all shipments outside the United States and Canada, see International Warranty.
- * The warranty period for the JetStar six (6) ounce & Super JetStar eight (8) ounce series popcorn machines is two (2) years.
- * The warranty period for the Chrome-Max Griddles is five (5) years on the griddle surface. See detailed warranty provided with unit.
- * The warranty period for Teflon/Dura-Tec coatings is one year under normal use and reasonable care. This warranty does not apply if damage occurs to Teflon/Dura-Tec coatings from improper cleaning, maintenance, use of metallic utensils, or abrasive cleaners, abrasive pads, product identifiers and point-of-sale attachments, or any other non-food object tha comes in continuous contact with the roller coating. This warranty does not apply to the "non-stick" properties of such materials.
- > This warranty does not apply to "Special Products" but to regular catalog items only. Star's warranty on "Special Products" is six (6) months on parts and ninety (90) days on labor.
- > This warranty does not apply to any item that is disassembled or tampered with for any purpose other than repair by a Star Authorized Service Center or the Service Center's sub-agency.
- > This warranty does not apply if damage occurs from improper installation, misuse, wrong voltage, wrong gas or operated contrary to the Installation and Operating instructions.
- > This warranty is not valid on Conveyor Ovens unless a "start-up/check-out" has been performed by a Factory Authorized Technician.

PARTS WARRANTY

Parts that are sold to repair out of warranty equipment are warranted for ninety (90) days. The part only is warranted. Labor to replace the part is chargeable to the customer.

- SERVICES NOT COVERED BY WARRANTY
 Travel time and mileage rendered beyond the 50 mile radius limit 1.
- Mileage and travel time on portable equipment (see below)
- Labor to replace such items that can be replaced easily during a daily cleaning routine, ie; removable kettles on fryers, knobs, grease drawers on griddles, etc.
- Installation of equipment
- Damages due to improper installation
- Damages from abuse or misuse 6.
- Operated contrary to the Operating and Installation Instructions 7.
- Cleaning of equipment 8
- Seasoning of griddle plates

- 10. Voltage conversions
- Gas conversions
- 12. Pilot light adjustment
- 13. Miscellaneous adjustments
- 14. Thermostat calibration and by-pass adjustment
- Resetting of circuit breakers or safety controls or reset buttons 15
- Replacement of bulbs
- 17. Replacement of fuses
- Repair of damage created during transit, delivery, & 18. installation OR created by acts of God

PORTABLE EQUIPMENT

Star will not honor service bills that include travel time and mileage charges for servicing any products considered "Portable" including items listed below. These products should be taken to the Service Agency for repair:

- * The Model 510FD Fryer.
- * The Model 526TOA Toaster Oven.
- * The Model J4R, 4 oz. Popcorn Machine.
- * The Model 518CMA & 526CMA Cheese Melter.
- * The Model 12MC & 15MC & 18MCP Hot Food Merchandisers.
- * The Model 12NCPW & 15NCPW Nacho Chip/Popcorn Warmer.
- * All Hot Dog Equipment except Roller Grills & Drawer Bun Warmers.
- * All Nacho Cheese Warmers except Model 11WLA Series Nacho Cheese Warmer.
- * All Condiment Dispensers except the Model HPD & SPD Series Dispenser.
- * All Specialty Food Warmers except Model 130R, 11RW Series, and 11WSA Series.
- * All QCS/RCS Series Toasters except Model QCS3 & RCS3 Series. * All Fast Steamer Models except Direct Connect Series.

- ALL:
- * Pop-Up Toasters
- * Butter Dispensers
- * Pretzel Merchandisers (Model 16PD-A Only)

Email: service@star-mfg.com


- * Pastry Display Cabinets
- * Nacho Chip Merchandisers
- * Accessories of any kind
- * Sneeze Guards
- * Pizza Ovens
- (Model PO12 Only)
- * Heat Lamps
- * Pumps-Manual

The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.

FOR ASSISTANCE

Should you need any assistance regarding the Operation or Maintenance of any Star equipment; write, phone, fax or email our Service Department. In all correspondence mention the Model number and the Serial number of your unit, and the voltage or type of gas you are using.

2M-4497-2 10/2010

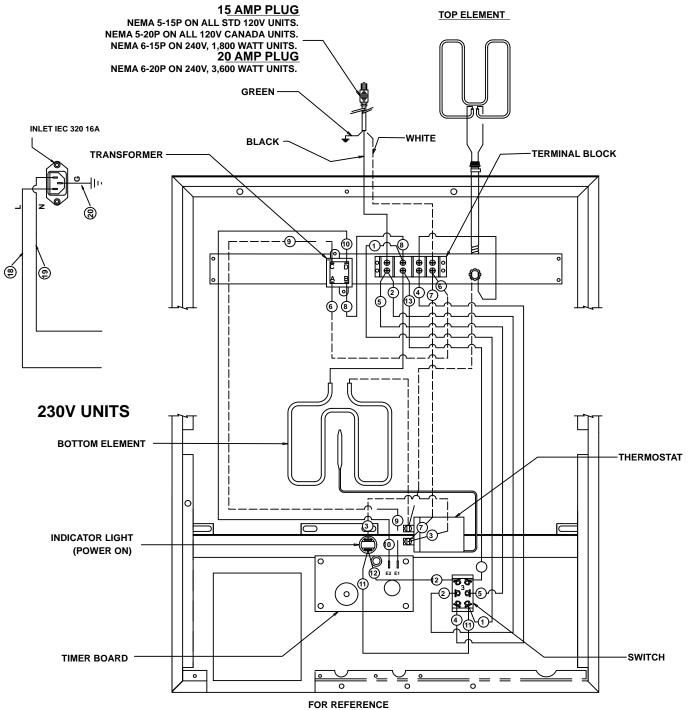

WIRING DIAGRAM IS SHOWN AS UNIT IS ASSEMBLED WITH THE BOTTOM PLATE REMOVED. ITEMS ARE IN GENERAL LOCATION BUT MAY BE RELOCATED OR SCALED FOR CLARITY.


WIRE DIAGRAM, CG/GR, 10/14, 120V/230/240V, WITH TIMER




SOME ITEMS ARE INCLUDED FOR ILLUSTRATIVE PURPOSES ONLY AND IN CERTAIN INSTANCES MAY NOT BE AVAILABLE

SK2001 Rev. B 6/13/2005 MODEL: SEE ABOVE

UNITS WITH IEC CONNECTOR:

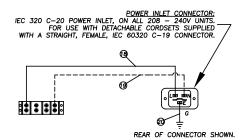

NORTH AMERICA:

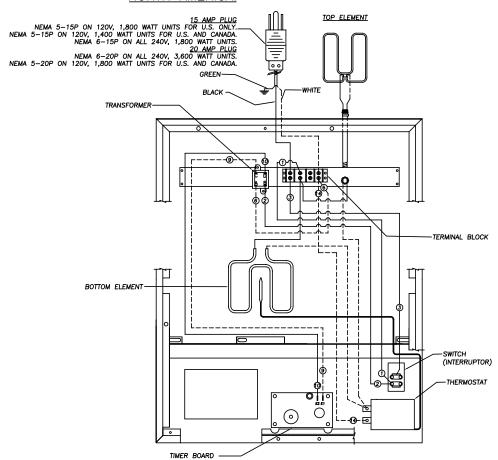

FOR REFERENCE
WIRING DIAGRAM IS SHOWN AS UNIT IS ASSEMBLED
WITH THE BOTTOM PLATE REMOVED. ITEMS ARE IN
GENERAL LOCATION BUT MAY BE RELOCATED OR SCALED
FOR CLARITY.

WIRE DIAGRAM, CG/GR, 10/14, 120V/230/240V, WITH TIMER, T-STAT, AND SPST SWITCH


SOME ITEMS ARE INCLUDED FOR ILLUSTRATIVE PURPOSES ONLY AND IN CERTAIN INSTANCES MAY NOT BE AVAILABLE

STAR MANUFACTURING INTERNATIONAL, INC.

DR: PMR

SK2334 REV. - 11/27/07

MODEL: SEE ABOVE

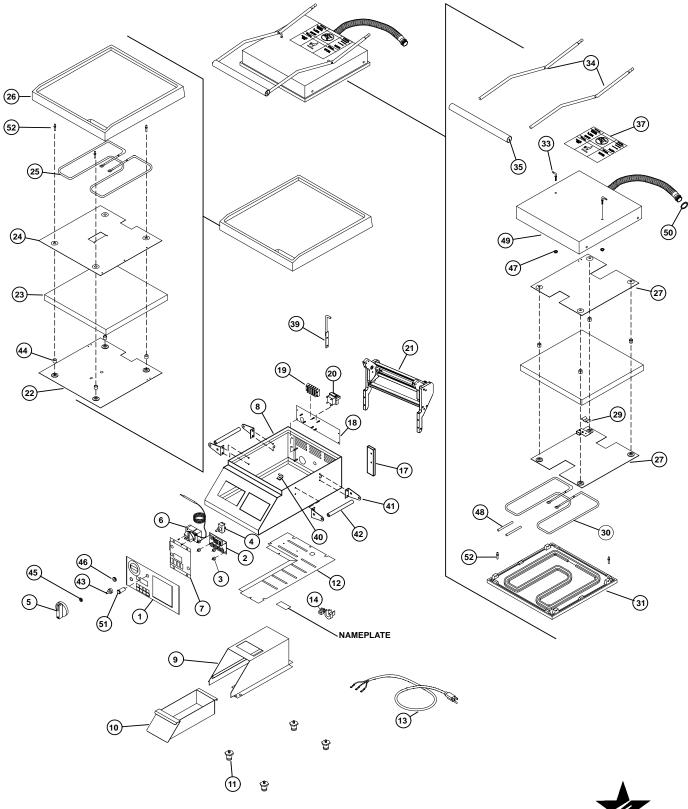

This drawing contains information confidential to Star Manufacturing International, Inc. No reproduction or disclosure of its contents is permitted.

SOME ITEMS ARE INCLUDED FOR ILLUSTRATIVE PURPOSES ONLY AND IN CERTAIN INSTANCES MAY NOT BE AVAILABLE

MODEL: GR10IT4



STAR MANUFACTURING INTERNATIONAL, INC.

SK2082 REV. A

Star Two-Sided Grill MODEL CG10IT4, GR10IT4-120V


Non-indept	Key Number	Part	Per		
2	number	Number	Unit	Description	
SPACER S	1	2M-Z7667	1	OVERLAY W/TIMER - 10"	
SWITCH - 3 POSITION	2	2J-Z7668	1	TIMER CONTROL	
Section	3	2K-Z1971	4	SPACER	
6 2T-6447 1 THERMOSTAT 118V-236V 7 D9-GR00234 1 FACEPLATE ASSEMBLY - 10" WITH TIMER 8 D9-GR00524 1 BODY ASSEMBLY - 10" WITH TIMER 9 D9-GR06177 1 GREASE CABINET ASSEMBLY 10 D9-GR06177 1 GREASE CABINET ASSEMBLY 11 2A-211501 4 FOOT - 1" ADJUSTABLE 12 D9-22711 1 BASE BOTTOM - 10" 13 2E-22935 1 CORD, POWER 123 5-20P 120C 14 2K-32340 1 BASE BOTTOM - 10" BOTTOM 15 2E-22884 1 PLATE - COUNTER BALANCE MOUNT 18 D9-GR0053 1 REAR LINER ASSEMBLY - 10" BOTTOM 20 2E-0-507-0351 1 TERMINAL BLOCK 21 2R-29907 1 COUNTER BALANCE - 10" IRON 22 D9-22774 1 BOTTOM INSULATION - 10" IRON 23 D9-22773 1 BOTTOM ILEMENT RETAINING PLATE - 10" 24 D9-22773 1 BOTTOM ILEMENT RE	4	2E-Z6863	1	SWITCH - 3 POSITION	
Page	5	2R-Z4621	1	KNOB - CONTROL	
BODY ASSEMBLY - 10" GREASE CABINET ASSEMBLY	6	2T-6447	1	THERMOSTAT 118V-236V	
Do-GR0034 1 GREASE CABINET ASSEMBLY	7	D9-GR0234	1	FACEPLATE ASSEMBLY - 10" WITH TIMER	
10	8	D9-GR0062	1	BODY ASSEMBLY - 10"	
10	9	D9-GR0034	1 1	GREASE CABINET ASSEMBLY	
11					
12			4		
13					
2E-Z4118					
14			1 1	•	
17	14			· · · · · · · · · · · · · · · · · · ·	
18 D9-GR0053 1 REAR LINER ASSEMBLY - 10" BOTTOM 19 2E-Z894 1 TERMINAL BLOCK 20 2E-05-07-0351 1 TERMINAL BLOCK 21 2R-Z2907 1 COUNTER BALANCE - 10" IRON 22 D9-Z2774 1 BOTTOM INSULATION RETAINING PLATE - 10" 23 D9-Z2973 1 BOTTOM ELEMENT RETAINING PLATE - 10" 25 2N-Z1979 1 ELEMENT - HEATING 1000W/120V (BO-TOM) 26 PS-GR0360 1 KIT, 2F-Z1933 CASTING - SMOOTH BOTTOM - 10" IRON 27 D9-Z2772 1 TOP ELEMENT - INSULATED PLATE - 10" 28 D9-GR0084 1 TOP ELEMENT - INSULATED PLATE - 10" 29 B9-04-WB-0046 1 CLAMP WIRE SUPPORT 30 PS-GR0349 1 KIT, 2F-Z1932 CASTING - SMOOTH TOP - 10" IRON 31 PS-GR0347 1 KIT, 2F-Z1932 CASTING - SMOOTH TOP - 10" IRON 34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 LABEL - CAUTION (BI-LINGUAL) 39 <t< td=""><td></td><td></td><td></td><td></td><td></td></t<>					
19					
2E-05-07-0351					
21					
D9-Z2774					
D9-Z2908			1 1		
24					
25					
26 PS-GR0360 PS-GR0358 1 KIT, 2F-Z1933 CASTING - SMOOTH BOTTOM - 10" IRON KIT, 2F-Z1935 MACH-CAST GR BOTTOM 10" IRON (CG MODEL) 27 D9-Z2772 1 TOP ELEMENT - INSULATED PLATE - 10" TOP RETAINING PLATE ASSEMBLY - 10" CLAMP WIRE SUPPORT 29 B9-04-WB-0046 1 CLAMP WIRE SUPPORT 30 PS-Z1978 1 KIT, 2F-Z1932 CASTING - SMOOTH TOP) 31 PS-GR0349 PS-GR0347 1 KIT, 2F-Z1932 CASTING - SMOOTH TOP) 33 2C-Z3200 2 PIN - TOP HOUSING - SMOOTH TOP - 10" IRON 34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 HANDLE - 10" 37 2M-Z2620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z33026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z33072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z36604 8 SPACER - INSULATION PLATE <t< td=""><td></td><td></td><td></td><td></td><td></td></t<>					
PS-GR0358					
D9-Z2772	20		1 1		
28 D9-GR0084 1 TOP RETAINING PLATE ASSEMBLY - 10" 29 B9-04-WB-0046 1 CLAMP WIRE SUPPORT 30 PS-Z1978 1 ELEMENT - HEATING 800W/120V (TOP) 31 PS-GR0349 1 KIT, 2F-Z1932 CASTING - SMOOTH TOP - 10" IRON PS-GR0347 1 KIT, 2F-Z1934 MACHINE-CAST GR TOP-IRON 10" (CG MODEL) 33 2C-Z3200 2 PIN - TOP HOUSING 34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 HANDLE - 10" 37 2M-Z620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z	27			,	
29 B9-04-WB-0046 1 CLAMP WIRE SUPPORT 30 PS-Z1978 1 ELEMENT - HEATING 800W/120V (TOP) 31 PS-GR0349 1 KIT, 2F-Z1932 CASTING - SMOOTH TOP - 10" IRON PS-GR0347 1 KIT, 2F-Z1934 MACHINE-CAST GR TOP-IRON 10" (CG MODEL) 33 2C-Z3200 2 PIN - TOP HOUSING 34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 HANDLE - 10" 37 2M-Z2620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3352 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899					
PS-Z1978					
PS-GR0349					
PS-GR0347 1 KIT, 2F-Z1934 MACHINE-CAST GR TOP-IRON 10" (CG MODEL) 33 2C-Z3200 2 PIN - TOP HOUSING 34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 HANDLE - 10" 37 2M-Z620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 <			1 1	,	
33 2C-Z3200 2 PIN - TOP HOUSING 34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 HANDLE - 10" 37 2M-Z2620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V	31			·	
34 2B-Z2988 2 ARM - 10" 35 2V-Z2990 1 HANDLE - 10" 37 2M-Z2620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V	00			,	
35 2V-Z2990 1 HANDLE - 10" 37 2M-Z2620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
37 2M-Z2620 1 LABEL - CAUTION (BI-LINGUAL) 39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
39 2V-Z3252 1 ROD - TOP HOUSING LATCH 40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
40 2A-Z3026 1 HALF CLIP .437 41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V				,	
41 D9-Z3071 4 BRACKET - HANDLE 42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
42 2V-Z3072 2 HANDLE - SIDE 43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V			1 1		
43 2I-05-07-0013 1 BOOT - SWITCH 44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 10-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
44 2A-Z6604 8 SPACER - INSULATION PLATE 45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
45 2I-Z3380 2 THERMOSTAT SEAL WASHER 46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
46 2I-Z3379 1 GROMMET - THERMOSTAT 47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V			-		
47 2C-Z2899 2 5/16-18 UNC LOCKNUT 48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
48 1O-E1500 0.33 SLEEVING #4 .208ID GLASS 49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V	-				
49 D9-GR0203 1 TOP HOUSING AND CONDUIT ASSEMBLY 50 2E-Z3768 1 LOCKNUT, CONDUIT, 1/2 INCH 51 2J-Y6689 1 PILOT LIGHT 120V					
50					
51 2J-Y6689 1 PILOT LIGHT 120V					
				· · · · · · · · · · · · · · · · · · ·	
O OO			1 1		
52 2C-08-07-0285 8 STUD, SELF TAPPING	52	2C-08-07-0285	8	STUD, SELF TAPPING	

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 1 1 OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.



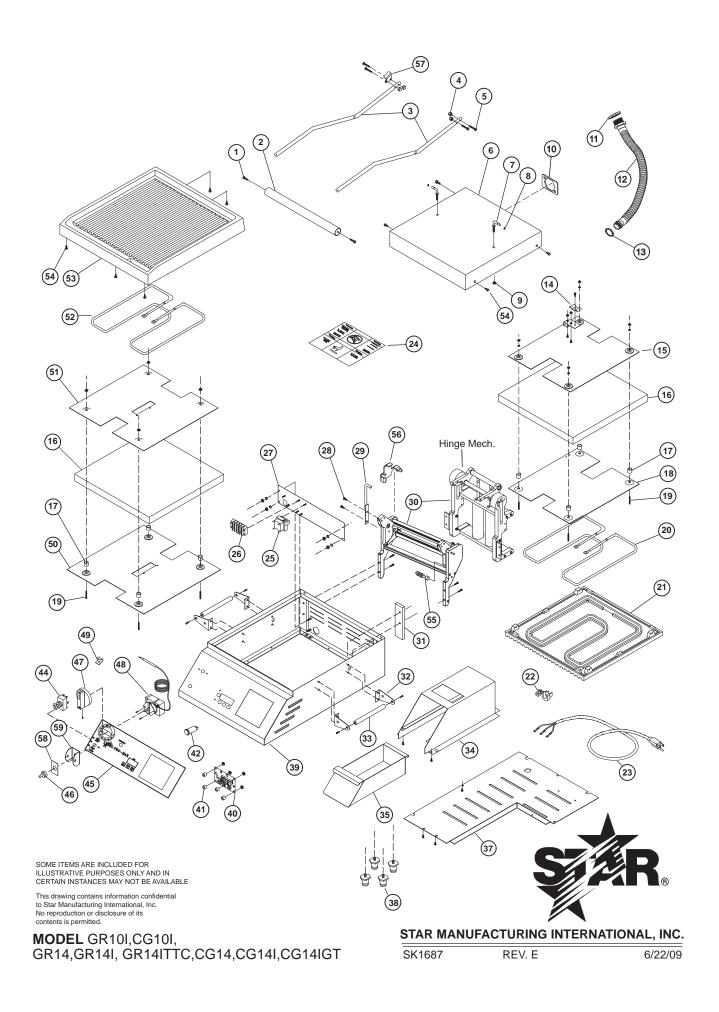

Star Two-Sided Grill MODEL GR14ITTC GRILL,SANDWICH,14"W/TIMER

Key	Dort	Number		
Number	Part Number	Per	Description	
		Unit	·	
1	2C-Z2992	2	SCREW, HANDLE	
2	2V-Z2989	1 1	HANDLE - 14"	
3	2B-Z3336	2	ARM	
4	2C-08-07-0040	4	NUT	
4	2C-08-07-0262	4	WASHER	
5	2C-Z2992	4	SCREW, ARM TO BRACKET	
6	D9-Z2036	1 1	HOUSING-TOP-14"	
7	2C-Z3200	2	PIN - TOP HOUSING	
8	2C-08-07-0040	2	RETAINER RING	
9	2C-Z2899	2	1/4" NUT, USE PART NUMBER 2C-Z2820	
10	2A-Z3827	1 1	CONDUIT KEEPER PLATE	
11	2C-Z3780	2	CONDUIT RETAINER	
12	2E-Z2898	1	CONDUIT ASSY PTFE	
13	2E-Z3768	1	CONDUIT LOCKNUT	
14	D9-04-GR-0166	1	WIRE MOUNT	
15	D9-GR0079	1	TOP RETAINING PLATE AY/14	
16	D9-Z2888	2	INSULATION - 14"	
17	2A-Z6604	8	SPACER - INSULATED PLATE	
18	D9-Z2075	1	TOP ELEMENT/INS. PLATE/14	
19	2C-08-07-0285	8	SCREW, ELEMENT RET. PLATE	
20	PS-Z2391	1 1	TOP ELEMENT, HEATING, 1800W/240	
21	PS-GR0352	1 1	CASTING, SM. TOP, IRON-14"	
22	2K-Y6764	1 1	BUSHING	
23	2E-Z2905	1 1	CORD SJTO 12/2 NEMA 6-20P	
24	2M-Z2620	1 1	LABEL CAUTION, BI-LINGUAL	
25	2E-05-07-0350	1 1	TRANSFORMER 230V/10V 6VA	
26	2E-Z2894	1 1	TERMINAL BLOCK	
27	D9-GR0080	1 1	REAR LINER ASSY 14"/REAR	
28	2C-1512	2	SCREW - PIN ASSY	
29	2V-Z3252	1 1	PIN ASSY - TOP HOUSING STOP	
30	2R-Z2896	1 1	COUNTERBALANCE -14"-IRON	
31	2A-Z6484	2	TORQUE BOX ASSY.	
32	D9-Z3071	4	BRACKET-HANDLE	
33	2V-Z3072	2	HANDLE - SIDE	
34	D9-GR0150	1 1	GREASE CABINET ASSY.	
35	D9-GR0518	1 1	GREASE DRAWER ASSY.	
37	D9-Z3259	1 1	BASE BOTTOM - 14"	
38	2A-Z11500	4	4" NON SKID FOOT BASE	
39	D9-GR0184	1 1	BODY ASSY	
40	2J-Z7668	1 1	TIMER CONTROL	
41	2K-Z1971	4	SPACER	
43	D9-GR0390	1 1	FACEPLATE ASSY 14" NO TIMER	
44	2E-Z3808	1 1	SWITCH(EATON)-30A@120V,SPST	
45	2M-Z11267	1 1	OVERLAY	
46	2I-05-07-0013		RUBBER BOOT, SWITCH	
47	2R-Z4621	1 1	KNOB-CONTROL	
48	2T-6447		THERMOSTAT 118V-236V	
49	2A-Z3026	1 1	HALF CLIP	
50	D9-Z8082		BTM. INSULATION RET. PLT. 14"	
51	D9-Z8082		BTM. INSOLATION RET. PLT. 14 BTM ELEMENT RET. PLATE 14"	
52	2N-Z2392	1 1	BTM ELEMENT, HEATING, 1800W/240V	
53	PS-Z1949		CASTING, SM. BOT., IRON-14"	
54	2C-Z5883	8	SCREW 10-24X1/2 FZA	
54 55	2C-25663 PS-GR134		ROLLER BEARING KIT	
.10	F3-GK134	2		
56	D9-Z11283	1 1 1	COUNTER BALANCE STOP, BASE	

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 1 OF 2

Some items are included for illustrative purposes only and in certain instances may not be available.



Star Two-Sided Grill MODEL GR14ITTC GRILL,SANDWICH,14"W/TIMER

Key Number	Part Number	Number Per Unit	Description		
Key Number 57 58 59 NI NI	Part Number D9-Z11284 2M-12-07-0038 Z1-70-07-0343 2V-Z3027 D9-Z9516		COUNTER BALANCE STOP,BRKT LABEL ON & OFF SWITCH GUARD CROSS SUPPORT (NOT SHOWN) SIDE SUPPORT		
IMPORT	ANT. WHEN ORDER		OI TAGE OR TYPE GAS DESIDED	DAGE	2

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 2 OF 2

Some items are included for illustrative purposes only and in certain instances may not be available.



Star - Holman - Lang - Wells - Bloomfield - Toastmaster 10 Sunnen Drive, St. Louis, MO 63143 U.S.A. (314) 678-6303 www.star-mfg.com