



10 SUNNEN DRIVE
(314) 781-2777

P.O. BOX 430129
• (800) 807-9054

ST. LOUIS, MISSOURI 63143
• FAX (800) 264-6666



**GENERAL OPERATOR'S MANUAL
BLIMPIE CONVEYOR TOASTERS
MODEL QCS3-950HB**

**FOR SERVICE INFORMATION
U.S. AND CANADA CALL: 1-800-225-3958
24 HOURS/DAY 7 DAYS/WEEK**

TABLE OF CONTENTS

UNCRATING AND INSPECTION	PAGE 2
ASSEMBLY AND INSTALLATION	PAGE 2
ROTARY POWER SAVER	PAGE 3
SPRING LOADED FRONT BEARING	PAGE 4
COOKING PROCEDURES	PAGE 5
CLEANING PROCEDURES	PAGE 5
TROUBLESHOOTING GUIDE	PAGE 6, 7
MAINTENANCE PROCEDURES	PAGE 7, 8
PARTS LIST	PAGE 9
WIRING DIAGRAM	PAGE 10

Electric Cooking Equipment for the Food Service Industry

Conveyor Toasters & Ovens Cheese Melters Broilers Pretzel Bakers

**GENERAL OPERATOR'S MANUAL
BLIMPIE CONVEYOR TOASTERS
MODEL QCS3-950HB**


UNCRATING AND INSPECTION

Unpack the unit and components from the shipping container.
Remove all visible packing material and those from inside the cooking chamber.
If damage is discovered, file a claim immediately with the carrier that handled the shipment.

ASSEMBLY AND INSTALLATION

The QCS3-950HB was shipped fully assembled and ready to plug into a standard outlet specified for its voltage and amp draw. Removal or replacement of the power cord and plug will **VOID** the warranty. For assistance contact the **Holman Cooking Equipment Factory Service Team at 1-800-225-3958**. Check Page 8 for the wiring diagram. Consult with a licensed electrician prior to installation.

FIGURE 1 – PLUG CONFIGURATION

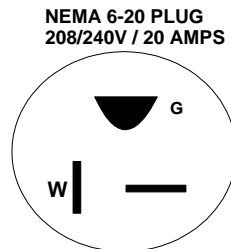

 **CAUTION**

Allow enough space around the toaster for adequate ventilation.
Do not operate the unit without the crumb tray properly positioned. Overheating and poor toasting may occur.
Read all the labels on the outside of the unit and follow their instructions.

 **WARNING**

DISCONNECT THE UNIT FROM THE POWER SOURCE BEFORE REMOVING OR INSTALLING ANY PARTS.

 **WARNING**


Before installing unit(s), check with your local power company or your electrician to determine the actual voltage coming into the equipment. For units rated 208 or 240 volts; never plug a 208-volt unit into 240 volts or a 240-volt unit into 208 volts.

 **WARNING**

Be absolutely sure that the ground connection for the receptacle is properly wired. Do not connect equipment to power without proper ground connections. Improper grounding may result in personal injury or fatality.

OPERATION

Your BLIMPIE toaster is equipped with a Rotary Power Saver Switch, details are as follow:

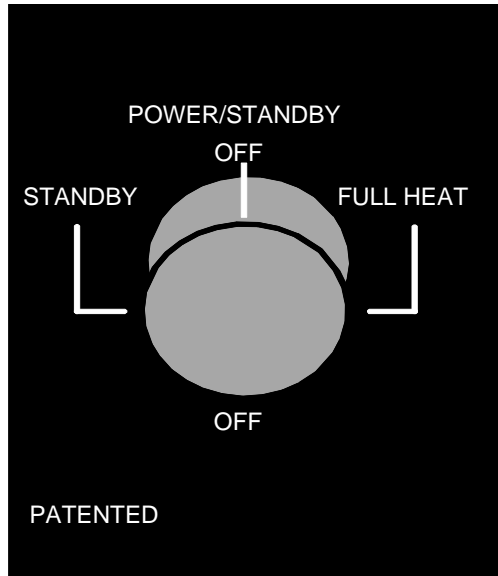

ROTARY POWER SAVER SWITCH

USING YOUR POWER SAVER

For toasters equipped with a **Rotary Power Saver Switch**, turn clockwise or counterclockwise to get in the following positions:

- FULL POWER** When in this position your equipment is at full power and ready to use.
- OFF ROTARY** Two off positions are provided so that a single rotation to either direction will shut the unit off.
- STANDBY** The standby position reduces the power consumption by 75%. Using this position during the quiet times will save electricity, and keep the toaster warm. When needed, turn the switch to FULL POWER. Recovery time is about 30 seconds.

SPRING LOADED FRONT BEARING ASSEMBLY

Your BLIMPIE Conveyor Toaster is equipped with a spring-loaded front bearing assembly as shown below in (Figure 2). The spring-loaded bearing assembly keeps the conveyor belt at a constant tension as the unit heats up and cools down. The conveyor belt is set to the proper tension when the white Teflon bushing is flush with or 1/8" inside of the extension as shown in (Figure 3).

FIGURE 2



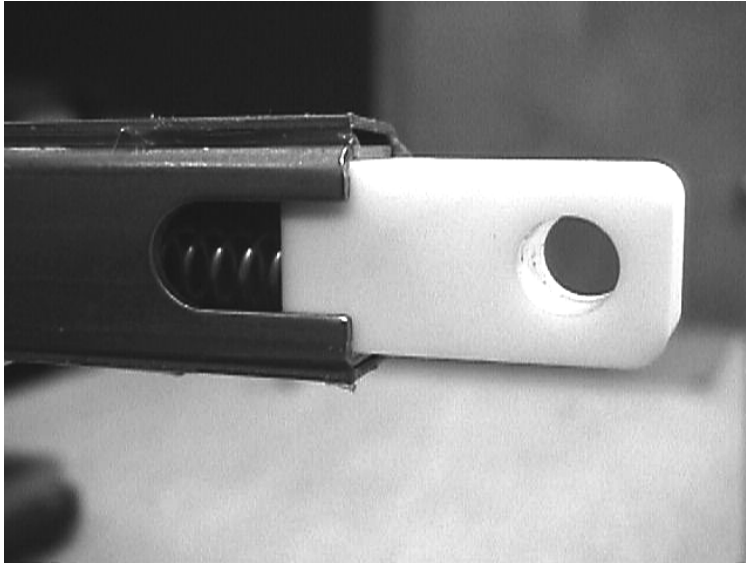


FIGURE 3

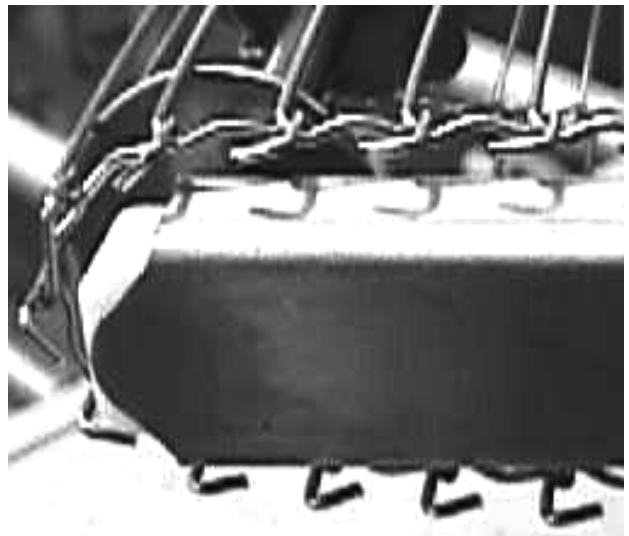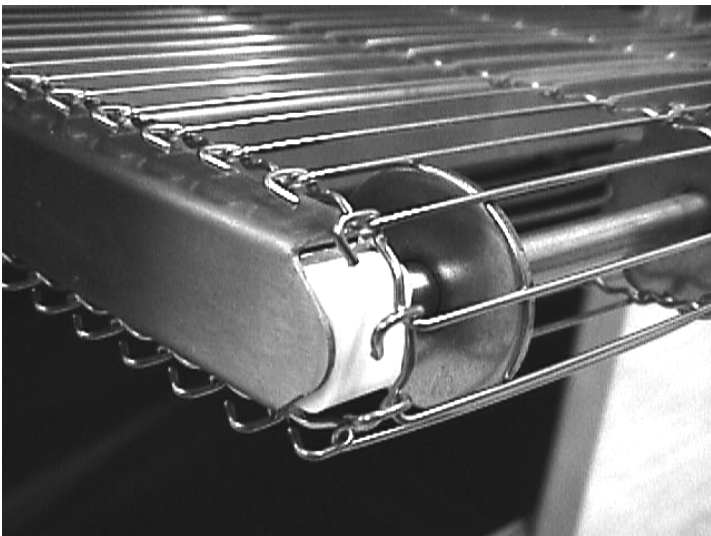

COOKING PROCEDURES

A. BREAD TOASTING

The QCS3-950HB comes with a swinging heat shutter at the product entrance. This shutter will move out of the way as product passes beneath it.

- 1) Turn the power saver to FULL power and the conveyor speed control to 50.
- 2) Allow warm up time of 5 to 10 minutes.
- 3) Test with a sample roll or other intended product:
 - ◆ If toasting is too light, turn conveyor speed control counterclockwise to a slower speed.
 - ◆ If toasting is too dark, turn conveyor speed control clockwise to a faster speed.

CLEANING PROCEDURES

Preventive maintenance for your BLIMPIE toaster consists of the following recommended cleaning procedures. To keep your toaster in its top operating condition, these steps should be performed daily.

- A. Clean air intake on bottom of unit.
- B. For lightly soiled conveyor belts, turn conveyor speed control to fastest setting (100) and wipe with a damp cloth (daily) For heavily soiled conveyors, turn conveyor speed control to fastest setting and wipe with a light abrasive pad. (as needed)
- C. Turn main power saver switch to the **OFF** position. **DISCONNECT UNIT FROM POWER SOURCE.**
- D. After the unit cools, remove interior crumb tray and clean. Slide crumb tray back into position.
- E. Wipe exterior surface of unit.



DO NOT OPERATE UNIT WITHOUT CRUMB TRAY IN PLACE. THE UNIT WILL OVERHEAT AND ACTIVATE THE HEAT LIMIT SWITCH.

**GENERAL OPERATOR'S MANUAL
BLIMPIE CONVEYOR TOASTERS
MODEL QCS3-950HB**

TROUBLESHOOTING GUIDE

A. UNIT WILL NOT HEAT, CONVEYOR BELT WILL NOT MOVE.

- 1) Be sure the main circuit breaker is switched to the **ON** position.
- 2) Check to see if the toaster is plugged in and all controls are turned to the **ON** position.

B. UNIT HAS HEAT ONLY ON ONE SIDE, CONVEYOR BELT TURNS FREELY.

- 1) Call the **Holman Cooking Equipment Factory Service Team at 1-800-807-9054**, as heating element may need replacing.

C. CONVEYOR WILL NOT TURN, UNIT HEATS PROPERLY. To check for mechanical binding:

1) **DISCONNECT UNIT FROM POWER SOURCE.**

2) Remove 2 screws holding enclosure to the bottom of the unit.

3) Set unit on the legs and remove 4 screws on the back of the toaster.

4) Slide the enclosure off the unit and remove the back panel.

5) Loosen the four screws which hold the drive motor in place.

6) Slide the motor up allowing the drive chain to be removed from the sprockets.

7) Move the conveyor belt by hand to check for mechanical binding. If conveyor moves freely, call the **Holman Cooking Equipment Factory Service Team at 1-800-807-9054** as the drive motor and/or speed control may need replacing.

8) Replace the enclosure by sliding it forward towards the front of the unit. The front edge of the enclosure will slide beneath the toaster front.



TROUBLE SHOOTING GUIDE CONT.

D. HEAT LIMIT SWITCH (RESET)

Your BLIMPIE conveyor toaster is equipped with an automatically activated heat limit switch that interrupts the heater tube connections if the ambient temperature in the control box exceeds 190°F (88C). This switch can be reset manually by pushing the red button under the toaster as shown above.

1) DISCONNECT UNIT FROM POWER SOURCE.

2) Check to see if air intake area in the bottom center of the control box cover is free of dust, grease or other obstructions.

3) Check if crumb tray is in place. **NEVER OPERATE UNIT WITHOUT CRUMB TRAY IN PLACE AS THIS CAUSES OVERHEATING IN THE CONTROL BOX.**

4) If no obstructions to the air flow can be found and if the crumb tray is in place, call the **Holman Cooking Equipment Factory Service Team at 1-800-807-9054** for assistance.

F. CONVEYOR TURNS AT ONE SPEED REGARDLESS OF SPEED CONTROL SETTING.

1) Call the **Holman Cooking Equipment Factory Service Team at 1-800-807-9054**, as speed control should be replaced.

MAINTENANCE PROCEDURES

A. REPLACING HEATER TUBES

1) DISCONNECT UNIT FROM POWER SOURCE.

2) Remove the enclosure.

3) Remove heater tube wire from terminal block connection, keeping top and bottom wires separate.

4) Lift heater tube retainers by loosening retaining screws and sliding the retainer plate up. Hand tighten the plate to hold it up so the heater tubes will slide out freely.

5) **Gently**, pull defective heater tube out of unit.

6) **Gently**, put new heater tube into unit.

7) Loosen retainer screws and slide the retainer back into place. Tighten the screw to secure the retainer in place over the ends of the heater tubes.

MAINTENANCE PROCEDURES CONT.

B. REPLACING FAN MOTOR

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove screws from the enclosure and the back panel at rear of unit.
- 3) Remove the enclosure and the back panel.
- 4) Unplug power supply cord from fan motor.
- 5) Remove (4) screws, which hold fan motor and grill to bottom of unit.
- 6) Put replacement motor and grill in place and secure to the bottom of unit with screws.
- 7) Reconnect power supply cord to fan motor.
- 8) Replace back panel and enclosure. Fasten with screws removed in step 2.

C. REPLACING BELT DRIVE MOTOR

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove enclosure and back panel.
- 3) Remove sprocket from motor shaft.
- 4) Remove the wire from terminal block connecting the drive motor to internal wiring. On units rated 208 or 240 volts, note which color leads are being used for these connections and which lead is capped with white tape. The new motor should use the same arrangement.
- 5) Remove screws holding motor in place.
- 6) Put new motor in place and attach loosely with mounting screws.
- 7) Replace sprocket on motor shaft.
- 8) Slide motor until the drive chain has about 1/8" slack when lightly pushed at the center of its top open run.
- 9) Tighten screws to secure motor.
- 10) Rewire leads same as removed in step 4.
- 11) Replace side panel and control box cover.

IF ASSISTANCE IS REQUIRED FOR THIS OR ANY OTHER PROCEDURE IN THIS MANUAL CALL THE HOLMAN COOKING EQUIPMENT FACTORY SERVICE TEAM at 1-800-807-9054 24 HOURS/DAY 7 DAYS/WEEK



FOR WARRANTY ASSISTANCE, CALL 1-800-807-9054 24/HRS. A DAY, 7 WAYS A WEEK

ORIGINAL EQUIPMENT WARRANTY

- 1.) Holman/Star Manufacturing Company obligation under this warranty shall be expressly limited to replacing or repairing without charge, any component of the electrically-heated cooking equipment which, in the sole opinion of Holman/Star is deemed to be defective. This warranty shall be effective for a period of twelve (12) months commencing from the date the equipment is **INSTALLED BY THE ORIGINAL PURCHASER, WHO SHALL PROVIDE COPY OF INVOICE OR PROOF OF PURCHASE IF WARRANTY PERIOD IS IN DOUBT.**

- 2.) Holman/Star Manufacturing Company agrees to pay any recognized kitchen equipment service agency within the United States and Canada for any **FACTORY-AUTHORIZED LABOR** required to repair or replace (does not include pressing the reset button or cleaning), at the **sole option** of Holman/Star, any part of the electrically-heated cooking equipment which proves to be defective in material or workmanship during the warranty period **provided, however that the repairs or replacement have been duly authorized by Holman/Star before the work is performed.** This warranty does include travel time not to exceed one (1) hour and mileage not to exceed fifty (50) miles (80 km) on units with a net weight excess of fifty (50) pounds (22.7 kg), **BUT SPECIFICALLY EXCLUDED TRAVEL CHARGES on the following units with net weight of less than FIFTY (50) POUNDS (22.7 kg):**

QCS-1 Series	QCS-2 Series	QCSe-2 Series	RCS-2 Series
---------------------	---------------------	----------------------	---------------------

- 3.) This warranty does not apply to repairs or replacement of any components(s) of your unit, which have been damaged or abused due to accident, alterations, unauthorized repairs, misuse or improper maintenance.

- 4.) Installation to improper voltage will void any and all implied warranties.

- 5.) This warranty is expressly in lieu of all other warranties and representations expressed or implied, **INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE,** and other obligations or liabilities on the part of Holman/Star Manufacturing Company.

The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.

FOR ASSISTANCE

Should you need any assistance regarding the Operation or Maintenance of any Holman/Star equipment; write, phone, fax or email our Service Department.

In all correspondence mention the Model number and the Serial number of your unit, and the voltage you are using.

**GENERAL OPERATOR'S MANUAL
BLIMPIE CONVEYOR TOASTERS
MODEL QCS3-950HB**

PARTS LIST MODEL QCS3-950HB

<u>PART #</u>	<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>QTY</u>	<u>DESCRIPTION</u>
HC-402499	1	HEATER TUBE RETAINER	HH-100561	1	PULL OUT TRAY
2P-200643	1	DRIVEN SPROCKET	HH-402465	1	CRUMB TRAY
2P-200646	1	DRIVE SPROCKET	HH-402466	1	CRUMB TRAY GUARD
HX-150016	1	DRIVE CHAIN	2B-200764	1	LOAD UP TRAY
2U-200509	1	DRIVE MOTOR	HM-101114	1	COMPLETE CRUMB TRAY ASSEMBLY
2A-200902	1	DRIVE SHAFT	HS-160024	1	CONVEYOR BELT
HA-112261	2	TEFLON BEARING	2U-200561	1	FAN MOTOR
2A-202905	1	IDLER SHAFT	2R-200562	1	FAN GRILL
2P-200700	2	BUSHING, IDLER SHAFT	2E-200574	1	FAN SWITCH
2P-200736	2	SPRING	2E-200387	1	FAN MOTOR CORD SET
2E-200551	1	ROTARY POWER SAVER SWITCH	HG-140024	1	CORD SET
SP-118042	1	SPEED CONTROL	HH-101371	1	ENCLOSURE
2R-200768	1	KNOB, SPEED CONTROL	HH-402470	1	BACK PANEL
2R-200769	1	KNOB, POWER SAVER	2R-200709	4	LEG
2E-200566	1	RESET	SEE HEATER TUBE CHART		HEATER TUBE

<u>HEATER TUBE PART NUMBER</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
HS-198017	HEATER TUBE QUARTZ 208V	3
HU-198020	HEATER TUBE QUARTZ 240V	3

GENERAL OPERATOR'S MANUAL
BLIMPIE CONVEYOR TOASTERS
MODEL QCS3-950HB

WIRING DIAGRAM MODEL QCS3-950HB 208, 240

