O P E R A T I O N S M A I N T E N A N C E MANUAL

FOOD HOLDING & TRANSPORT CABINETS

WITTCO MODEL NUMBERS

1826-4 1826-7-BC-IS 1826-13-BC-IS 1826-13-BC 1826-13-BC 1826-15-BC 1826-40-BC



LIMITED WARRANTY

Wittco warrants the Products that it manufactures to be free from defects in materials and workmanship, under normal use and service, for the periods indicated below from the date of purchase when installed and maintained in accordance with Wittco's written instructions. Buyer must establish the "Products" purchase date by returning Wittco's Warranty registration Card or by other means satisfactory to Wittco in its sole discretion.

Wittco warrants its Products to be free from defects in materials and workmanship from the date of purchase (subject to the foregoing conditions) for the period(s) of time and on the conditions listed below:

- a) Ninety (90) days Labor Warranty
- b) One (1) Year Parts Warranty

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED. INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT. Without limiting the generality of the foregoing, SUCH WARRANTIES DO NOT COVER: Coated incandescent light bulbs or heat lamps, all glass components. Product misuse, tampering, misapplication, application of improper voltage, or recafibration of thermostats or high limit switches.

LIMITATION OF REMEDIES & DAMAGES

Wittco's liability and Buyer's exclusive remedy hereunder will be limited solely, at Wittco's option, to repair or replacement by a Wittco authorized service agency (other than where Buyer is located outside of the United States or Canada, in which case Wittco's liability and Buyer's exclusive remedy hereunder will be limited solely to replacement of part under warranty) with respect to any claim made within the applicable warranty period referred to above. Without limiting the generality of the foregoing, all portable Products, as defined by Wittco, shall be delivered by Buyer, at its sole expense, to the nearest Wittco authorized service agency for replacement or repair. Wittco reserves the right to accept or reject any such claim in whole or in part. Wittco will not accept the return of any Product without prior written approval from Wittco, and all such approved returns shall be made at Buyer's sole expense. WITTCO WILL NOT BE LIABLE, UNDER ANY CIRCUMSTANCES, FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST OF PRODUCTS AND LOSS OF PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS.



WITTCO TECHNICAL & PRODUCT SUPPORT

TECHNICAL SUPPORT & SERVICE INQUIRES MAY BE DIRECTED TO WITTCO BY:

1. CALLING DIRECTLY TO:

WITTCO FOODSERVICE EQUIPMENT TECHNICAL & SERVICE DEPARTMENT - (800) 367-8413 8:00 AM - 4:30 PM (CENTRAL TIME)

2. FAXING DIRECTLY TO:

WITTCO FOODSERVICE EQUIPMENT TECHNICAL & SERVICE DEPARTMENT - (414) 354-2821 DAILY 24 HOURS

3. MAILING DIRECTLY TO:

WITTCO FOODSERVICE EQUIPMENT INC. 7737 NORTH 81 ST. STREET MILWAUKEE, WISCONSIN 53223 USA

WHEN DIRECTING INQUIRIES TO WITTCO PLEASE HAVE THE FOLLOWING INFORMATION AVAILABLE TO AVOID DELAYS

- 1. Wittoo model number indicated on the equipment serial data plate located at the electrical connection.
- 2. Wittco serial number indicated on the equipment serial data plate. The equipment serial number will also have two (2) alpha characters immediately following the serial number. These alpha characters are part of the serial number.



INTRODUCTION

The 1826 series of commericial and institutional cabinets from Wittoo Foodservice Equipment provide an efficient and sanitary method of holding and transporting prepared food products. They have found wide acceptance in all types of food service operations. Schools, hospitals, restaurants, and correctional facilities are all users of these dependable and useful cabinets.

This manual has been produced to provide persons responsible for the operation and maintenance of the equipment with a simple but comprehensive understanding of its proper use. We recommend that this manual be read and understood prior to placing the cabinet in operation.

As with any piece of food service equipment, this holding and transport cabinet will require a minimum of care and maintenance. Suggestions for this procedure are contained in this manual and should become a regular part of the operation of the unit.

NOTE: The holding and transport cabinet should be cleaned in accordance with the instructions contained in this manual.

It is recommended that prior to placing the holding and transport cabinet into operation that it be pre-heated at the highest temperature setting for a period of 30-45 minutes.

Should repair or adjustment of the unit become necessary, we suggest that procedures described in this manual be followed. The operator may also contact the authorized Wittco dealer who sold the product or an authorized Wittco service agency. If the needed repair occurs during the warranty period, prior authorization is required from Wittco by the service company before the work is done.

It is our sincere desire that you obtain the maximum benefit from your Wittco heated holding and transport cabinet. If at any time questions arise or additional information is required, contact Wittco at 800 367-8413.

DESCRIPTION

The Wittco 1826 series cabinets provide an efficient means of holding and transporting bulk prepared foods at proper serving temperatures. The 1826 commercial series cabinets will accommodate either 18 X 26 sheet pans or 12 X 20 steam table pans by utilizing the adjustable universal tray slides. The 1826 institutional series will accommodate 18 X 26 sheet pans, 12 X 20 steam table pans, or 1/1 or 2/1 gastronorm pans.

UNCRATING

Each Wittco Foodservice Equipment cabinet is packed in a cardboard carton which, in turn, is banded to a wooden pallet. When the cabinet is received by the operator, the carton should immediately be inspected for any sign of visible exterior damage. If carton is

punctured or dented, it may be an indication that the cabinet has sustained concealed freight damage It is very important that any evidence of damage be noted on the Bill of Lading at the time of receipt.

UNPACKING THE CABINET

- 1. Remove the banding material holding the carton to the pallet.
- 2. Remove the cardboard carton and the plastic bag covering the cabinet.
- 3. Carefully lift the cabinet off the carton bottom and pallet and place it on the floor or a table, if it is a counter top unit.
- 4. Open the cabinet door and remove the box containing the adjustable tray slides. (If the cabinet is an 1826-4 or an 1826-7, this box will also contain the tray slide upright side supports.)
- 5. Remove the cardboard element cover protector from the bottom of the cabinet.
- 6. Remove the adjustable tray slides from the box and install them in the cabinet. The hook on the end of the slide must be up in order for them to be properly installed. (If the cabinet is an 1826-4 or 1826-7, the tray slide supports will have to be installed first. To install the supports, hook the openings in flat flange of the support over two vertical carriage bolts on the interior of the cabinet. Make sure that all flanges on the four supports are facing the door opening.)
- 7. Pre-heat the cabinet for 30-45 minutes before using.

ELECTRICAL REQUIREMENTS

The 1826 series of holding and transport cabinets are factory wired for either 110/120 volt or 208/240 volt, single phase operation. All 110/120 volt units are equipped with an 8 foot cord and NEMA 5-15 plug as standard equipment. All 208/240 volt units are equipped with an 8 foot cord and NEMA 6-15 plug.

CAUTION: Verify that the power source matches the data plate on the lower rear of the cabinet and the plug configuration before the connection is made.

OPERATION

The control panel of the 1826 series cabinets contains a dual indicator operating light with both amber and red lamps, a dial thermometer, and a full range thermostat.

After the cabinet is connected to an appropriate power source, the operator will notice that the red indicator light is illuminated. This light will continue to be on as long as the cabinet is connected to the power source.

Rotate the thermostat knob so that it points to the number 5. This will cause the heating elements to start heating. When this occurs the amber indicator light will be illuminated. This light will stay on as long as the heating elements are engaged. Once the predetermined temperature is achieved, the heating elements will begin to cycle. During this period the amber light will turn on and off.

As the elements are heating, the thermometer will begin to move and indicate the interior temperature of the cabinet. At the number 5 setting the thermometer should indicate an average temperature of approximately 150 degrees° F.

NOTE: The temperature in any heated cabinet will fluctuate as the heating elements cycle on and off. The thermostat setting will provide an average air temperature in the cabinet. However, the operator should always monitor the food product to insure that it remains at proper temperatures.

REMEMBER - THE GREATER THE THERMOSTAT NUMBER SETTING THE HIGHER THE CABINET TEMPERATURE AND THE LOWER THE THERMOSTAT NUMBER SETTING THE LOWER THE CABINET TEMPERATURE.

CLEANING

The interior of the cabinet should be cleaned whenever a food spill occurs. Use a mild soap and water to clean. The tray slides should be removed and cleaned in a sink if necessary. **Never use harsh chemicals or abrasive pads to clean the cabinet.**

REPLACEMENT OF ELECTRICAL COMPONENTS

It is highly recommended that only Wittco Foodservice Equipment replacement parts be used to insure compatibility of component parts in the operation of holding and transport cabinet.

THERMOSTAT REPLACEMENT

- 1. DISCONNECT THE CABINET FROM ITS POWER SOURCE.
- 2. Remove the top cover by removing the retaining screws and lifting the cover off the cabinet to expose the thermostat.
- 3. Remove the black thermostat knob from the control panel by loosening the "L-end" screws that holds it to the thermostat stem.

NOTE: PRIOR TO LOOSENING THE "L-end" SCREWS, TURN THE BLACK THERMOSTAT KNOB SO THAT THE ARROW ON THE KNOB IS IN THE "OFF" POSITION

- 4. Notice the arrangement and connection of all electrical leads and refer to the wiring diagrams for reference.
- 5. Disconnect the wire leads connected to the thermostat.
- 6. Loosen the screws holding the temperature sensing bulb and remove it from the interior of the cabinet. The temperature sensing bulb must be replaced whenever the thermostat is replaced.

THERMOSTAT REPLACEMENT (CON'T)

- 7. Remove the two screws on the front of the control panel that hold the thermostat in place and remove it.
- 8. Install the replacement thermostat and temperature sensing probe following the reverse of the above procedure.
- 9. Reinstall the cabinet top cover and screws.
- 10. Reconnect the cabinet to the power source and test.

INDICATOR LIGHT REPLACEMENT

1. DISCONNECT THE CABINET FROM ITS POWER SOURCE.

- 2. Remove the top cover by removing the retaining screws and lifting the cover off the cabinet to expose the indicator light.
- 3. Notice the arrangement and connection of all electrical leads and refer to the wiring diagrams for reference.
- 4. Disconnect the wire leads connected to the indicator light
- 5. Depress the side mounted retaining clips on the indicator housing and remove the light from the front on the control panel.
- 6. Install the replacement indicator light by pushing it into the control panel until the retaining clips snap into place.
- 7. Reconnect the electrical leads to the indicator light.
- 8. Reinstall the cabinet top cover and screws.
- 9. Reconnect the cabinet to the power source and test.

HEATING ELEMENT REPLACEMENT

1. DISCONNECT THE CABINET FROM ITS POWER SOURCE.

- 2. Open the door to the cabinet.
- 3. Remove the bottom mounted element cover.
- 4. Remove the retaining screws securing the element to the interior rear of the cabinet.


HEATING ELEMENT REPLACEMENT (CON'T)

- 5. Gently pull the element from is housing until the electrical lead wire connectors are exposed.
- 6. Disconnect the defective element at the electrical lead wire connectors.
- 7. Connect the element lead wires to the cabinet lead wires by reinstalling the wire connectors.
- 8. Tuck the residual wire back through the wire housing hole until the replacement element is against the interior rear wall.
- 9. Reinstall the element retaining screws.
- 10. Reinstall the protective element cover.
- 11. Reconnect the cabinet to the power source and test.

THERMOMETER REPLACEMENT

1. DISCONNECT THE CABINET FROM ITS POWER SOURCE.

- 2. Remove the top cover by removing the retaining screws and lifting the top cover off the cabinet to expose the thermometer.
- 3. Identify and remove the thermometer sensing bulbscrews and retaining clips located in the interior top of the cabinet. Pull the thermometer sensing bulb through the access hole located in the top of the cabinet.
- 4. Remove the retaining nuts which secure the thermometer to the housing located on the back of the control panel.
- 5. Remove the thermometer by pushing it from the rear through the control panel.
- 6. Install the replacement thermometer following the reverse of the above procedure.
- 7. Reconnect the cabinet to its power source and test.

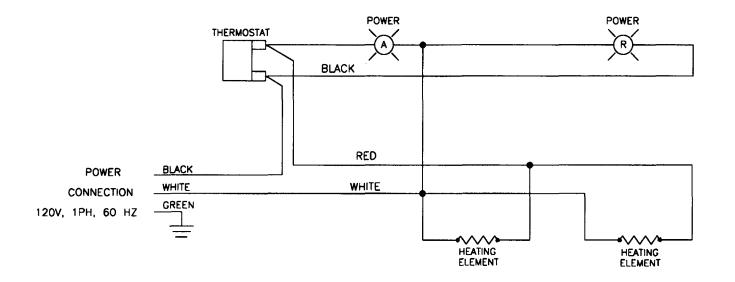

DRAWING TITLE WIRING DIAGRAM 120V. 1PH, 60 HZ

1826-4

1826-7

1826-13

1826-15

1826-40

WITTCO FOODSERVICE EQUIPMENT INC. REPLACEMENT PARTS LIST

WITTCO SERIES - HOLDING / TRANSPORT UNIT

6/18/98

			6/18/98				
WITTCO PART NO.	PART DESCRIPTION		MODEL NUMBER AND QUANTITY REQUIRED				
		1826-4	1826-7	1826-13	1826-15		
WP-113-E	BUMPER, ALUMINUM EXTRUSION ONLY (NO VINYL)	1	1	1	1		
WP-113-V	BUMPER, BLACK VINYL ONLY (NO EXTRUSION)	1	1	1	1		
WP-079	CARD HOLDER 3"x5"	1	1	1	1		
WP-114-2R	CASTERS 2" HEAVY DUTY RIGID	2	2	2	2		
WP-114-2S	CASTERS 2" HEAVY DUTY SWIVEL W/BRAKE	2	2	2	2		
WP-114-3R	CASTERS 3" HEAVY DUTY RIGID	2	2	2	2		
WP-114-3S	CASTERS 3" HEAVY DUTY SWIVEL W/BRAKE	2	2	2	2		
WP-114-4R	CASTERS 4" HEAVY DUTY RIGID	2	2	2	2		
WP-114-4S	CASTERS 4" HEAVY DUTY SWIVEL W/BRAKE	2	2	2	2		
WP-114-5R	CASTERS 5" HEAVY DUTY RIGID	2	2	2	2		
WP-114-5S	CASTERS 5" HEAVY DUTY SWIVEL W/BRAKE	2	2	2	2		
WP-114-6R	CASTERS 6" HEAVY DUTY RIGID	2	2	2	2		
WP-114-6S	CASTERS 6" HEAVY DUTY SWIVEL W/BRAKE	2	2	2	2		
WP-114-6HR	CASTERS 6" HI-MODULUS RIGID	2	2	2	2		
WP-114-6HS	CASTERS 6" HI-MODULUS SWIVEL W/BRAKE	2	2	2	2		
WP-178-1	CONTROL PANEL DECAL (BLUE)	1	1	1	1		
WP-U52	CORD, 8 FT.	1	1	1	1		
AD-650	CORD WRAP	1	1	1	1		
WP-063-4	DOOR, (NO HARDWARE)	1					
WP-063-7	DOOR, (NO HARDWARE)		1				
WP-063-13	DOOR, (NO HARDWARE)			1			
WP-063-15	DOOR, (NO HARDWARE)				1		
WP-107	DOOR LATCH COMPLETE W/CATCH	1	1	1	1		
WP-104-1	ELEMENT, 600 WATT - 120 VOLT	2	2	2	2		
WP-104-2	ELEMENT, 600 WATT 208-240 VOLT	2	2	2	2		
WP-182	ELEMENT CLIP	2	2	2	2		
WP-183	ELEMENT COVER	1	1	1	1		

WITTCO PART NO.	PART DESCRIPTION	MODEL	MODEL NUMBER AND QUANTITY REQUIRED				
		1826-4	1826-7	1826-13	1826-15		
WP-090-4	GASKET DOOR ALUMINUM EXTRUSION	1					
WP-090-7	GASKET, DOOR ALUMINUM EXTRUSION		1				
WP-090-13	GASKET, DOOR ALUMINUM EXTRUSION			1			
WP-090-15	GASKET. DOOR ALUMINUM EXTRUSION				1		
WP-302	GASKET, DOOR (BLACK) BY THE FT.	7'	8'	12'	14'		
WP-108	HANDLE, LIFT SIDE MOUNTED	4	4				
WP-117	HANDLE, PUSH/PULL			2	2		
WP-310	HANDLE, PUSH/PULL DECAL			2	2		
WP-111	HINGE FOR DOORS	2	2	3	3		
WP-103	HUMIDITY PAN (W/SPONGE)	1	1	1	1		
WP-099	HUMIDITY PAN SPONGE ONLY	1	1	1	1		
WP-174	INSPECTION CAP, CHROME	1	1	1	1		
WP-106-1	LIGHT, INDICATOR DUAL 125 VOLT (AMBER/RED)	1	1	1	1		
WP-106-2	LIGHT, INDICATOR DUAL 250 VOLT (AMBER/RED)	1	1	1	1		
WP-302-4	RACKS, INT. SIDE UPRIGHT	4					
WP-302-7	RACKS, INT. SIDE UPRIGHT		4				
WP-302-13	RACKS, INT. SIDE UPRIGHT			4			
WP-302-15	RACKS, INT. SIDE UPRIGHT				4		
WP-305	RACK, SIDE RETAINING BOLTS	8	8	8	8		
WP-006-1	STRAIN RELIEF AT POWER CORD	1	1	1	1		
WP-109	THERMOMETER, DIAL TYPE	1	1	1	1		
WP-093	THERMOMETER BULB HOLDER	1	1	1	1		
WP-110	THERMOSTAT W/OUT KNOB	1	1	1	1		
WP-242	THERMOSTAT KNOB	1	1	1	1		
WP-089	THERMOSTAT BULB HOLDER	2	2	2	2		
WP-308-C7	TOP COVER	1	1	1	1		
WP-121	TRAY SLIDES (SET of 2)	4	7	13	15		

WITTCO FOODSERVICE EQUIPMENT INC. REPLACEMENT PARTS LIST

WITTCO SERIES - HOLDING/TRANSPORT CABINETS

6/18/98

WITTCO		MODEL NUMBER AND QUANTITY REQUIRED			
PART NO.	PART DESCRIPTION	1826-40			
WP-113-40-E	BUMPER, ALUMINUM EXTRUSION ONLY (NO VINYL)	1			
WP-113-40-V	BUMPER, BLACK VINYL ONLY (NO EXTRUSION)	1			
WP-114-5R	CASTER 5" HEAVY DUTY RIGID	2			
WP-114-5S	CASTER 5" HEAVY DUTY SWIVEL W/BRAKE	4			
WP-114-6R	CASTER 6" HEAVY DUTY RIGID	2			
WP-114-6S	CASTER 6" HEAVY DUTY SWIVEL W/BRAKE	4			
WP-114-6HR	CASTER 6" HI-MODULUS RIGID	2			
WP-114-6HS	CASTER 6" HI-MODULUS SWIVEL W/BRAKE	4			
WP-178-3	CONTROL PANEL DECAL (BLUE)	1			
WP-247	CORD, 10' HEAVY DUTY	1			
AD-650	CORD WRAP	1			
WP-064-40-L	DOOR, DUTCH LEFT (NO HARDWARE)	2			
WP-064-40-R	DOOR, DUTCH RIGHT (NO HARDWARE)	2			
WP-107	DOOR LATCH COMPLETE W/CATCH	4			
WP-105-1	ELEMENT, 1000 WATT 120 VOLTS	2			
WP-105-2	ELEMENT, 1000 WATT 208-240 VOLTS	2			
WP-182	ELEMENT CLIP	2			
WP-284	ELEMENT COVER	2			
WP-090-40	GASKET, DOOR ALUMINUM EXTRUSION	1			
WP-302	GASKET, DOOR (BLACK) BY THE FT.	25'			
WP-141	HANDLE, PUSH/PULL	2			
WP-310	HANDLE, PUSH/PULL DECAL	2			
WP-111	HINGE, DOOR	8			
WP-103	HUMIDITY PAN (W/SPONGE)	2			
WP-099	HUMIDITY PAN SPONGE (ONLY)	2			
WP-174	INSPECTION CAP, CHROME	1			

W1TTCO PART NO.		MODEL NUMBER AND QUANTITY REQUIRED		
	PART DESCRIPTION	1826-40		
WP-106-1	LIGHT, INDICATOR DUAL 125 VOLT (AMBER/RED)	1		
WP-106-2	LIGHT, INDICATOR DUAL 250 VOLT (AMBER/RED)	1		
WP-305-40	RACKS, INT. SIDE UPRIGHT	8		
WP-305	RACK, SIDE RETAINING BOLTS	16		
WP-006-1	STRAIN RELIEF AT POWER CORD	1		
WP-109	THERMOMETER, DIAL TYPE	1		
WP-093	THERMOMETER BULB HOLDER	1		
WP-110	THERMOSTAT W/OUT KNOB	1		
AD-242	THERMOSTAT KNOB	1		
WP-089	THERMOSTAT BULB HOLDER	2		
WP-308-C40	TOP COVER	1		
WP-121	TRAY SLIDES (SET OF 2)	40		

WITTCO FOODSERVICE EQUIPMENT INC. REPLACEMENT PARTS LIST

WITTCO SERIES - HOLDING / TRANSPORT UNIT INSTITUTIONAL SERIES

6/19/98

WITTCO PART NO.	PART DESCRIPTION	MODEL NUM	MODEL NUMBER AND QUANTITY REQUIRED			
		1826-7-IS	1826-13-IS	1826-15-1S		
WP-113-EI	BUMPER, ALUMINUM EXTRUSION ONLY (NO VINYL)	1	1	1		
WP-113-VI	BUMPER, BLACK VINYL ONLY (NO EXTRUSION)	1	1	1		
WP-079	CARDHOLDER 3"x5"	1	1	1		
WP-114-2R	CASTERS 2" HEAVY DUTY RIGID	2	2	2		
WP-114-2S	CASTERS 2" HEAVY DUTY SWIVEL W/BRAKE	2	2	2		
WP-114-3R	CASTERS 3" HEAVY DUTY RIGID	2	2	2		
WP-114-3S	CASTERS 3" HEAVY DUTY SWIVEL W/BRAKE	2	2	2		
WP-114-4R	CASTERS 4" HEAVY DUTY RIGID	2	2	2		
WP-114-4S	CASTERS 4" HEAVY DUTY SWIVEL W/BRAKE	2	2	2		
WP-114-5R	CASTERS 5" HEAVY DUTY RIGID	2	2	2		
WP-114-5S	CASTERS 5" HEAVY DUTY SWIVEL W/BRAKE	2	2	2		
WP-114-6R	CASTERS 6" HEAVY DUTY RIGID	2	2	2		
WP-114-68	CASTERS 6" HEAVY DUTY SWIVEL W/BRAKE	2	2	2		
WP-114-6HR	CASTERS 6" HI-MODULUS RIGID	2	2	2		
WP-114-6HS	CASTERS 6" HI-MODULUS SWIVEL W/BRAKE	2	2	2		
WP-178-2	CONTROL PANEL DECAL (BLUE)	1	1	1		
WP-052	CORD,8 FT.	1	1	1		
AD-650	CORD WRAP	1	1	1		
WP-065-7	DOOR, (NO HARDWARE)	1				
WP-065-13	DOOR, (NO HARDWARE)		1			
WP-065-15	DOOR, (NO HARDWARE)			1		
WP-107	DOOR LATCH COMPLETE W/CATCH	1	1	1		
WP-104-1	ELEMENT, 600 WATT 120 VOLT	2	2	2		
WP-104-2	ELEMENT, 600 WATT 208-240 VOLT	2	2	2		
WP-182	ELEMENT CLIP	2	2	2		
WP-183	ELEMENT COVER	1	1	1		

WITTCO PART NO.	PART DESCRIPTION	MODEL NUM	MODEL NUMBER AND QUANTITY REQUIRED			
		1826-7-IS	1826-13-IS	1826-15-IS		
WP-090-7I	GASKET. DOOR ALUMINUM EXTRUSION	1				
WP-090-13I	GASKET, DOOR ALUMINUM EXTRUSION		1			
WP-090-15I	GASKET, DOOR ALUMINUM EXTRUSION			1		
WP-302	GASKET, DOOR (BLACK) BY THE FT.	9'	13'	16"		
WP-108	HANDLE, LIFT SIDE MOUNTED	4				
WP-117	HANDLE, PUSH/PULL		2	')		
WP-310	HANDLE, PUSH/PULL DECAL		2	2		
WP-111	HINGE FOR DOORS	2	3	3		
WP-103	HUMIDITY PAN (W/SPONGE)	1	1	1		
WP-099	HUMIDITY PAN SPONGE ONLY	1	1	1		
WP-174	INSPECTION CAP, CHROME	1	1	1		
WP-106-1	LIGHT, INDICATOR DUAL 125 VOLT (AMBER/RED)	1	1	1		
WP-106-2	LIGHT, INDICATOR DUAL 250 VOLT (AMBER/RED)	1	1	1		
WP-306-7L	RACKS, INT. SIDE UPRIGHT (LEFT)	4				
WP-306-7R	RACKS, INT. SIDE UPRIGHT (RIGHT)	4				
WP-306-13LL	RACKS, INT. SIDE UPRIGHT (LEFT LOWER)		4			
WP-306-13RL	RACKS, INT. SIDE UPRIGHT (RIGHT LOWER)		4			
WP-306-13LU	RACKS, INT. SIDE UPRIGHT (LEFT UPPER)		4			
WP-306-13RU	RACKS, INT. SIDE UPRIGHT (RIGHT UPPER)		4			
WP-306-15LL	RACKS, INT. SIDE UPRIGHT (LEFT LOWER)			4		
WP-306-15RL	RACKS, INT. SIDE UPRIGHT (RIGHT LOWER)			4		
WP-306-15LU	RACKS, INT. SIDE UPRIGHT (LEFT UPPER)			4		
WP-306-15RU	RACKS, INT. SIDE UPRIGHT (RIGHT UPPER)			4		
WP-305	RACK, SIDE RETAINING BOLTS	8	16	16		
WP-006-1	STRAIN RELIEF AT POWER CORD	1	1	1		
WP-109	THERMOMETER, DIAL TYPE	1	1	1		
WP-093	THERMOMETER BULB HOLDER	1	1	1		
WP-110	THERMOSTAT W/OUT KNOB	1	1	1		
WP-242	THERMOSTAT KNOB	1	1	1		
WP-089	THERMOSTAT BULB HOLDER	2	2	2		
WP-308-C7I	TOP COVER	1	1	1		
WP-275	TRAY SLIDES (SET of 2)	7	13	15		