Replacement Parts for Widespread Deck Faucets

2903 SINGLE DECK BASE RIGID

2000-7500 SCREW

2000-8000 RED BUTTON AND
2000-8001 BLUE BUTTON

LEVER HANDLE

2000-3002 BIBB CAP

73657 DUCK GASKET

73741 WASHER

3000-0011 RH SWIVEL STEM

2000-5003 SEAT WASHER

1000-7502 SCREW

73521 LUBE

10022 (36") SUPPLY LINE 1/2" F X 1/2" F

10006 (36") SUPPLY LINE 1/2" M X 1/2" F

2000-0002 HANDLE LEVER KIT

74752 SUPPLY LINE ADAPTER

3000-0000 RH SWIVEL STEM REPAIR KIT

OR

3000-0001 LH SWIVEL STEM REPAIR KIT

1792 ANGLE STOP WITH KEY

1790-1 ANGLE STOP W/ CROSS HANDLE

3969 6" RIGID GOOSENECK SPOUT

3966 12" RIGID GOOSENECK SPOUT

HOT SIDE
71668 DECK SHUT OFF VALVE LEFT HAND SWIVEL STEM

COLD SIDE
71684 DECK SHUT OFF VALVE LEFT HAND SWIVEL STEM

73557 SUPPLY LINE

73794 SLIP JOINT KIT

FISHER
MANFACTURING COMPANY
PO BOX 60, TULARE, CA 93275
(800)421-6162, FAX: (800)832-8238
www.fisher-mfg.com

PART NO. 42927   REV. A

FAHB-HW-WSLL
Product Installation Guide

Since 1936, Fisher Manufacturing Company has manufactured heavy-duty, high quality plumbing products and hardware specialties for the food service industry. For three generations, the Fisher family has adhered to a strict dedication of and overall value. When you install Fisher products… you install the best. Our hardware is manufactured with the standardization of internal mechanisms. All chrome plating is triple plated copper, nickel and chrome for durability. Every piece of equipment we make is rigorously tested in both our modern in-house testing center and in actual field situations under extreme conditions. Every detail is thoroughly checked. Before we make our products available to you, they pass each and every test. You get proven performance. Guaranteed.
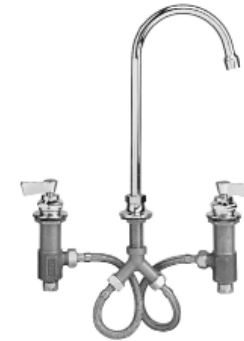
Limited One Year Warranty

Fisher Manufacturing Company warrants its products and parts thereof (except as noted below) against defects in materials or workmanship for a period of one year after the date of original purchase. During this period Fisher Manufacturing Company will replace a defective product or part without charge to you, provided that the entire product is delivered to Fisher Manufacturing Company. All transportation and insurance charges for shipping the product to and from Fisher Manufacturing Company must be borne by you. Charges for transportation and insurance may, at the option of Fisher Manufacturing Company, be refunded depending upon our investigation of the warranty claim. This warranty does not cover external finish (except at date of original purchase) or labor costs not specifically authorized by Fisher Manufacturing Company.

A full and complete copy of our One Year limited warranty is available upon request.

⚠ **Warning:** This product can expose you to chemicals including Lead, Nickel (Metallic), Di(2-ethylhexyl) phathalate (DEHP) which are known to the State of California to cause cancer, and Lead. Di(2-ethylhexyl) phathalate (DEHP) which are known to the State of Califorina to cause birth defects or reproductive harm. For more information go to:
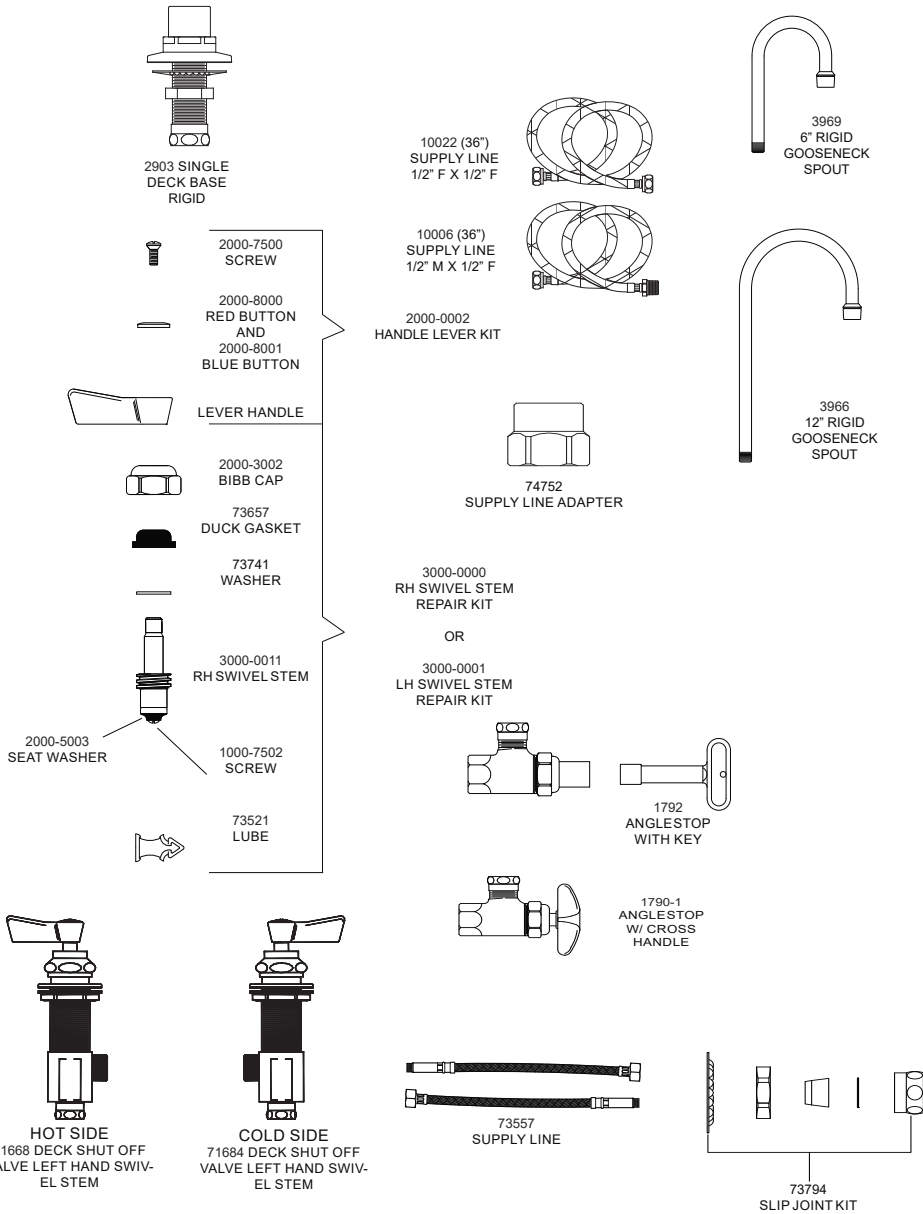www.P65Warnings.ca.gov.

#1902 - Widespread Deck Faucet with 12"Rigid Gooseneck Spout 2.2 GPM

#1778 - Widespread Deck Faucet with 6"Rigid Gooseneck Spout 2.2 GPM

#73378 - Widespread Deck Faucet with 12"Rigid Gooseneck Spout 0.35 GPM

#73379 - Widespread Deck Faucet with 6"Rigid Gooseneck Spout 0.35 GPM

KEEP THIS MANUAL FOR FUTURE REFERENCE

ANSI/A112.18.1M, ANSI/NSF 61.9

Installation Instructions for Widespread Deck Faucets

Installation Notes:

- Be sure to shut off water supply before beginning.
- Use pipe thread sealant such as PST on all threaded joints.
- Check the packaging for missing items BEFORE beginning installation. If items are missing, contact your supplier.
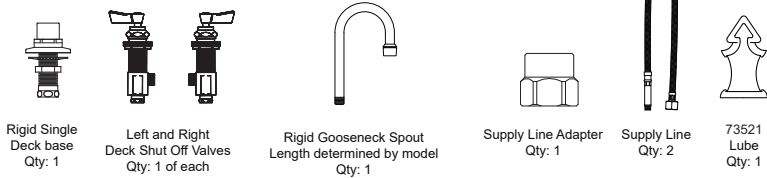
Tools Required for Installation

- Pipe Wrench
- Medium Sized Crescent Wrench
- Pipe Thread Sealant
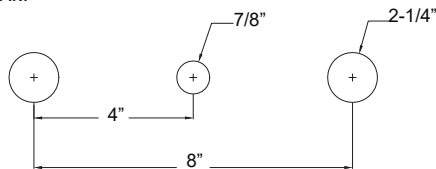
PST

Package Contents
The box should contain the following:

Rigid Single
Deck base
Qty: 1

Left and Right
Deck Shut Off Valves
Qty: 1 of each

Rigid Gooseneck Spout
Length determined by model
Qty: 1

Supply Line Adapter
Qty: 1

Supply Line
Qty: 2

73521
Lube
Qty: 1

Installation Instructions

1. Cut rough-in holes.

2. Mount spout base, then tighten with washer and locknut.

3. Screw on supply line adapter, use pipe sealant on the connection, to the nipple.

4. Add a small amount of o-ring lube to the o-ring on the supply lines and tighten supply lines in the supply line adapter.

5. Mount both control valves, and tighten with locknut. Connect supply lines to control valves and tighten. Make sure supply lines are not kinked or crimped after install.

6. Apply thread sealant to male threads on the spout and insert into control valve. Tighten until secure.
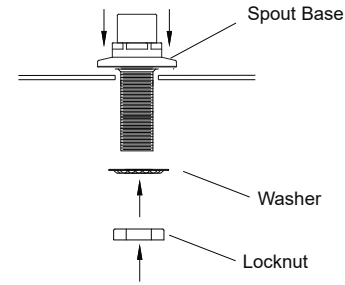
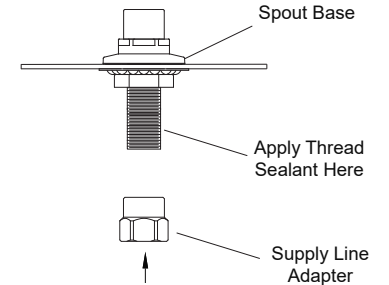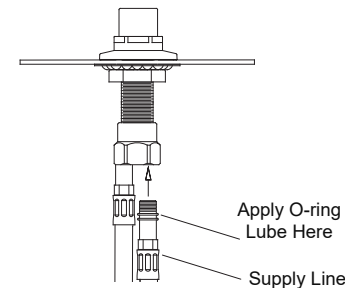7. Turn on water supply and check for leaks.

Step 1

ROUGH-IN:

7/8"

2-1/4"

4"

8"

Installation Instructions Continued

Step 2

Spout Base

Washer

Locknut

Step 3

Spout Base

Apply Thread Sealant Here

Supply Line Adapter

Step 4

Apply O-ring Lube Here

Supply Line

Step 5

Left Contol Valve

Right Contol Valve

Hot

Cold

Step 6

Apply O-ring Lube Here

Step 7