



COMPLETE ASSEMBLY

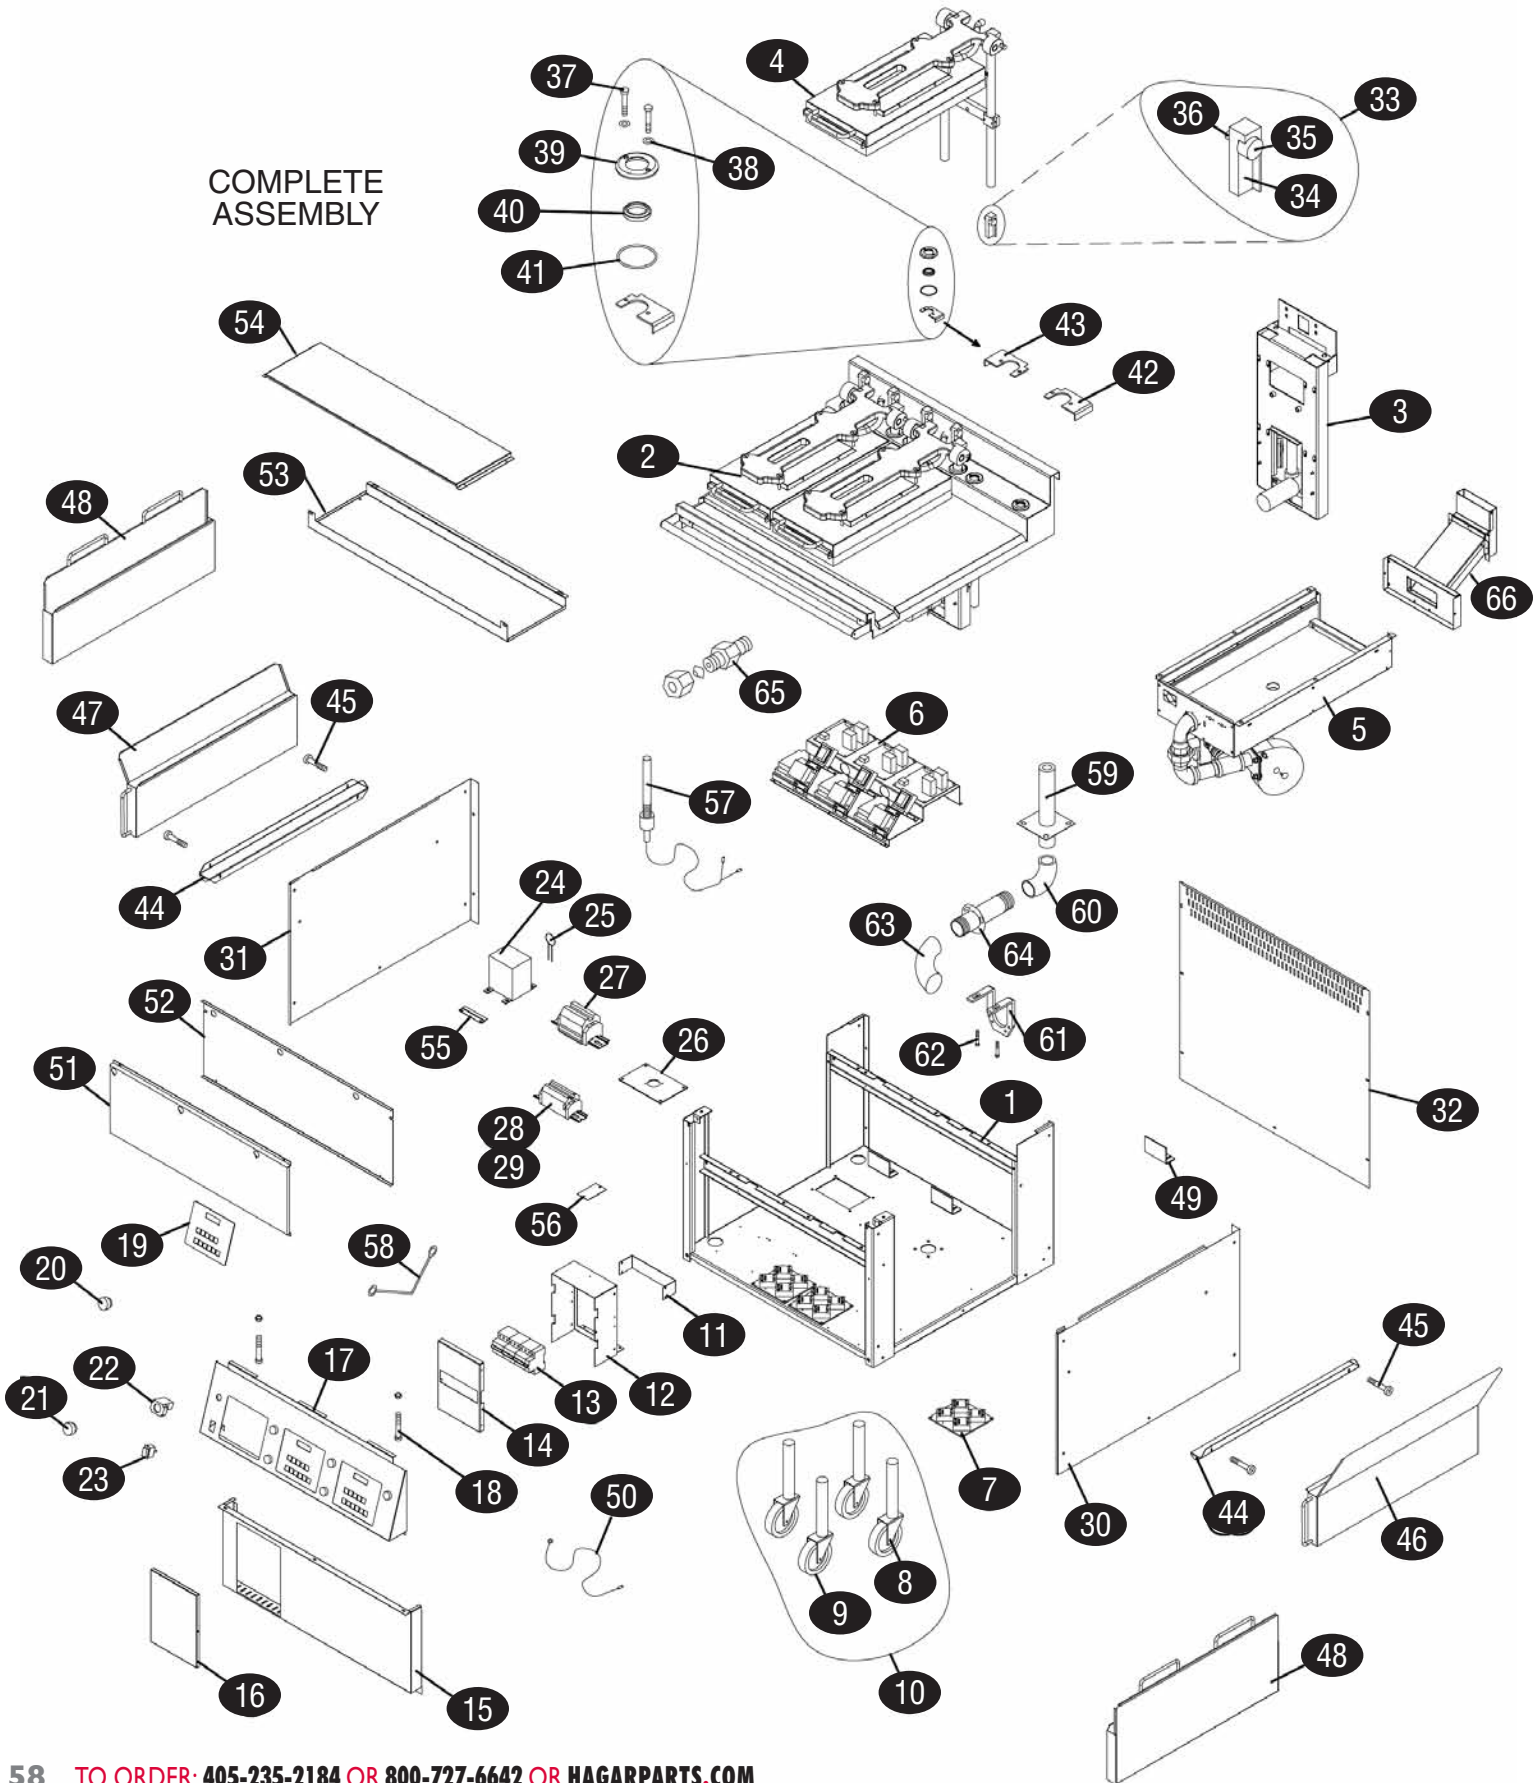


KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
1	GA4516058	Weld Assembly, Body Base	46	GA4524822	Grease Bucket, Sonic, Back Right
2	GA4517657	Plate Weld Assembly	47	GA5424823	Grease Bucket, Sonic, Back Left
3	GA4525541	Actuator Assembly	48	GA4516308	Grease Bucket, BA
4	GA4519752	Platen Assembly, 208v	49	GA4516977	Brace, Actuator Base
	GA4519755	Platen Assembly, 240v	50	GA1866101	Ground Wire, 24"
5	GA4517462	Burner & Flue Assemblies, Natural	51	GA4517593	Front Heat Shield, Outer
6	GA4516078	Component, Bracket Assembly	52	GA4517594	Front Heat Shield, Inner
7	GA4516116	Heat Sink Assembly	53	GA4517654	Burner Heat Shield, Lower
8	GA4516978	Caster, Nonlocking	54	GA4517655	Burner Heat Shield, Upper
9	GA4517563	Caster, Locking	55	GA1869301	Bracket, Transformer
10	GA4520678	Caster Kit, Locking & Nonlocking	56	GA4516114	Circuit Brace
11	GA4516113	Circuit Support	57	GA4520578	Thermocouple, Grill Plate
12	GA4517814	Circuit Breaker, 3 Pole	58	GA1866103	Strain Relief Wire, 12.5"
13	GA4516111	Circuit Box	59	GA4517394	Gas Inlet
14	GA4516112	Circuit Cover	60	GA1026715	Reduction Elbow, 90°, 1x3/4"
15	GA4516109	Front Panel, Lower	61	GA4525493	Support Bracket, Manifold
16	GA4516110	Access Door	62	GA8003210	Screw, Phillips Head, 32x3/8"
17	GA4516108	Front Panel, Upper	63	GA1026704	Elbow, 90°x3/4"
18	GA8003219	Screw, Phillips Head, 8-32x1/2"	64	GA4525494	Nipple Assembly
	GA8001203	Hex Nut, 8-32	65	GA1095499	Straight Connector, 7/16CC
	GA8000202	Washer, Locking, 8x19/64x3/4"	66	n/a	Flue Assembly (see page 62)
19	GA4516983	Fast Control, 5 Button w/Gap Key			
	GA4524774	Controller, Sonic Quick Pick, 8 Button			
20	GA1859604	Push Button, Black			
21	GA1859605	Push Button, Green			
22	GA1859606	Contact Block			
n/s	GA1859607	Mounting Latch			
23	GA1872404	Power Switch			
24	GA1864001	Main Transformer			
25	GA4518382	Surge Suppressor			
26	GA1668901	Power Cord Plate, Domestic			
27	GA4525397	Terminal Block			
28	GA4516981	Terminal Block, 120v			
29	GA4522739	Fuse, 5amp, 125VAC			
30	GA4516105	Body Side, Right			
31	GA4516106	Body Side, Left			
32	GA4517658	Back			
33	GA4520463	Arm Pivot Block Assembly			
34	GA1856802	Arm Pivot Block			
35	GA1854902	Cam Follower			
36	GA1854903	Jam Nut			
37	GA8003437	Hex Head Screw, 8/32x1", S/S			
38	GA1874301	O-Ring, #8-32			
39	GA4519098	Seal Cap			
40	GA4526315	Split Shaft Wiper, Black w/Orange Dot, 1.5diam			
41	GA4525256	Seal Cap, O-Ring, Wpress			
42	GA4520408	Seal Cap Bracket, Left			
43	GA4520407	Seal Cap Bracket, Right			
44	GA4516976	Grease Bucket Support			
n/s	GA8000213	Washer, Locking, #10x1-1/4" 18-8			
n/s	GA8000338	Washer, Flat, 7/32x1/2", S/S			
45	GA8003143	Screw, Phillips Head, #10-24x1-1/4" 18-8			

### GRILLS

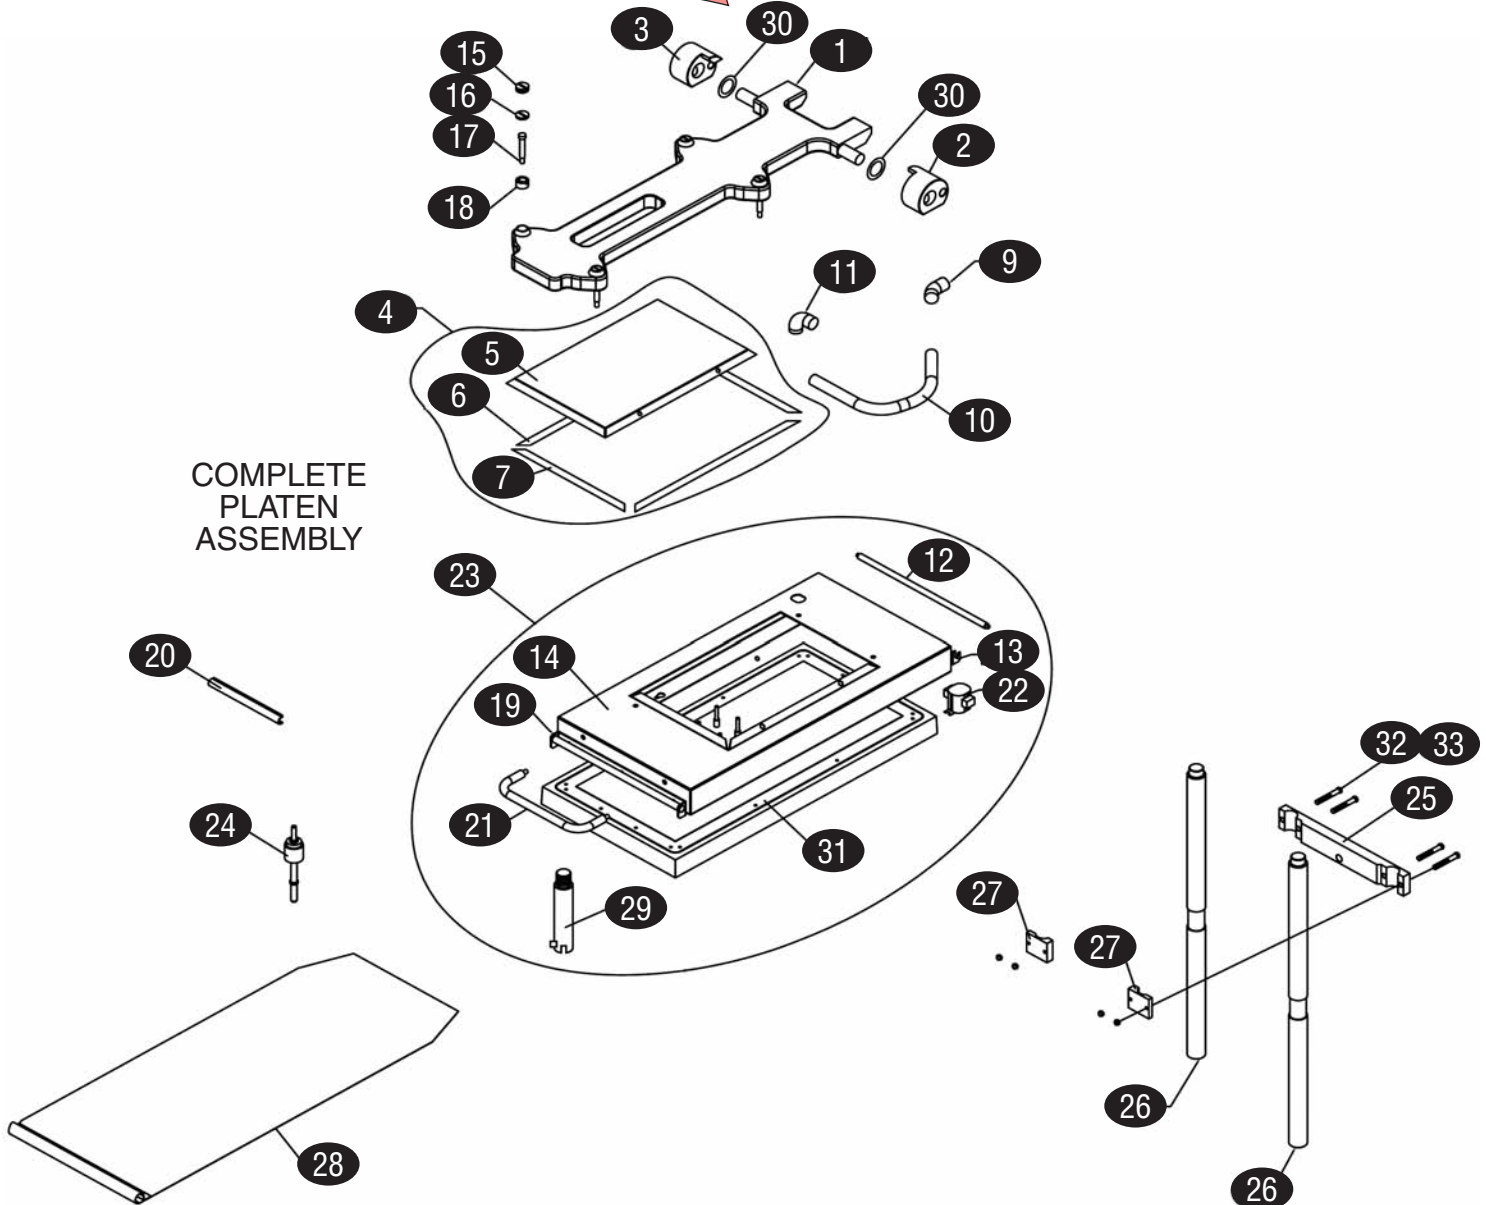

COMPLETE  
PLATEN  
ASSEMBLY

KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
1	GA4516085	Platen Arm	19	GA4516093	Teflon Holder, Front (not available separately)
2	GA4520422	Carriage Block Assembly, Right	20	GA1851301	Clip, Teflon
3	GA4520423	Carriage Block Assembly, Left	21	GA1859501	Platen Handle, Upper (not available separately)
4	GA4527090	Gasket Assembly, Platen Lid	22	GA1781301	Hi Limit, Auto Reset
5	GA4516092	Platen Lid	23	GA4519752	Platen Assembly, Complete, 208v
6	GA4527091-01	Gasket, 1/16", cut to 8-3/8", 45°end	GA4519755	Platen Assembly, Complete, 240v	
7	GA4527091-2	Gasket, 1/16", cut to 12-3/8", 45°end	24	GA1859401	Platen Thermocouple
9	GA4517021	Connector, 3/8", 45°	25	GA4516089	Cross Member
10	GA4517022	Platen Conduit	26	H70335	Actuator Shaft
11	GA4517020	Connector, 3/8", 90°	27	GA4516090	Bracket, Cross Member
12	GA4517008	Teflon Bar, Rear	28	GA1799303	Teflon Sheet
13	GA4516094	Teflon Holder, Rear (not available separately)	29	GA1859402	Bayonet Adaptor, Grill Plate/Platen
14	GA4516091	Platen Cowl (not available separately)	30	GA1855903	Washer, Teflon, Small
15	GA1859102	Platen Adjuster Cap	31	GA1937701	Gasket Tape, Goretex, .75x.065T
16	GA1859103	Platen Lock Nut	32	GA8003423	Hex Head Screw, Grd5, 1/4-20x1-1/4", S/S (2pk)
17	GA8005401	Shoulder Bolt	33	GA8000203	Washer, Locking, 1/4x1/2x1/16", S/S (2pk)
18	GA1859101	Nut, Platen Adjuster			

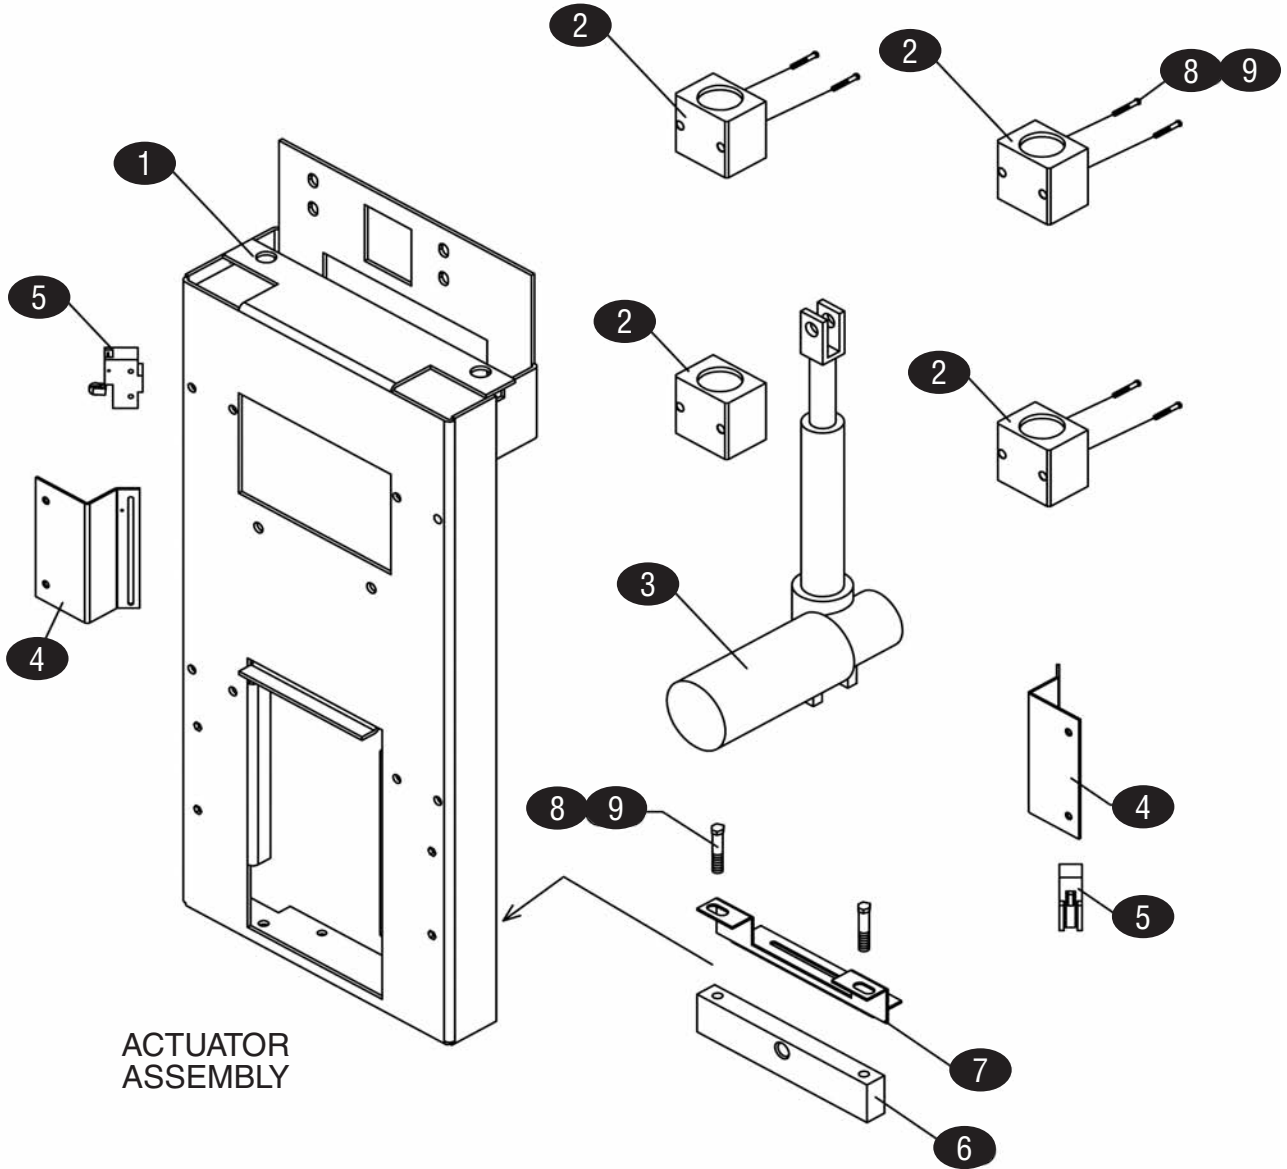


ACTUATOR ASSEMBLY


KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
1	GA4516080	Actuator Frame, Wa			
2	GA4518156	Pillow Block Assembly			
3	GA4525541	Linear Actuator			
4	GA1857601	Switch Bracket			
5	GA1855601	Platen Limit Switch, Upper/Lower			
6	GA4518787	Mount Block, Actuator, Painted			
7	GA4516097	Base Bracket, Actuator			
8	GA8003424	Shoulder Bolts, 1/4-20x2.25"			
9	GA8000206	Washer, Locking, 1/4"			



### GRILLS



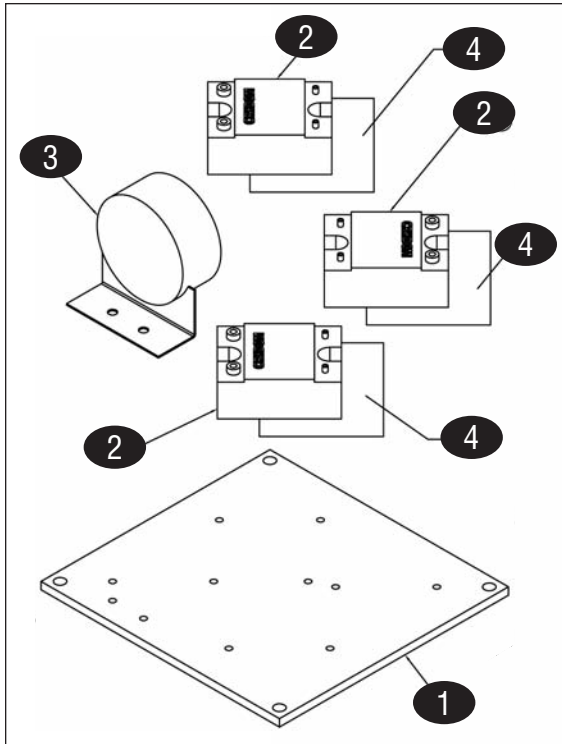


HEAT SINK ASSEMBLY

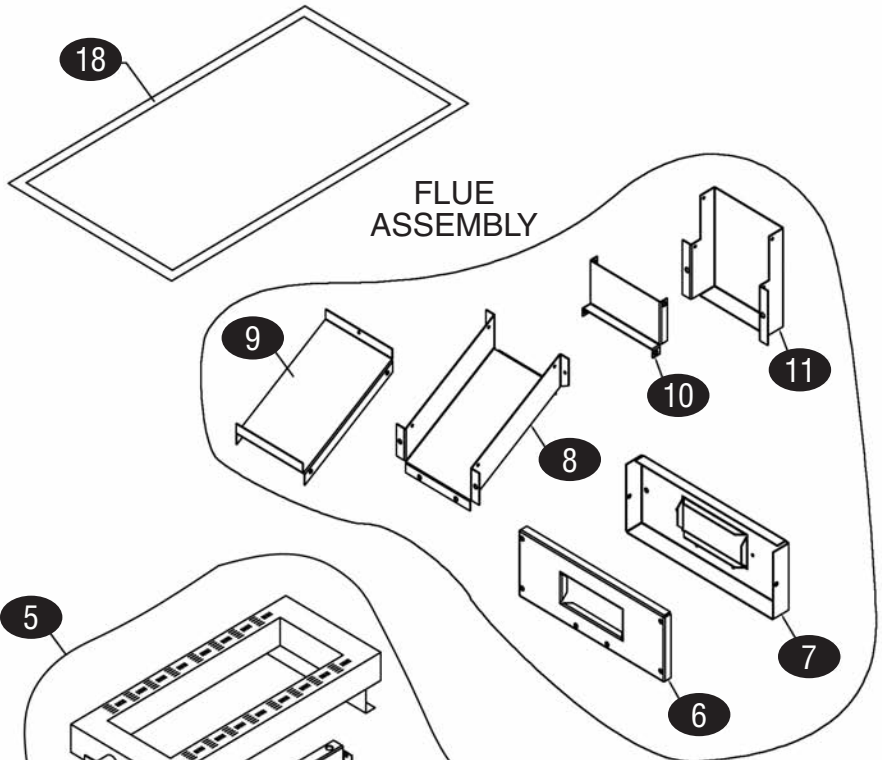


FLUE ASSEMBLY

COMPLETE BURNER ASSEMBLY

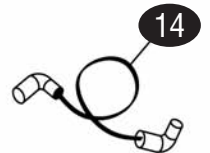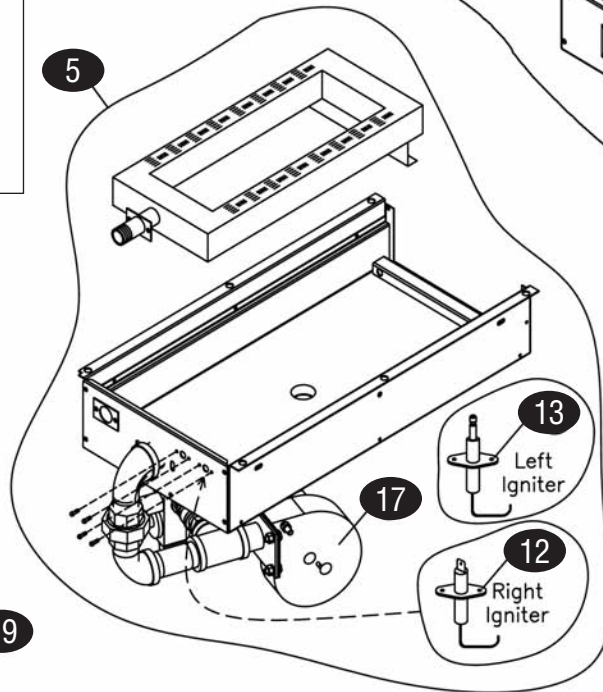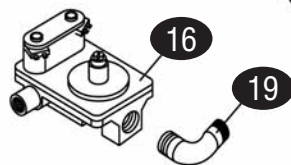

15



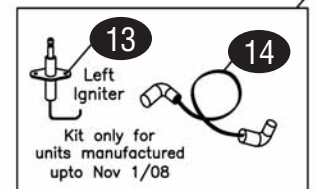


Kit only for units manufactured upto Nov 1/08

KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
1	GA4516116	Heat Sink	12	GA4524066	Igniter (Left Igniter Replacement Kit see #15)
2	GA4516988	Relay	13	GA4525537	Electrode Igniter
3	GA4517392	Pressure Switch	14	GA1864803	Ignition Cable
4	GA1811903	Thermal Interface, MAT	15	GA4525538	Service Kit, (incl. #12-14 above)
5	GA4517403	Burner Assembly, Lp	16	GA1864701	Gas Valve, Natural
	GA4517462	Burner Assembly, Natural	17	GA4525845	Blower Motor, 120v
6	GA4517396	Flue Box, Inner	18	GAWFT125750	Woven FG Tape, w/PSA, 1/8x3/4"
7	GA4517397	Flue Box, Outer	19	GA1027499	Connector Assembly, Male, 7/16CC, 3/8NPT
8	GA4517398	Flue Bottom			
9	GA4517399	Flue Top			
10	GA4517401	Flue Riser, Inner			
11	GA4517400	Flue Riser, Outer			



### GRIDDLES

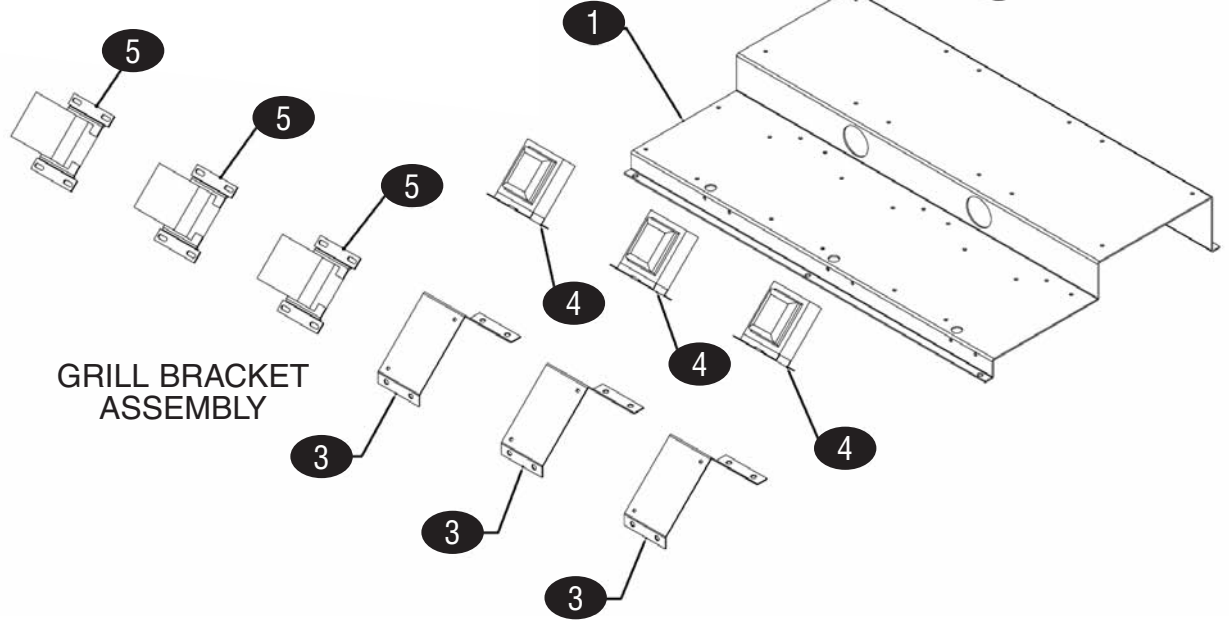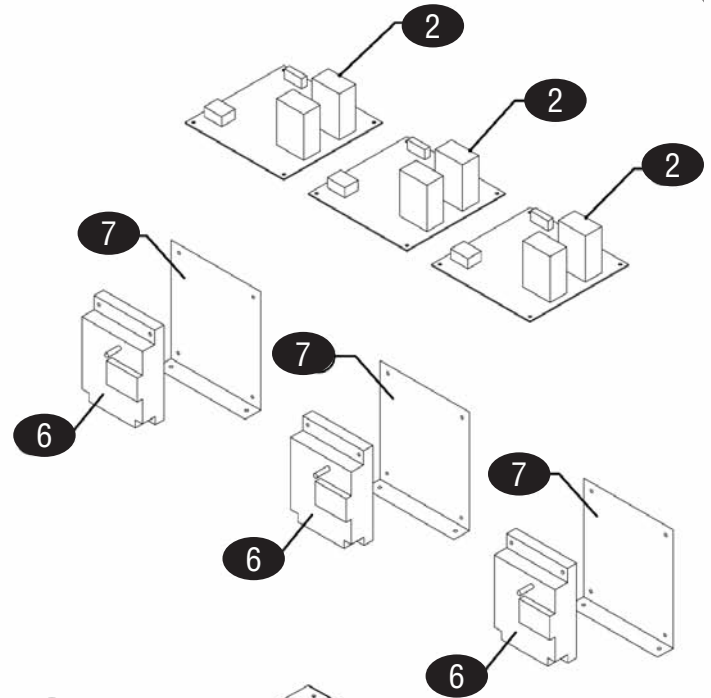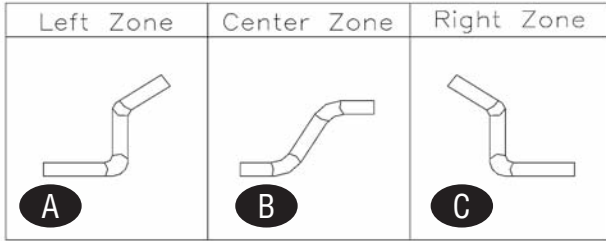

KEY	PART #	DESCRIPTION	KEY	PART #	DESCRIPTION
A	GA4517378	Tubing, Left (Left Zone location)			
B	GA4517377	Tubing, Center (Center Zone location)			
C	GA4517376	Tubing, Right (Right Zone location)			
1	GA4516078	Component, Mounting Bracket			
2	GA4516989	Motor Speed Control			
3	GA4516079	Contacteur Bracket			
4	GA1269800	Transformer, 24v			
5	GA1637001	Contacteur, 3 Pole, 120v			
6	GA1864901	Ignition Module			
7	GA1865901	Bracket, Ignition Module			