



# Instruction Manual

## Condiment Warmers

Model No. 2191, 2191EX, 2195, 2195EX, 2196, 2200,  
2200EX, 2201, 2201EX, 2205, 2205EX




**GOLD MEDAL® PRODUCTS CO.**

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

# OPERATING INSTRUCTIONS

## Controls and Their Functions

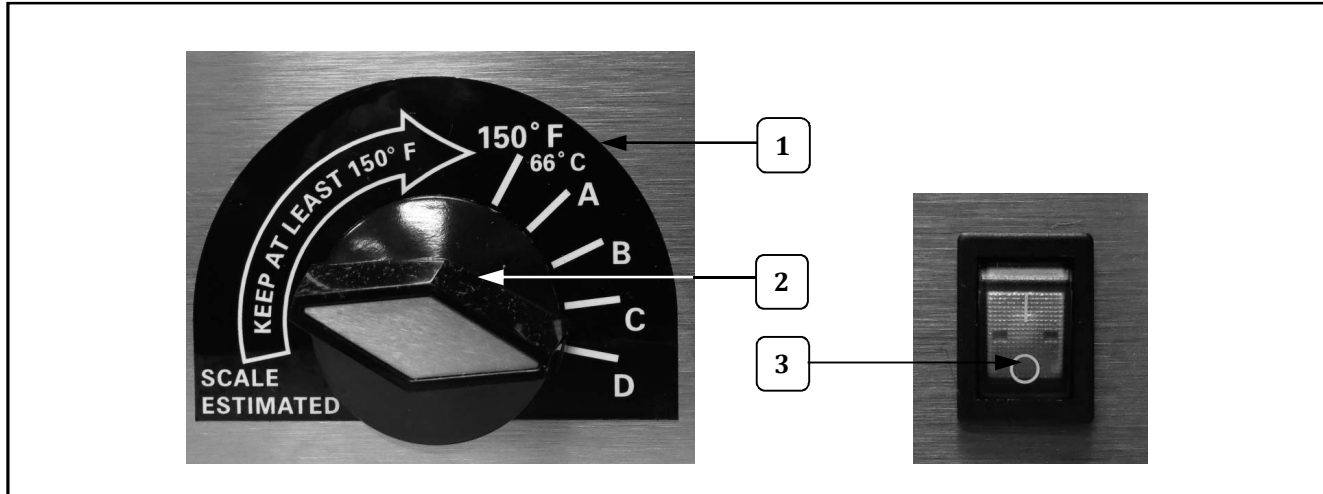

Item	Part No.	Part Description	
1	38303	TEMPERATURE SCALE	Display heat settings for the heat control knob
2	87049	KNOB HEAT CONTROL	Controls the heat of the warmer
3	42532	ROCKER SWITCH	Turns power on/off to the warmer

## Operating Instructions

1. Place platform (can holder/bowl spring, if provided) in water tank.
2. Fill water well with 5 cups of water (starting with hot water helps shorten warming time). **DO NOT operate the warmer without water in the well.**

3. Carefully place No. 10 Tin or insert bowl of product into the unit (platform/bowl spring should be centered under the container).

**Note:** On pump models, contents must be preheated before inserting. The pump will not function if contents are too thick.

4. Place lock ring or pump over container, press down and turn until it locks into unit.
5. Turn the power switch ON.
6. Set the Heat Control on HI (“D” setting). Once product is heated, reduce the heat (stir as needed depending on product).


**Caution:** Prolonged heating on HI could result in overcooking.

For cheese product, keep the Heat Control setting at least 150°F to hold a safe cheese product temperature. Let the cheese heat for 1 to 1 1/2 hours (stirring every 15 minutes) before serving. The pump works best when the cheese is hot.

7. Turn the Power Switch OFF when the unit is not in use.

# OPERATING INSTRUCTIONS

## Controls and Their Functions

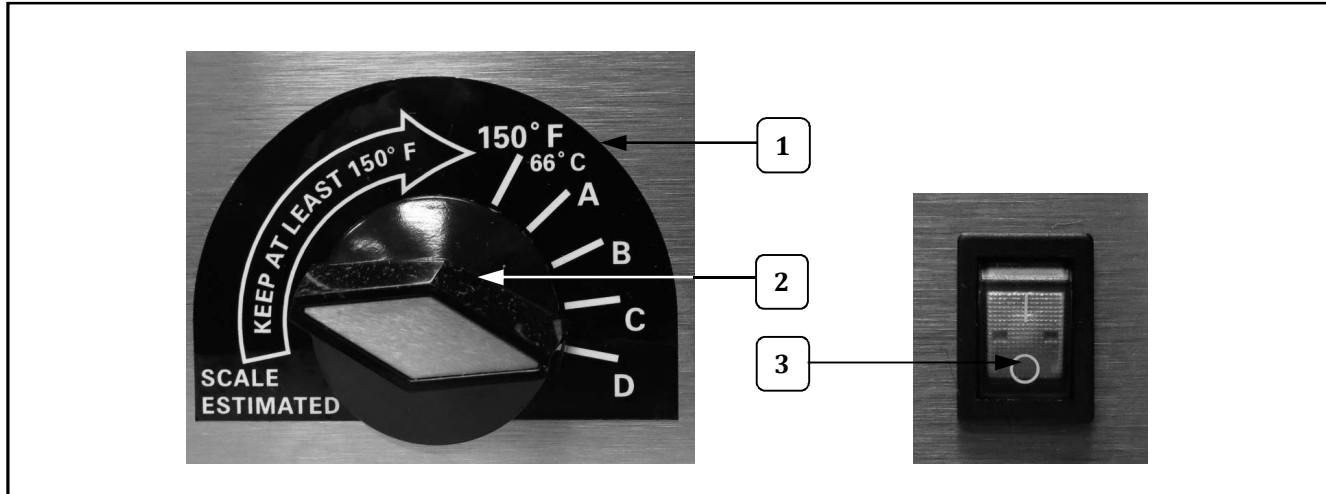

Item	Part No.	Part Description	
1	38303	TEMPERATURE SCALE	Display heat settings for the heat control knob
2	87049	KNOB HEAT CONTROL	Controls the heat of the warmer
3	42532	ROCKER SWITCH	Turns power on/off to the warmer

## Operating Instructions

- Place platform (can holder/bowl spring, if provided) in water tank.
- Fill water well with 5 cups of water (starting with hot water helps shorten warming time). **DO NOT operate the warmer without water in the well.**

- Carefully place No. 10 Tin or insert bowl of product into the unit (platform/bowl spring should be centered under the container).

**Note:** On pump models, contents must be preheated before inserting. The pump will not function if contents are too thick.

- Place lock ring or pump over container, press down and turn until it locks into unit.
- Turn the power switch ON.
- Set the Heat Control on HI (“D” setting). Once product is heated, reduce the heat (stir as needed depending on product).


**Caution:** Prolonged heating on HI could result in overcooking.

For cheese product, keep the Heat Control setting at least 150°F to hold a safe cheese product temperature. Let the cheese heat for 1 to 1 1/2 hours (stirring every 15 minutes) before serving. The pump works best when the cheese is hot.

- Turn the Power Switch OFF when the unit is not in use.

# OPERATING INSTRUCTIONS

## Controls and Their Functions

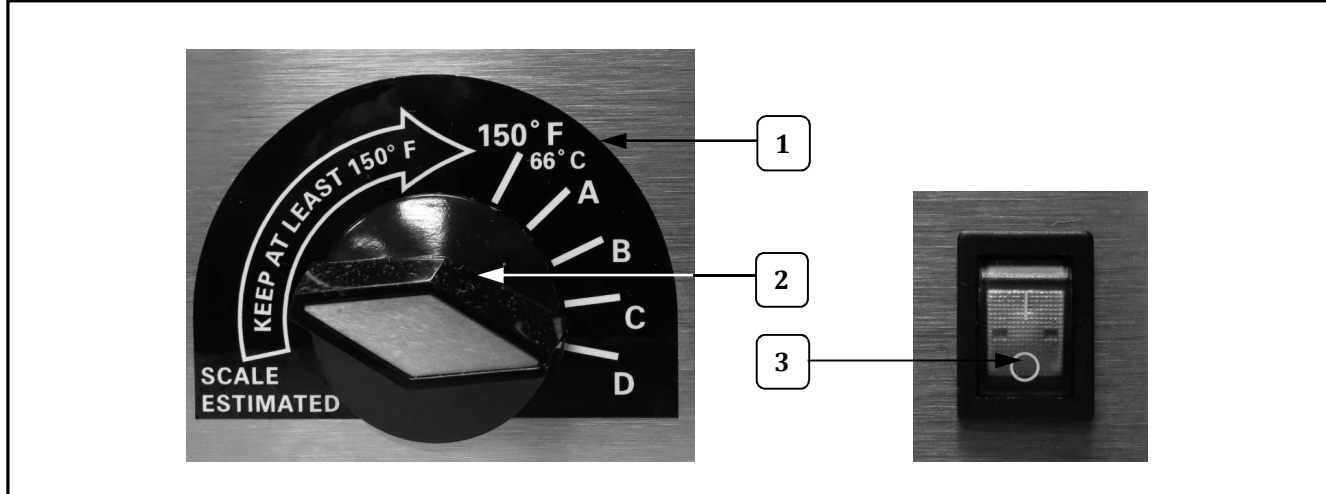

Item	Part No.	Part Description	
1	38303	TEMPERATURE SCALE	Display heat settings for the heat control knob
2	87049	KNOB HEAT CONTROL	Controls the heat of the warmer
3	42532	ROCKER SWITCH	Turns power on/off to the warmer

## Operating Instructions

- Place platform (can holder/bowl spring, if provided) in water tank.
- Fill water well with 5 cups of water (starting with hot water helps shorten warming time). **DO NOT operate the warmer without water in the well.**

- Carefully place No. 10 Tin or insert bowl of product into the unit (platform/bowl spring should be centered under the container).

**Note:** On pump models, contents must be preheated before inserting. The pump will not function if contents are too thick.

- Place lock ring or pump over container, press down and turn until it locks into unit.
- Turn the power switch ON.
- Set the Heat Control on HI (“D” setting). Once product is heated, reduce the heat (stir as needed depending on product).

**Caution:** Prolonged heating on HI could result in overcooking.

For cheese product, keep the Heat Control setting at least 150°F to hold a safe cheese product temperature. Let the cheese heat for 1 to 1 1/2 hours (stirring every 15 minutes) before serving. The pump works best when the cheese is hot.


- Turn the Power Switch OFF when the unit is not in use.



## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

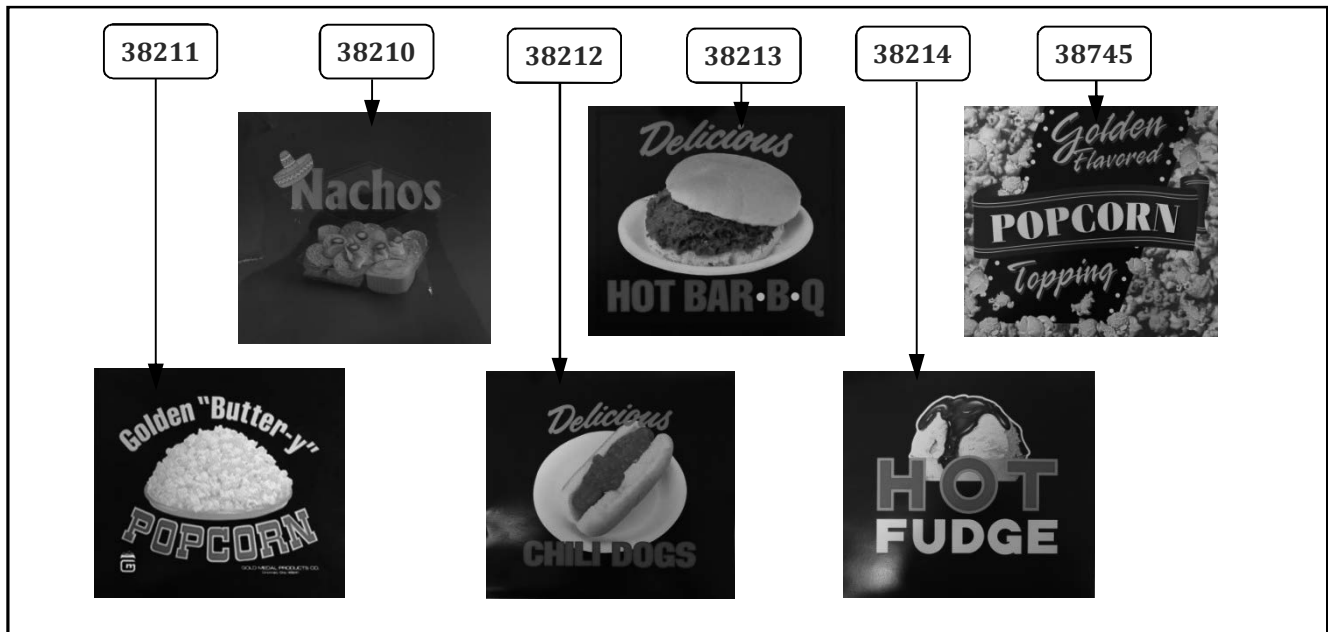




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

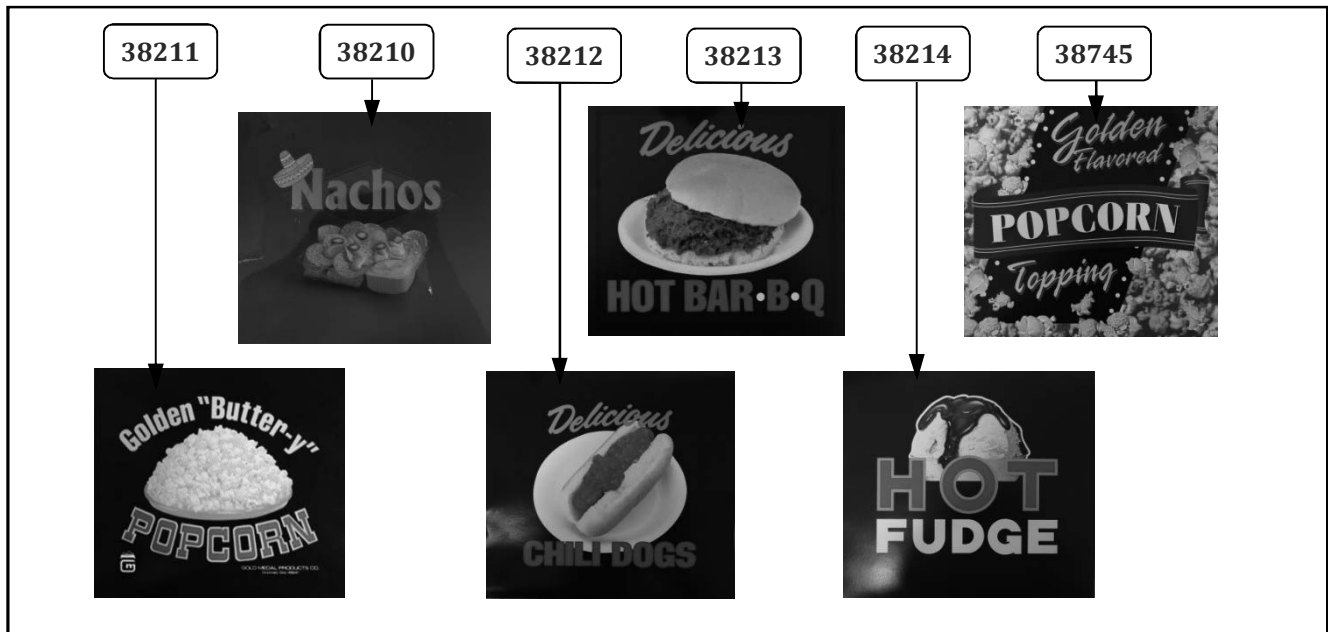




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

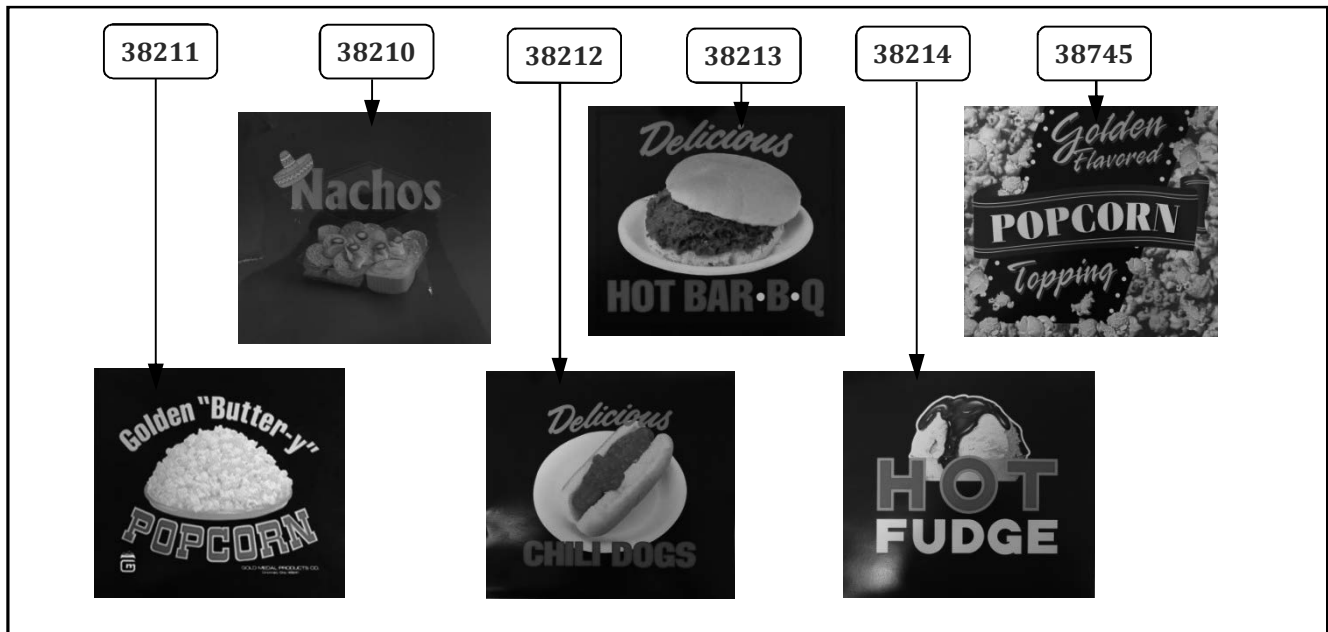




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

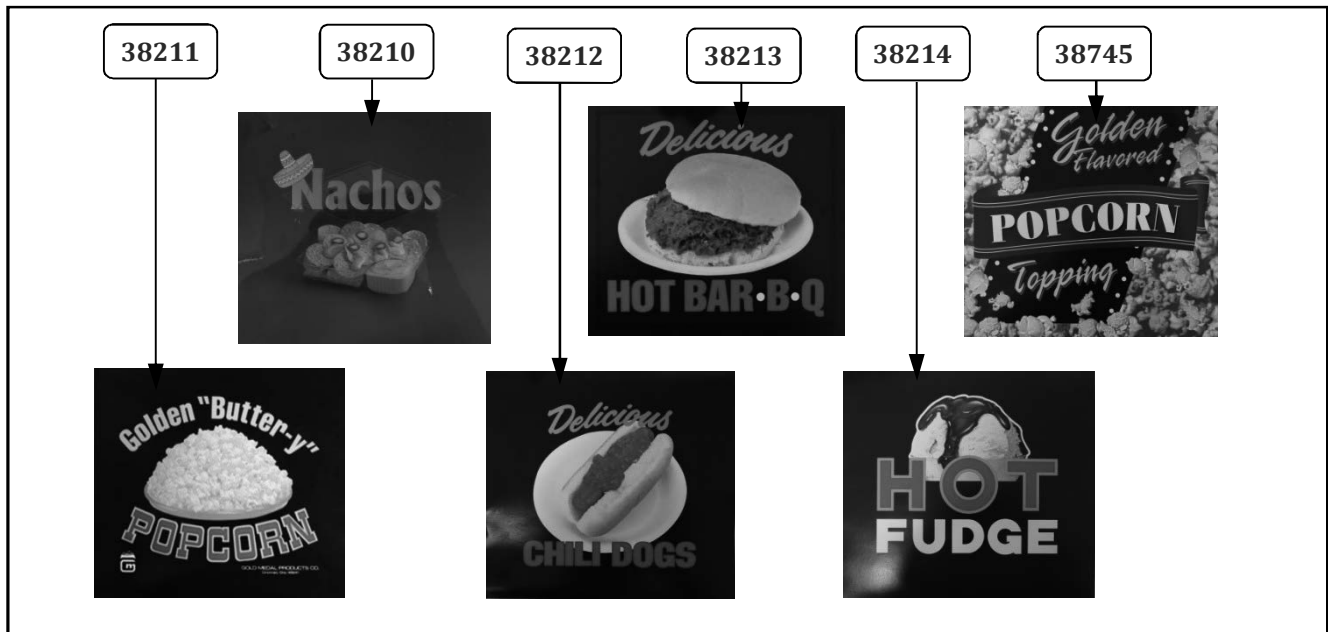






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

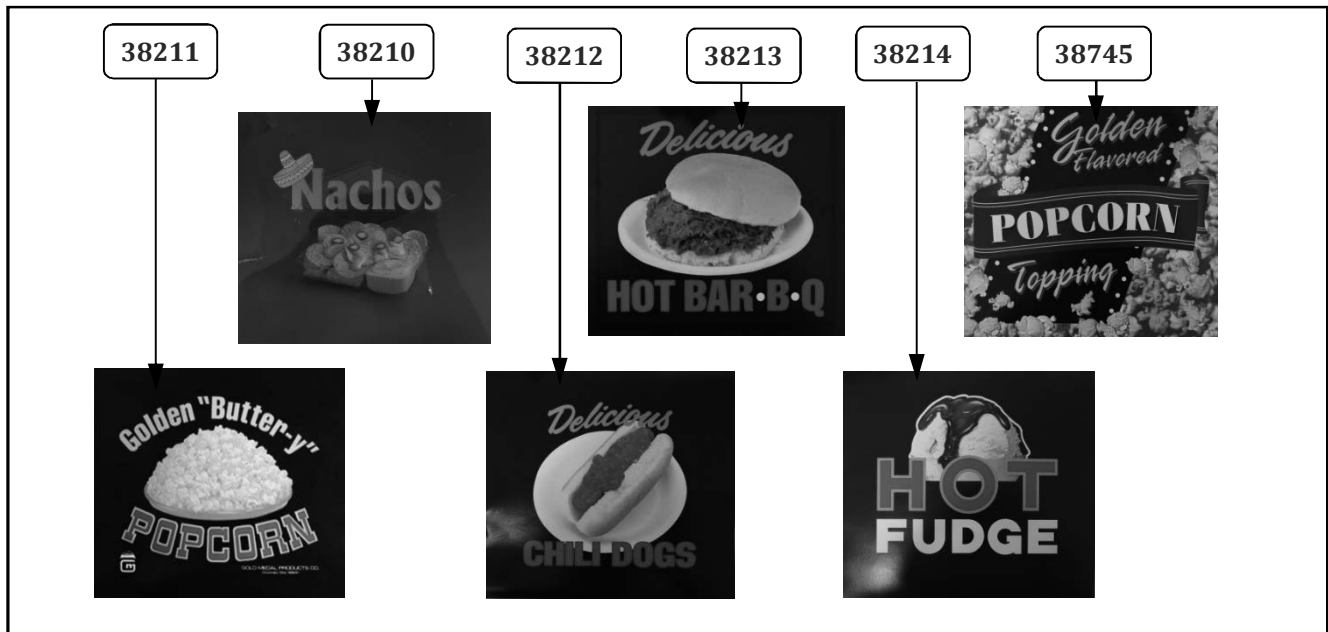




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

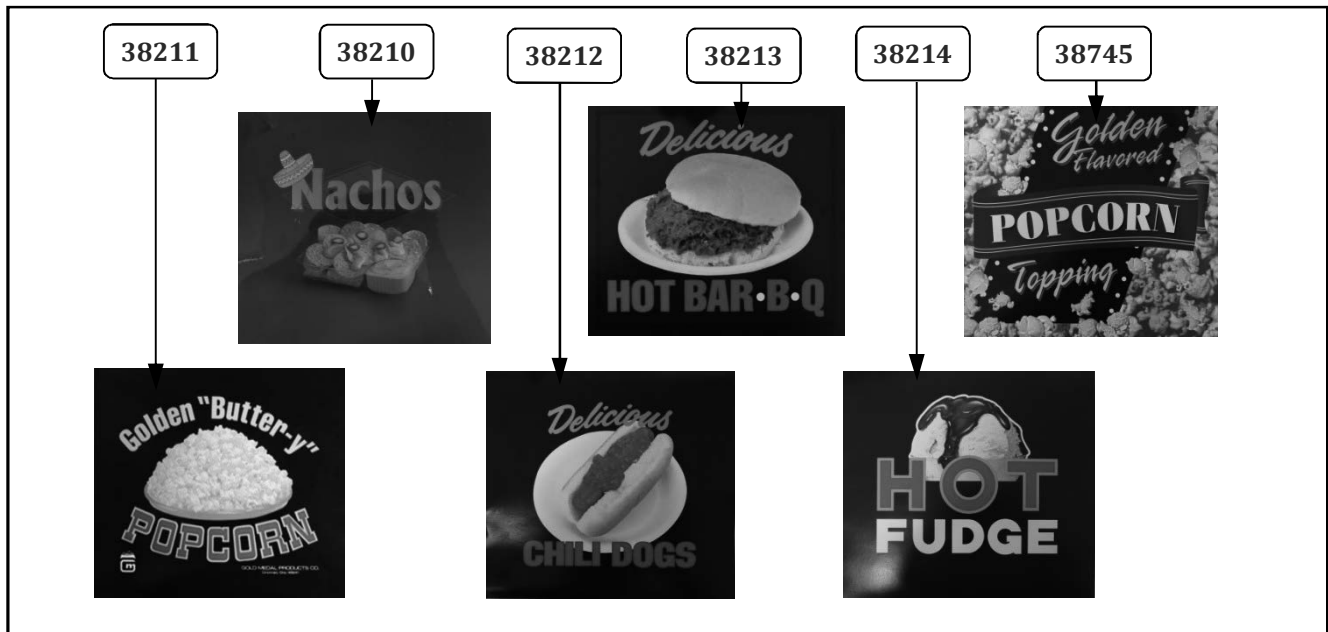




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

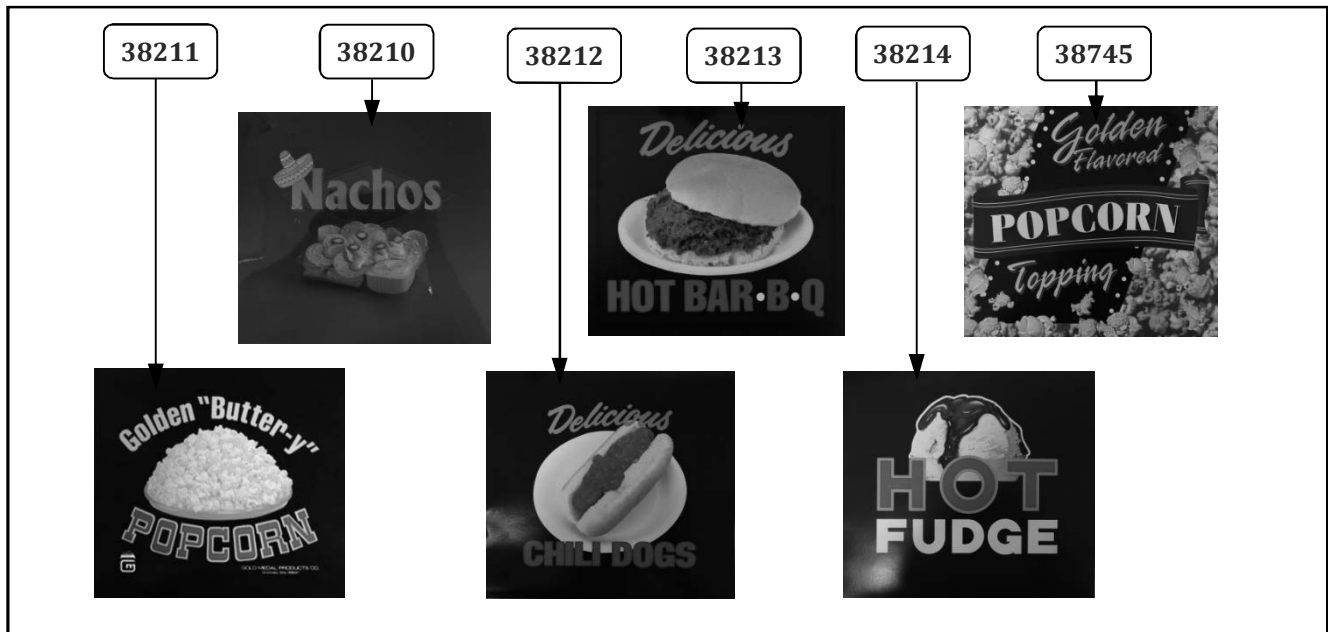




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

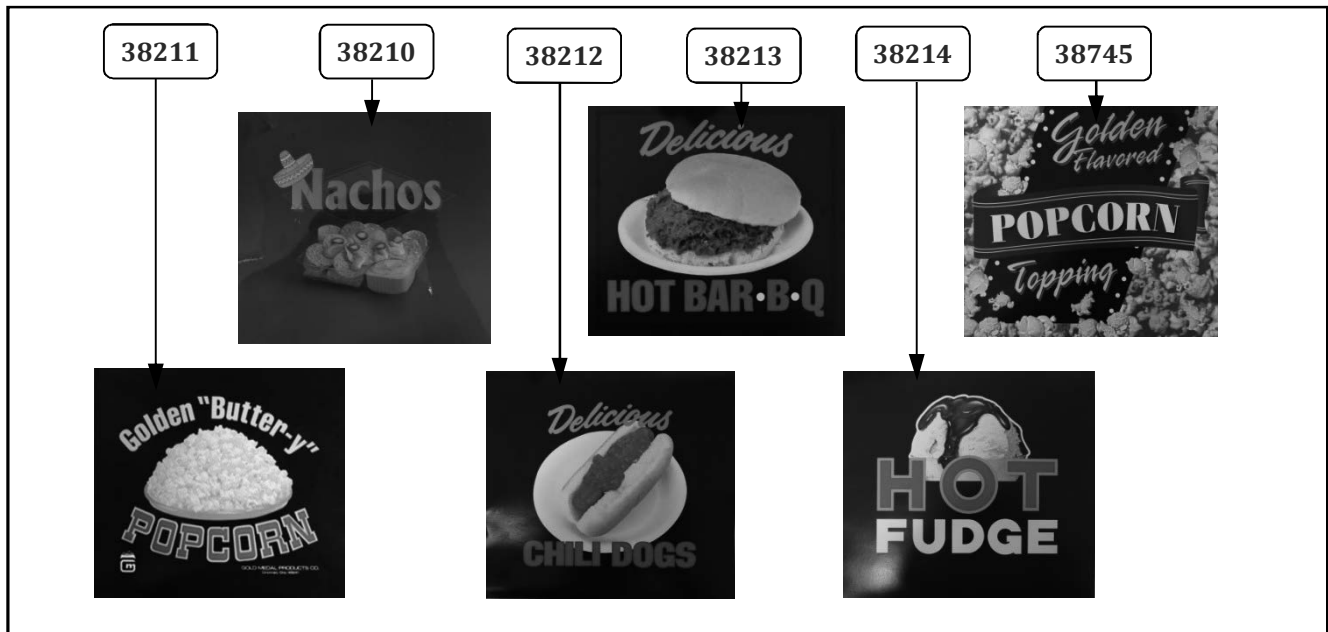




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

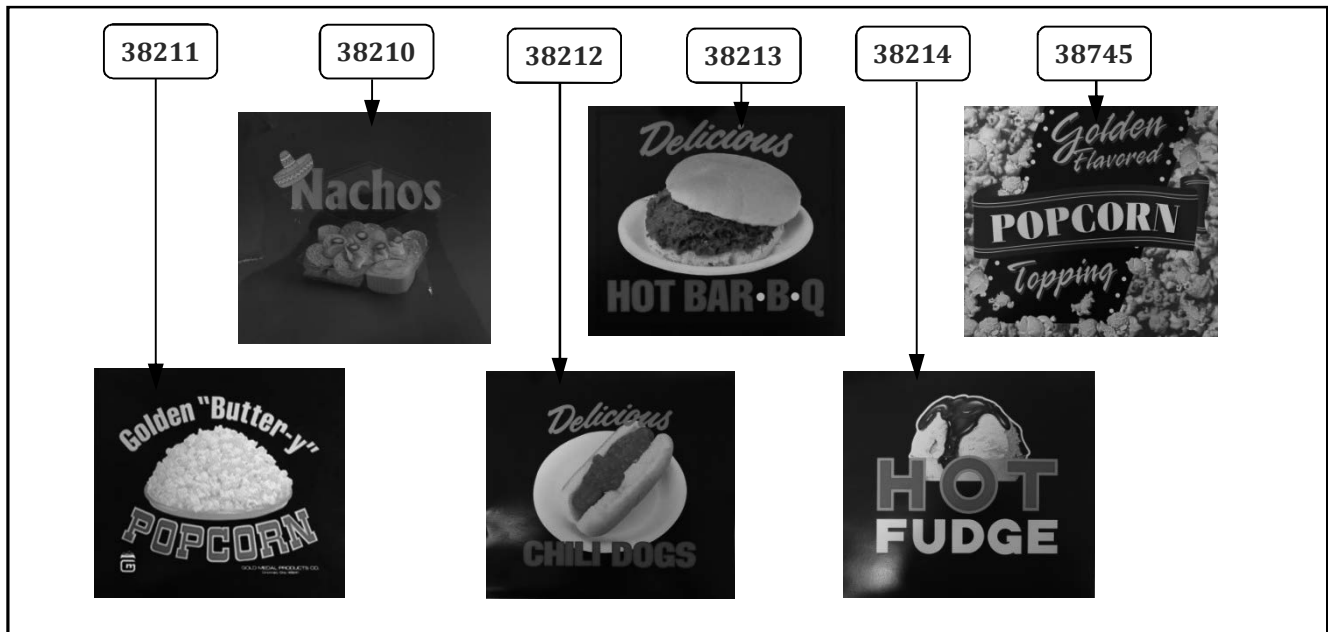




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

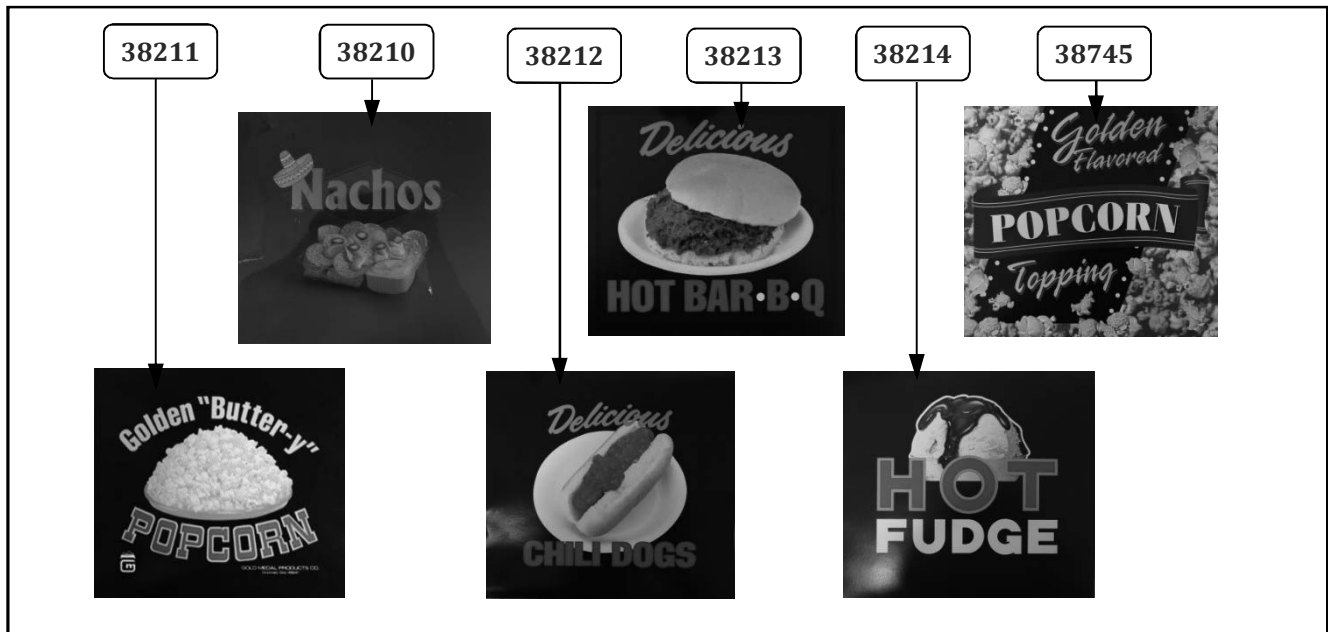




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

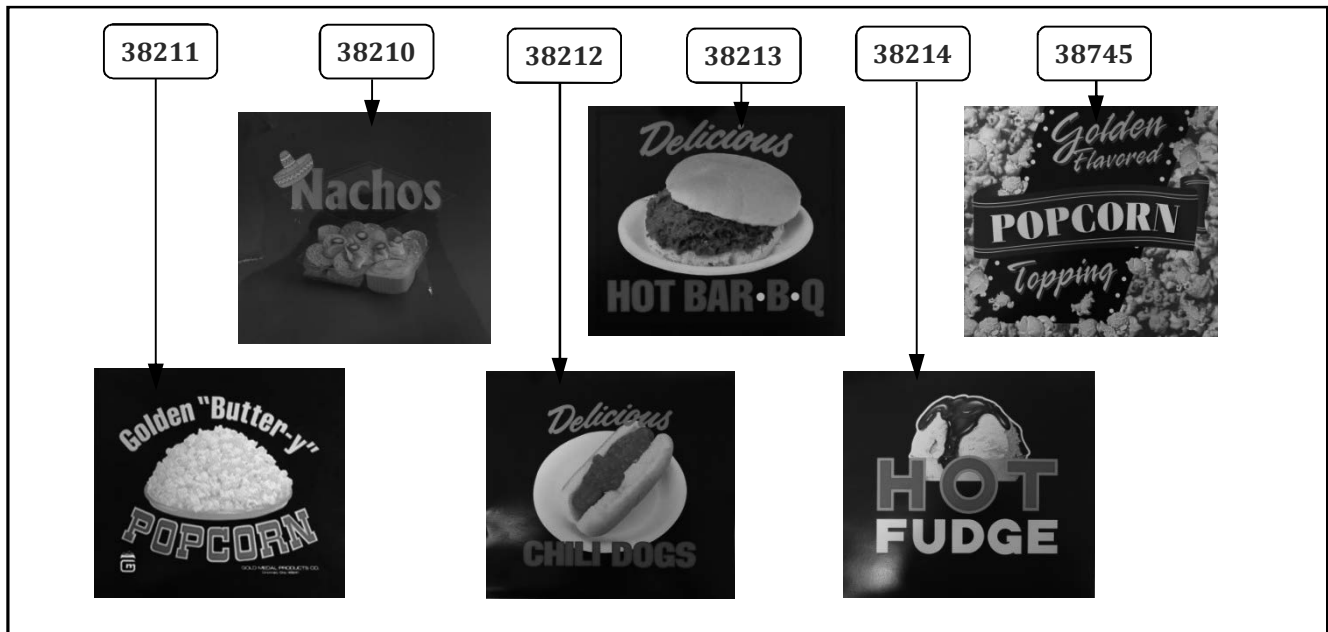




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

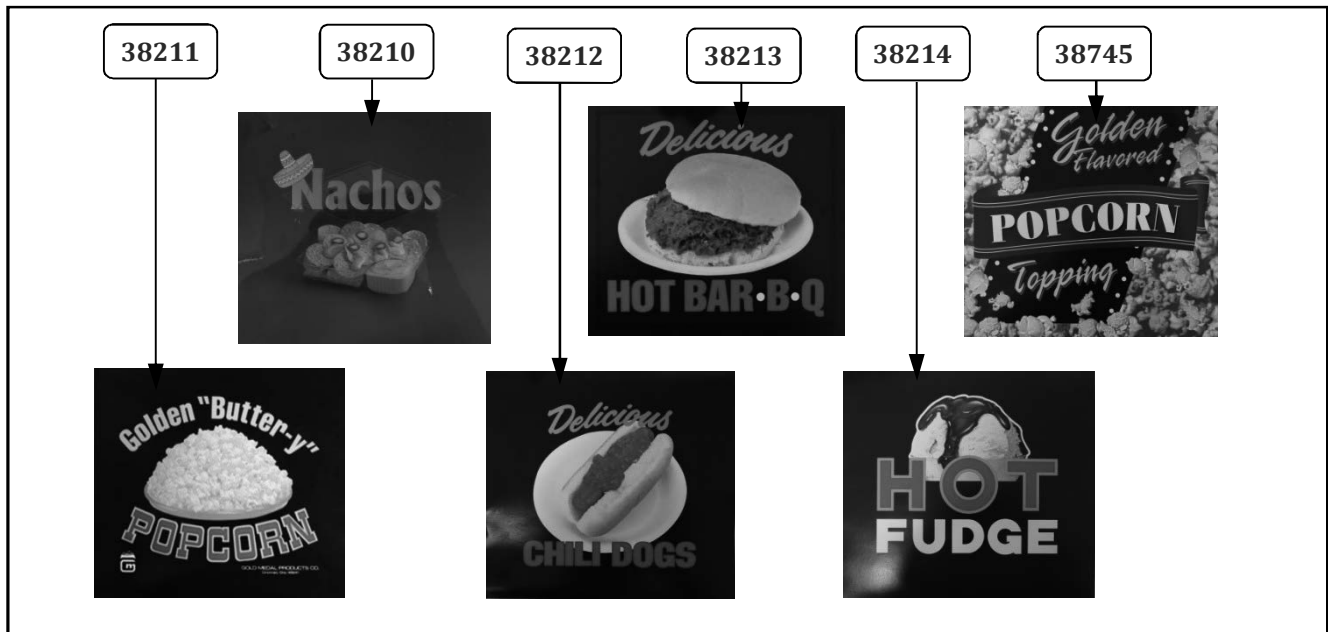






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

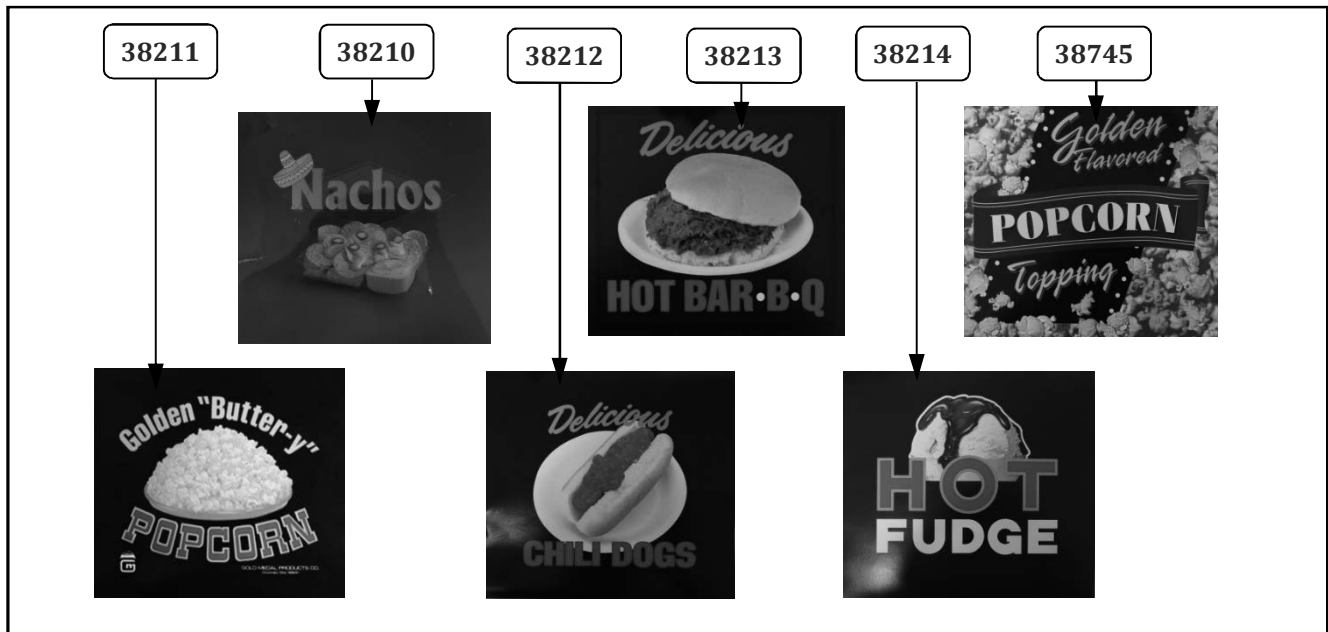




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

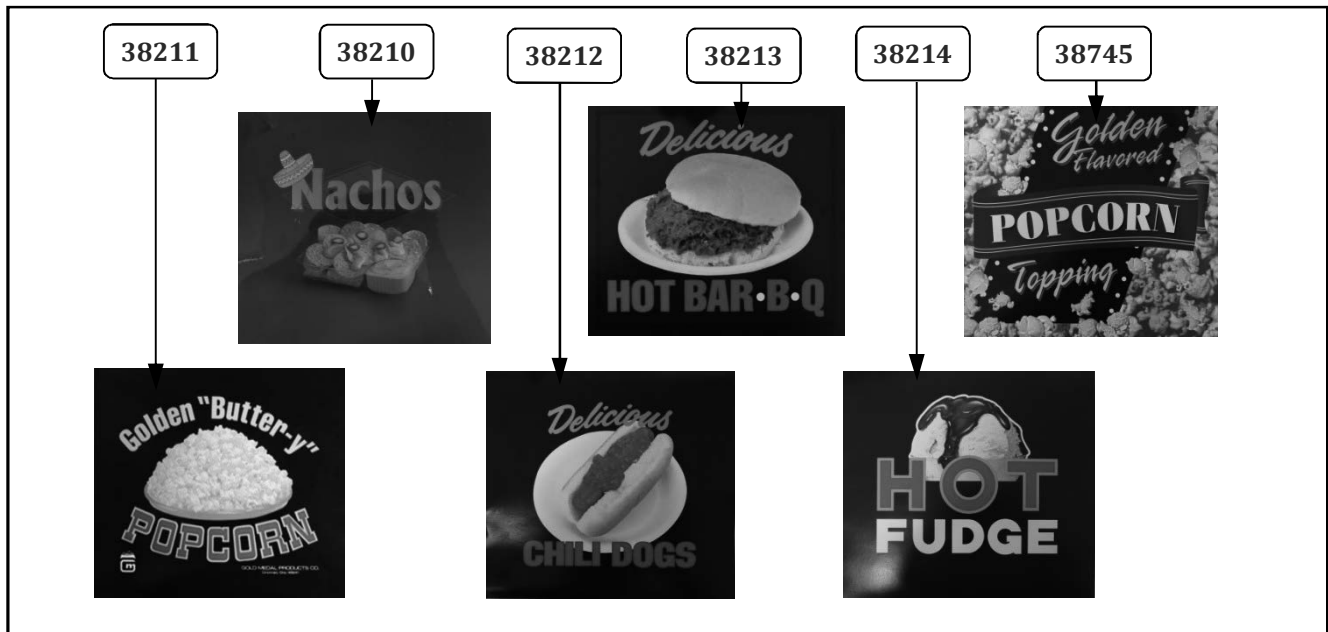




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

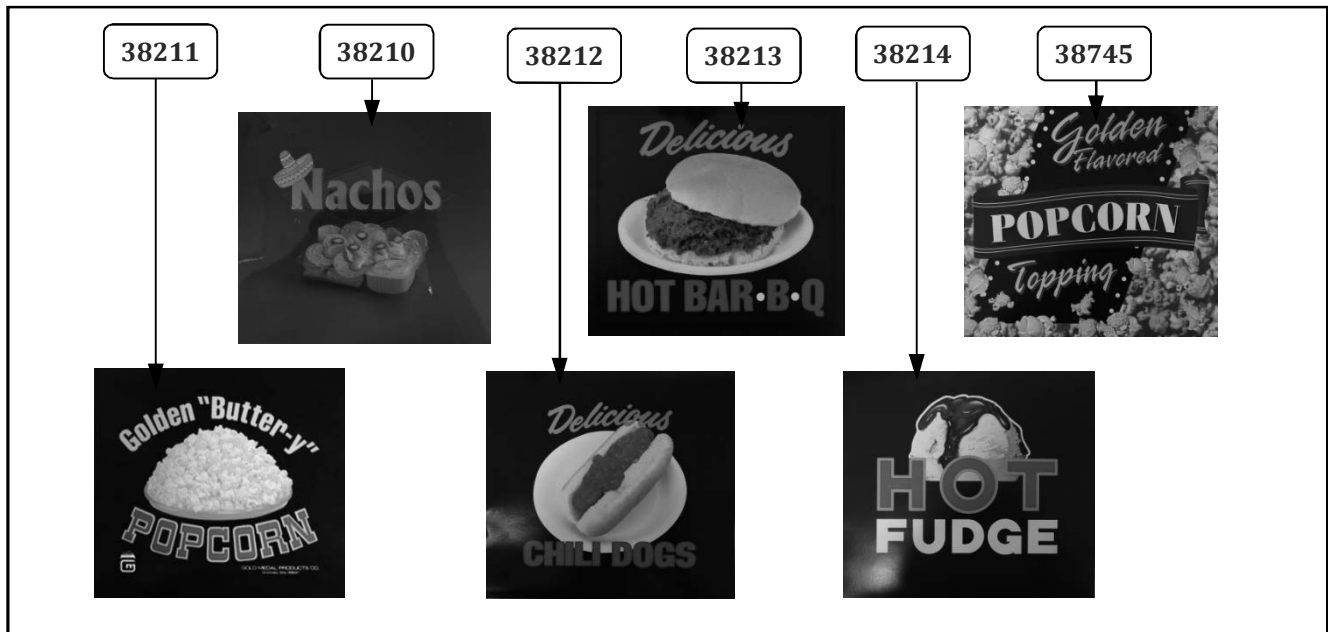




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

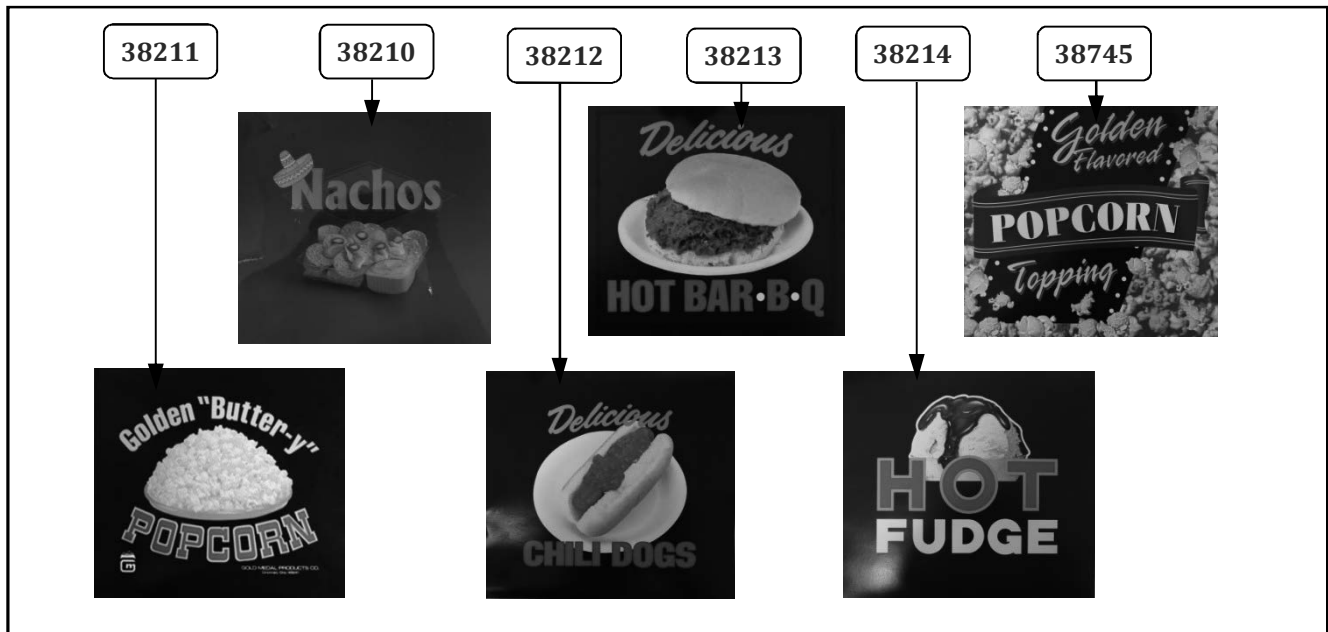




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

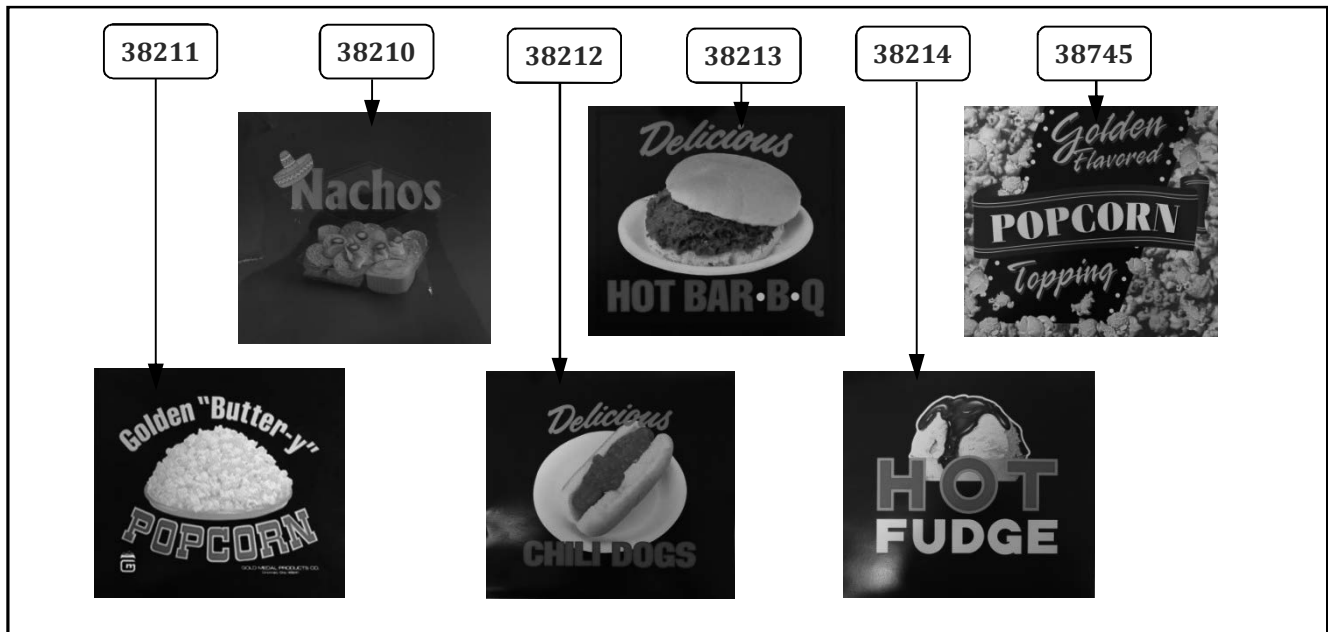




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

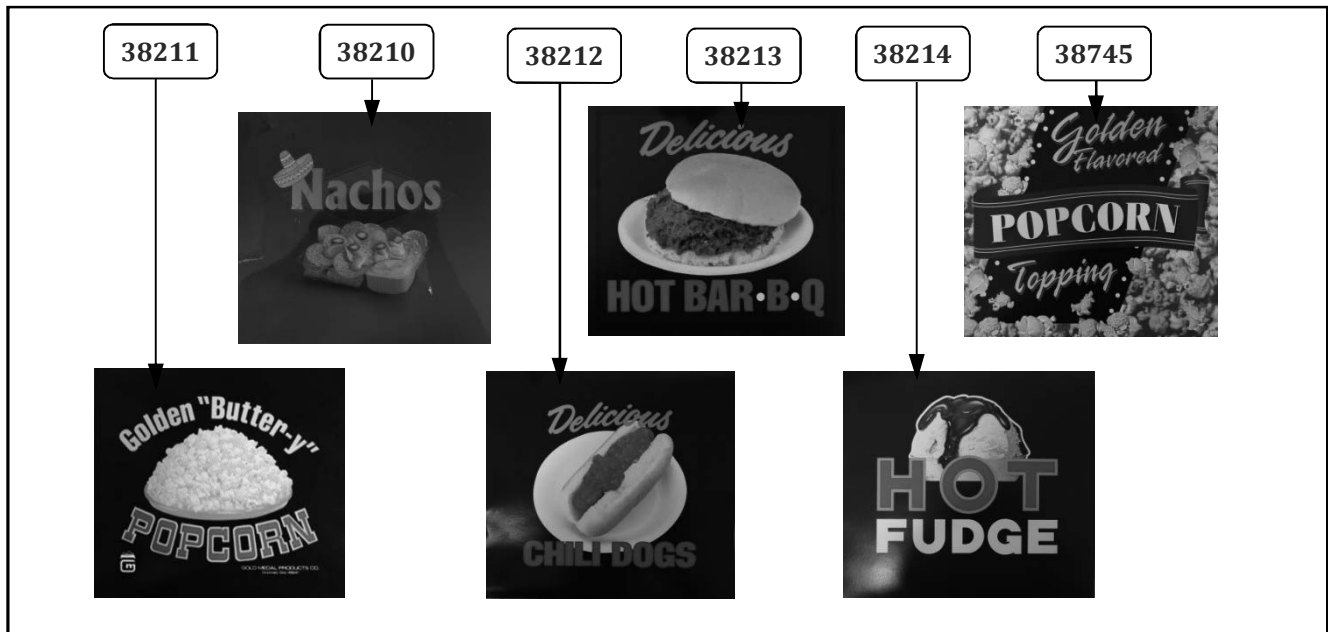




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

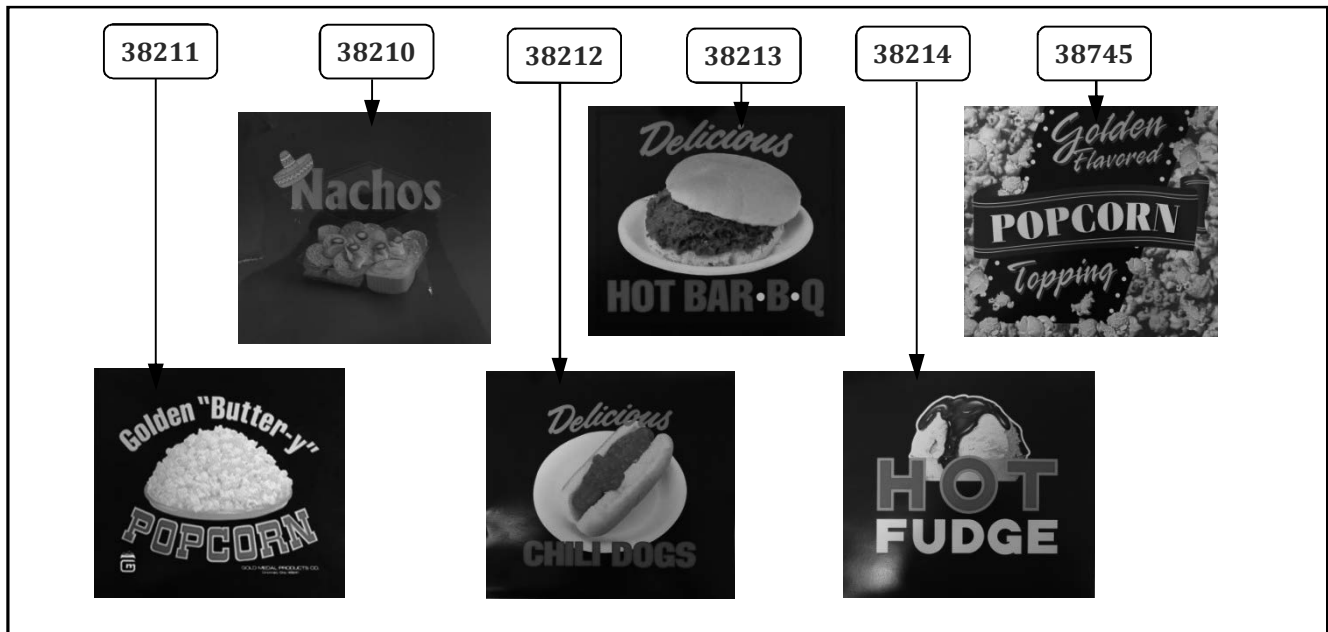




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

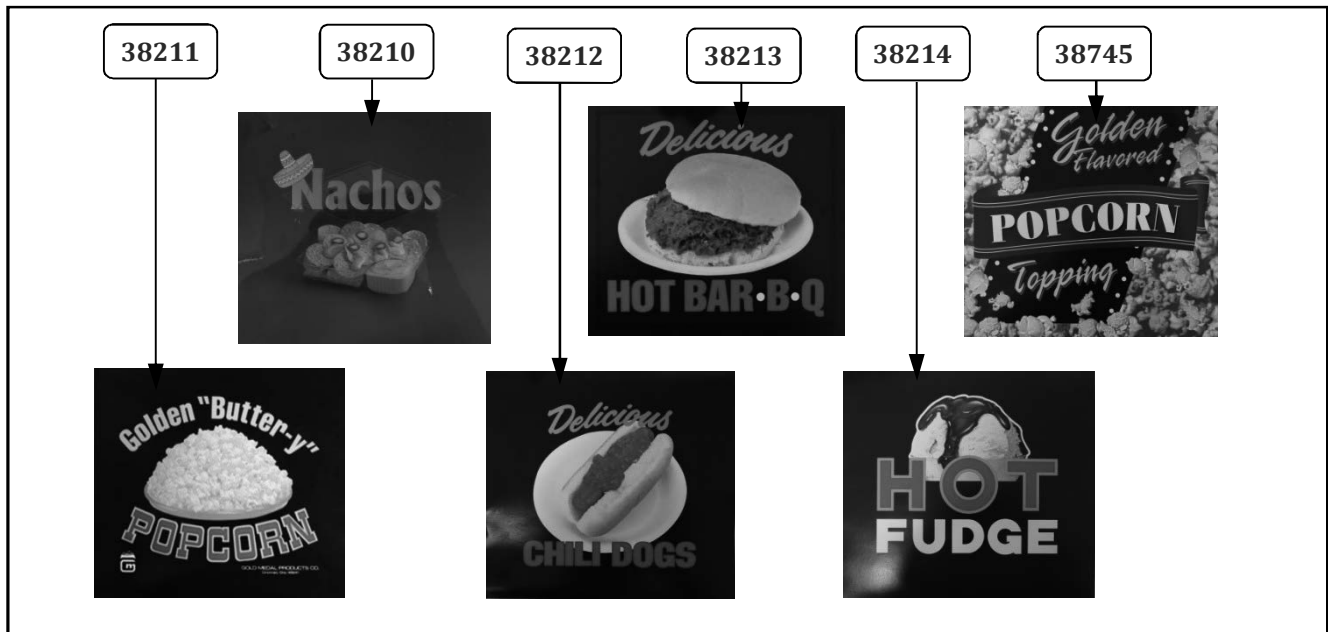






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

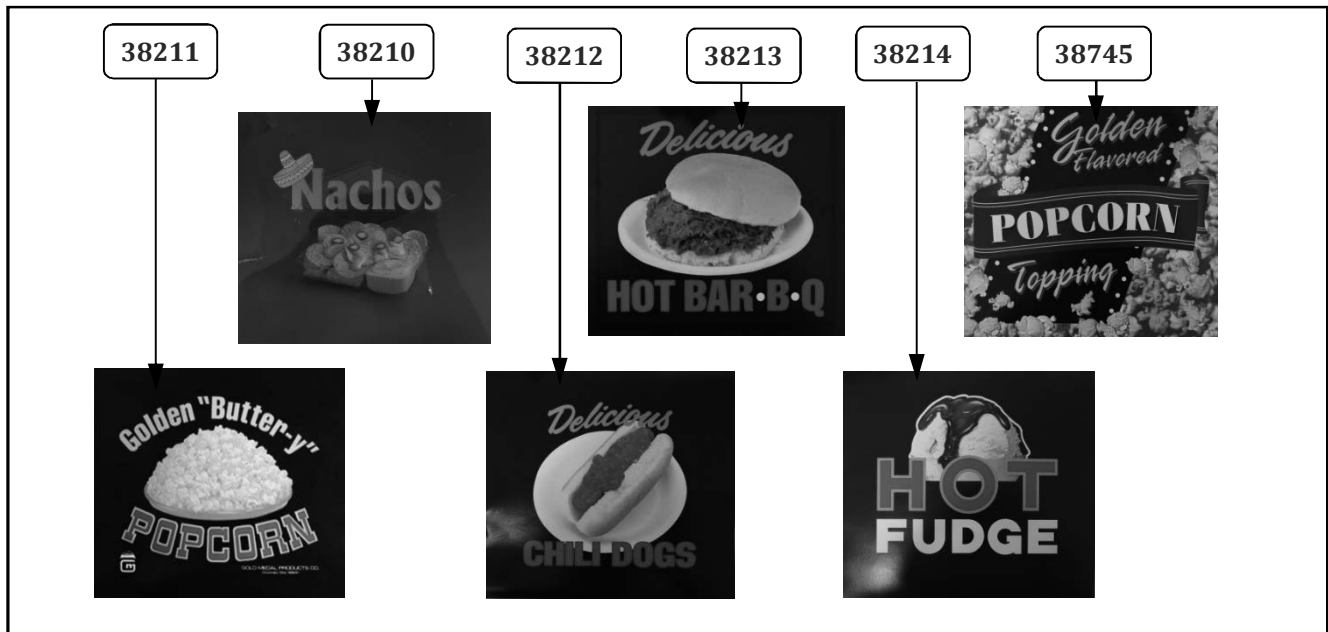




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

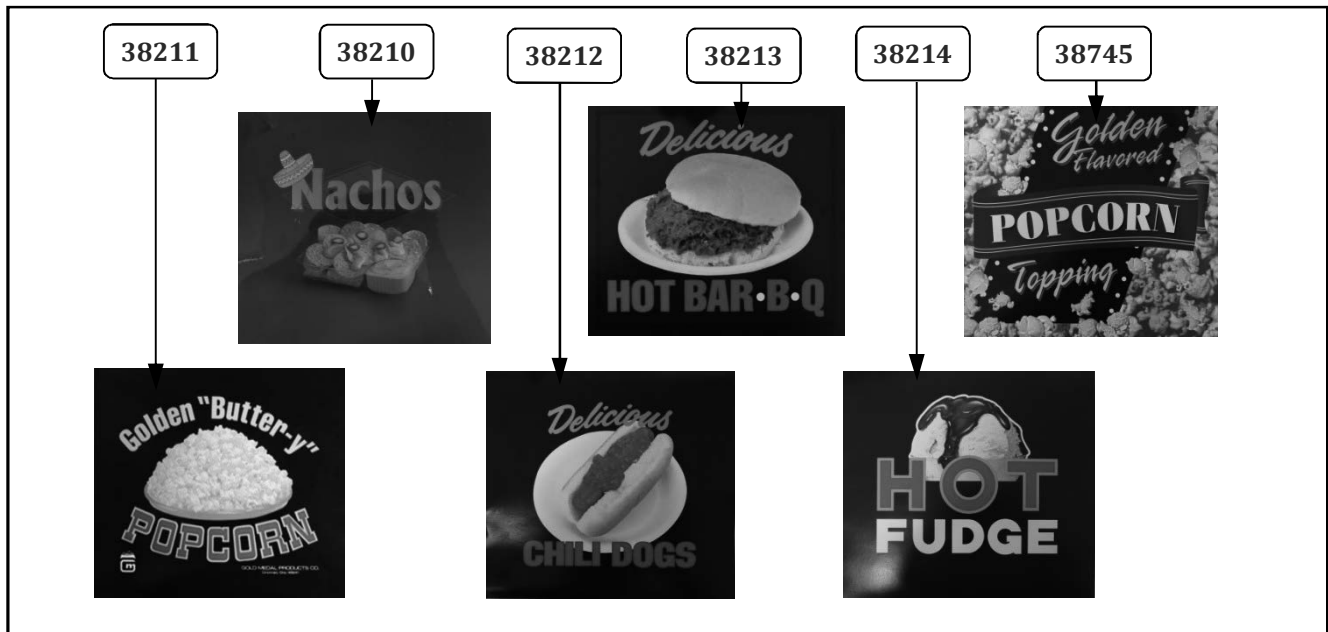




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

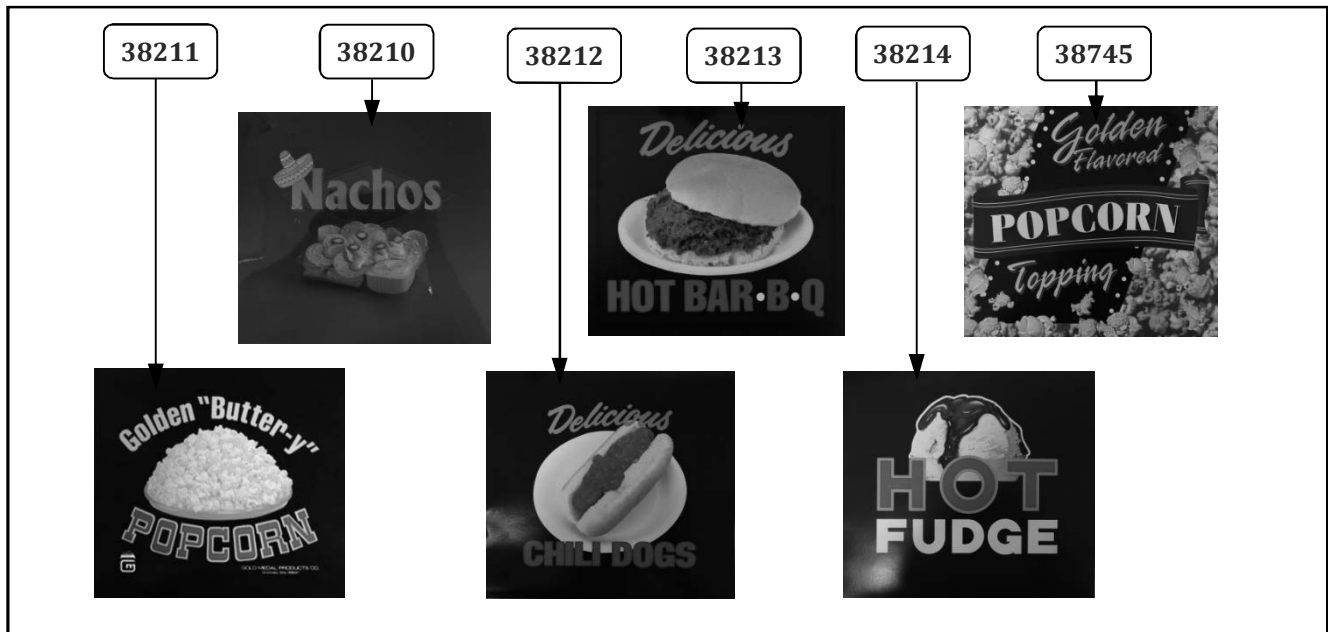




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

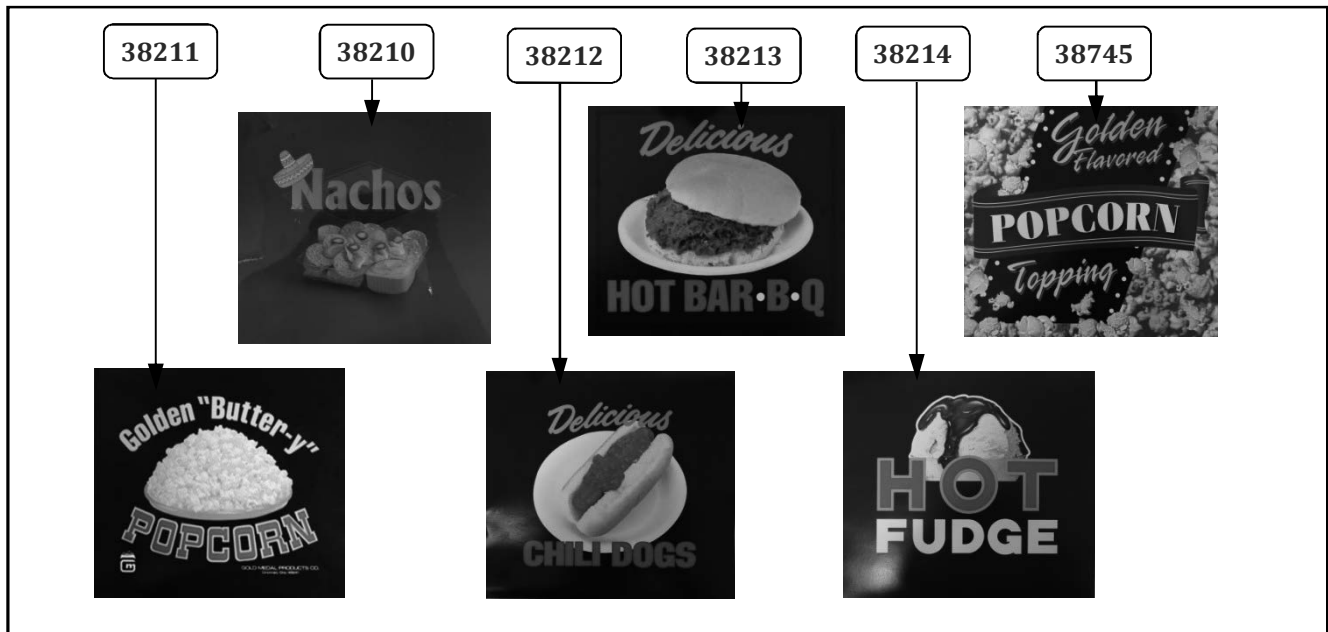




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

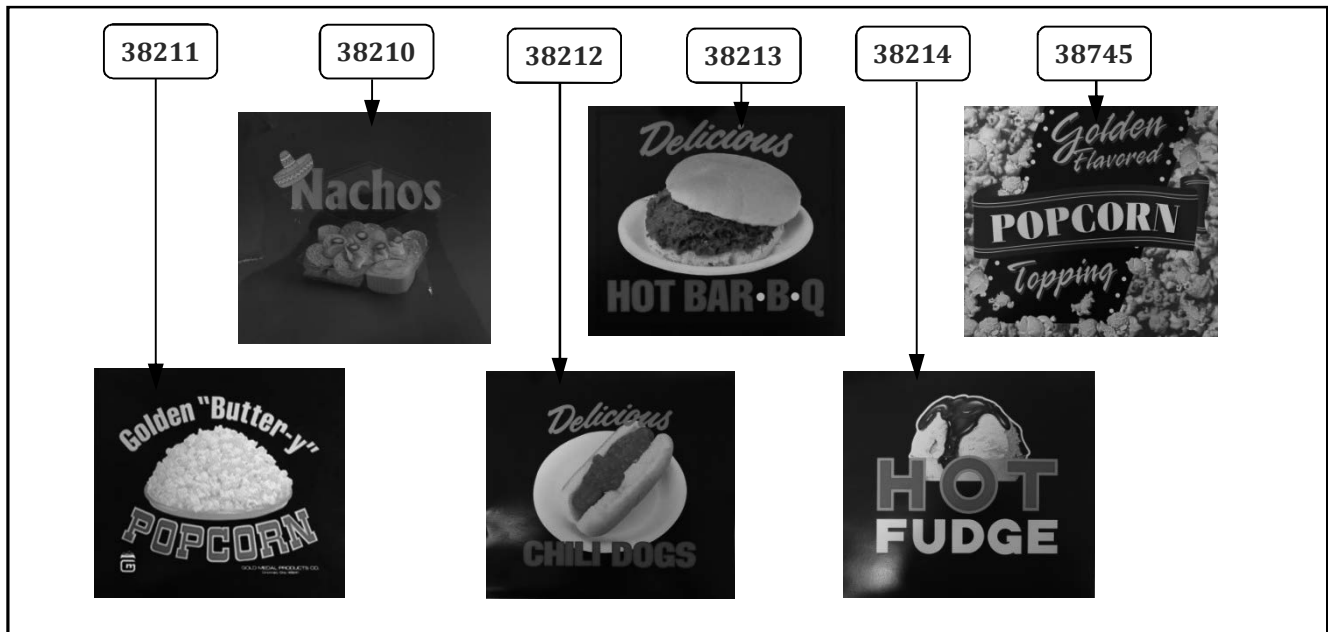




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

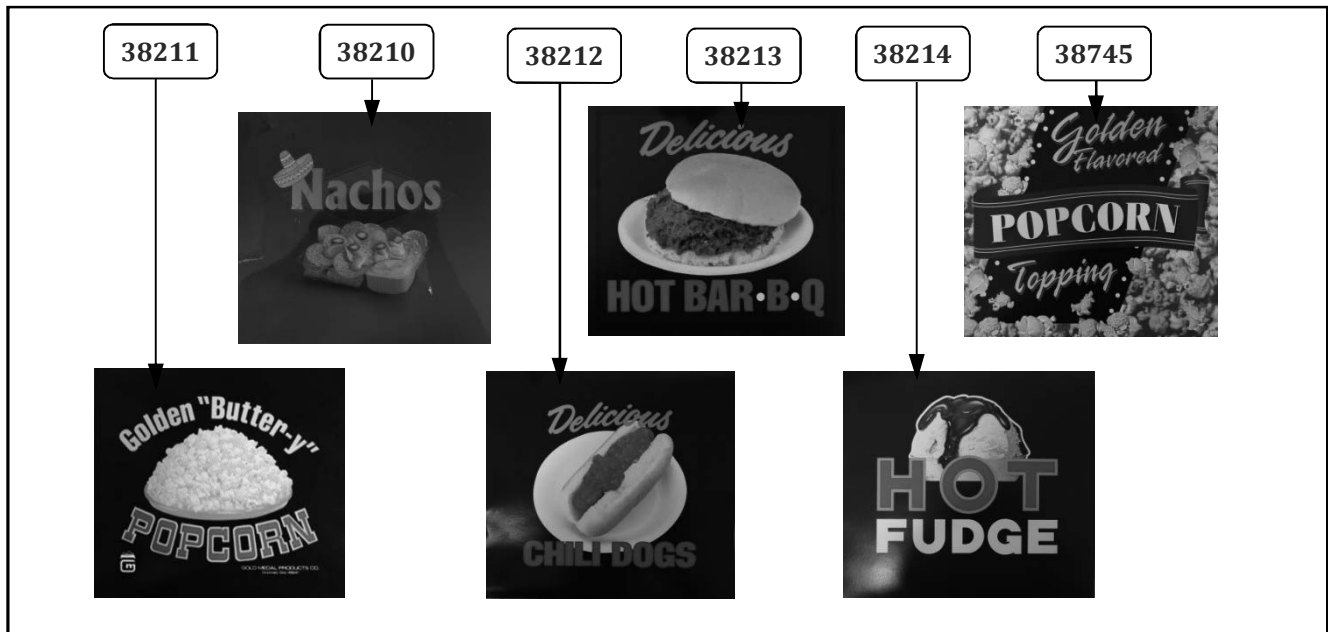




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

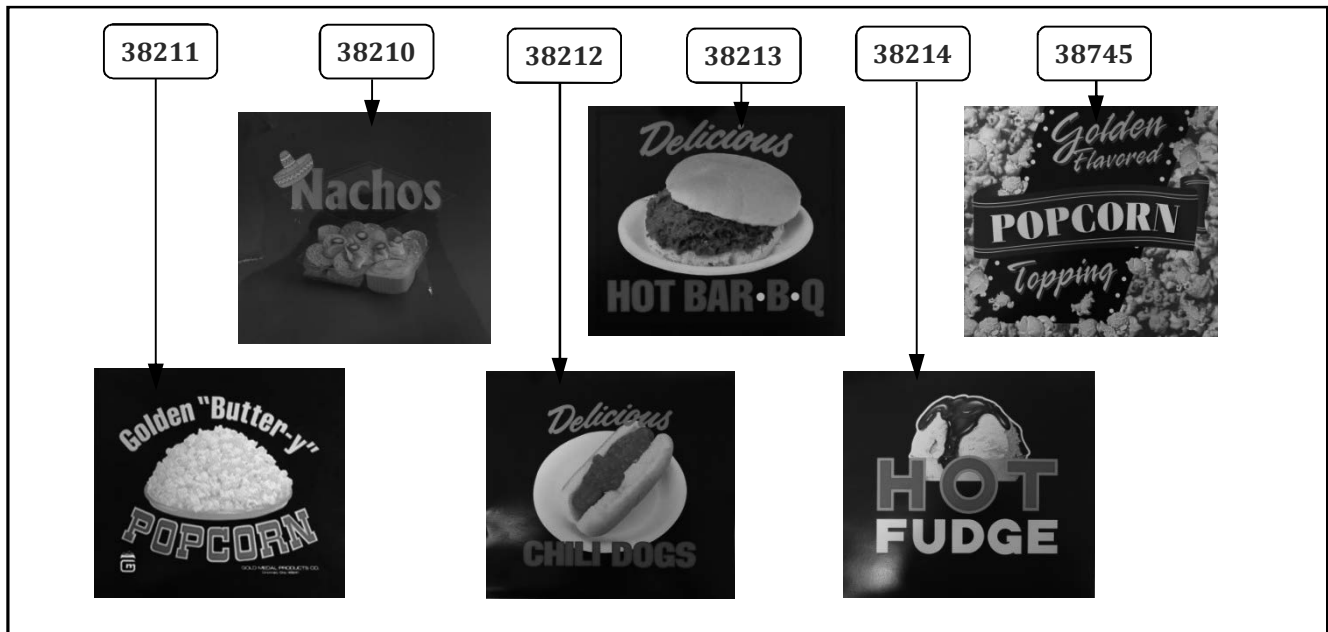




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

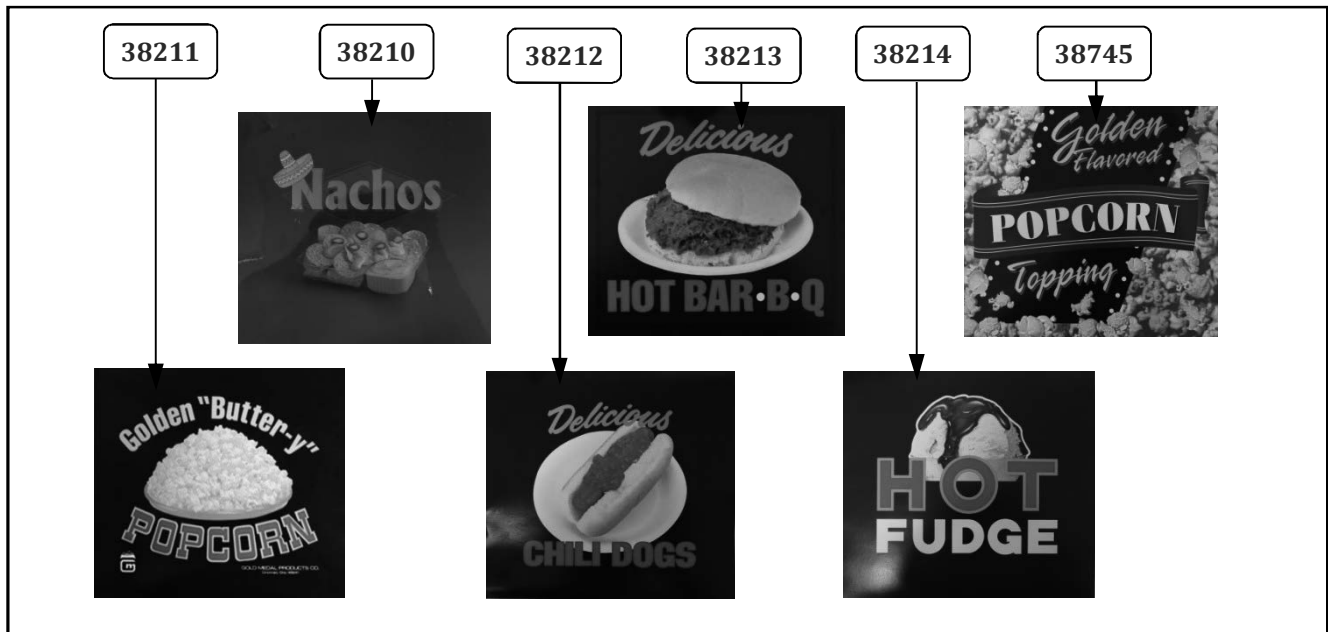






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

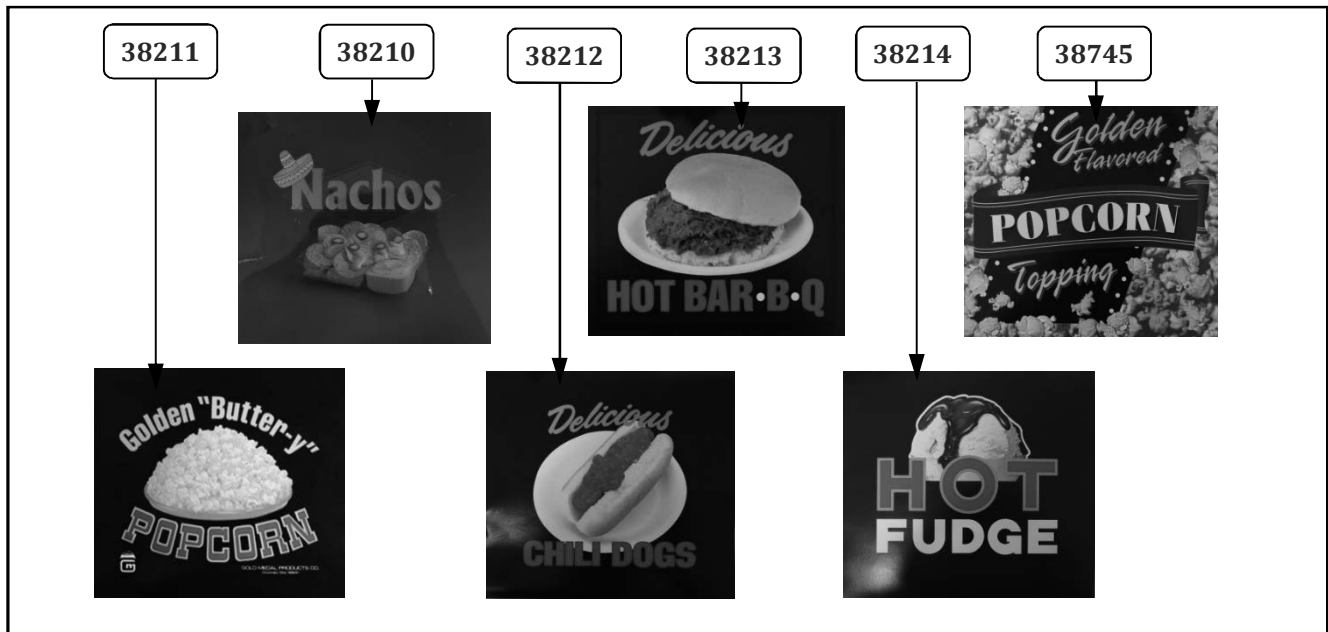




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

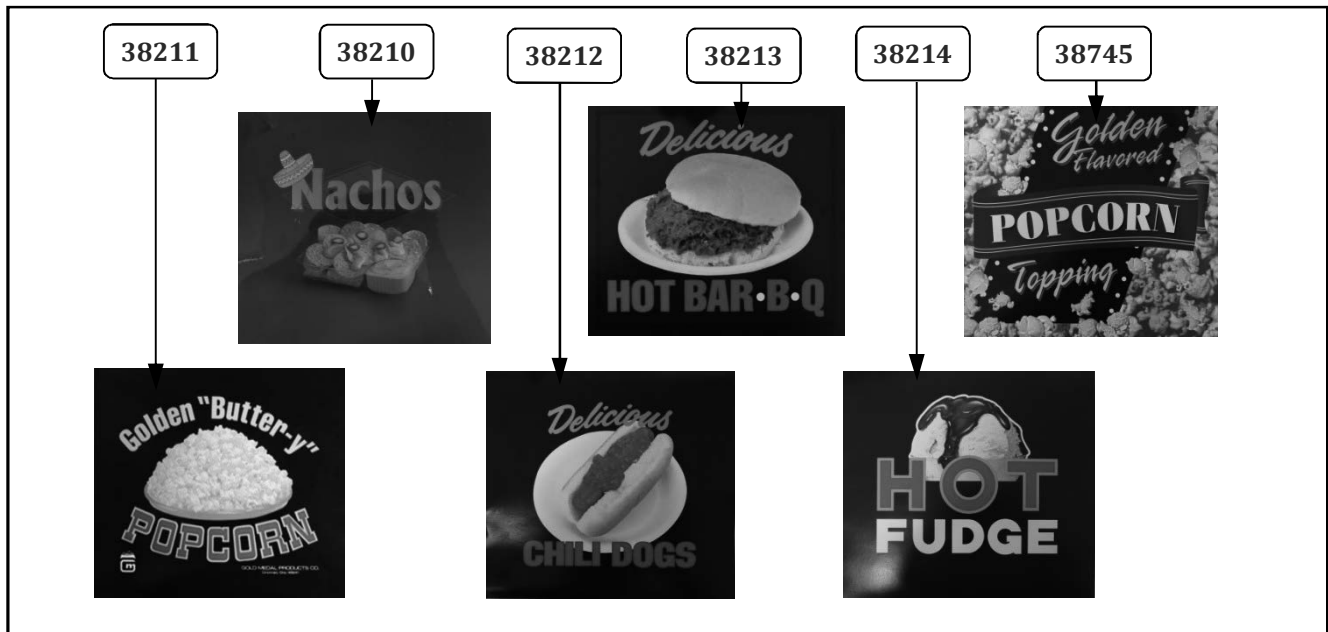




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

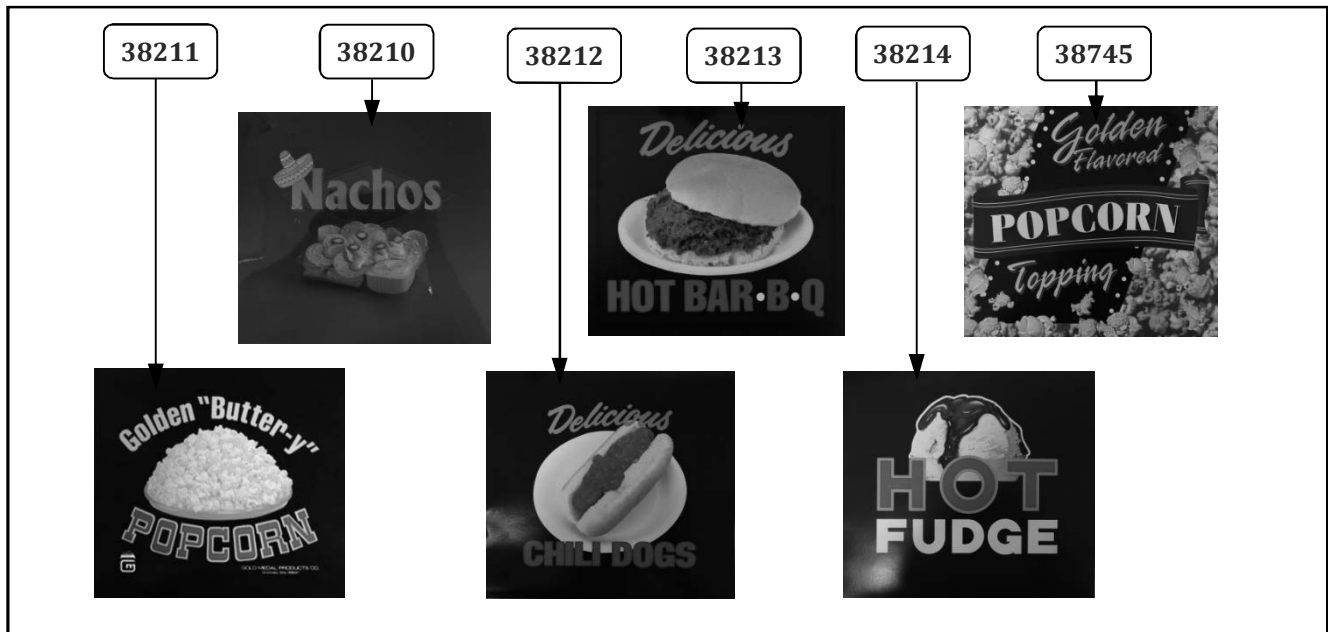




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

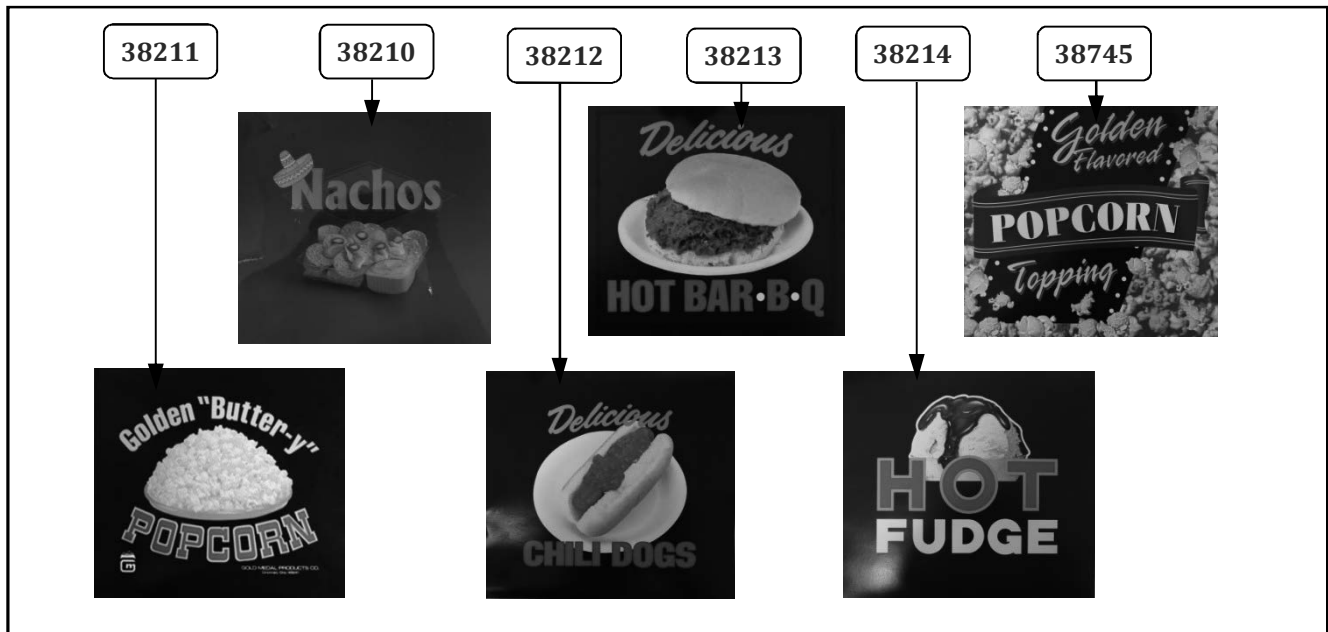




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

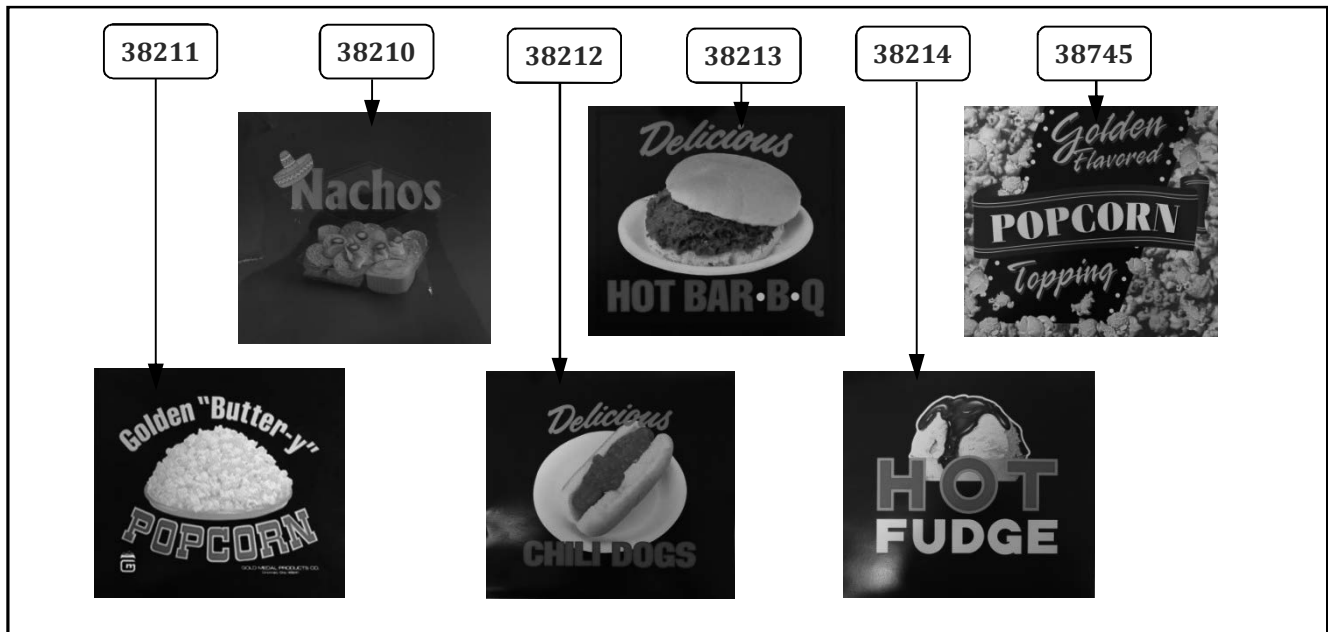




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

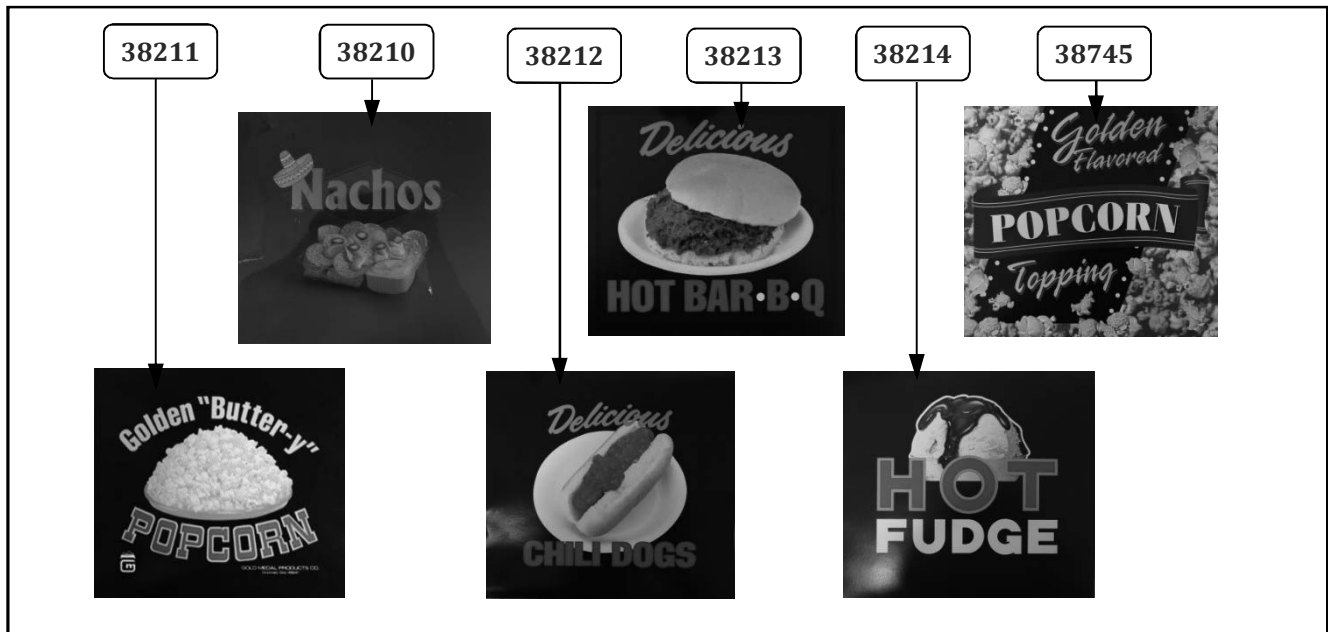




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

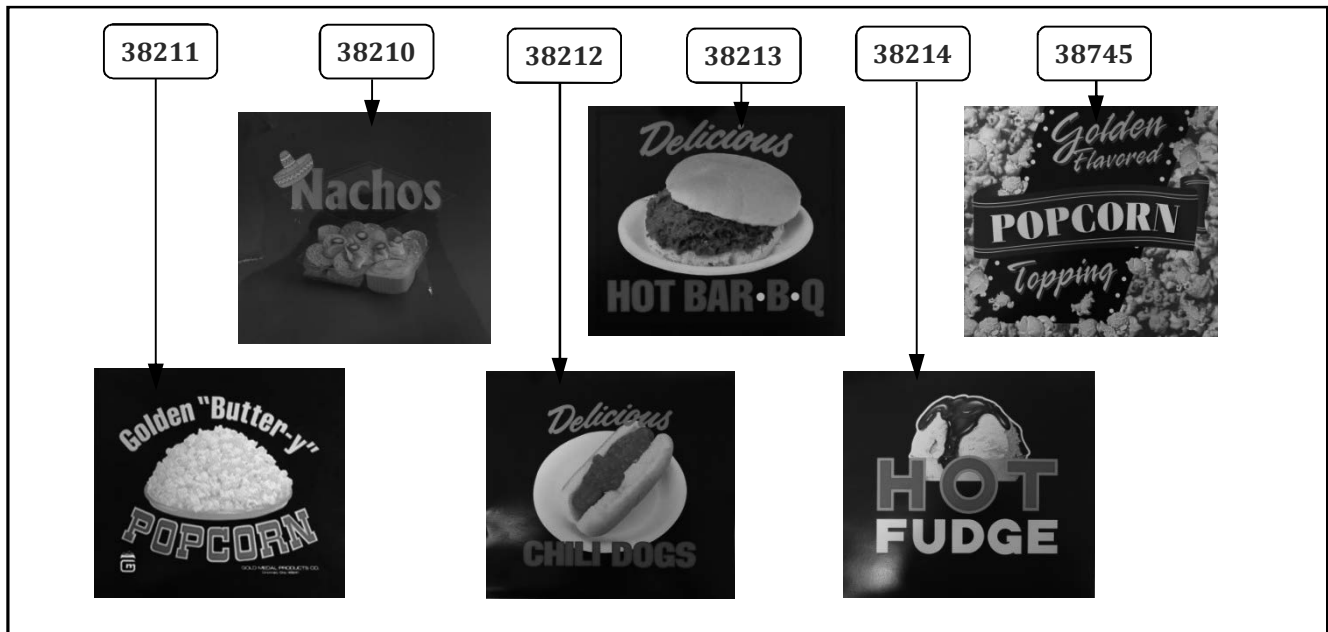




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

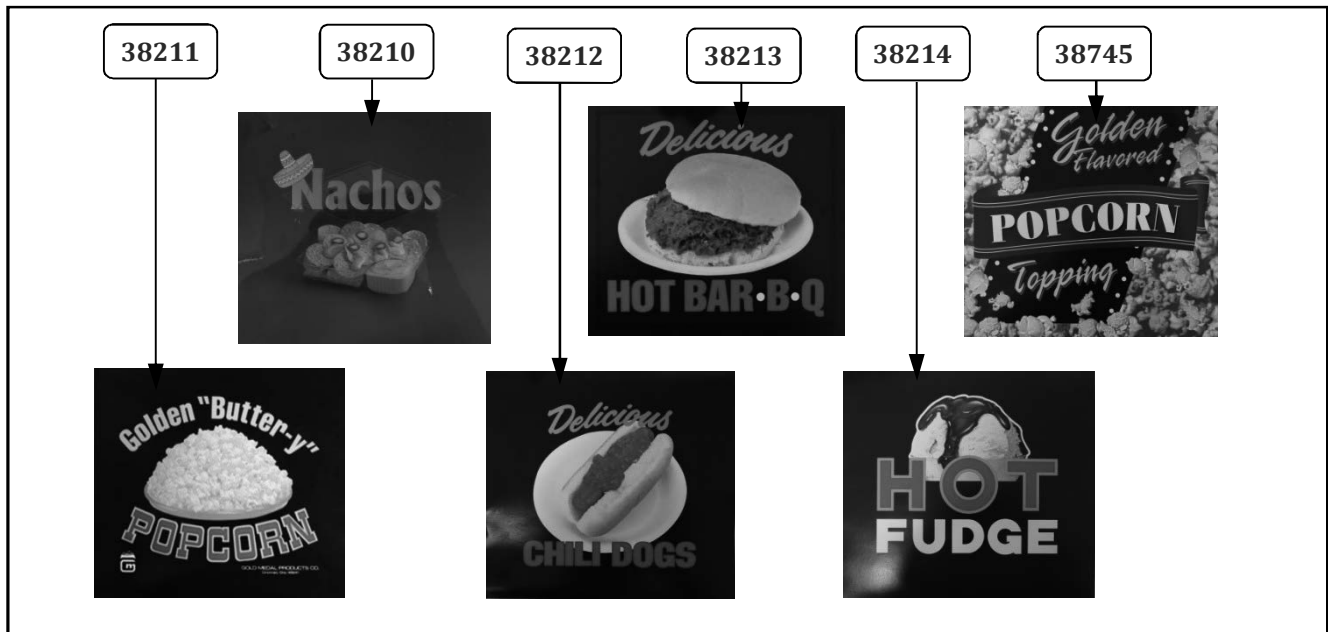






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

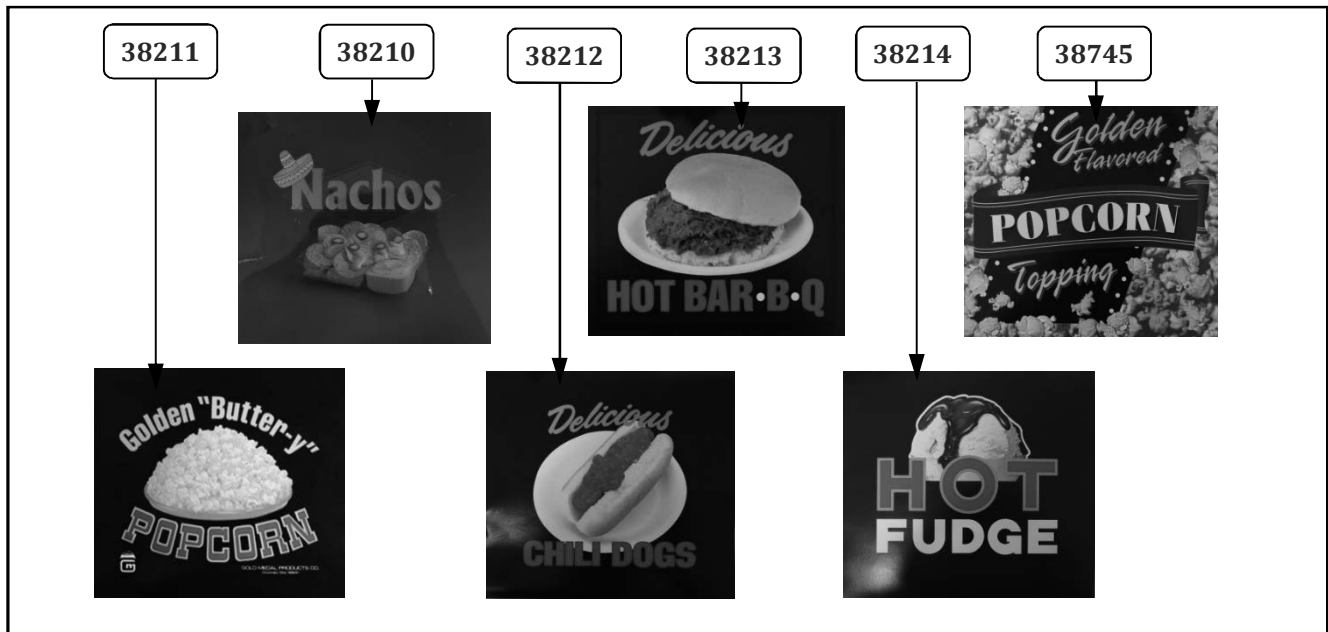




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

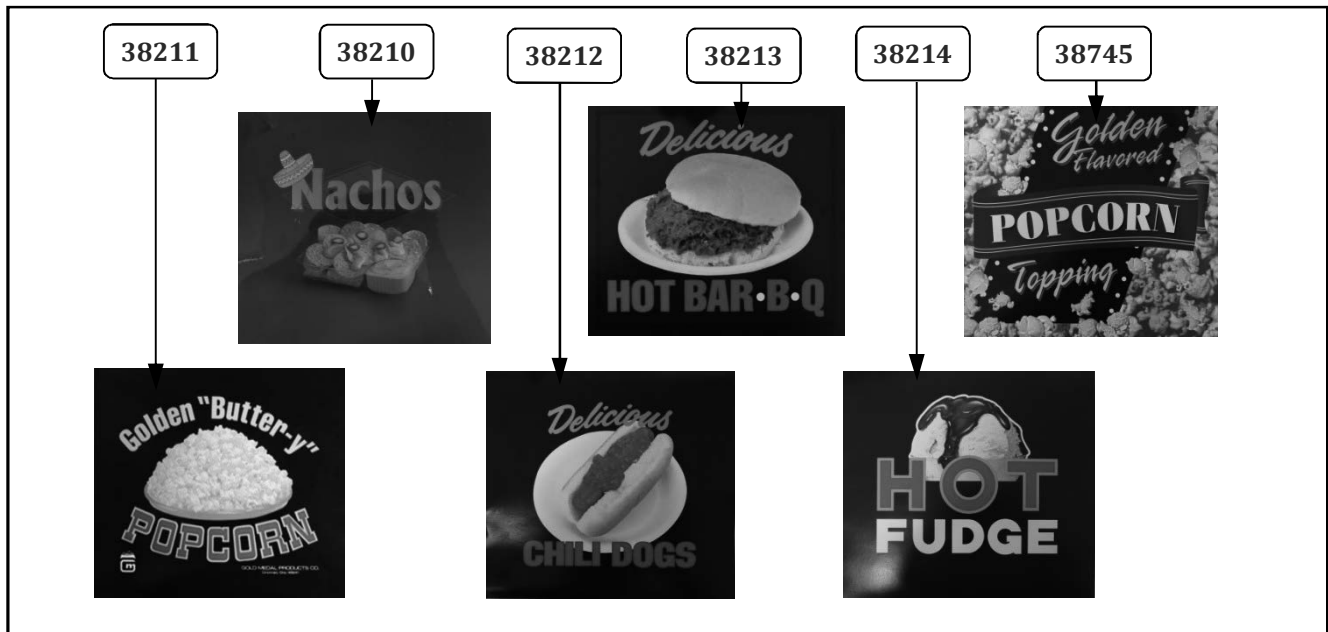




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

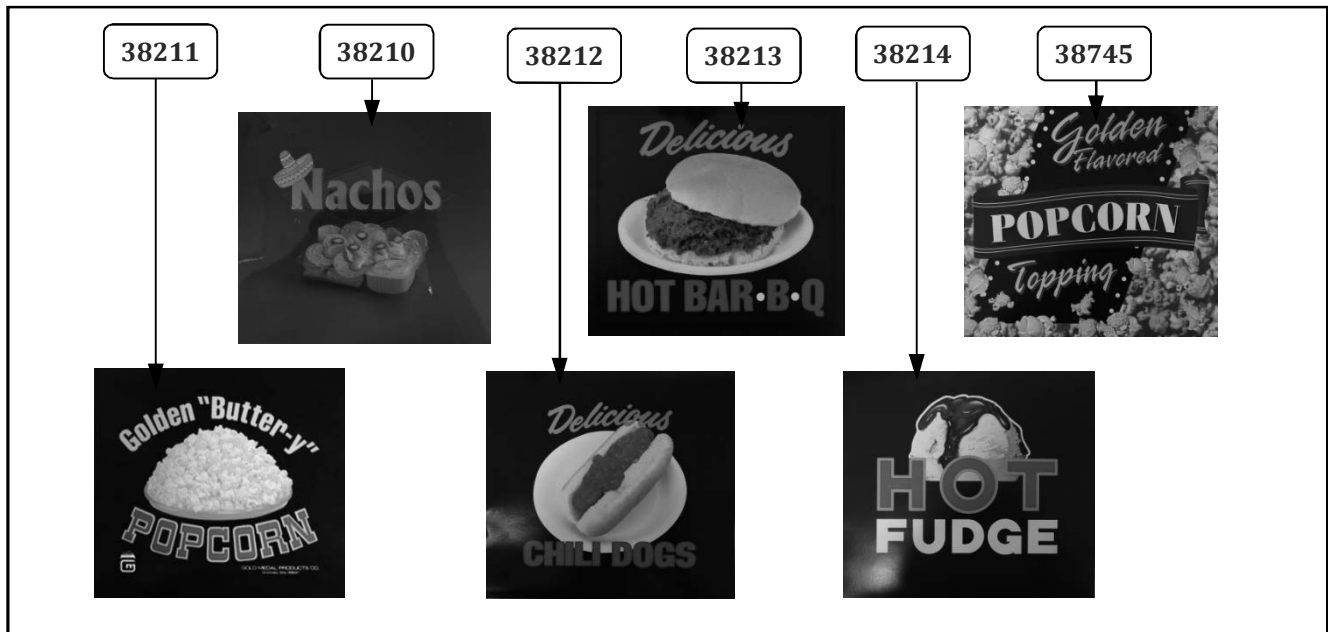




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

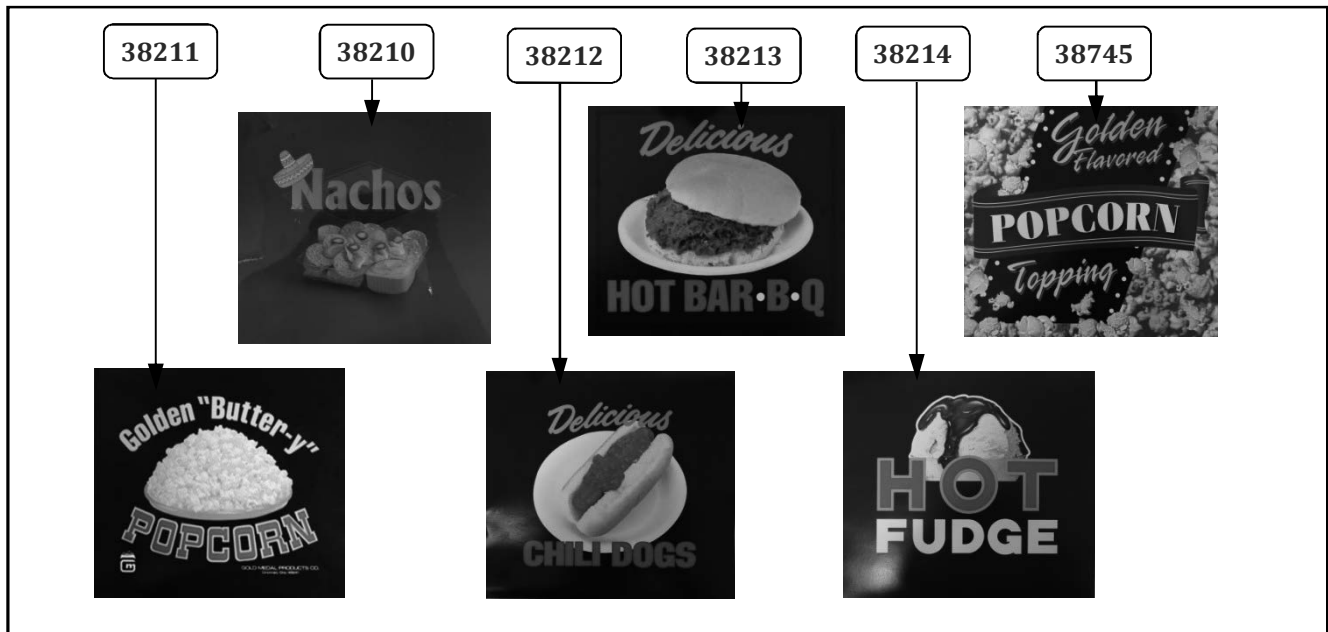




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

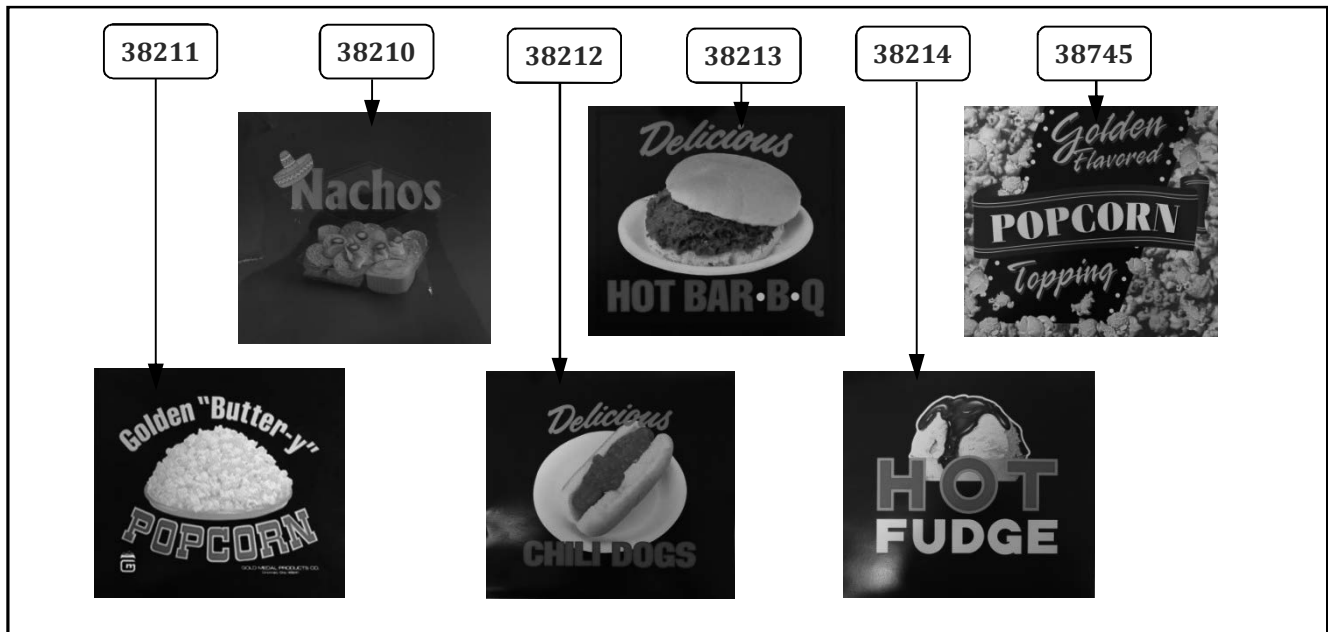




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

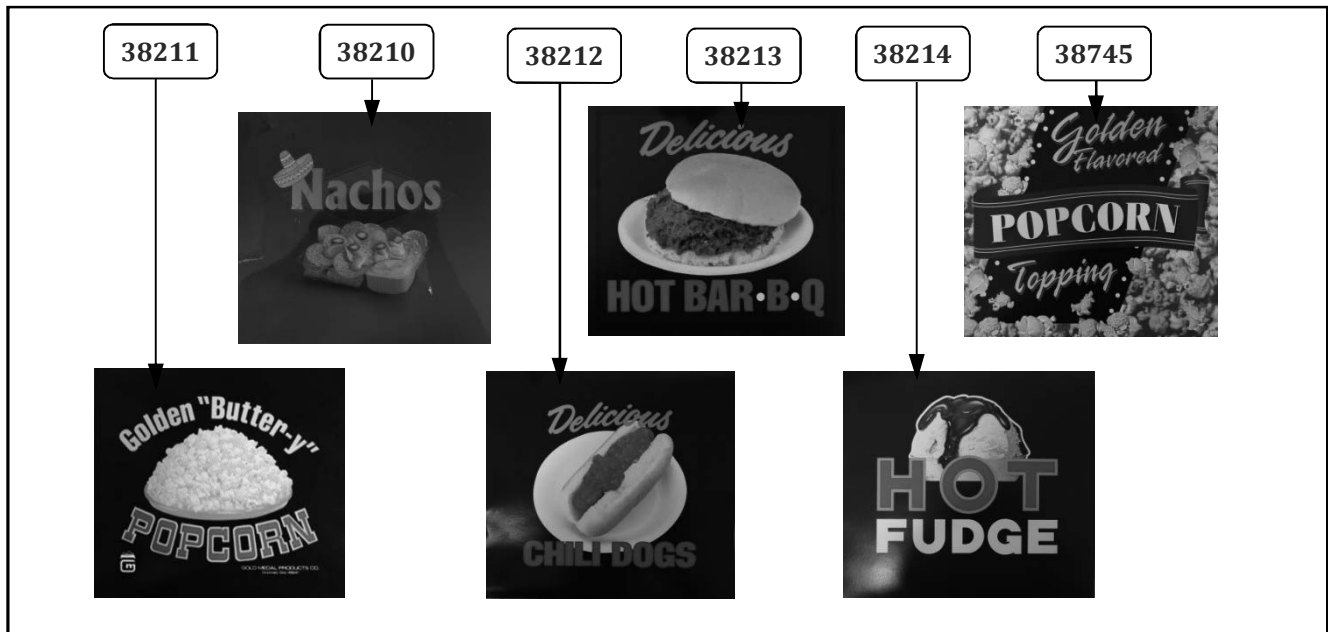




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

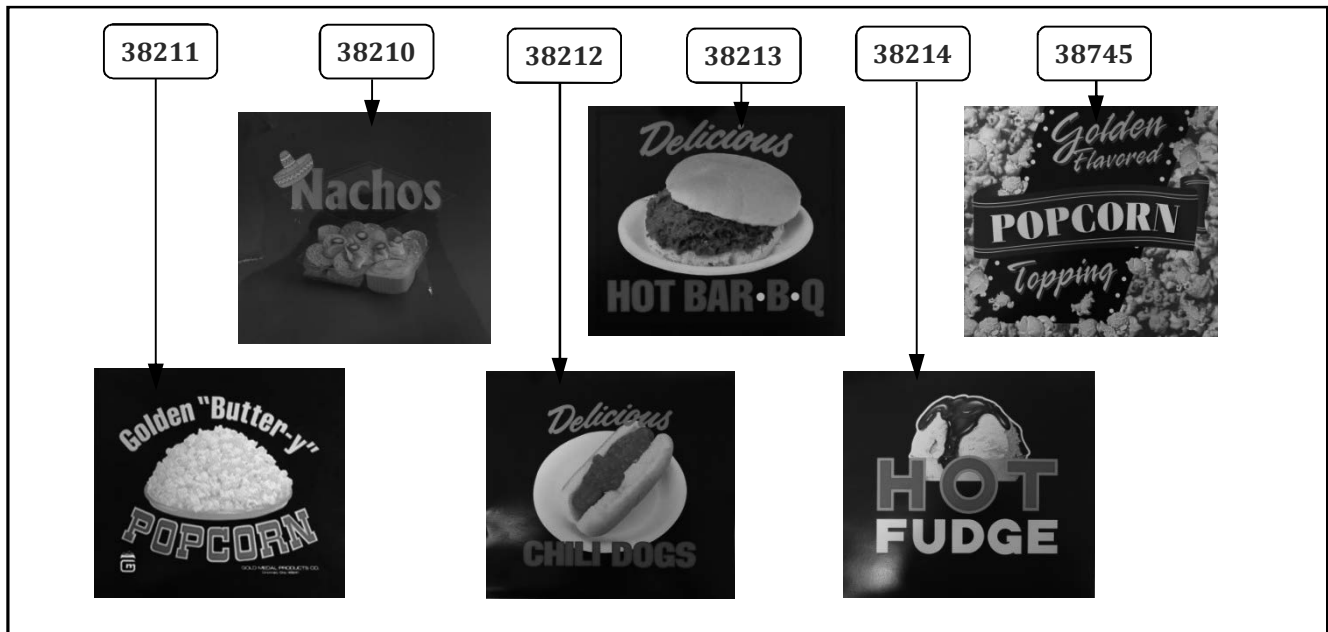




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

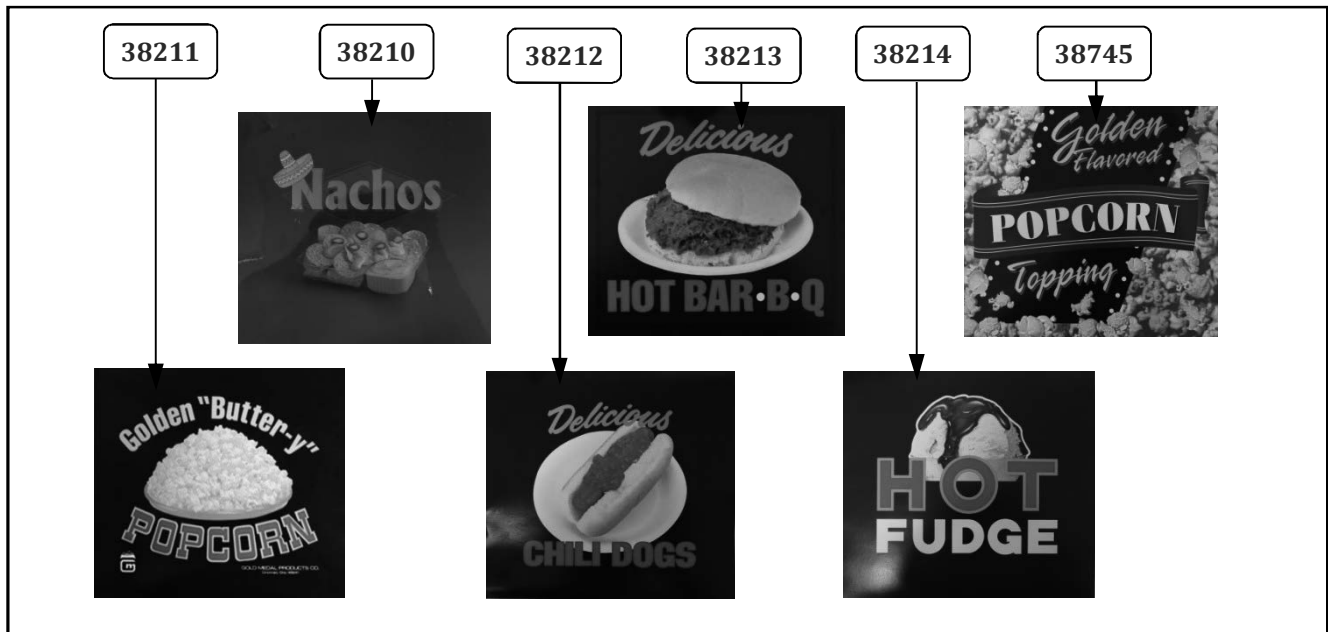






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

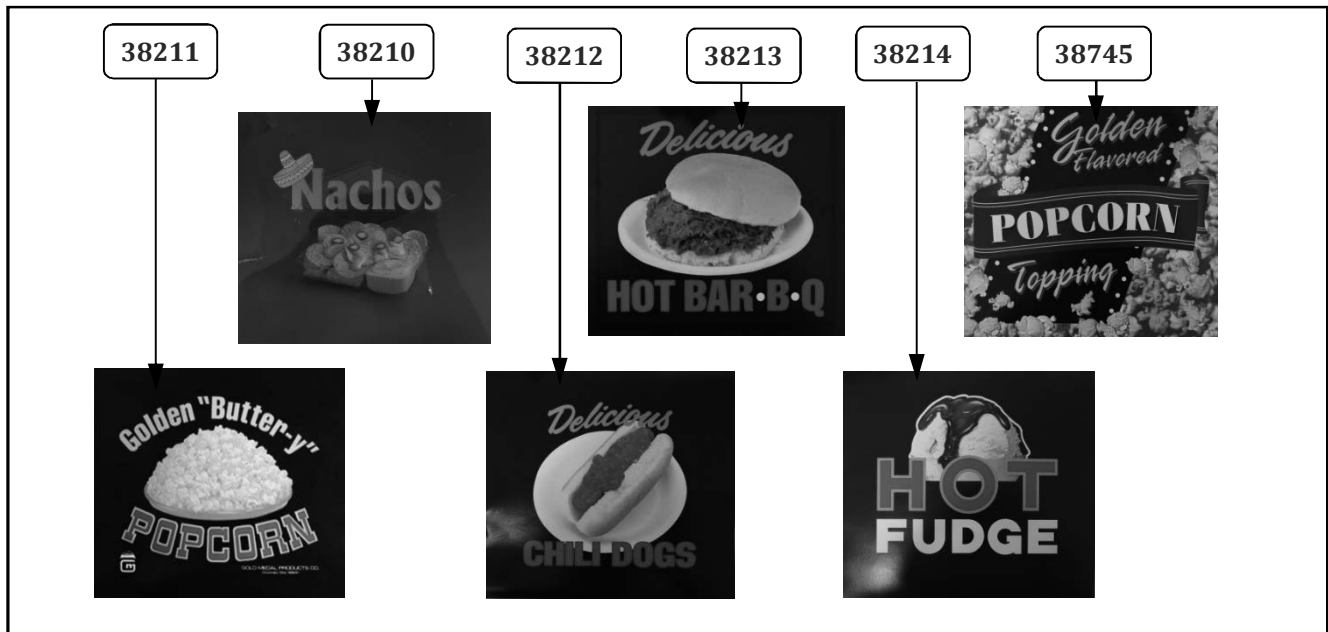




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

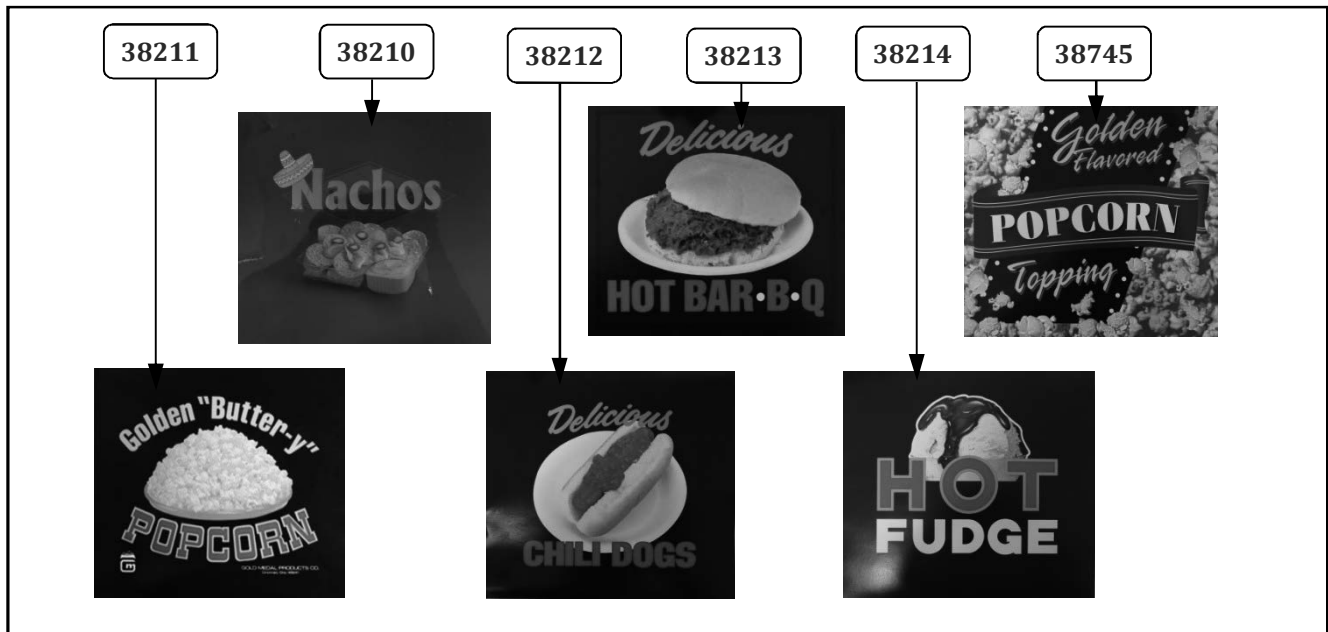




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

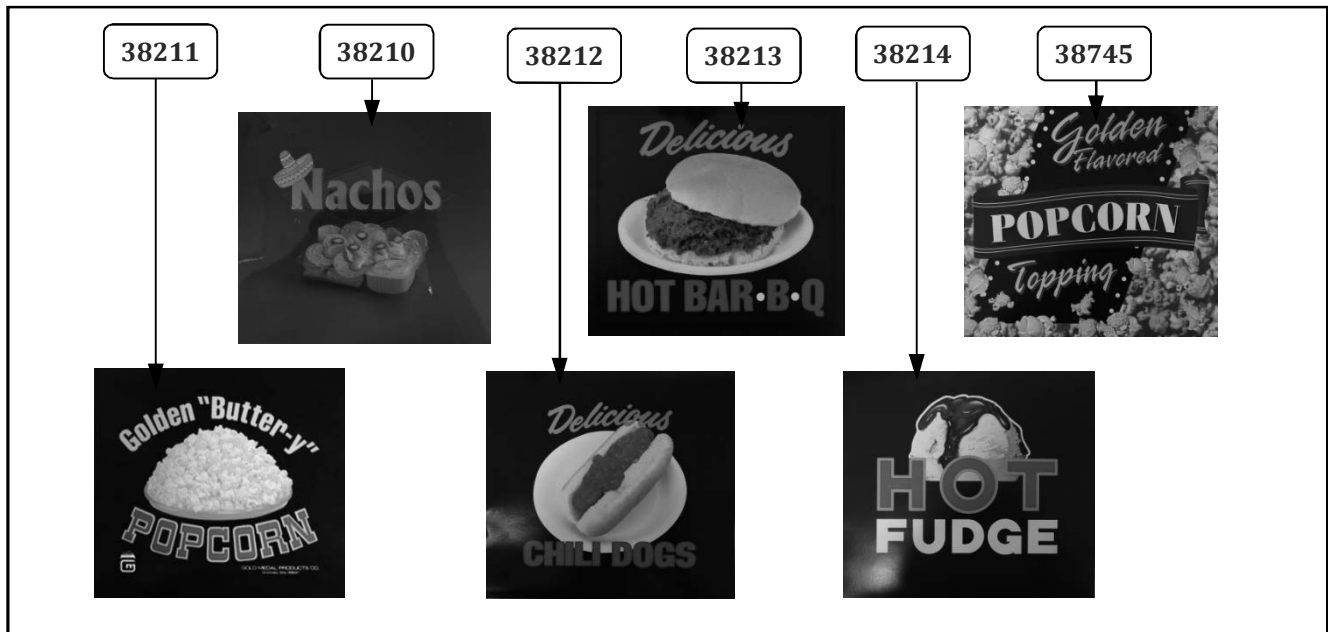




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

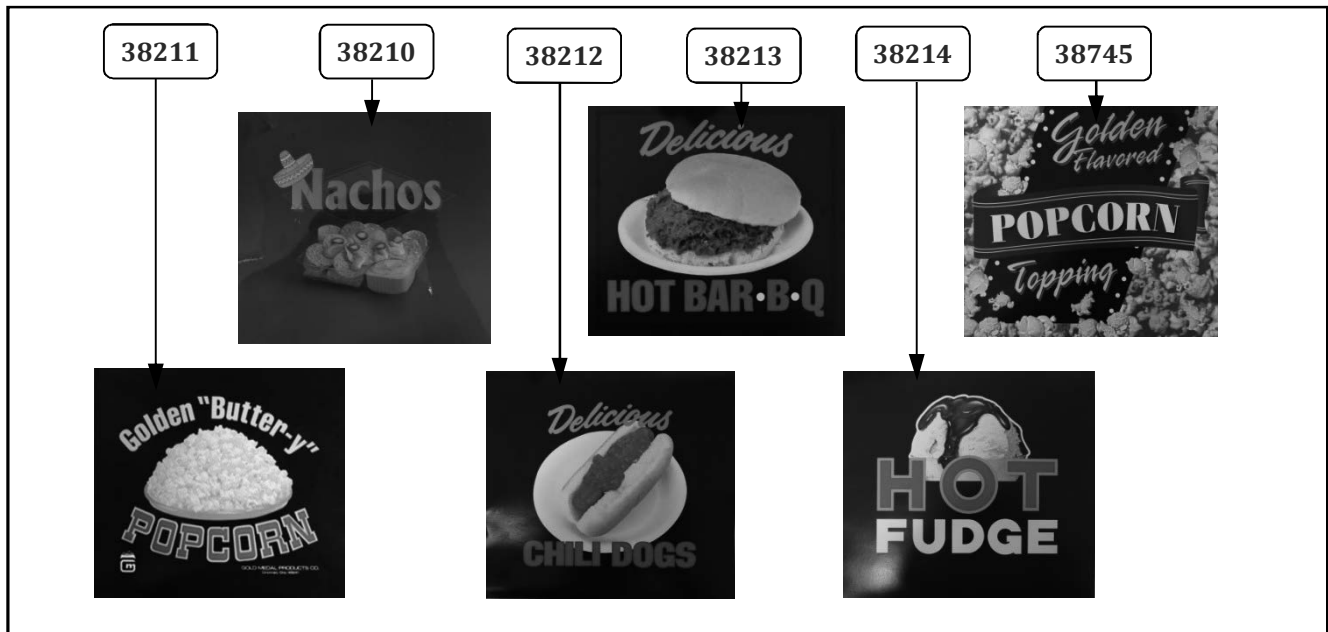




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

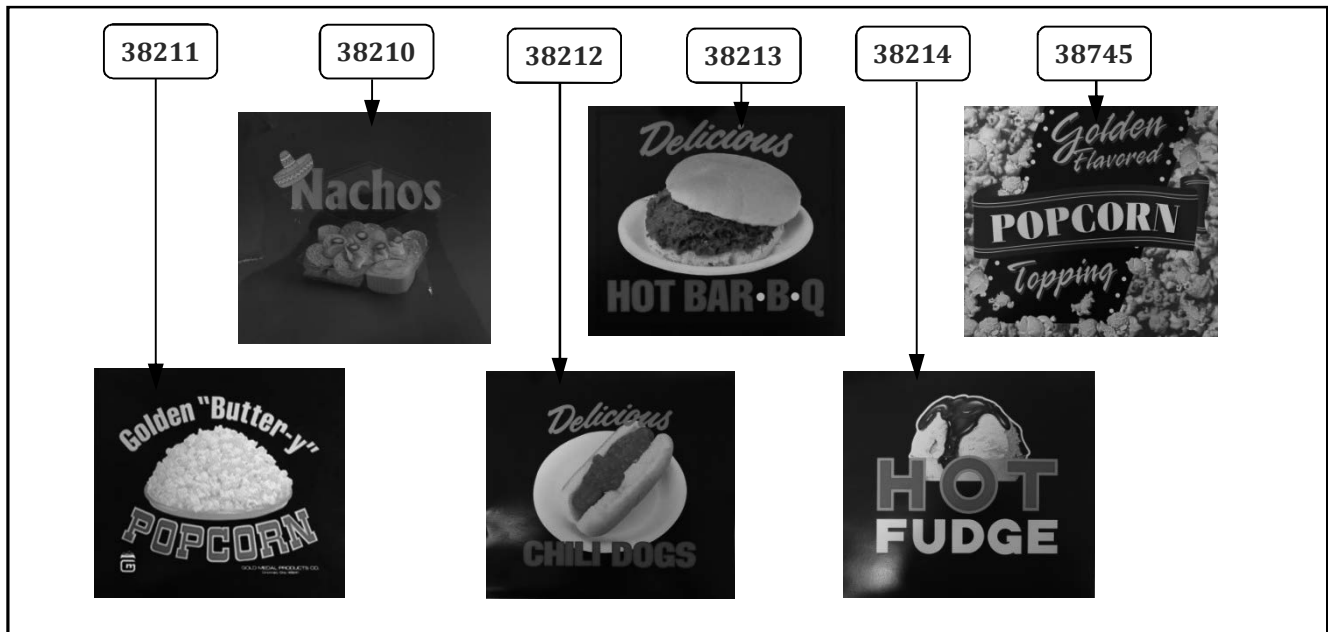




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

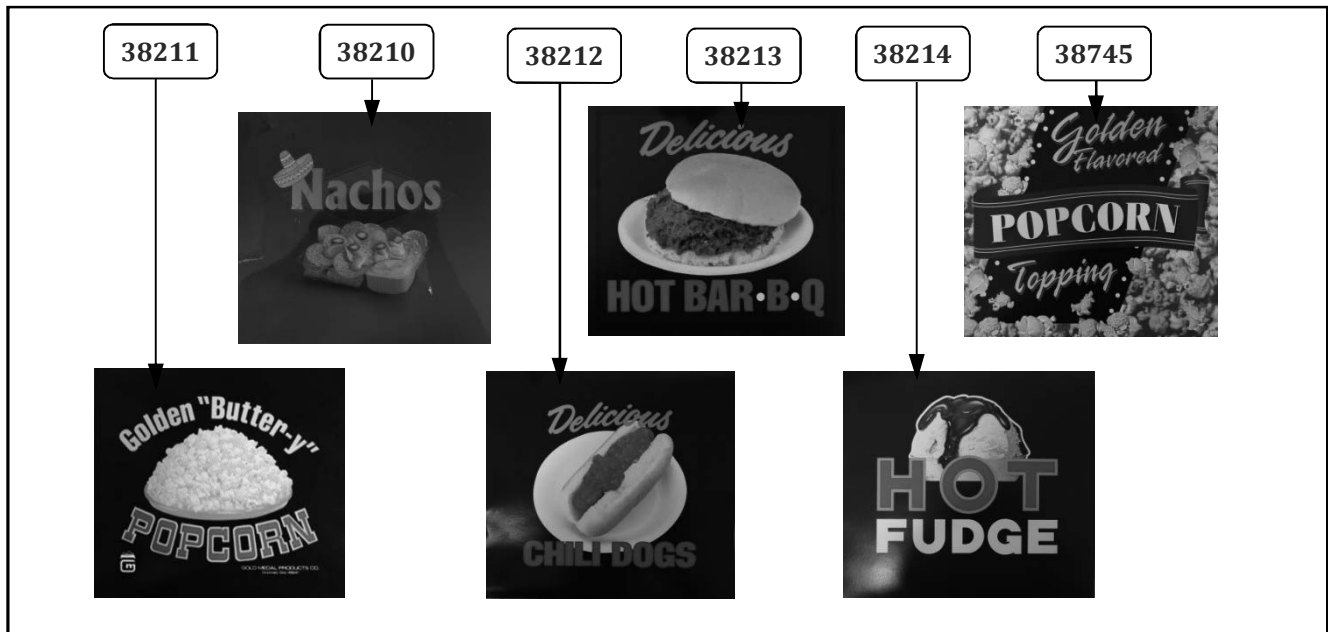




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

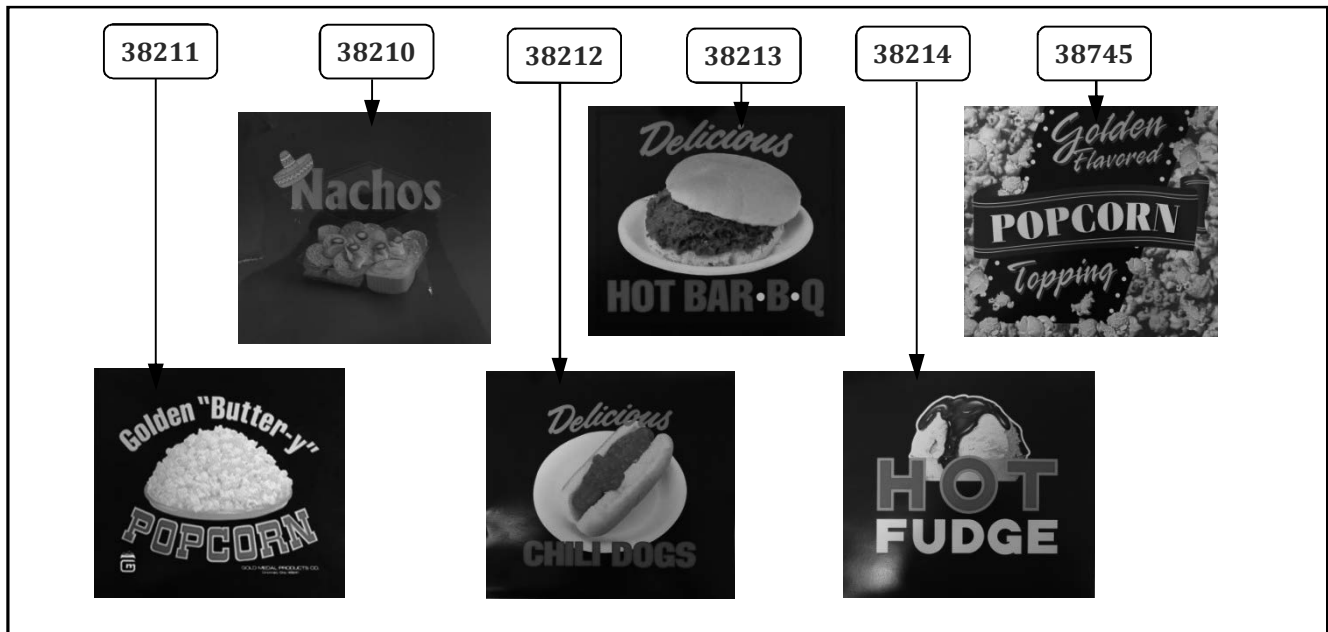




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

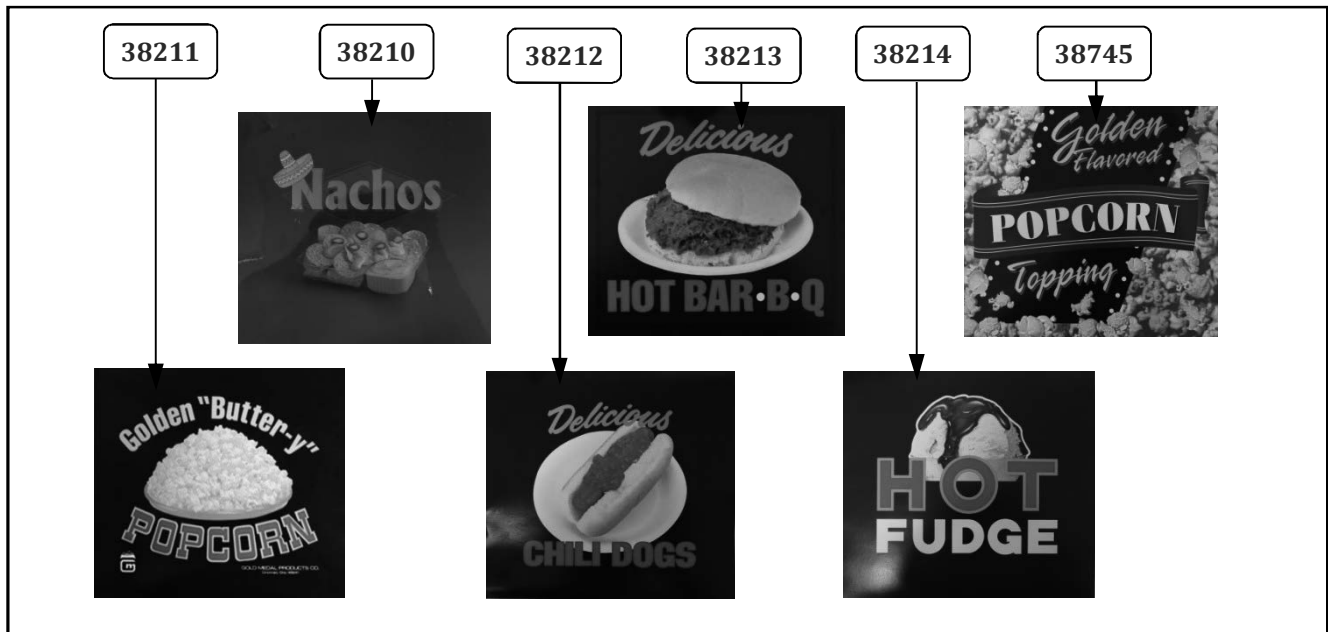






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

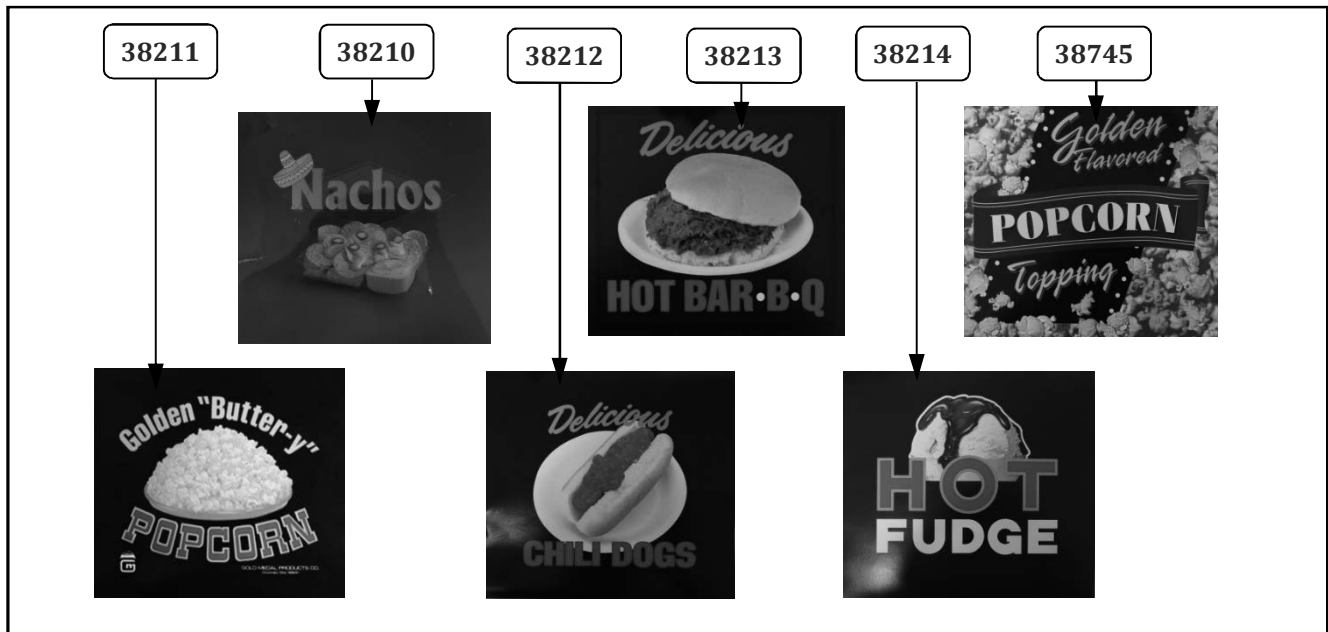




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

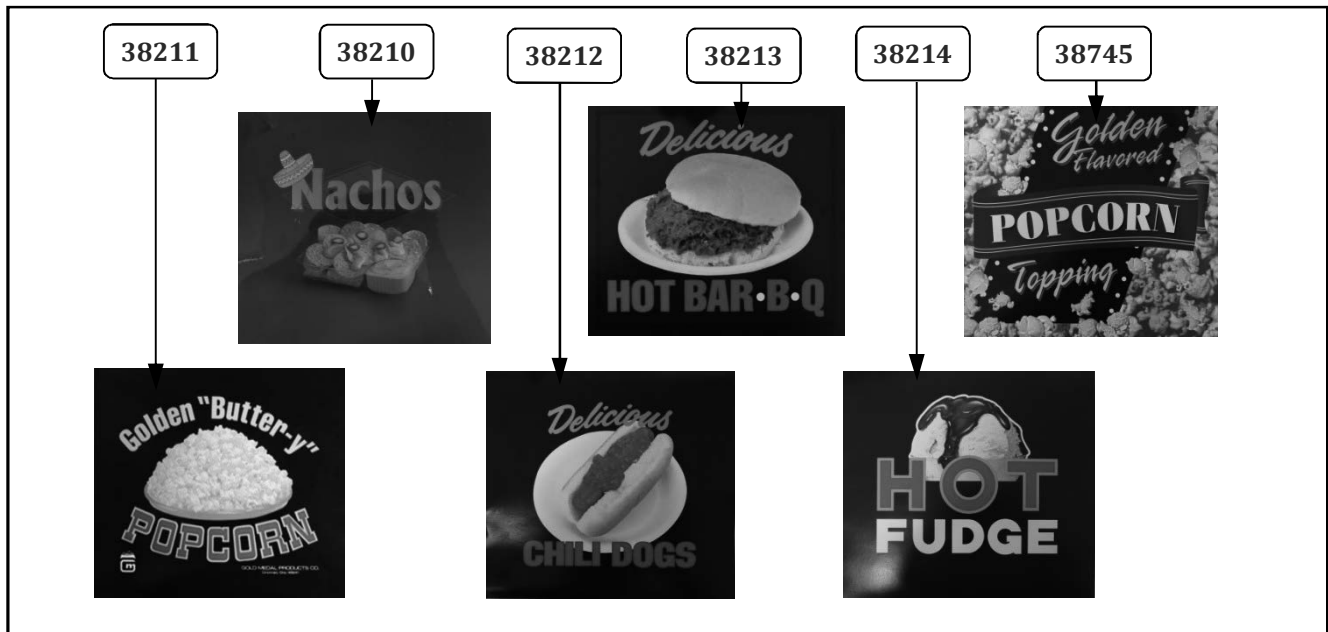




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

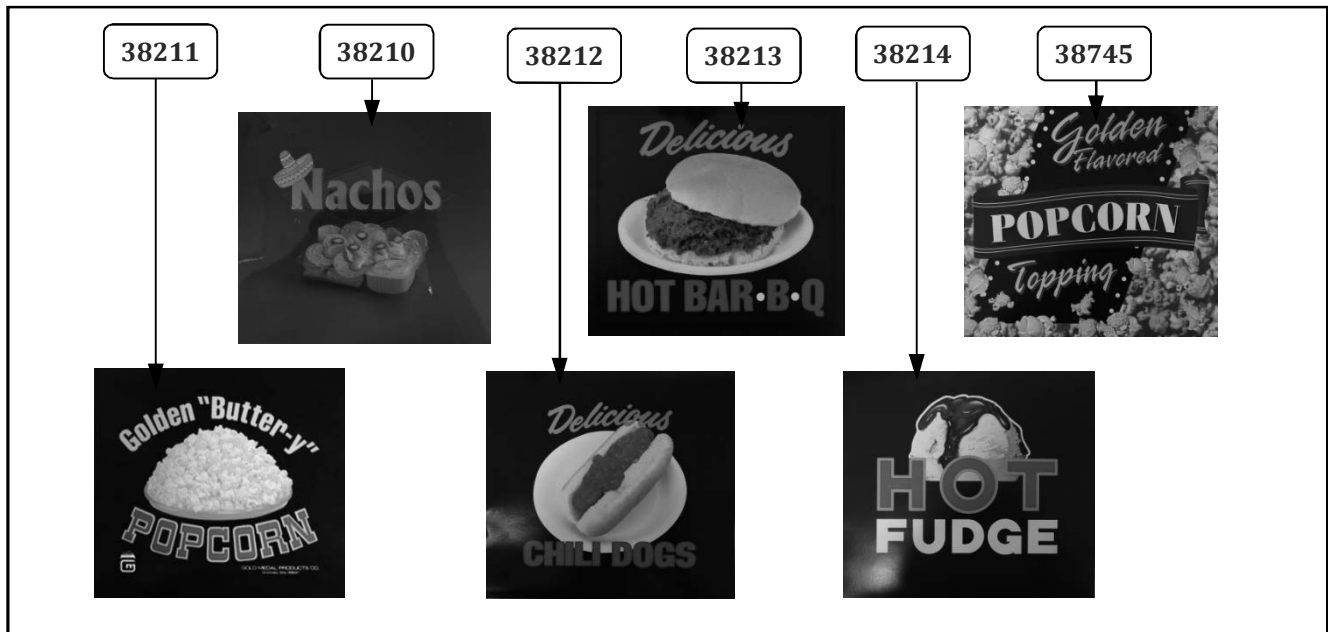




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

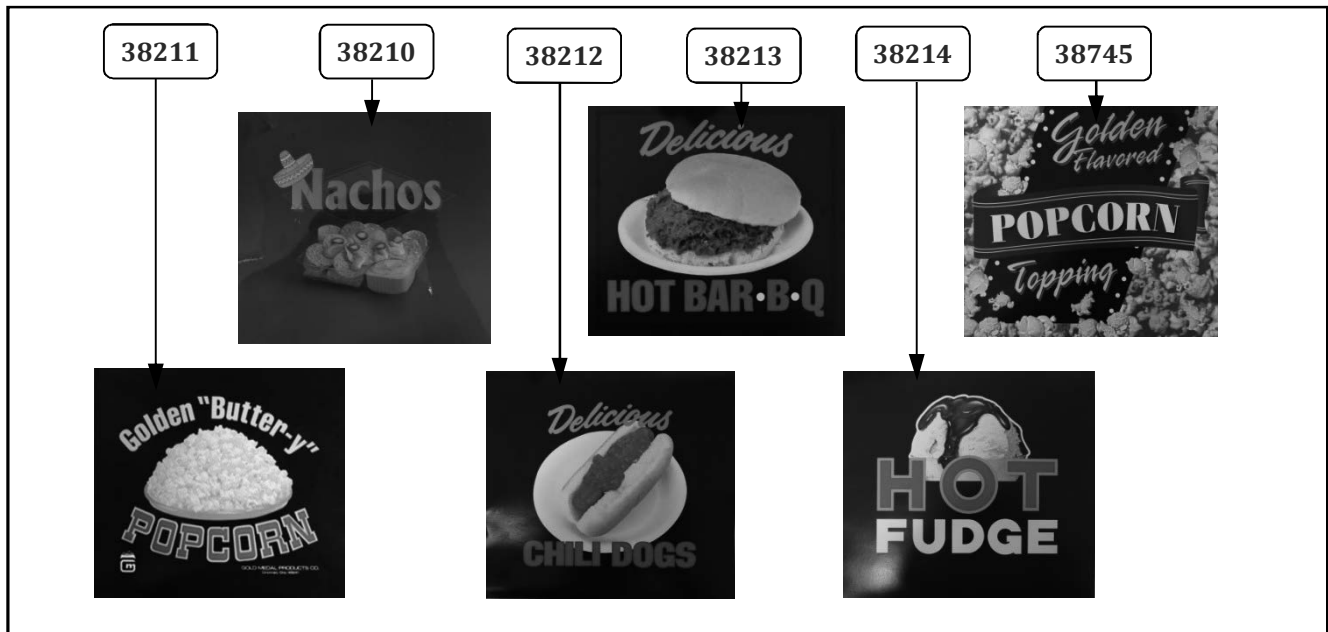




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

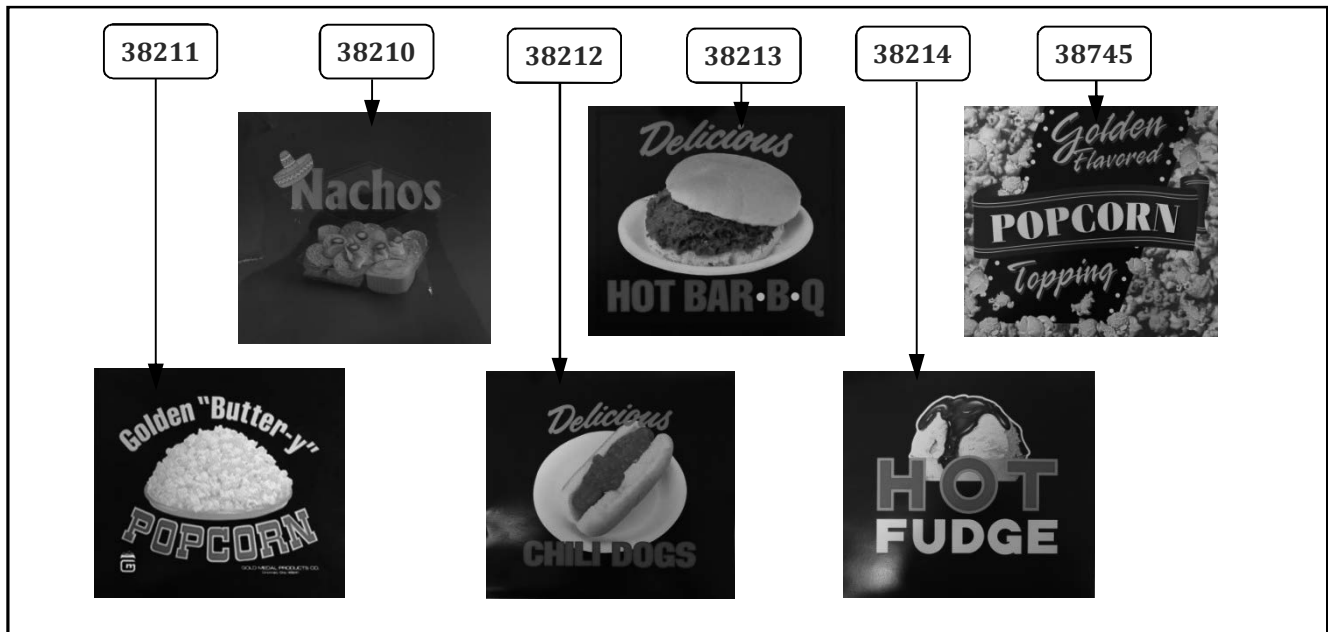




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

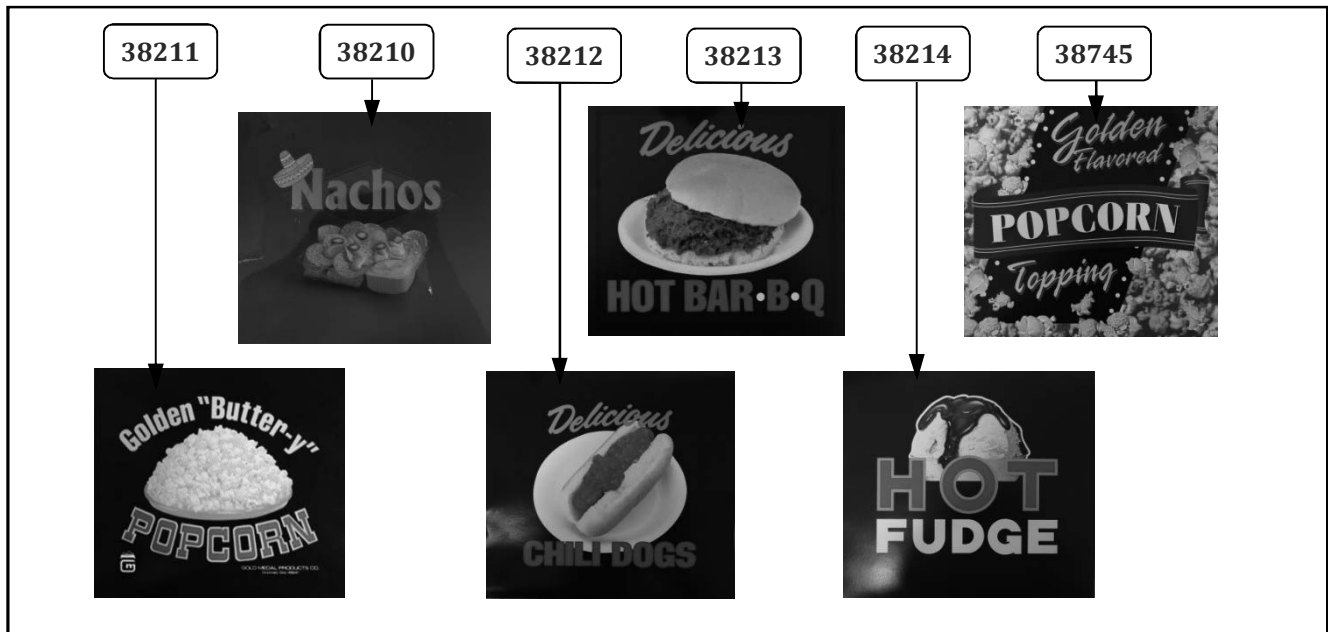




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

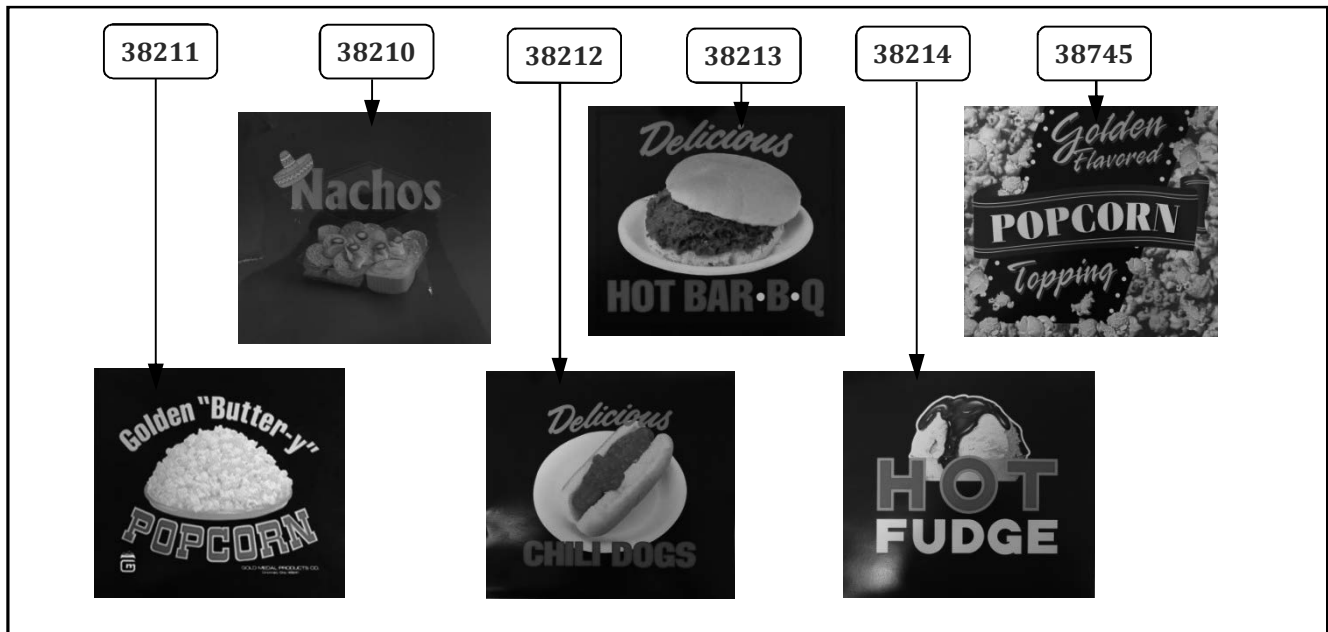




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

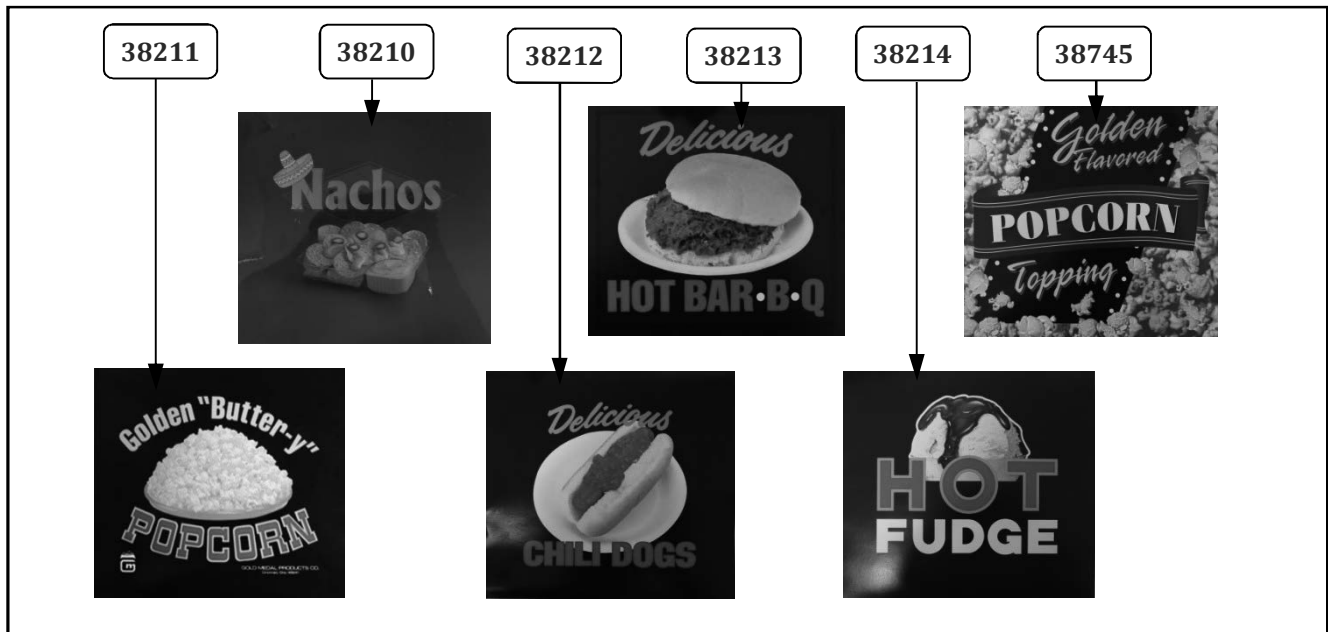






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

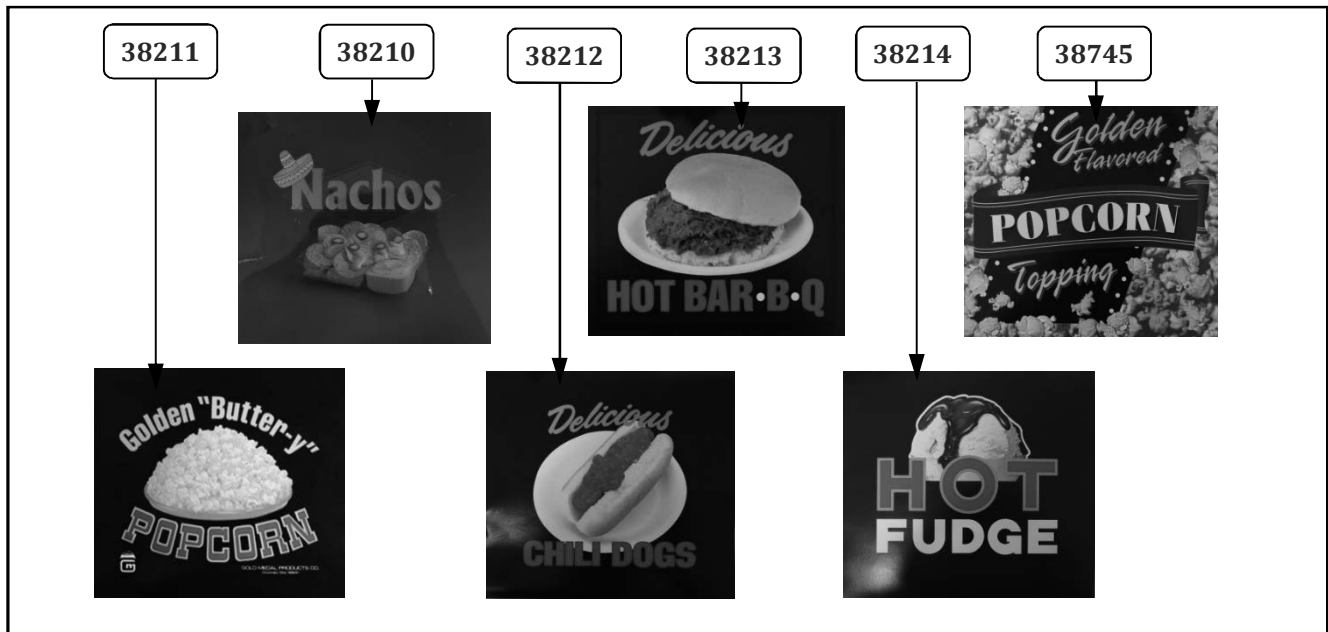




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

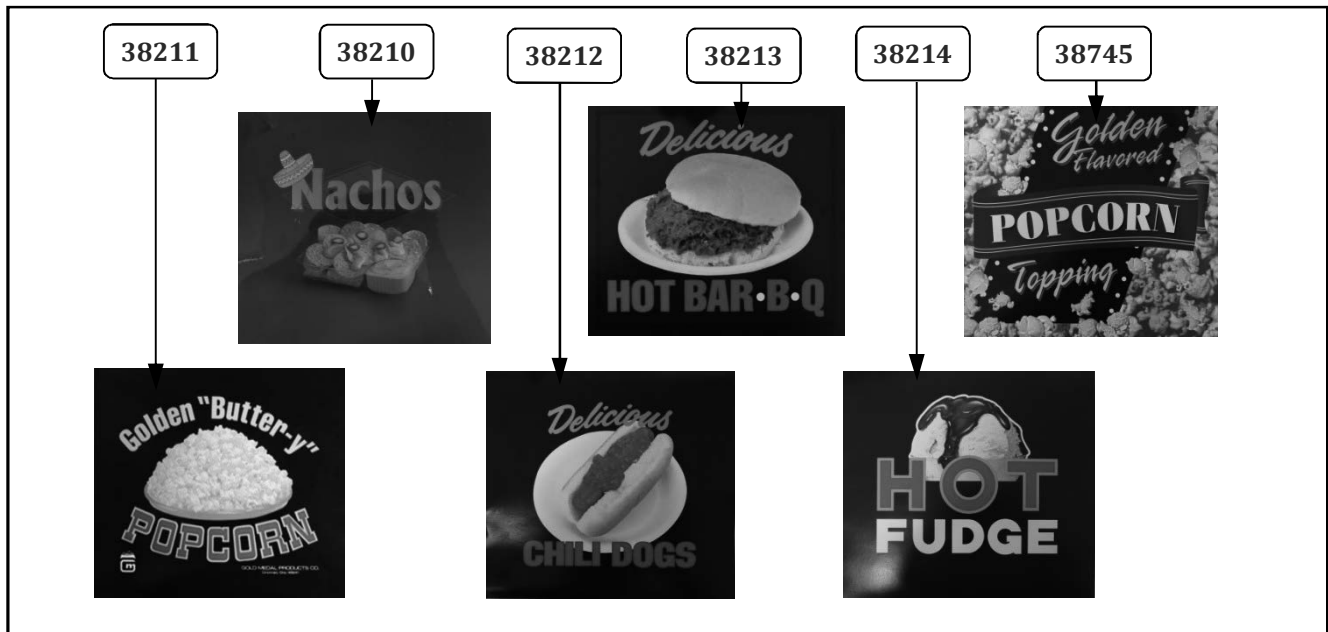




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

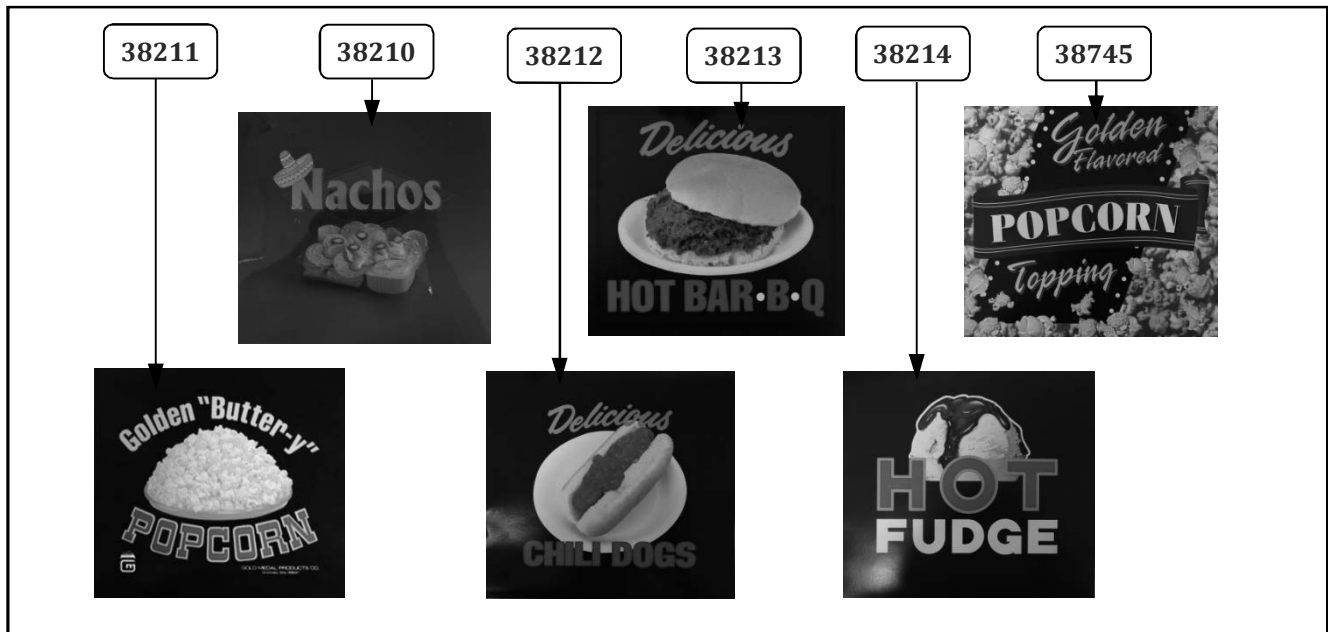




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

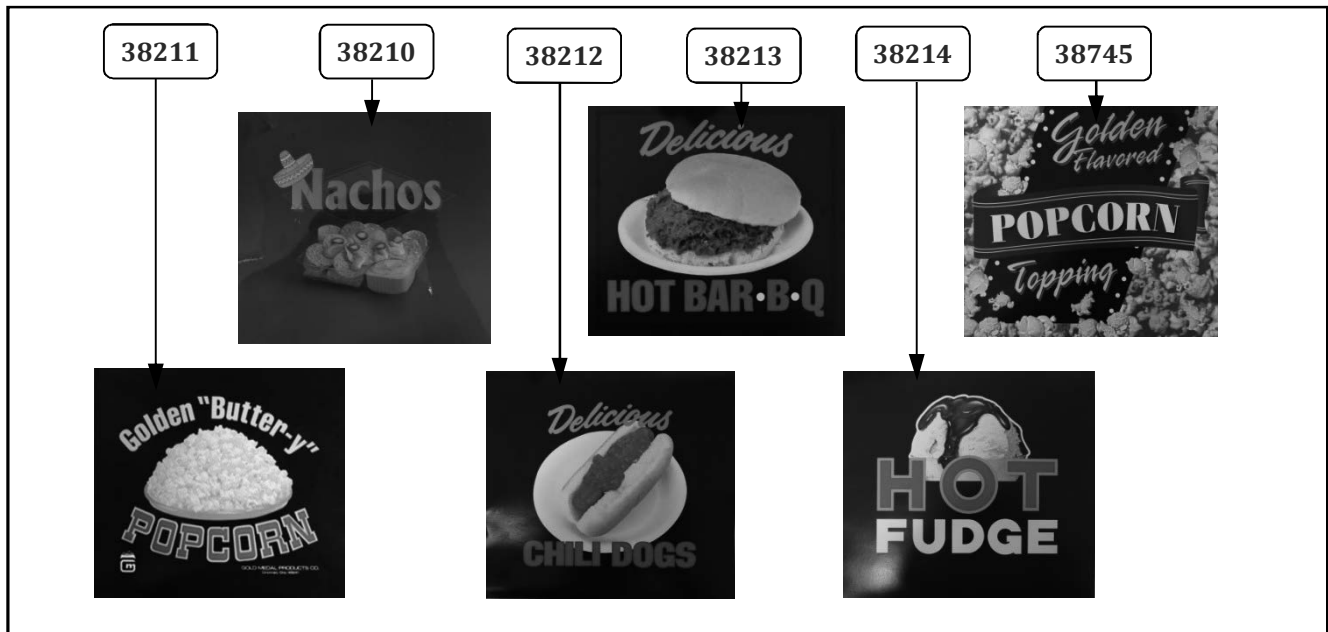




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

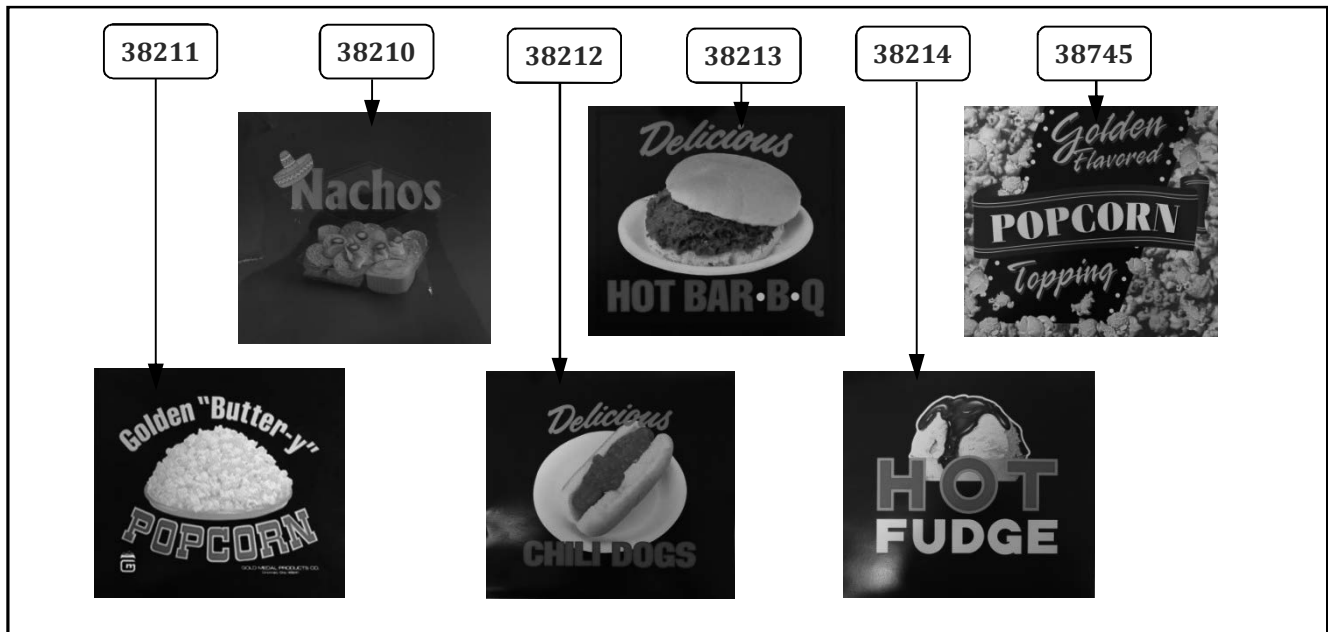




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

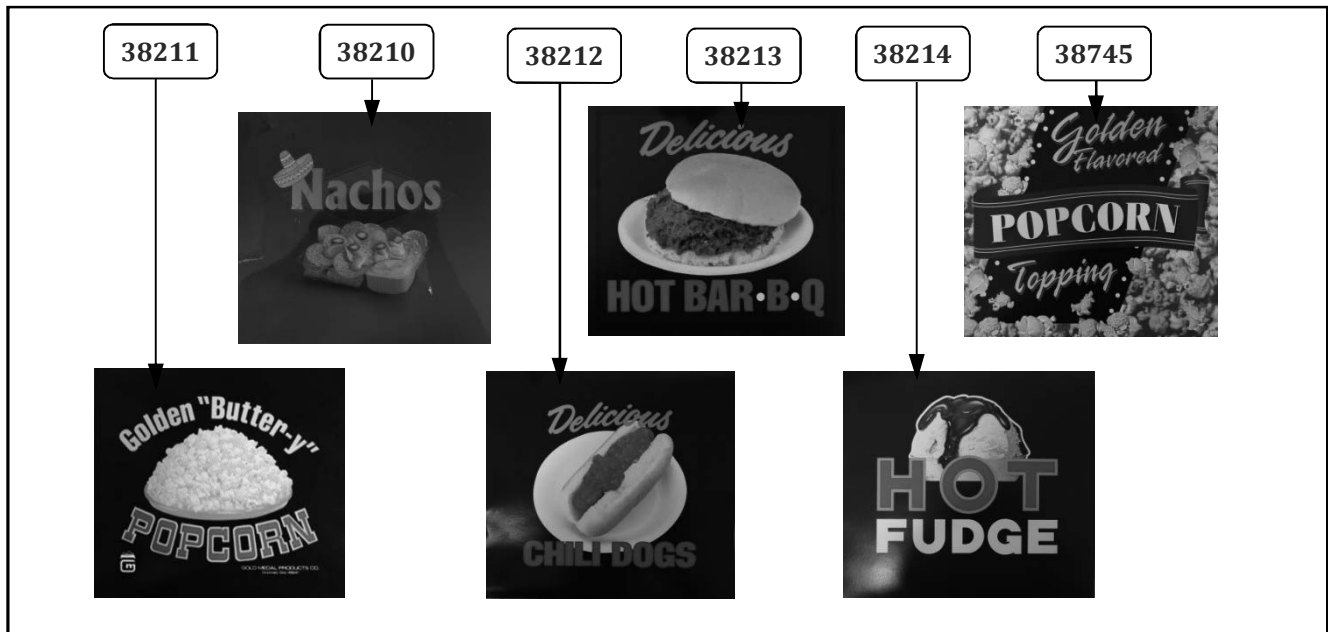




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

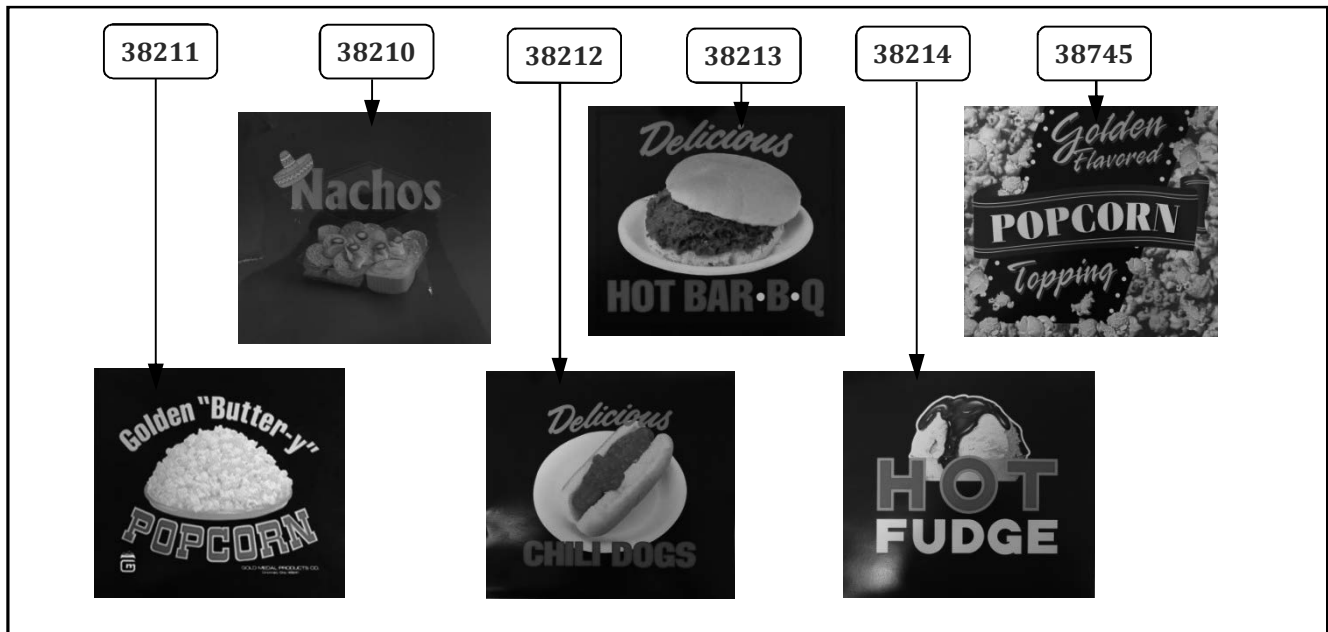




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

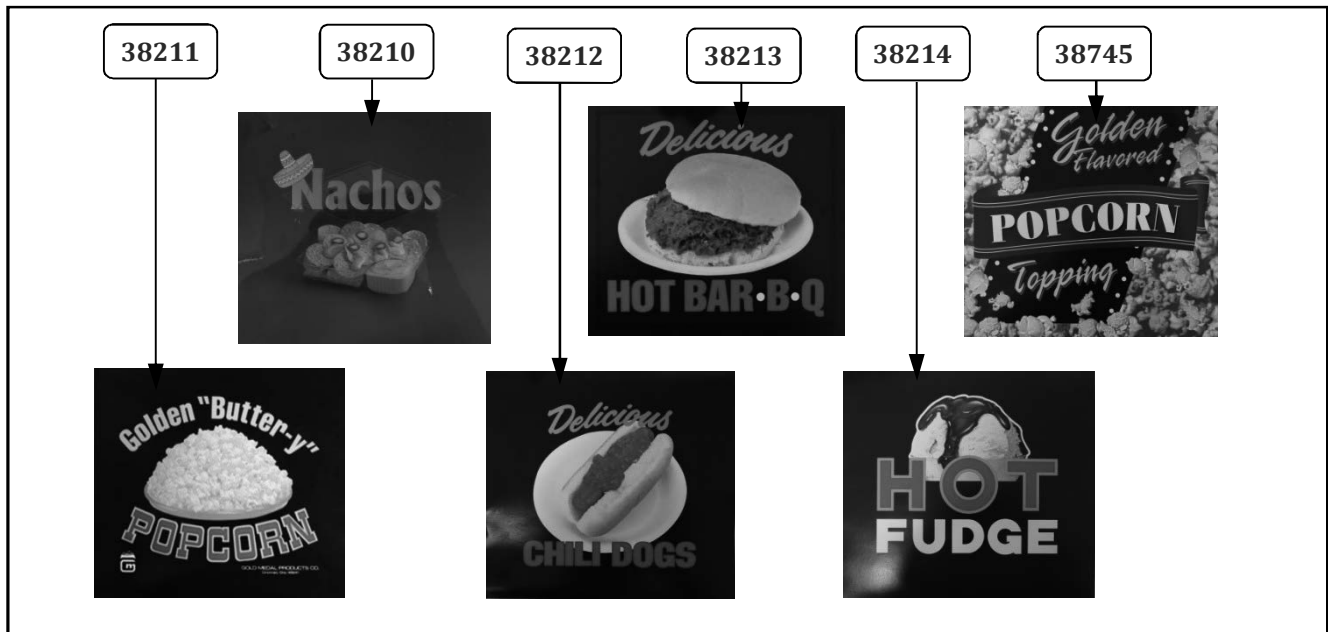






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

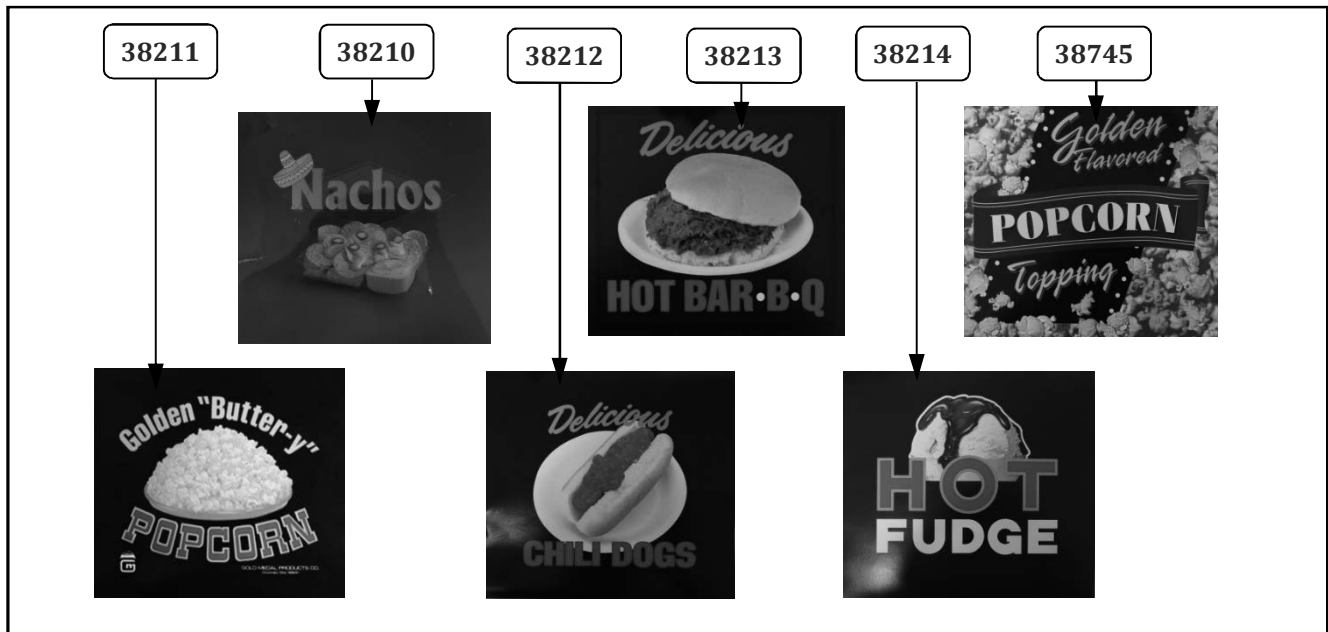




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

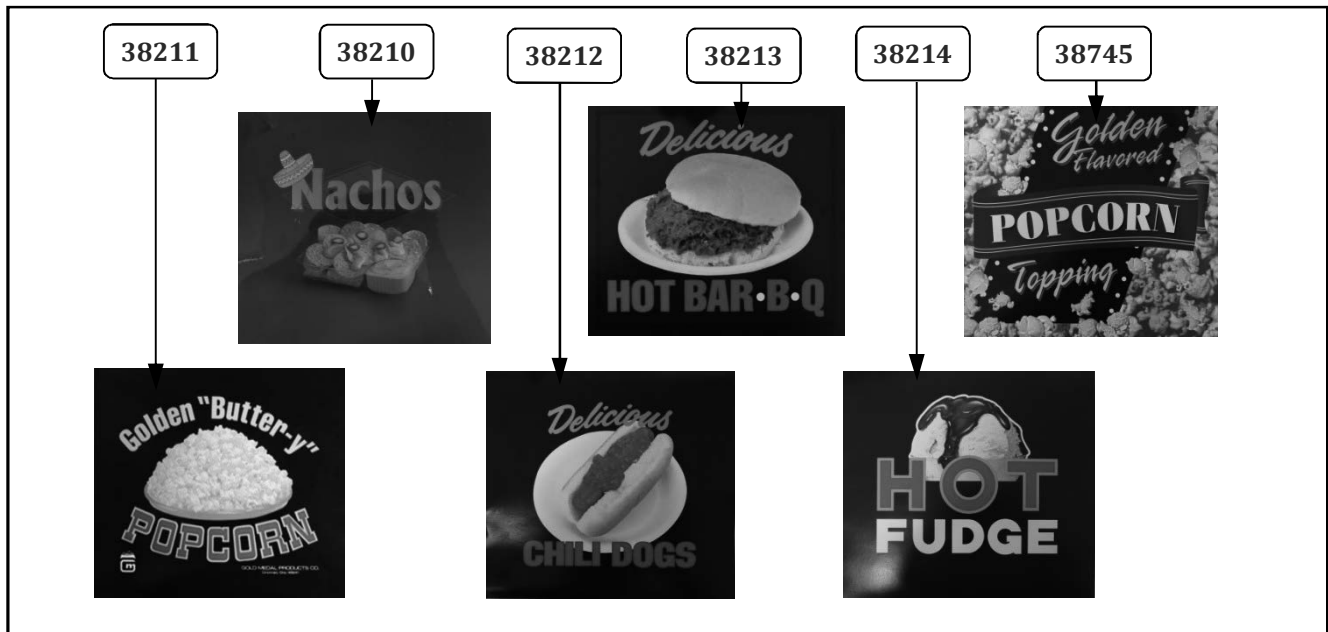




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

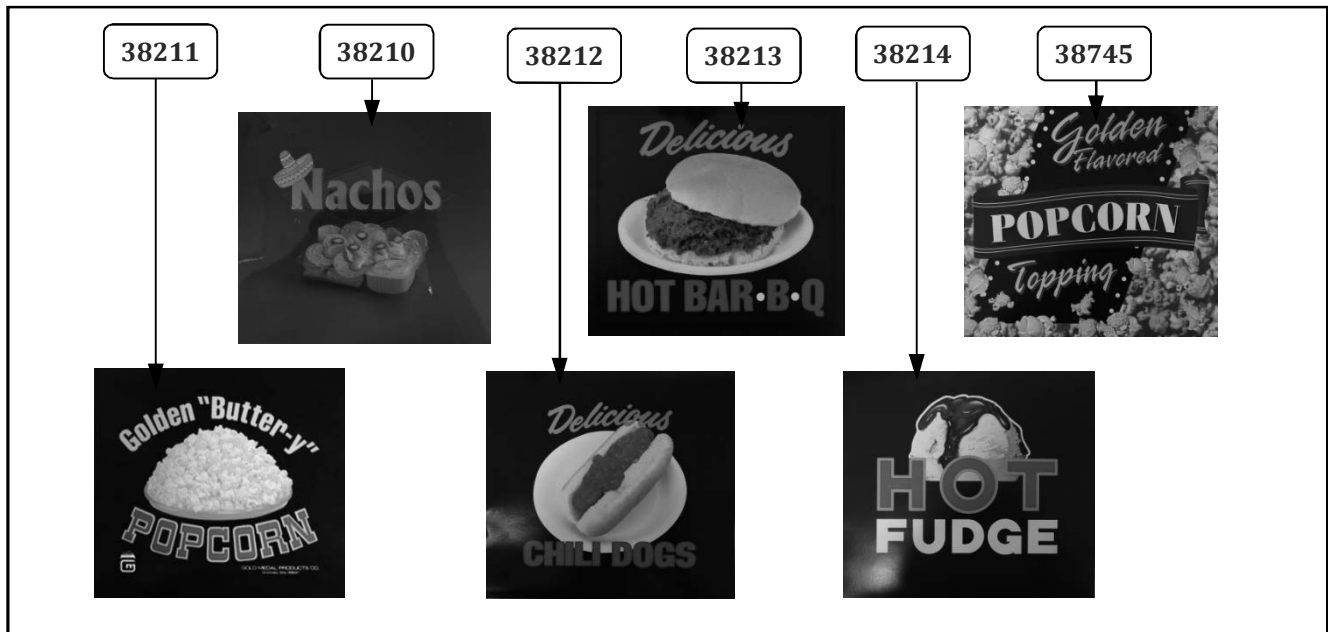




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

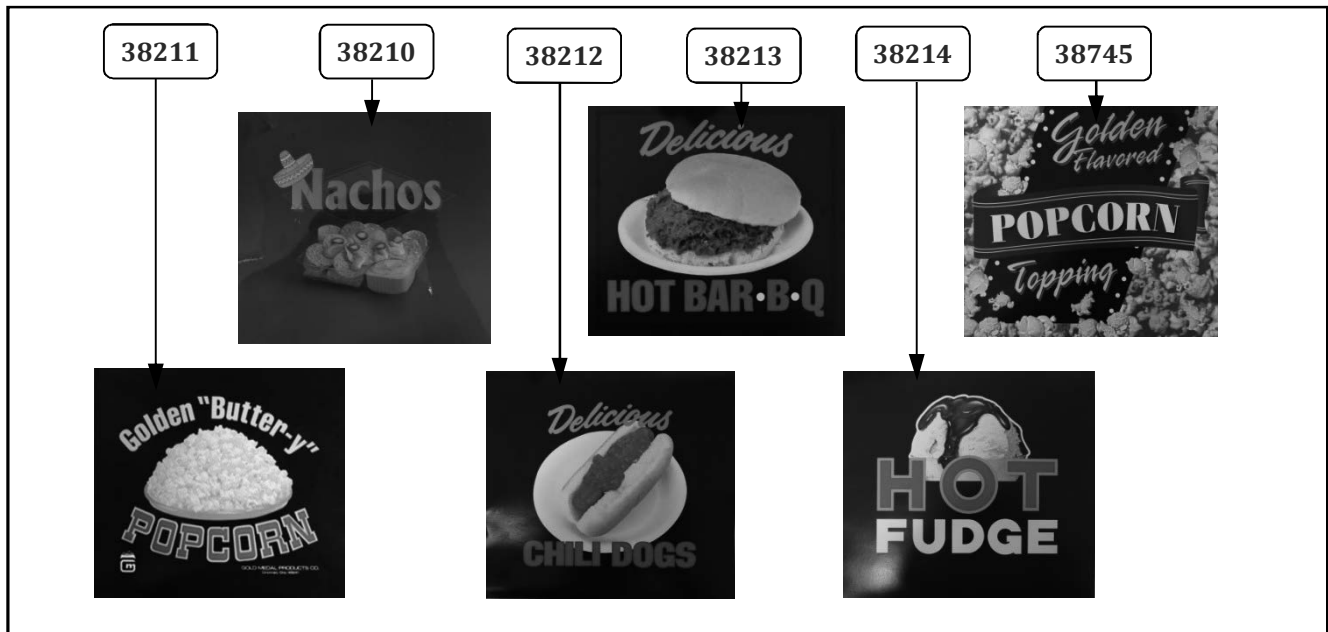




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

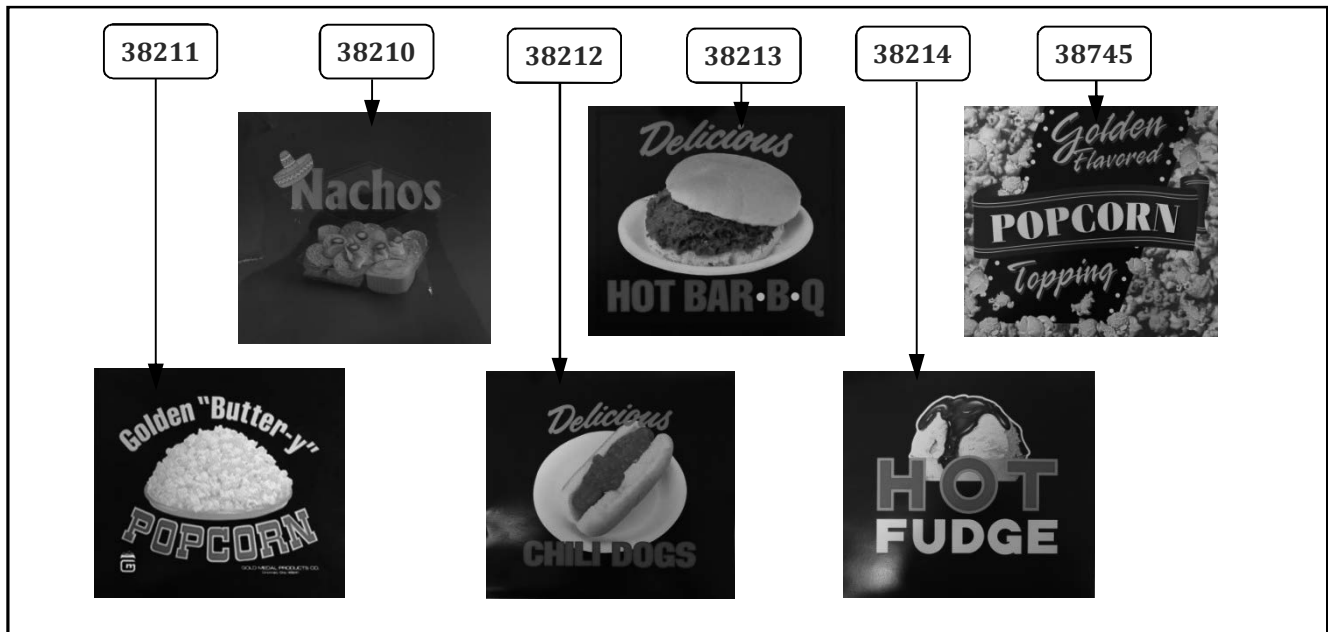




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

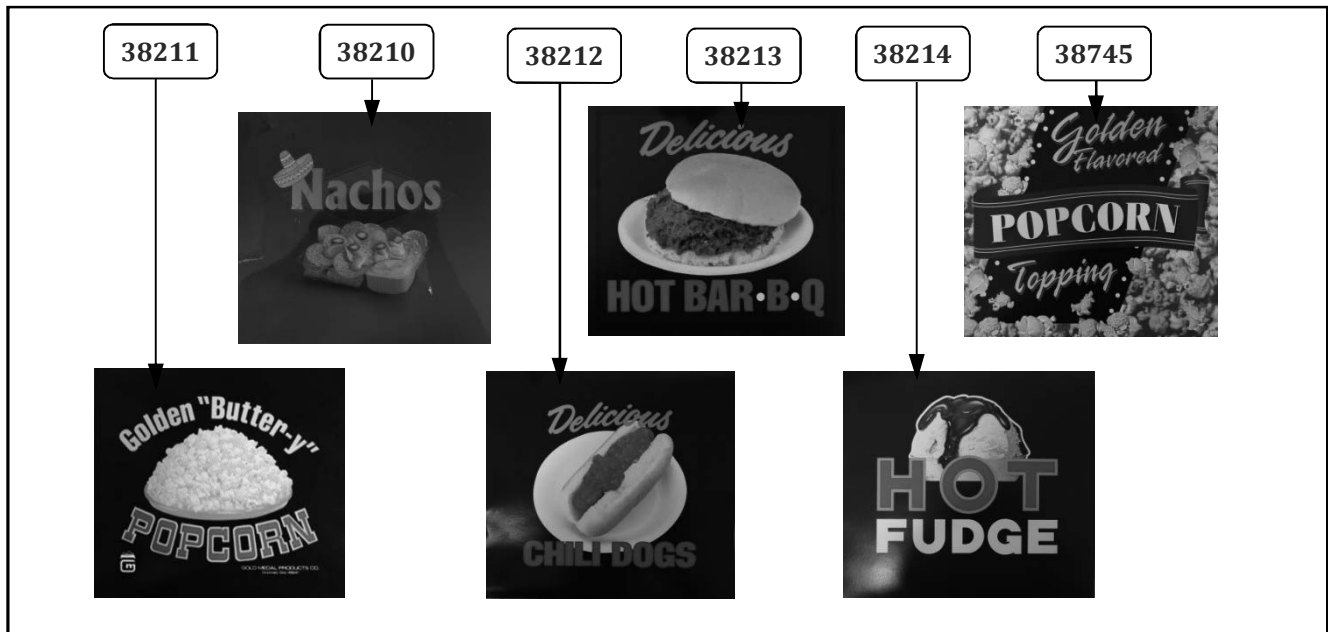




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

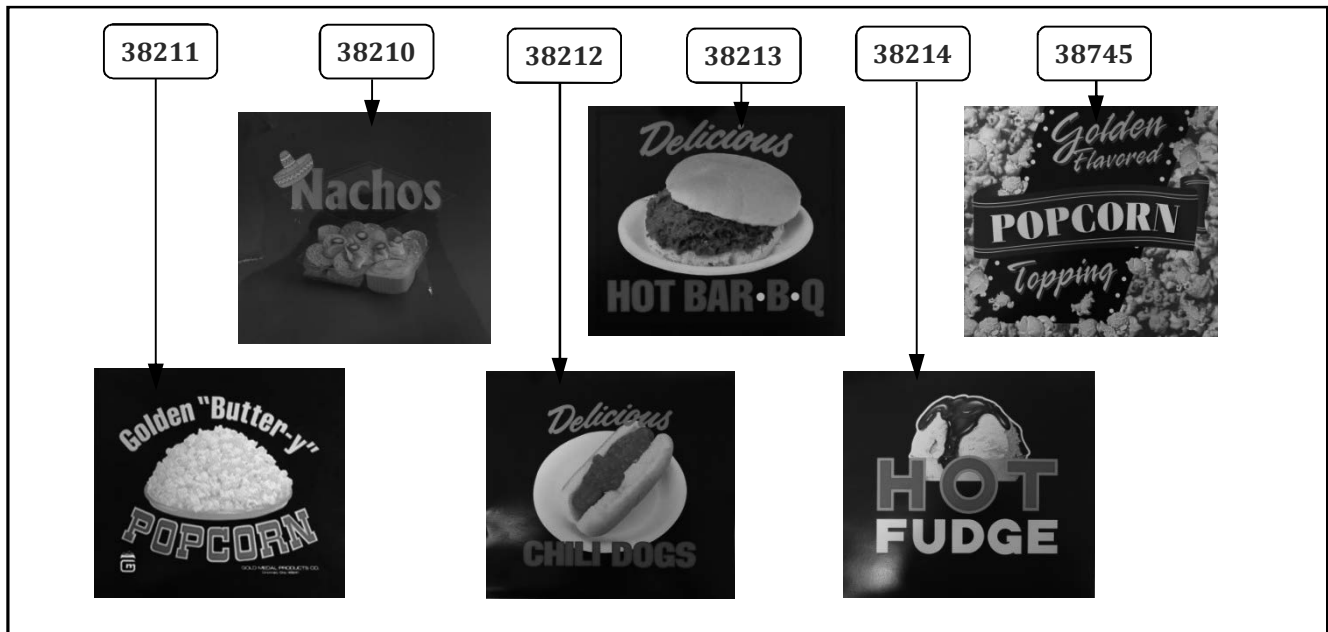




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

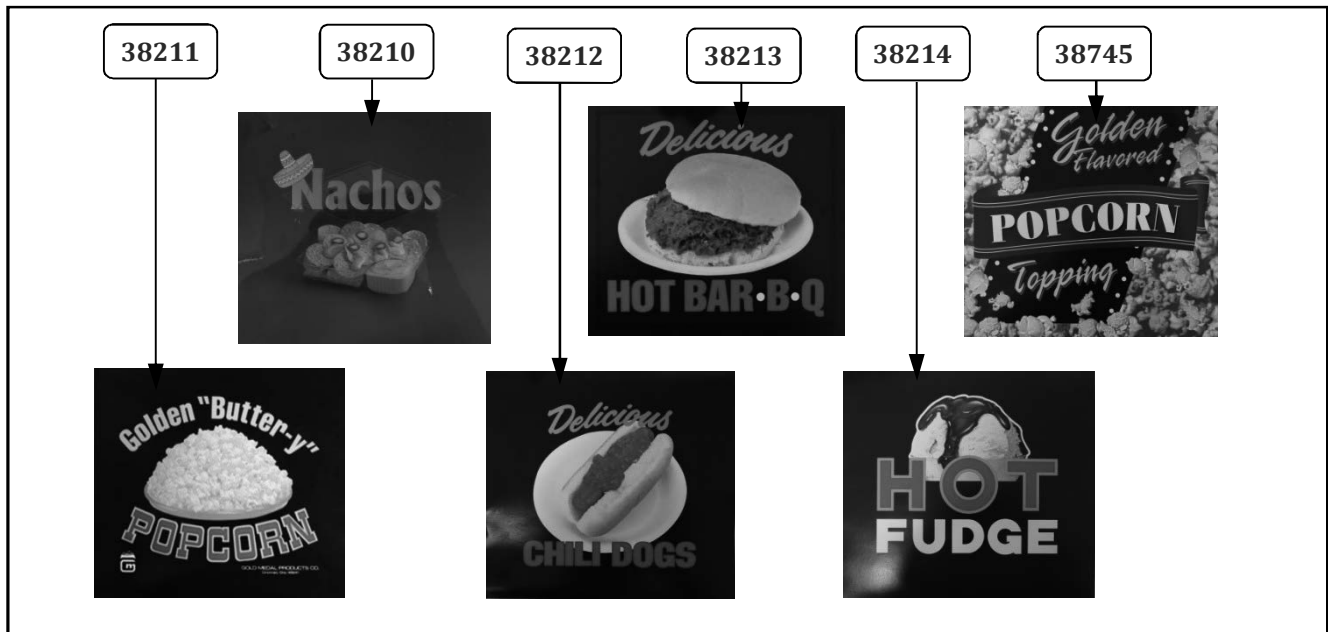






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

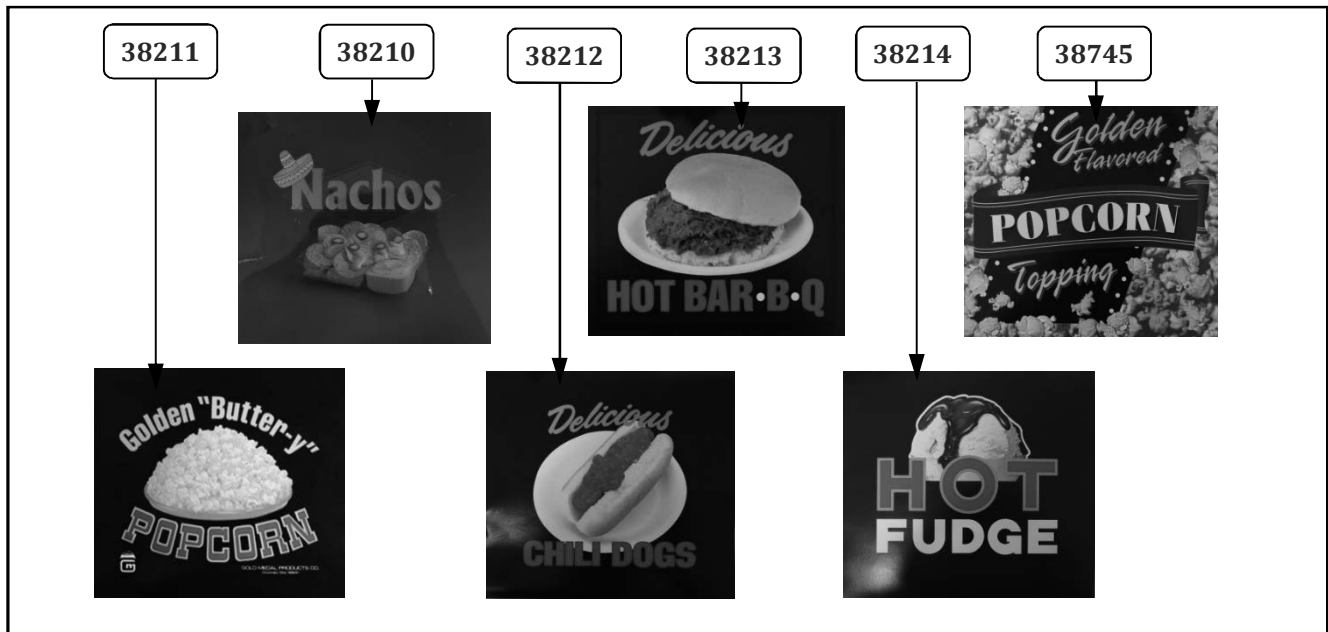




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

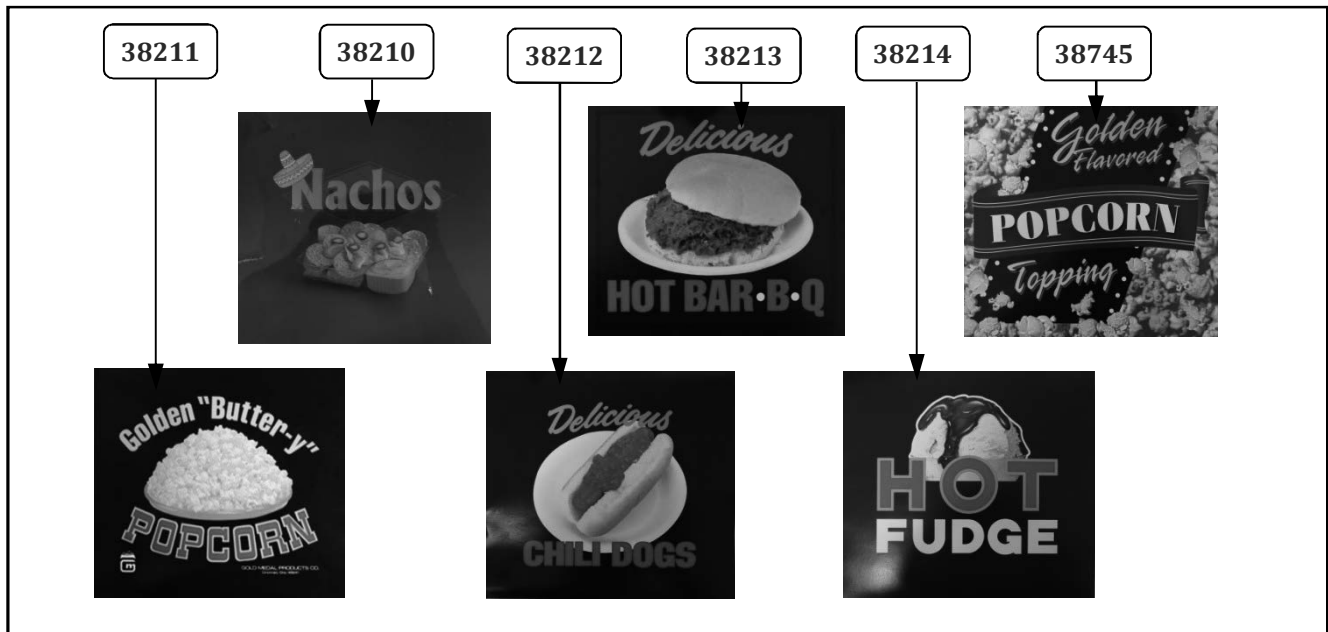




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

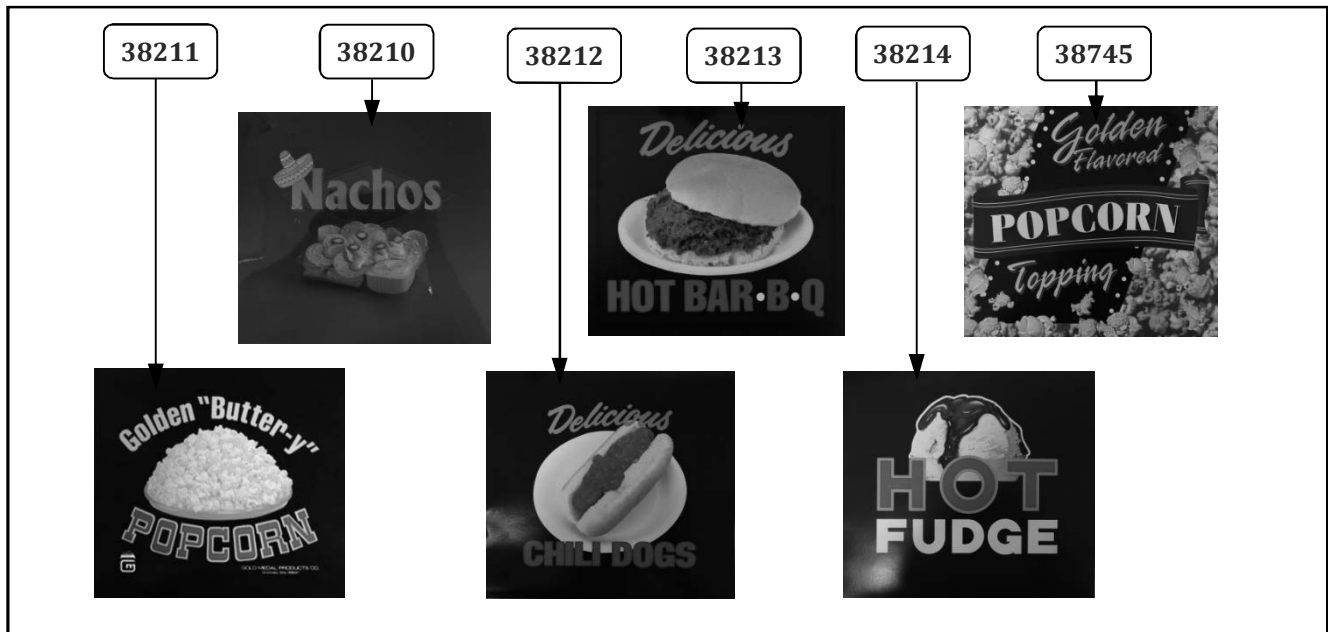




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

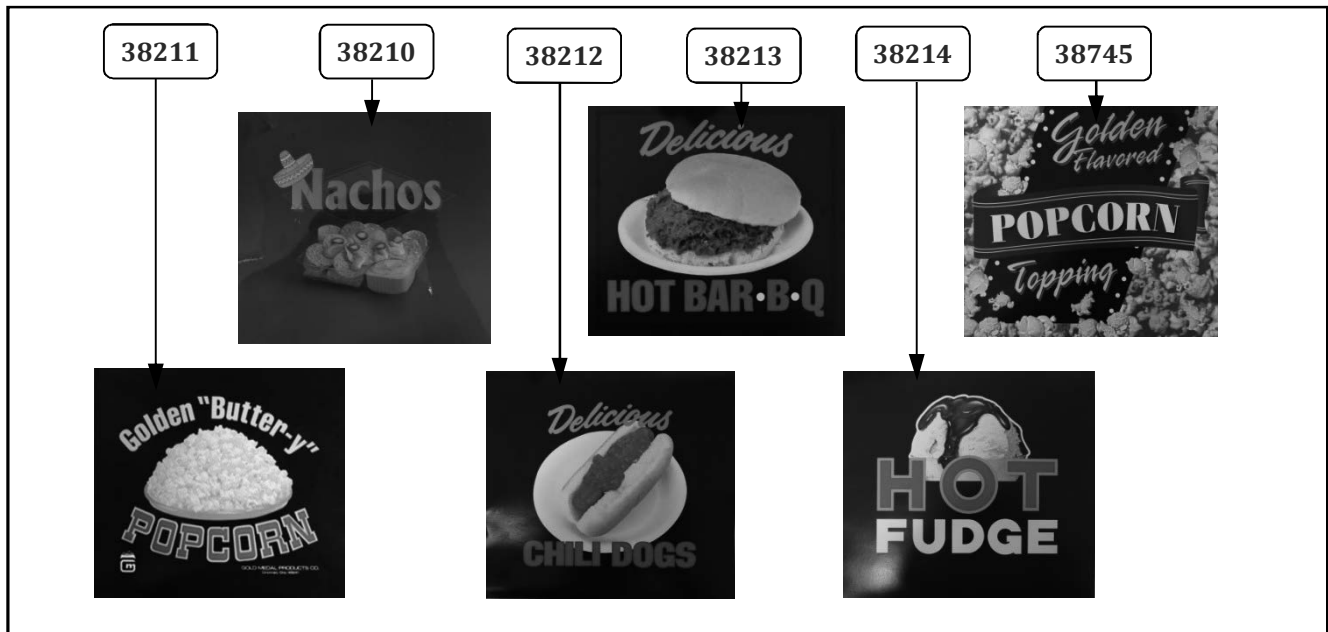




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

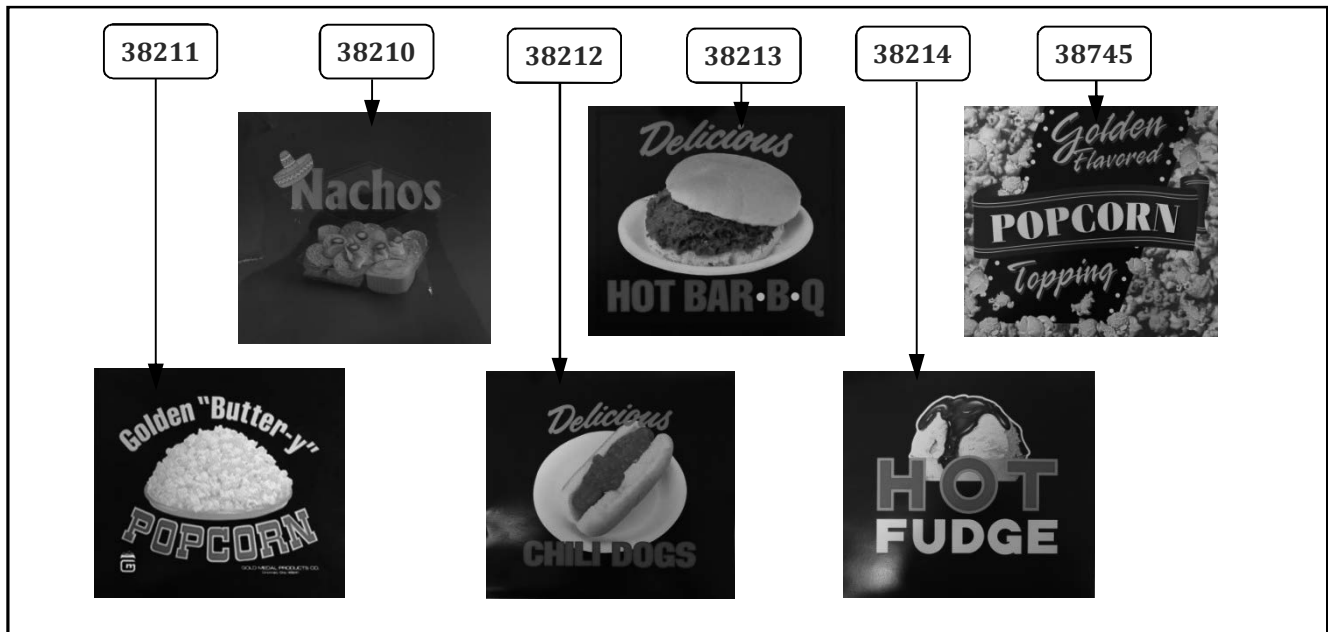




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

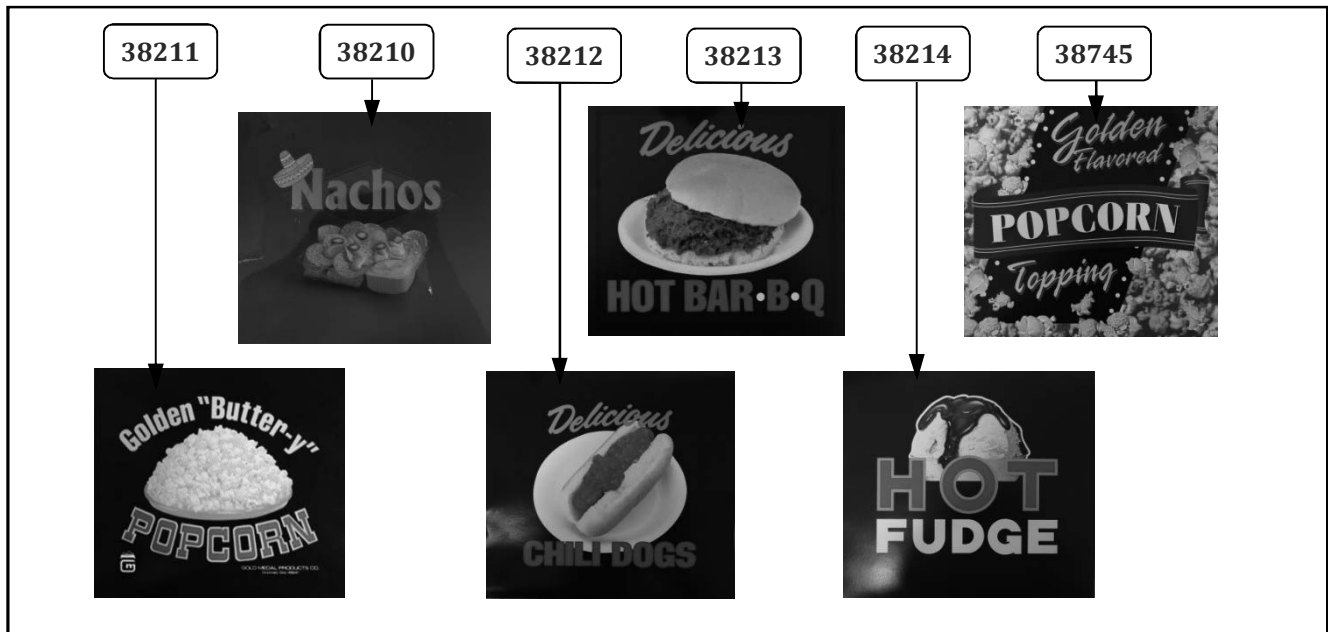




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

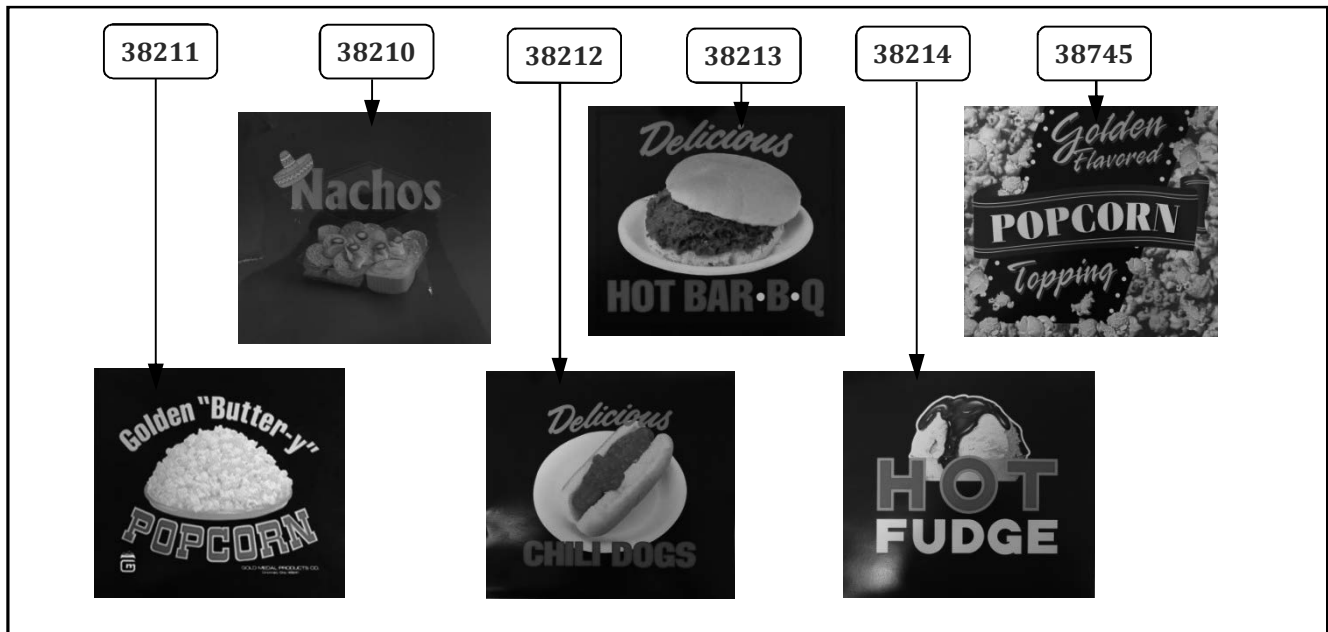




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

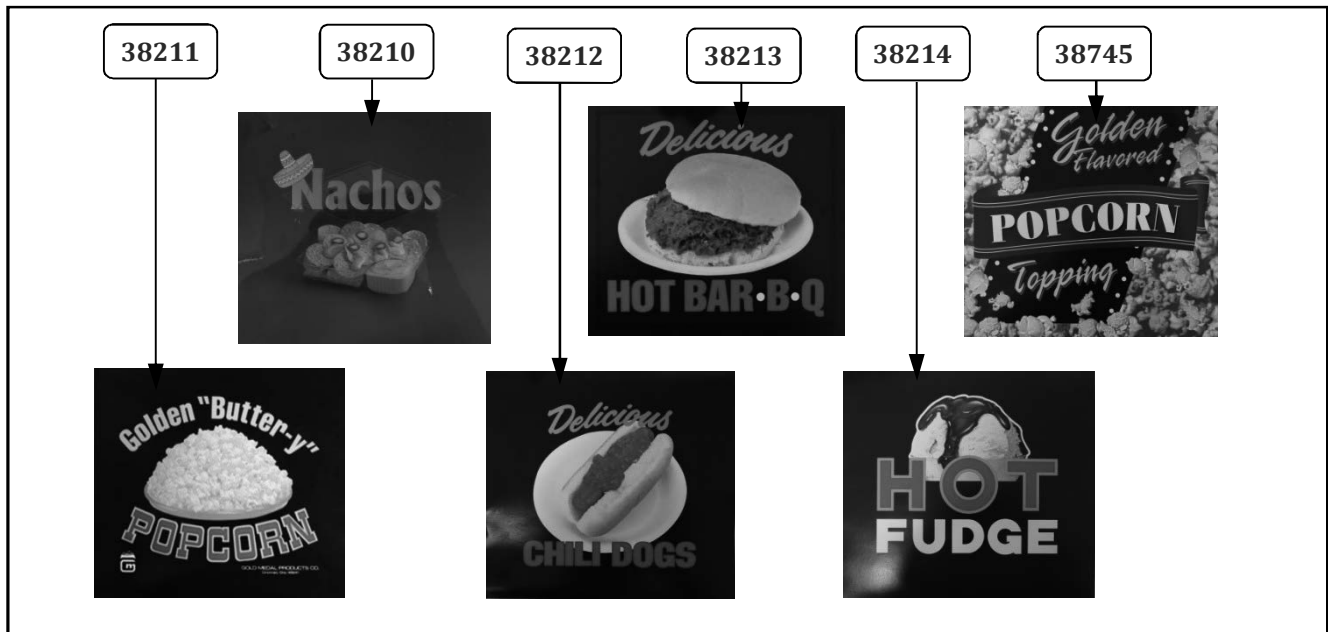






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

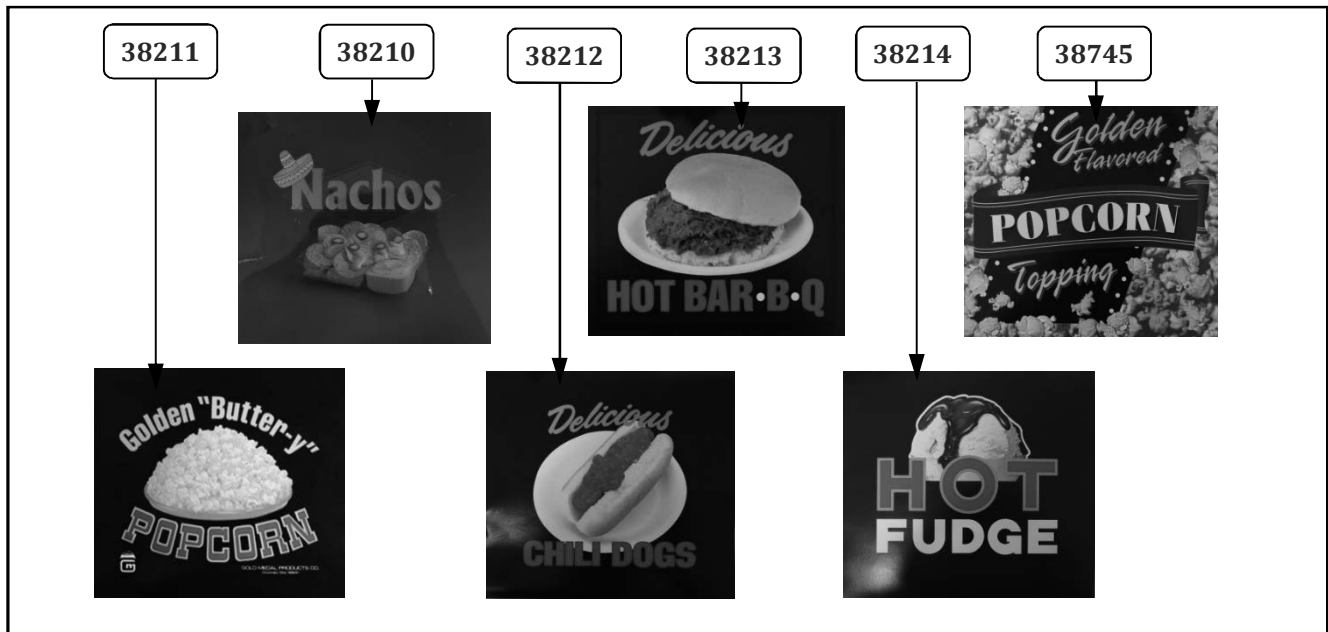




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

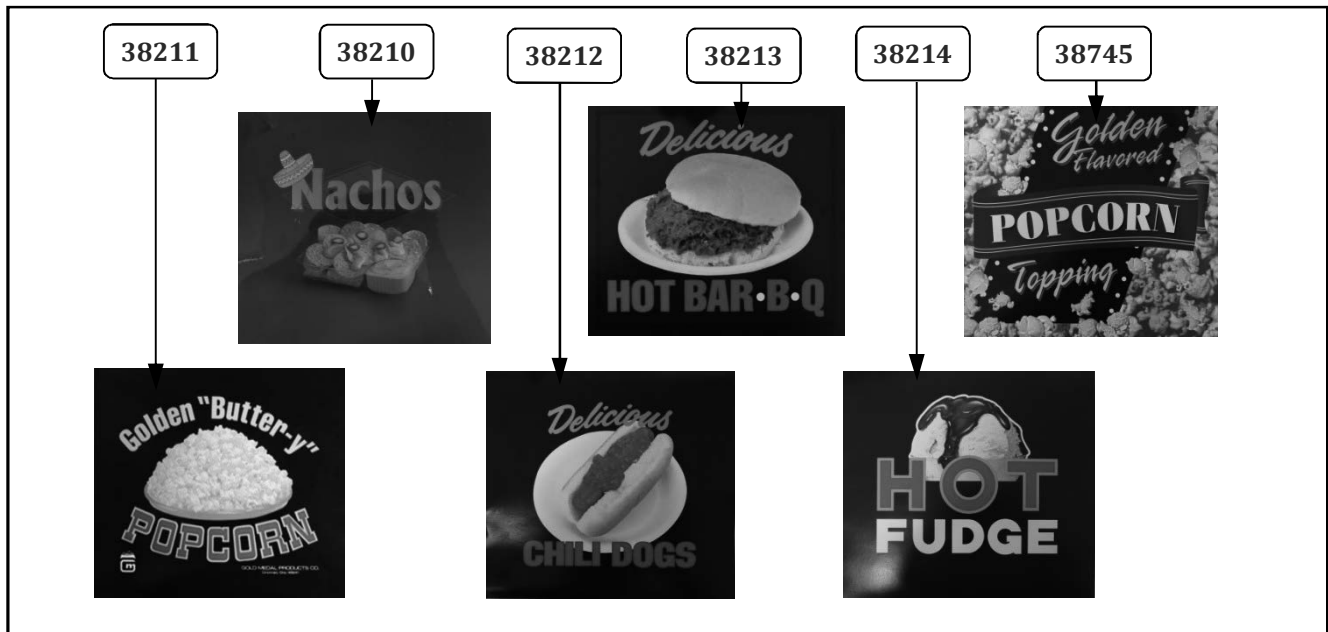




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

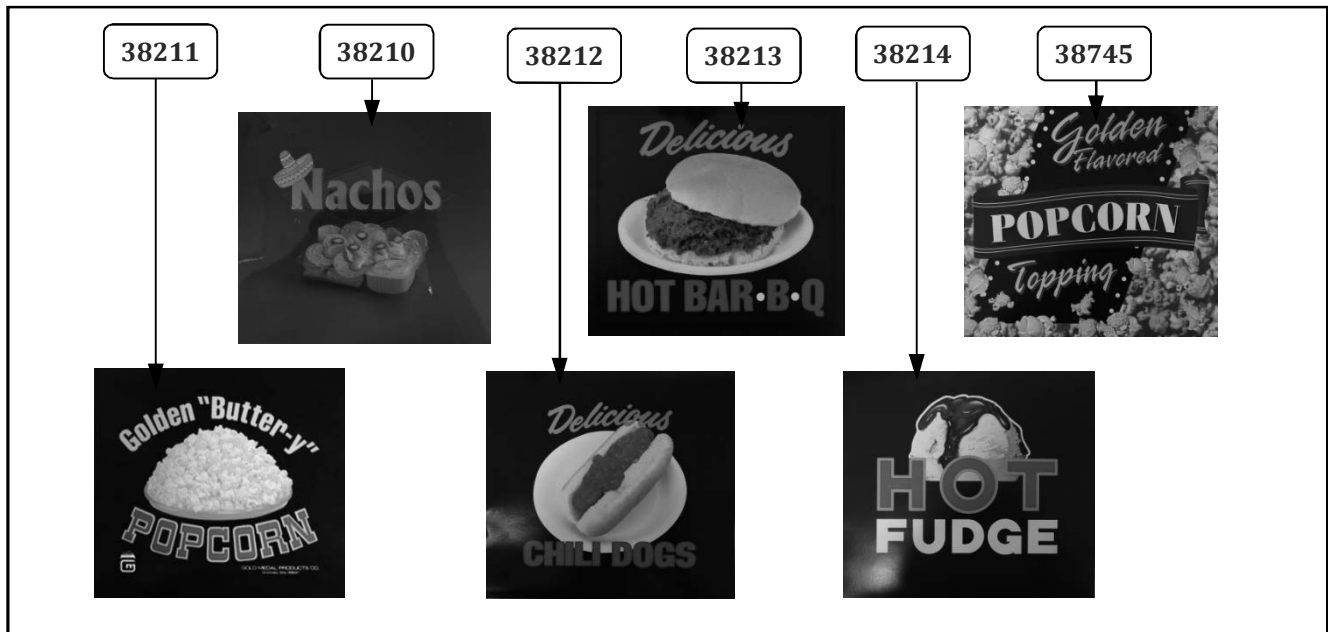




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

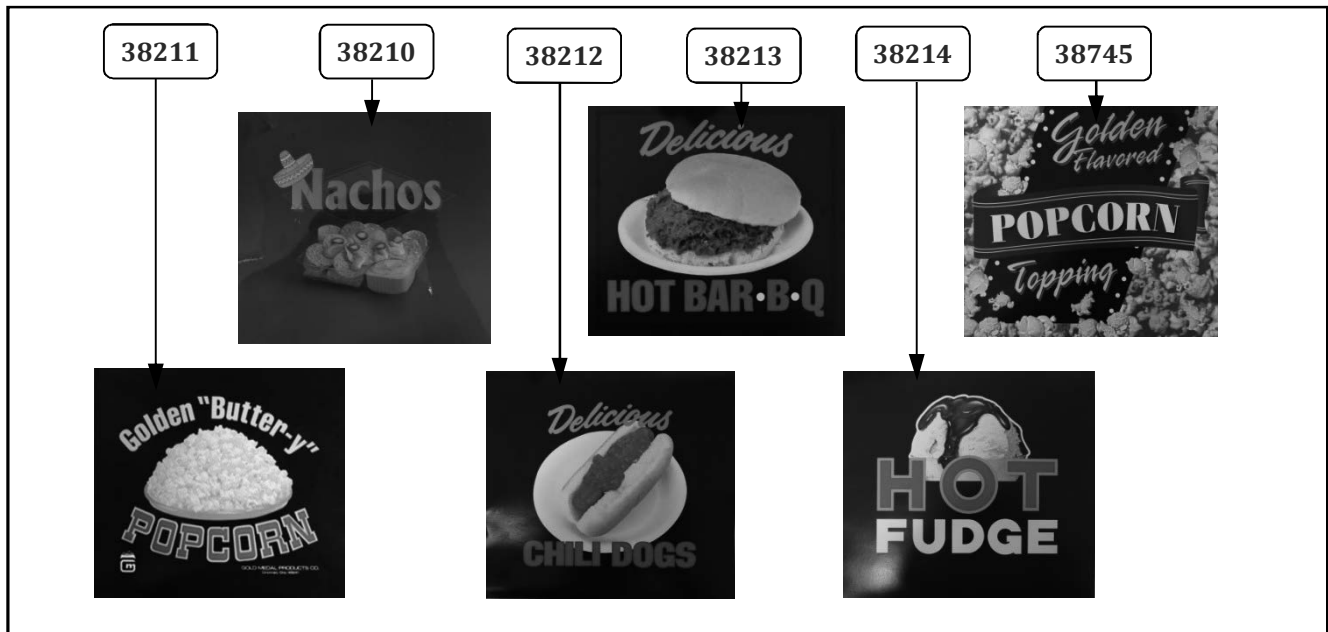




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

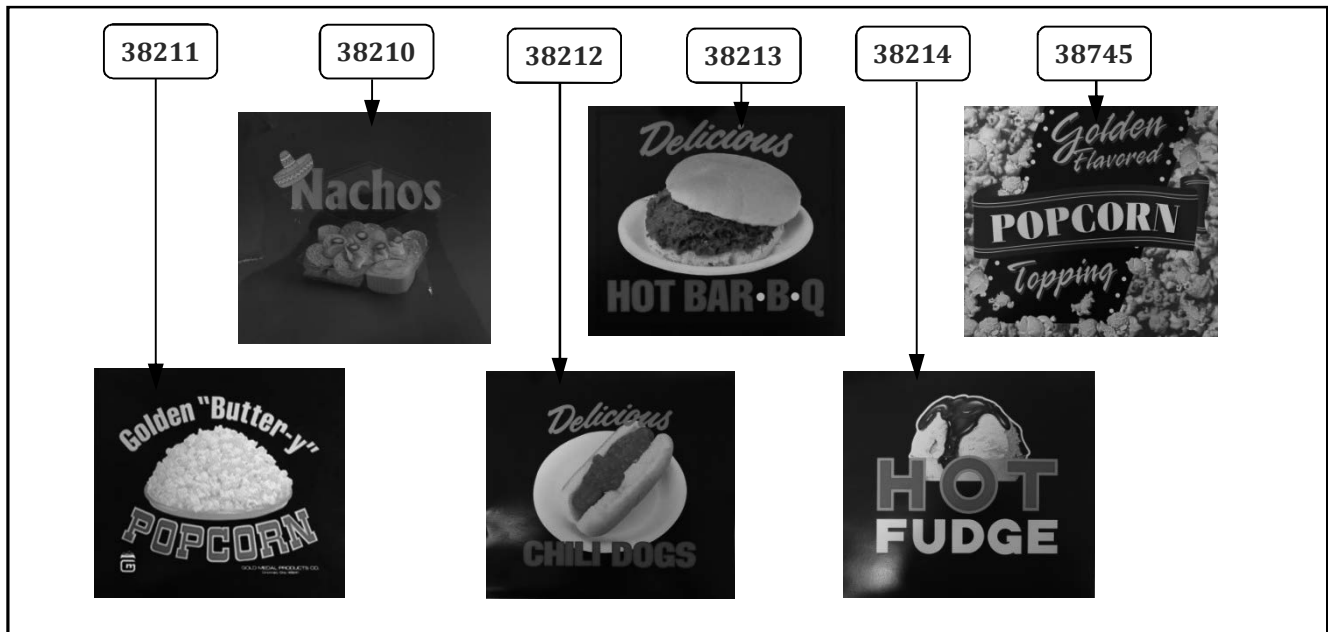




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

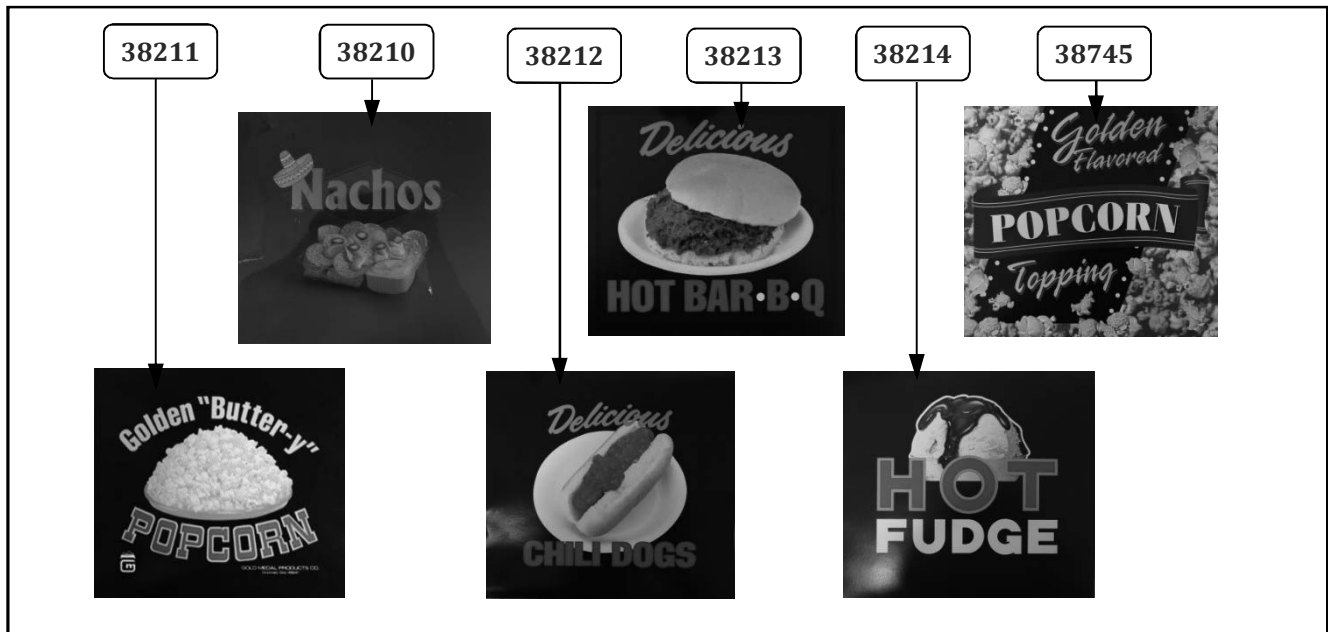




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

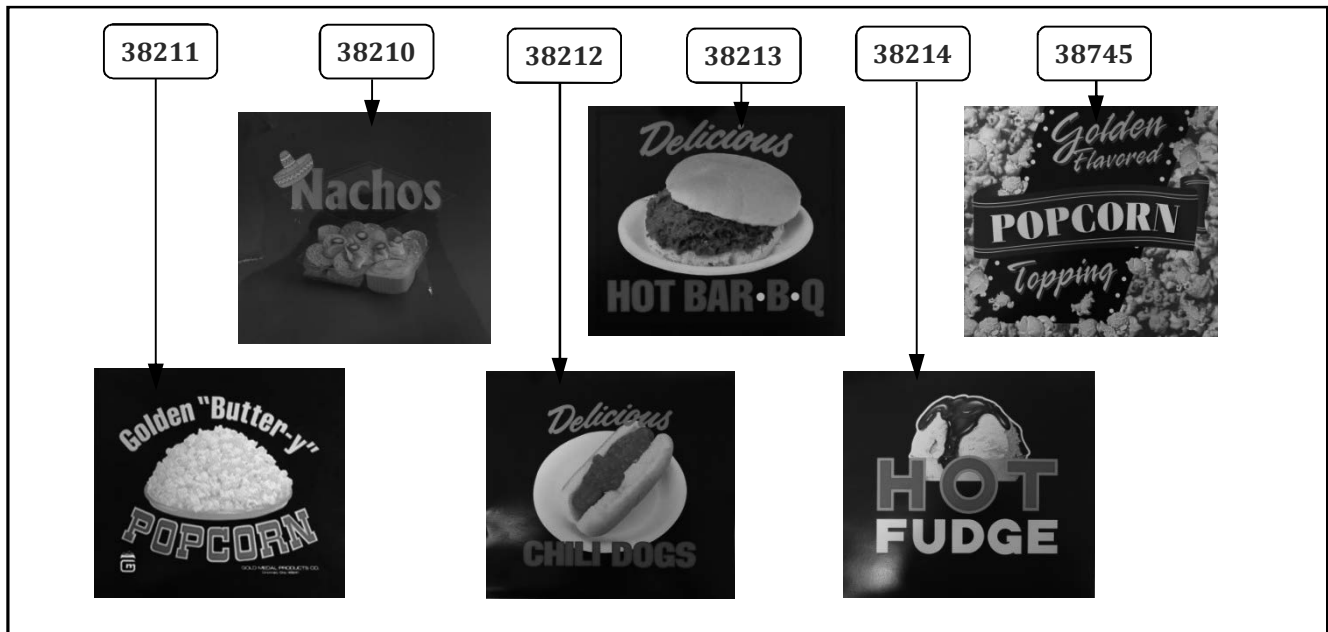




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

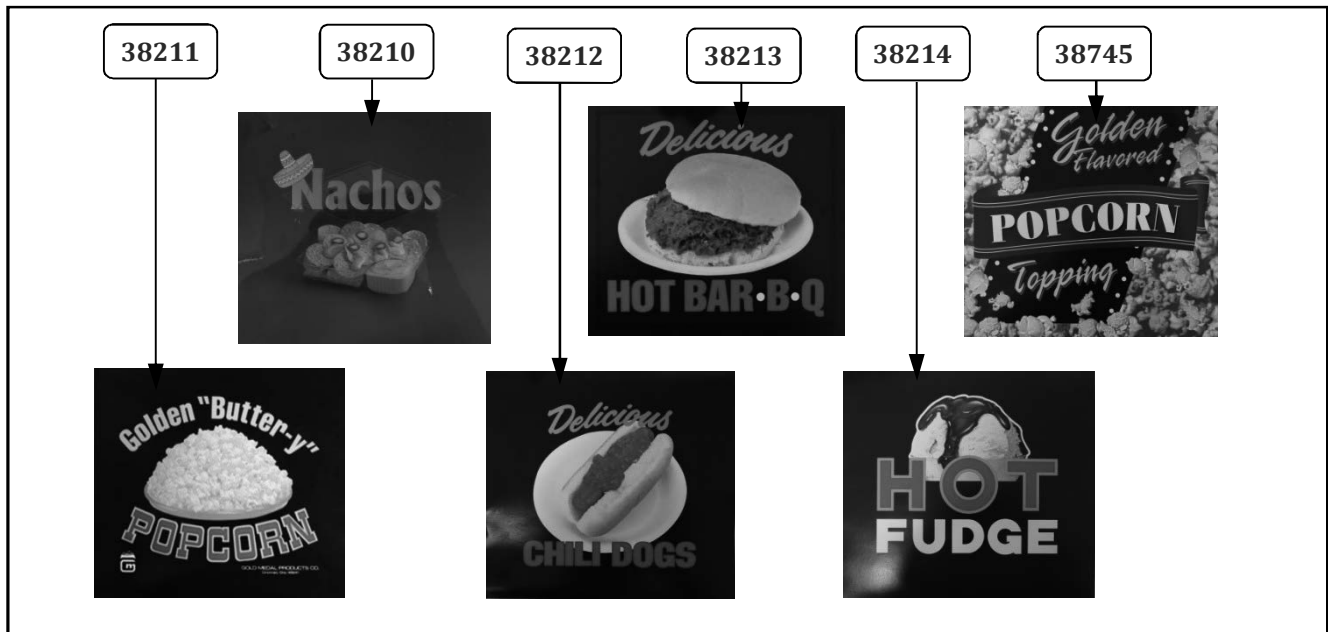






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

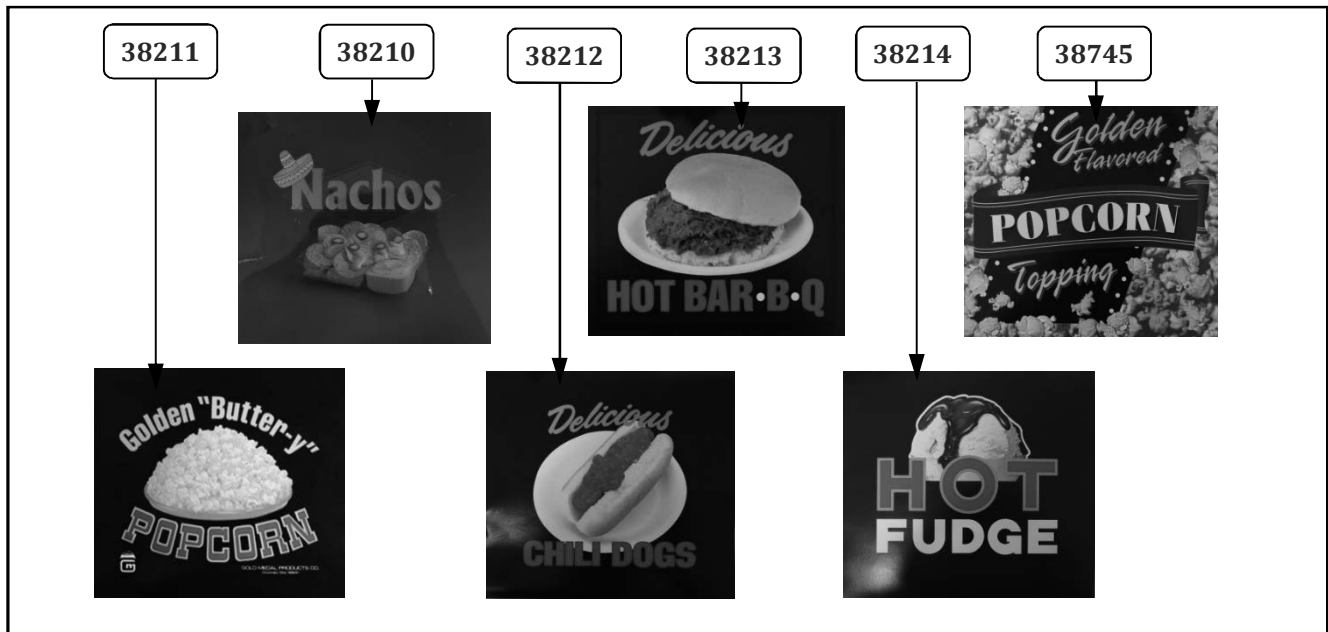




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

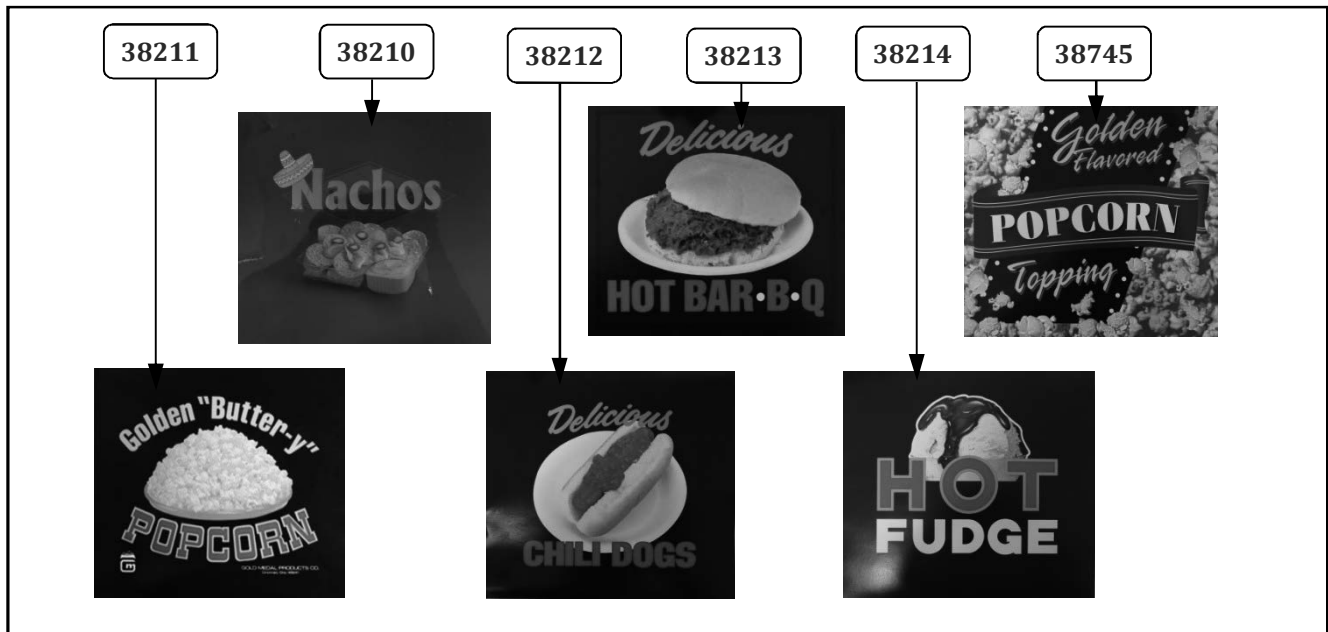




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

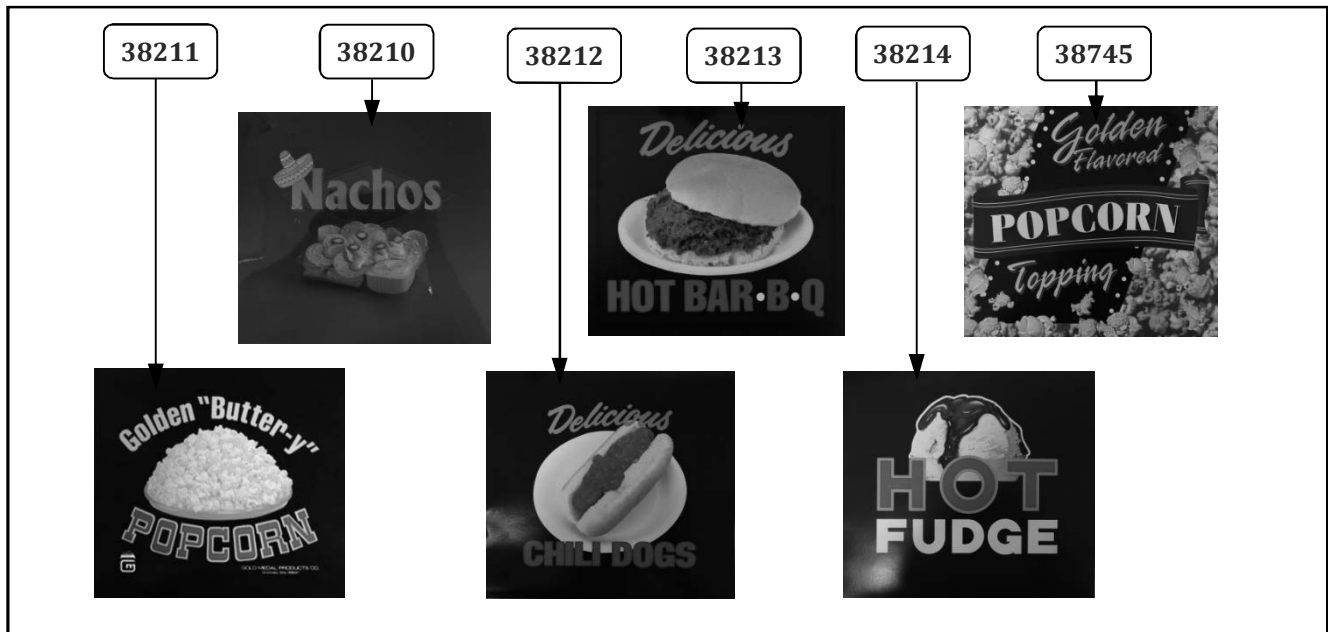




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

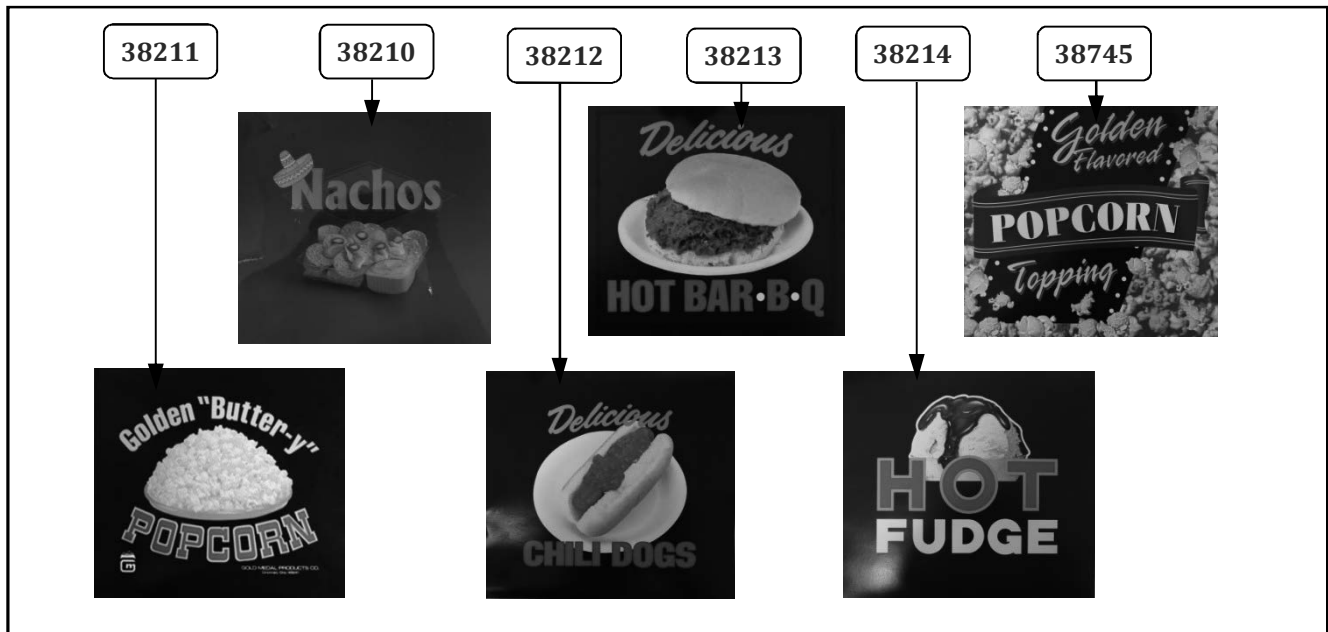




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

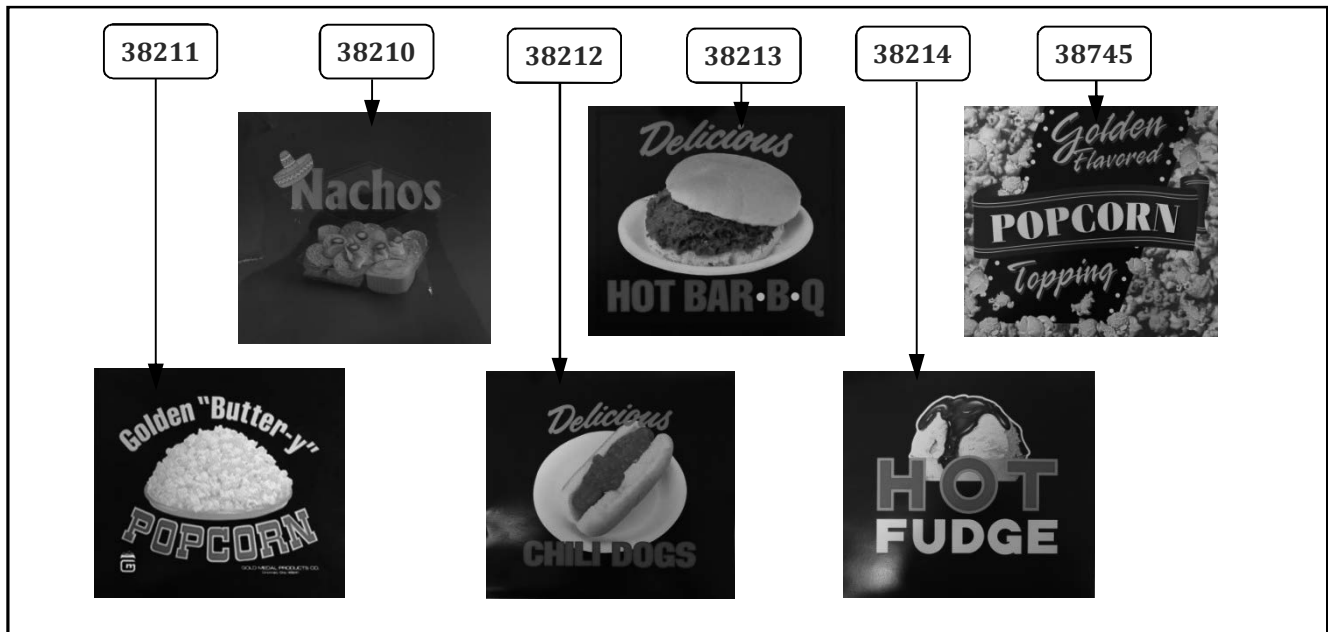




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

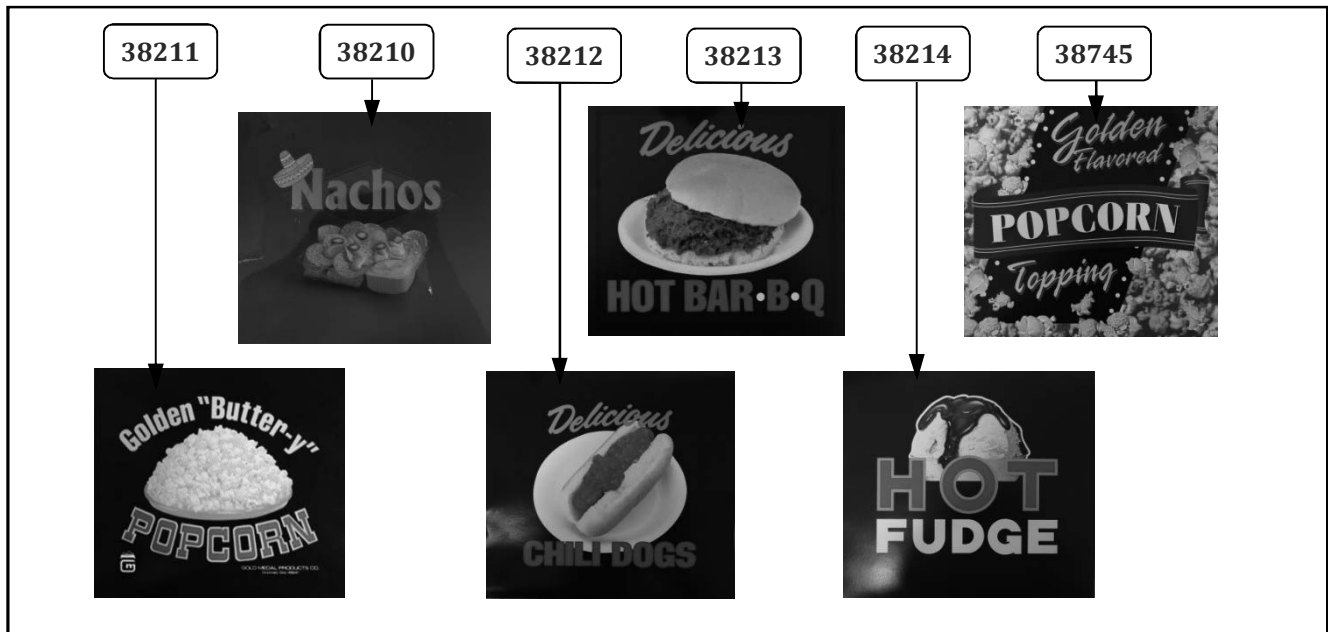




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

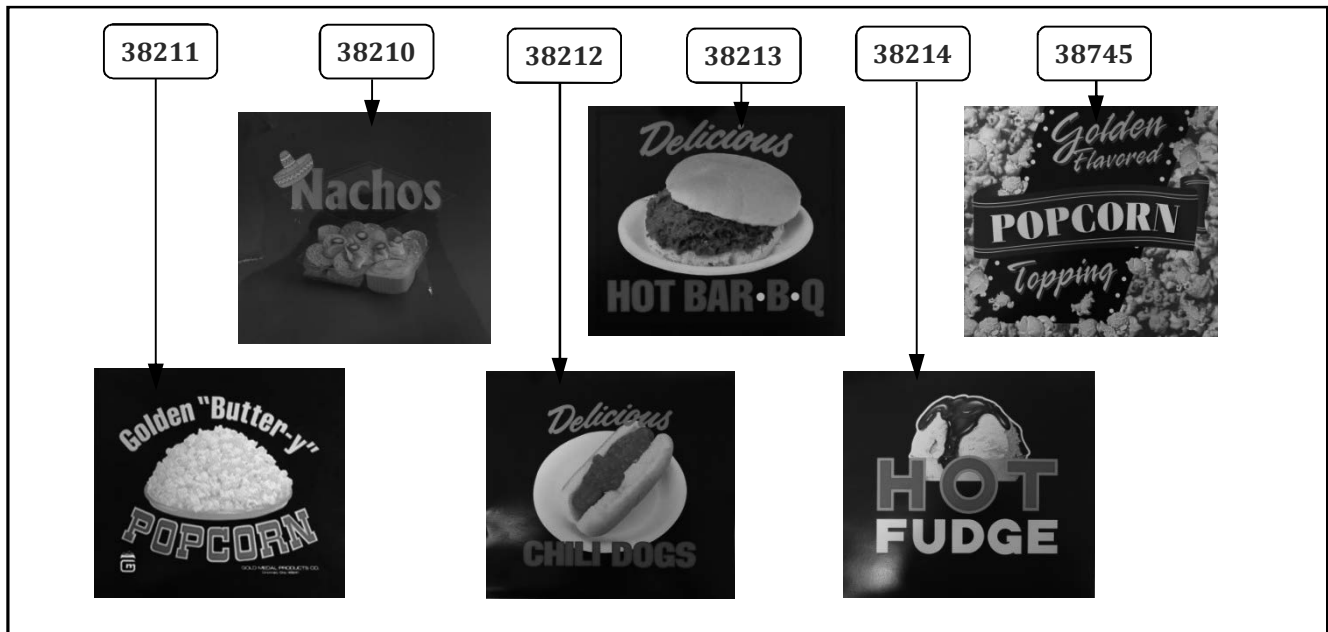




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

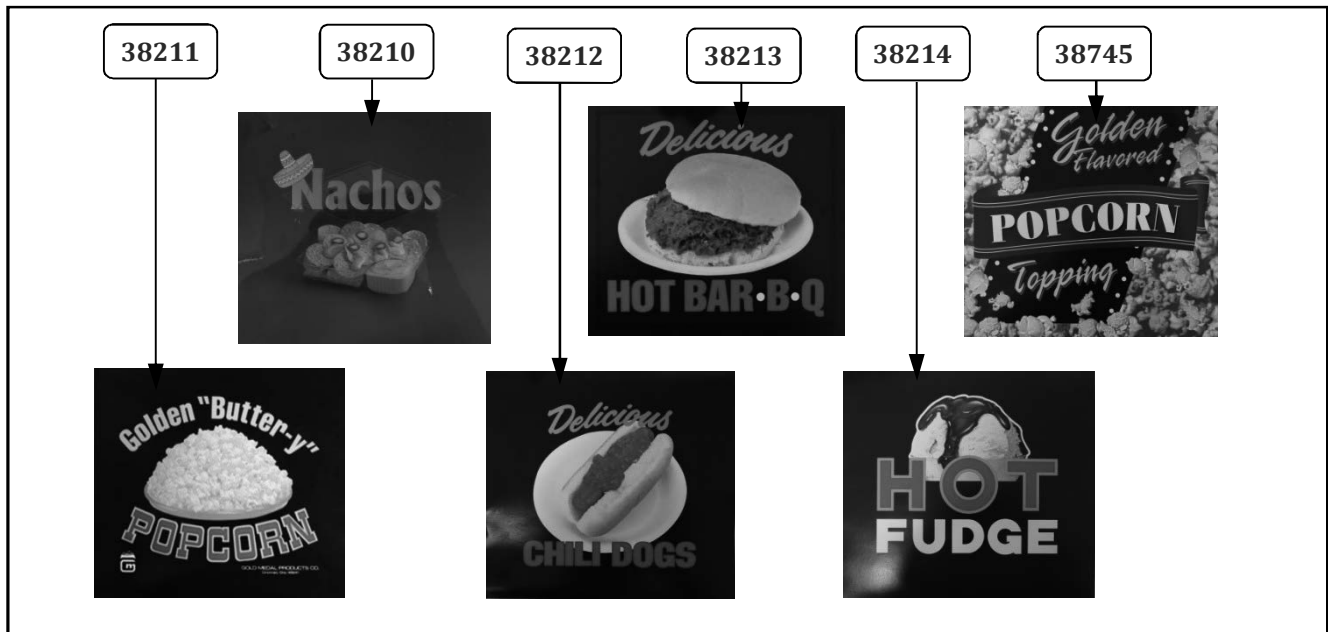






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

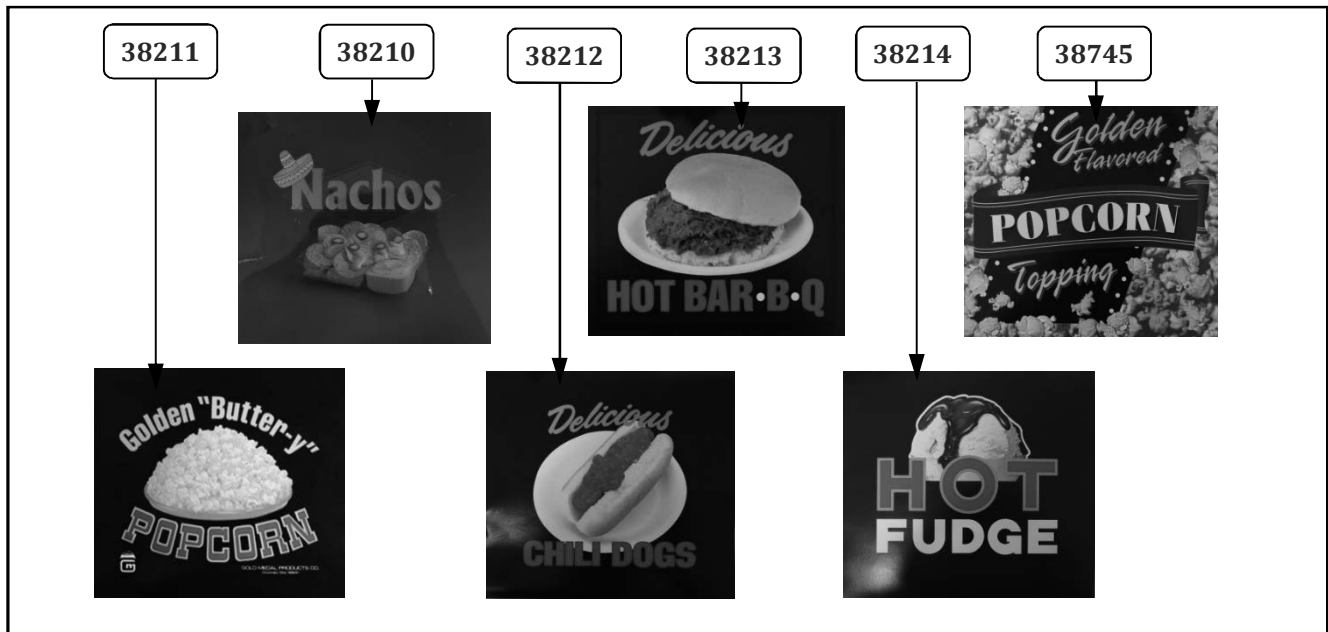




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

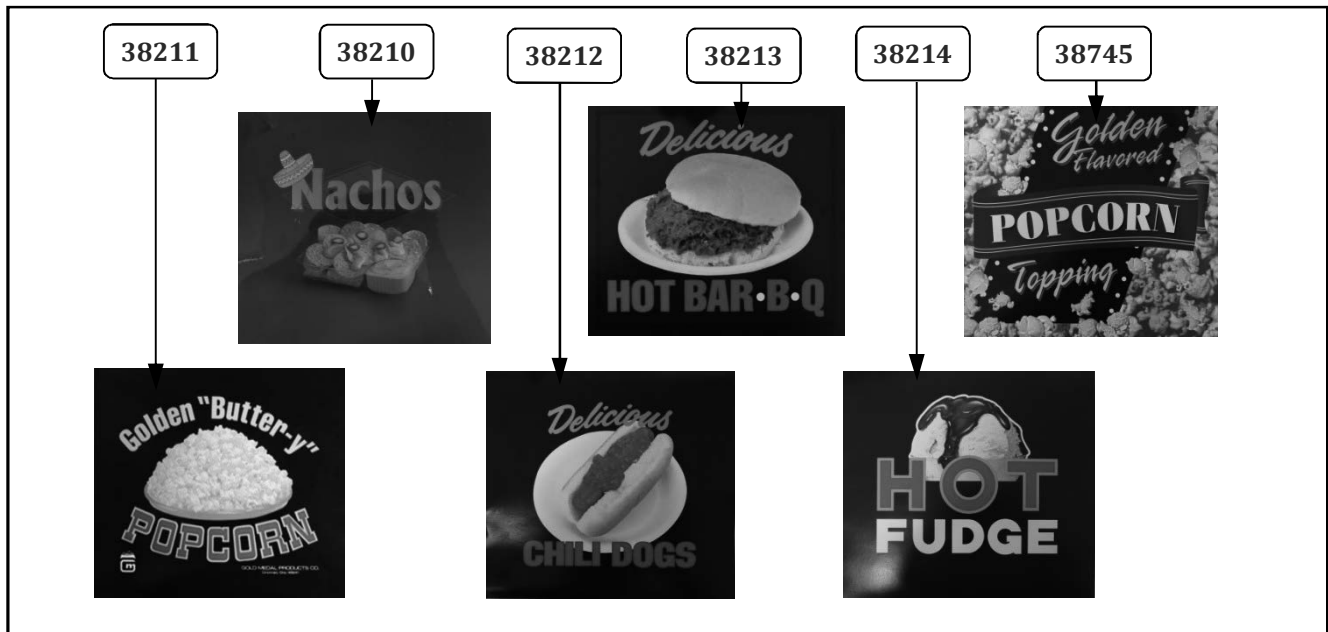




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

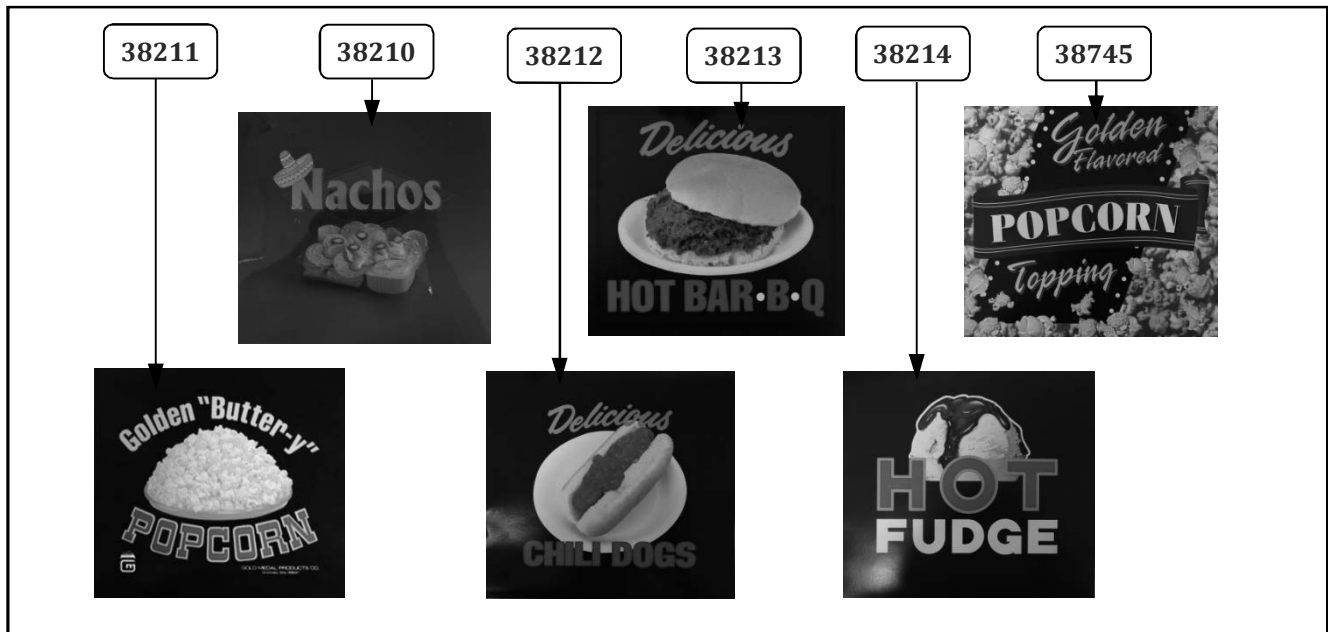




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

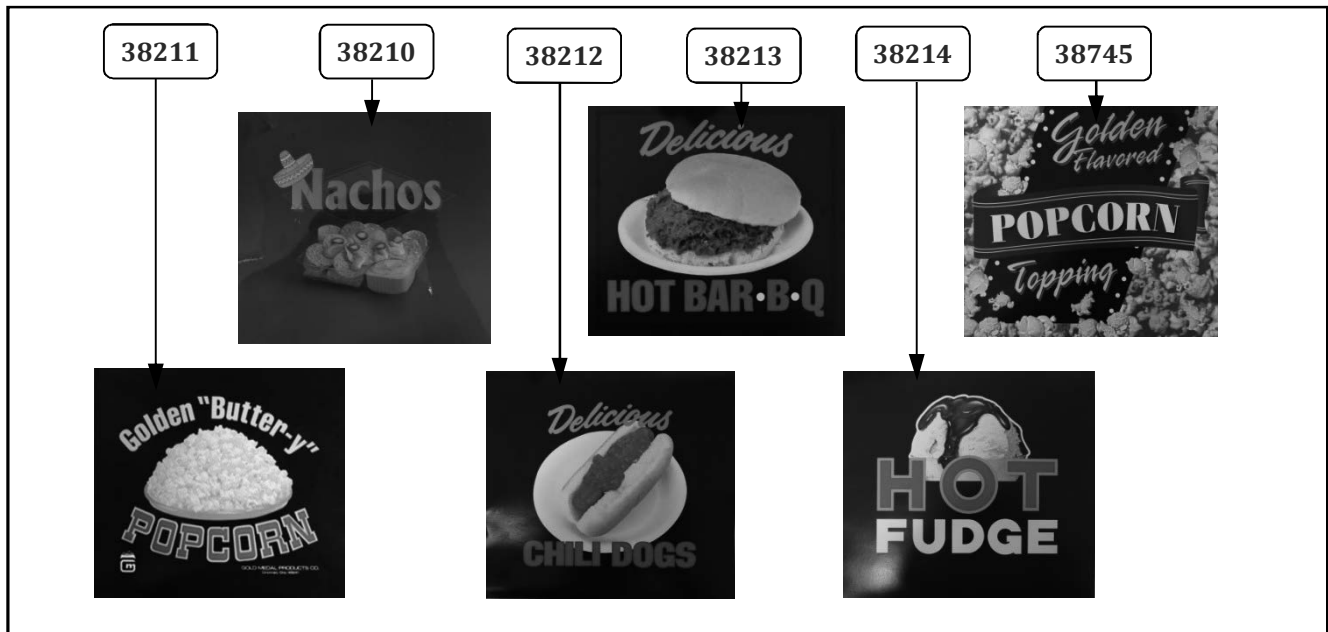




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

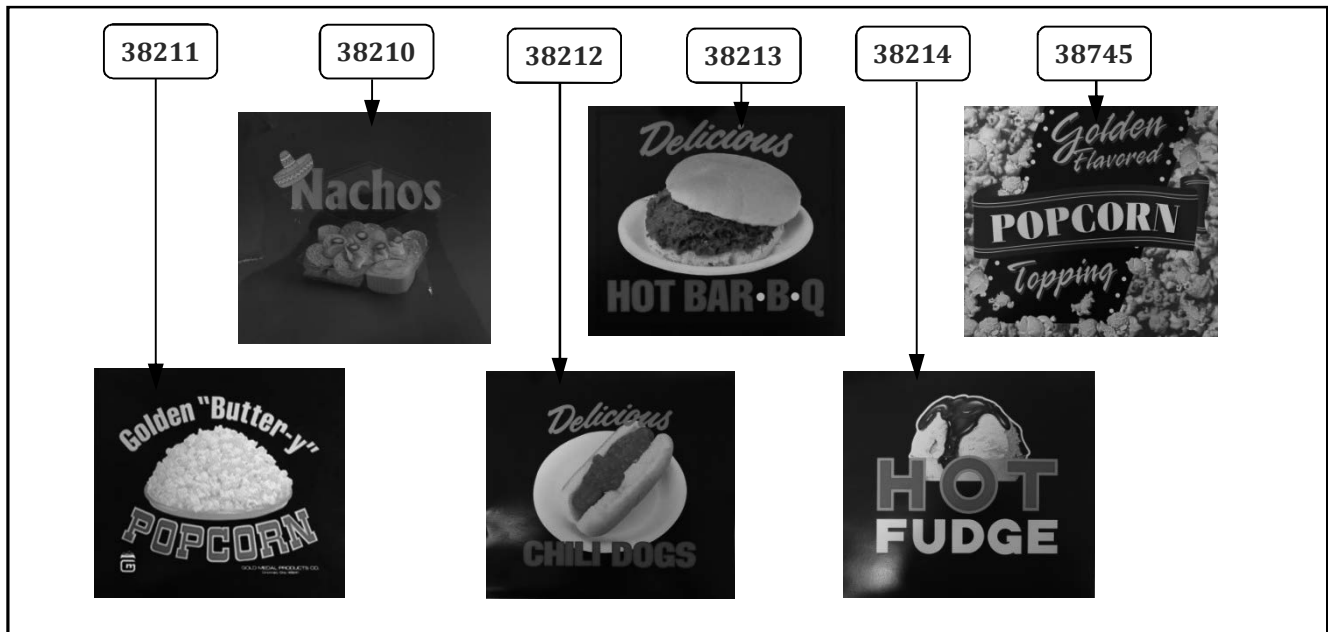




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

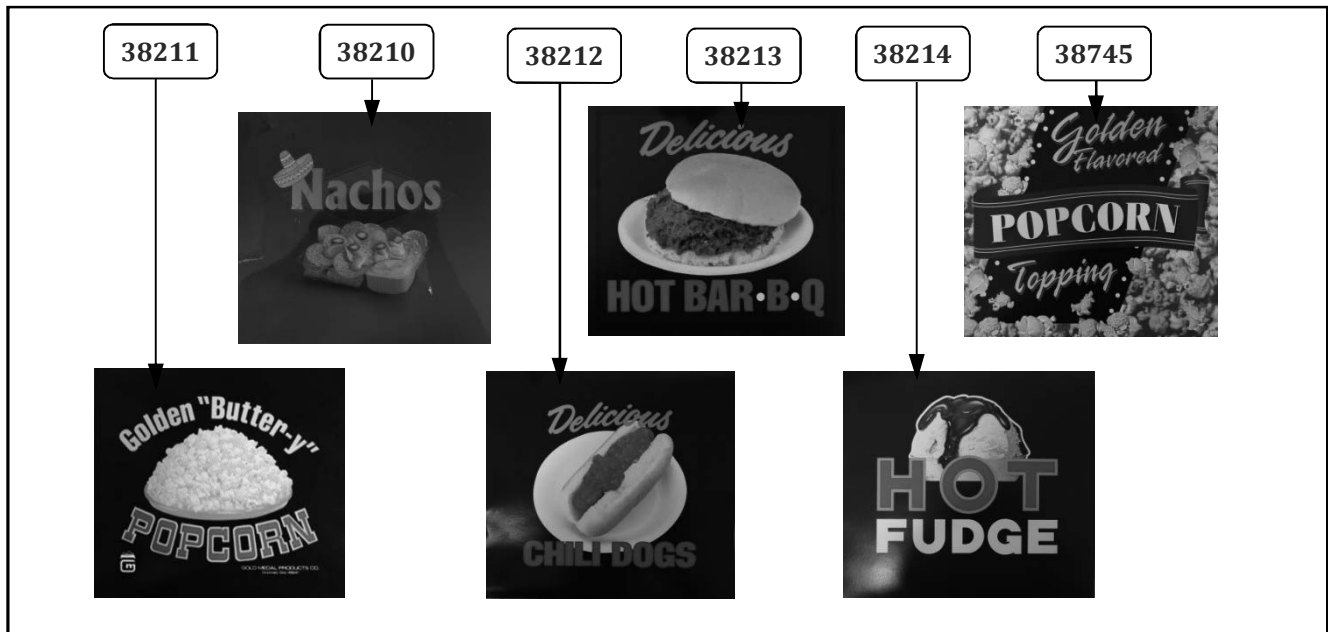




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

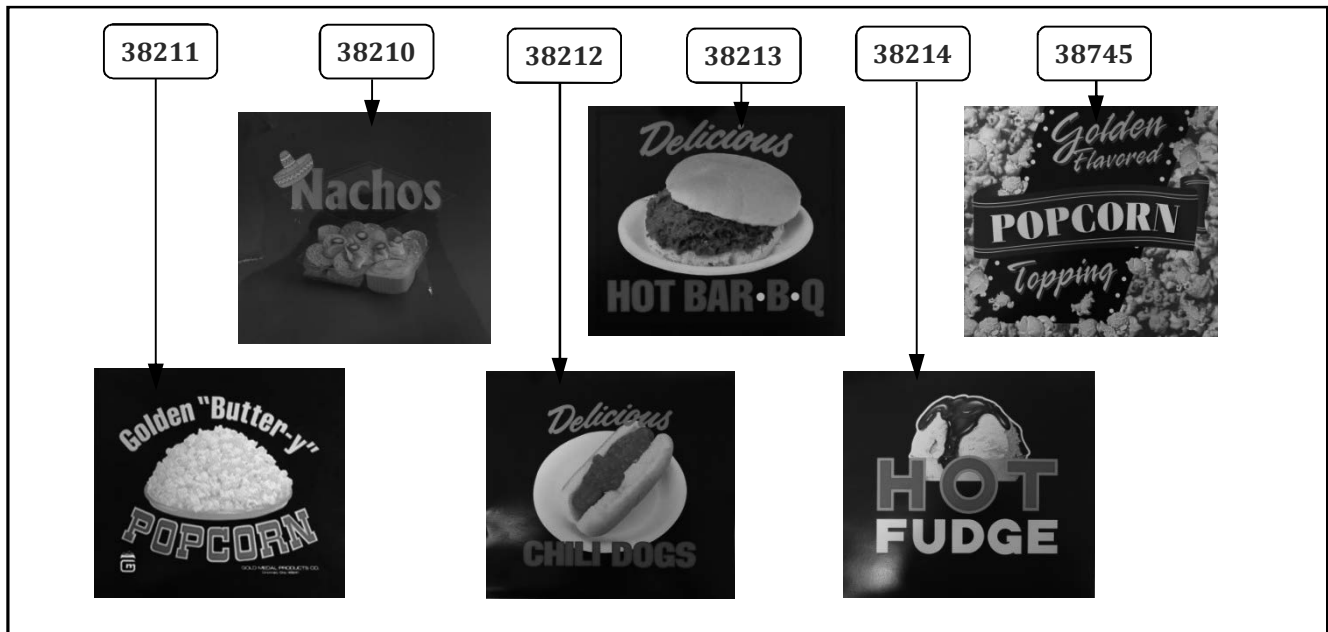




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

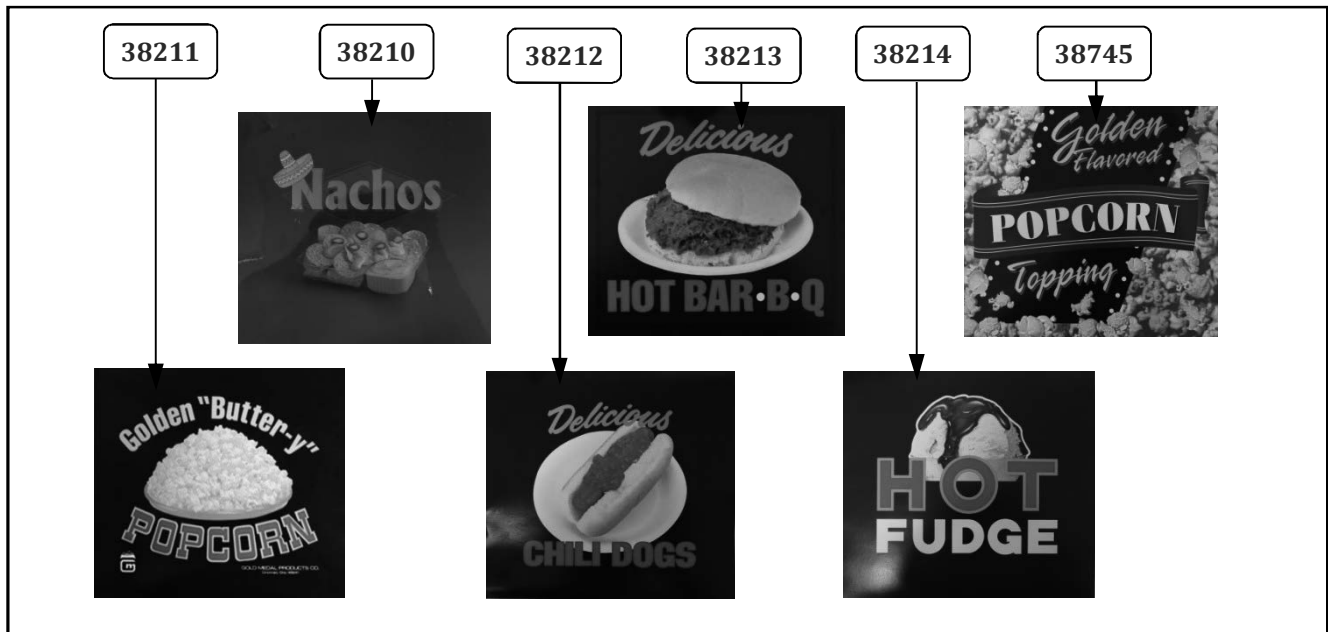






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

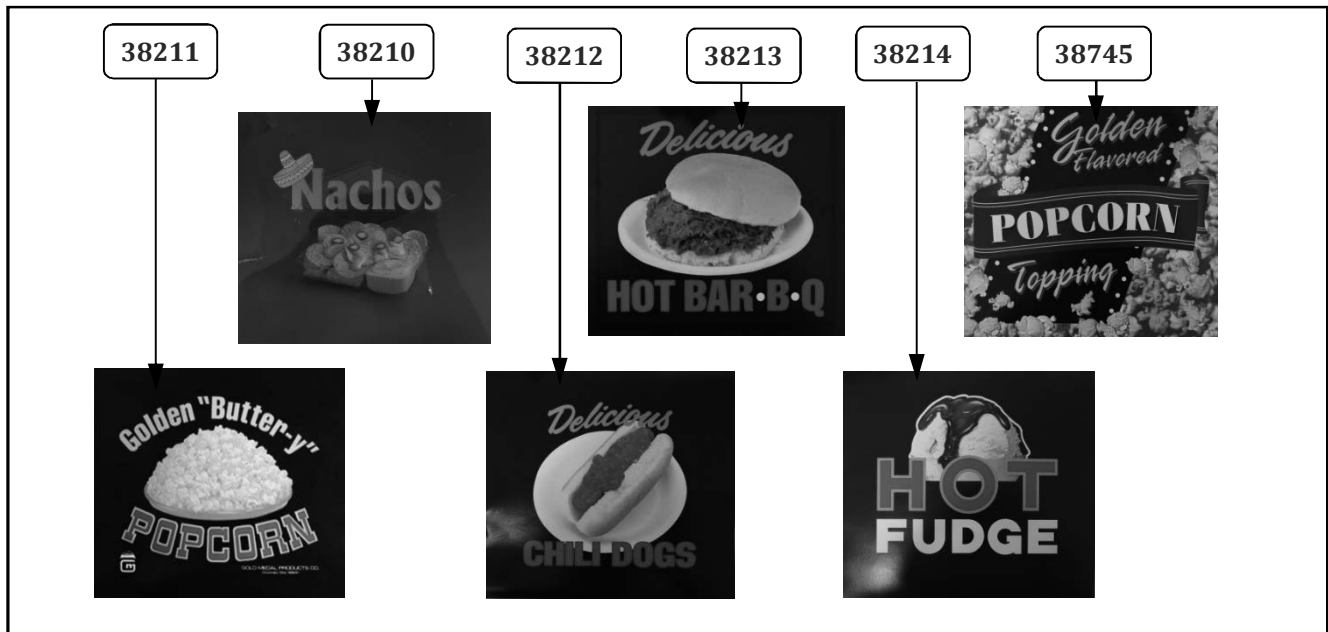




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

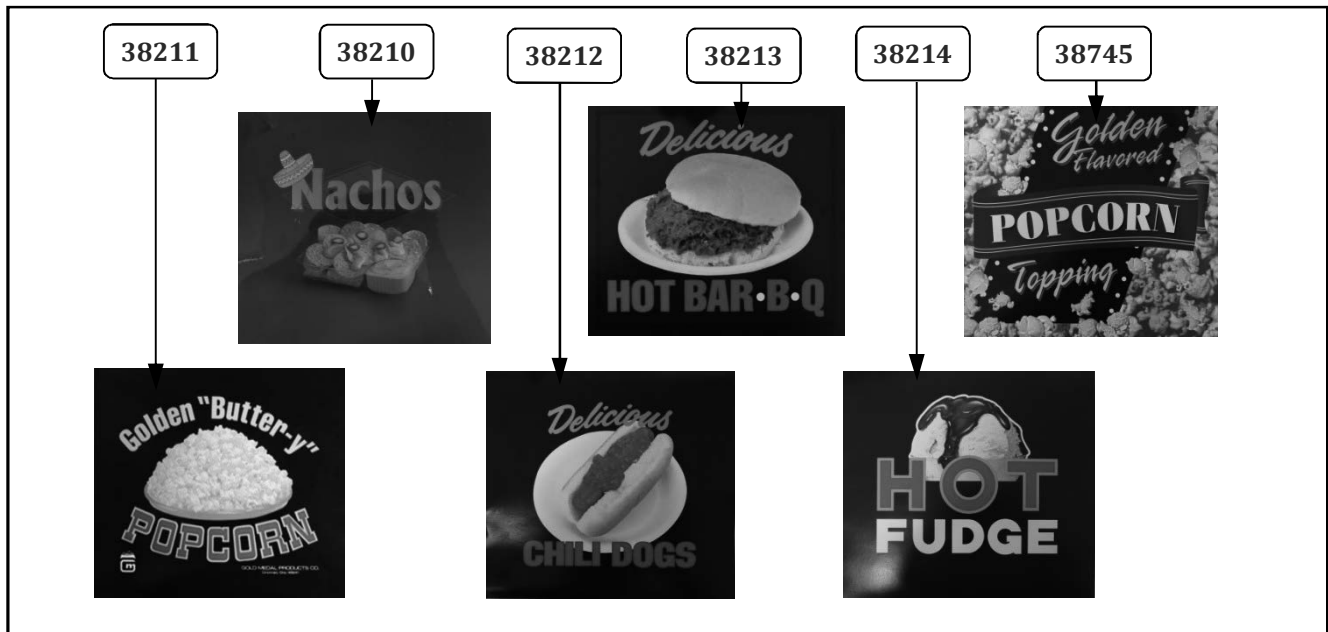




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

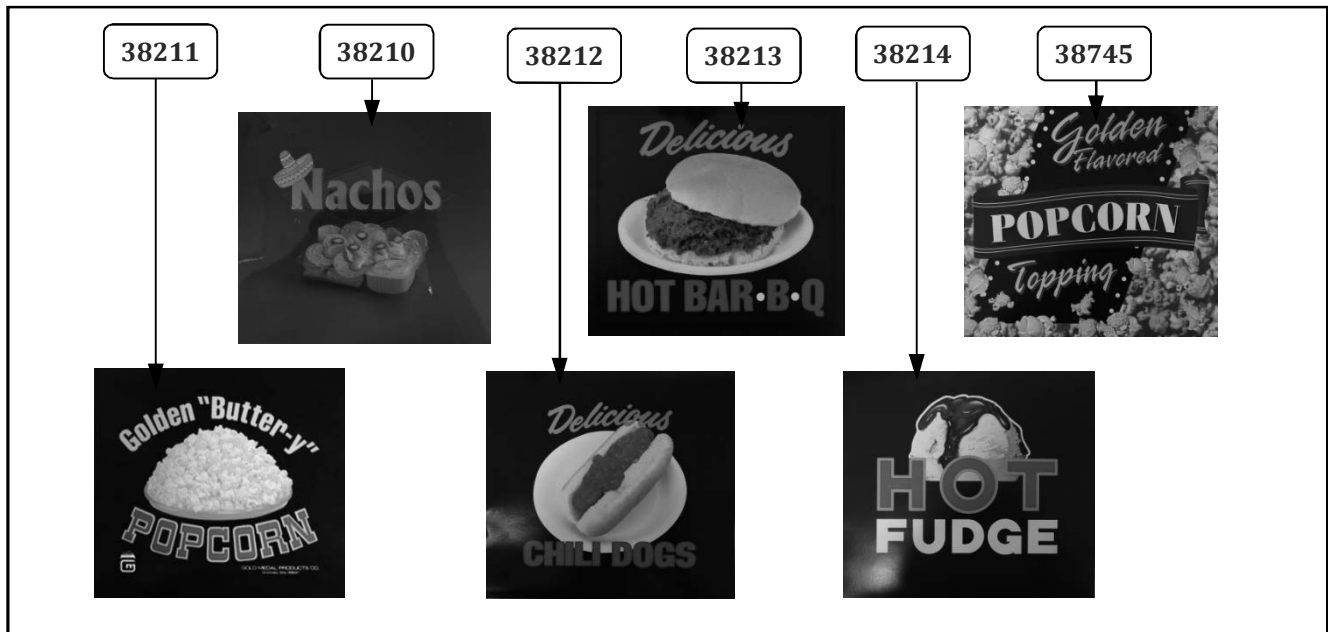




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

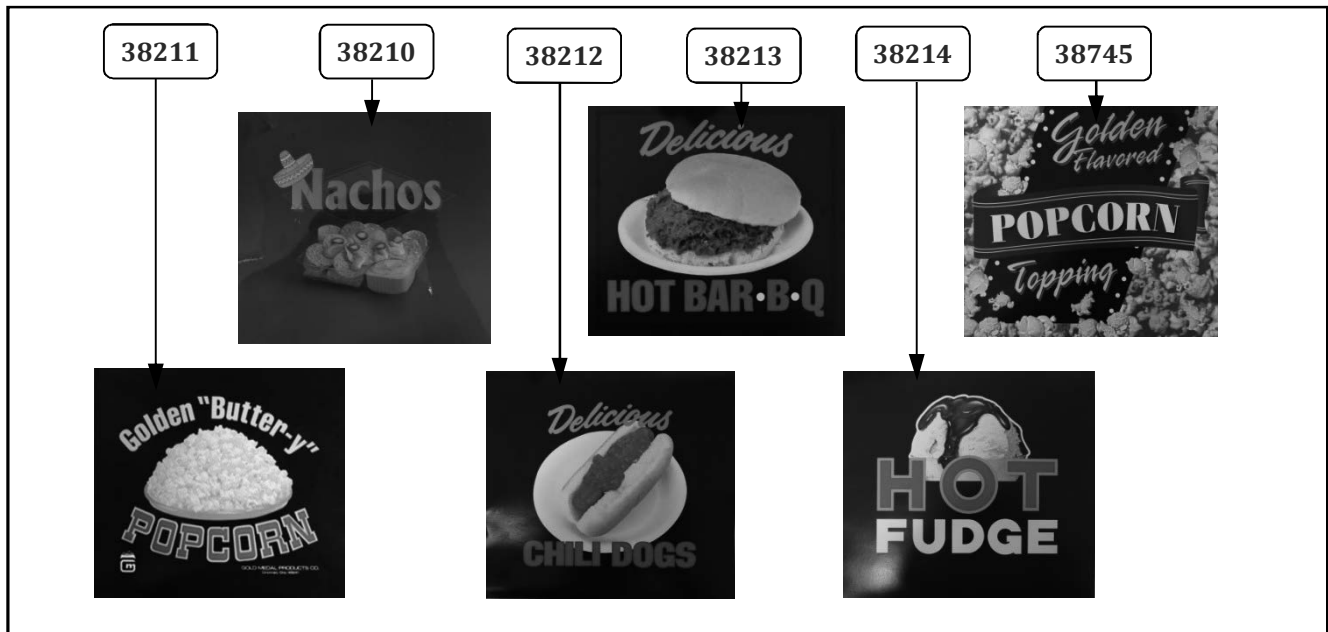




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

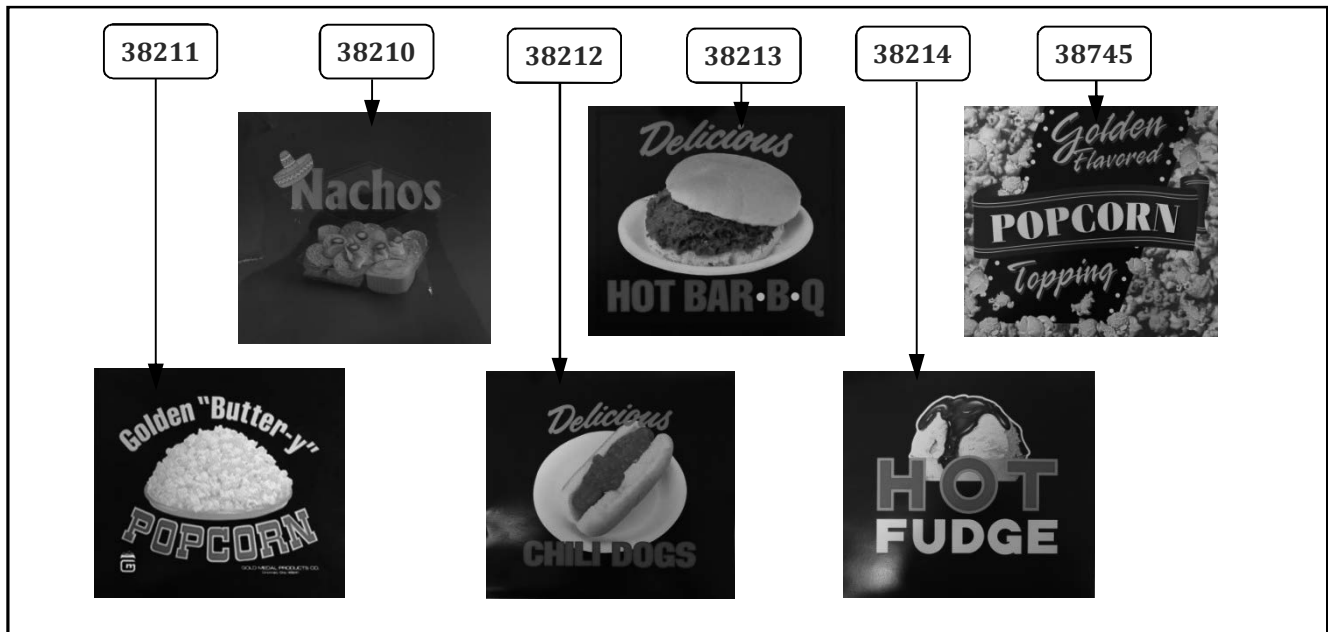




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

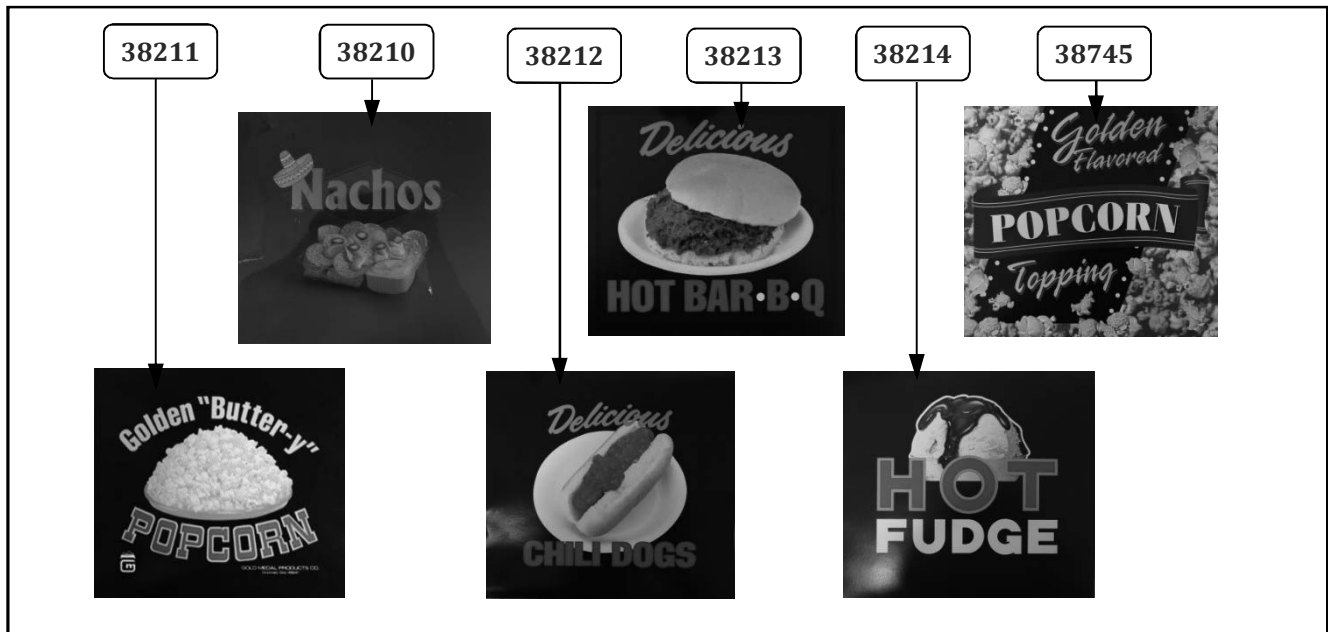




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

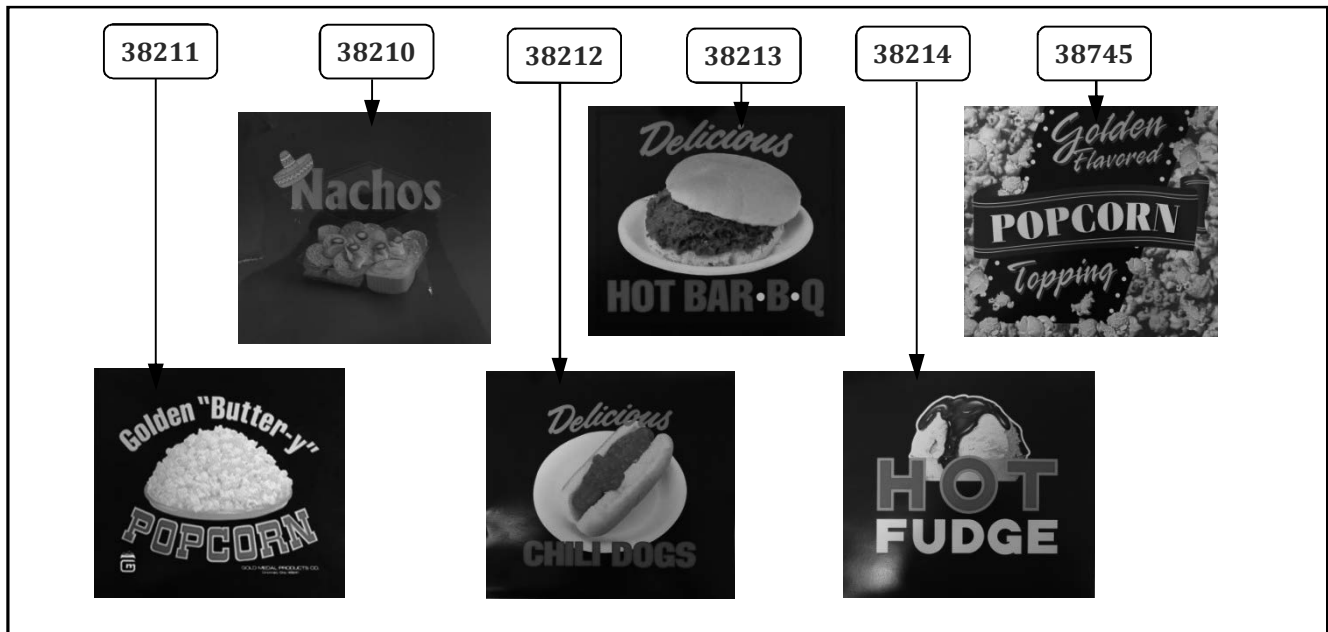




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

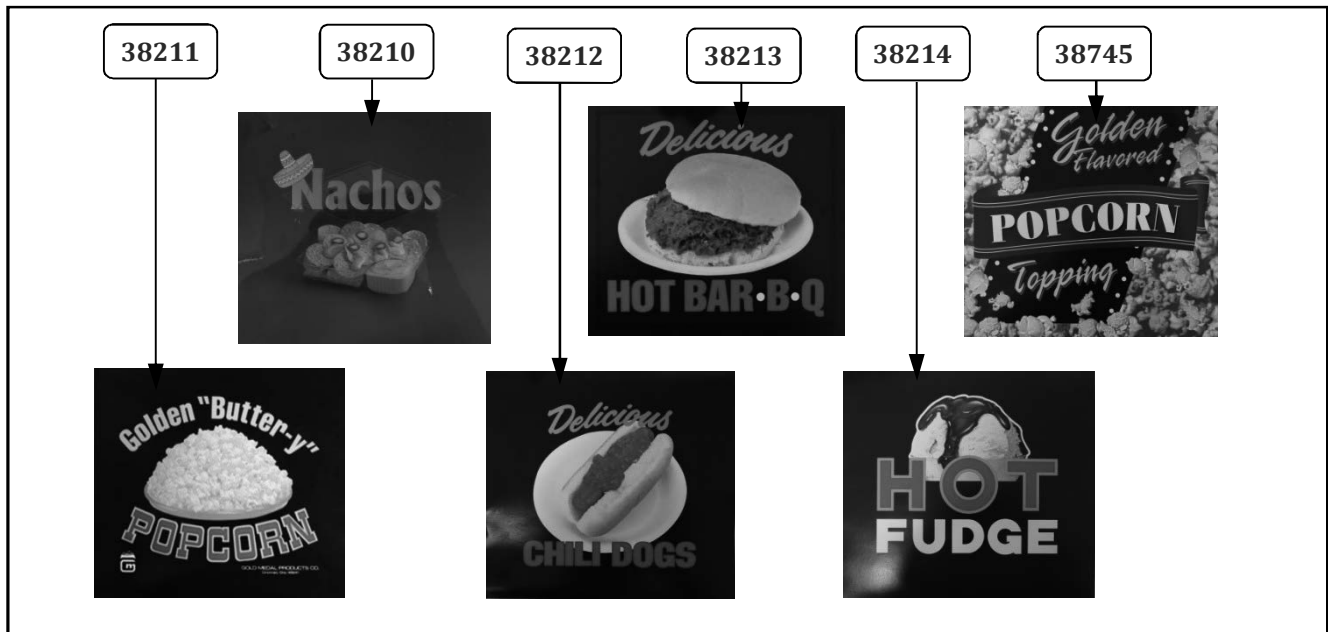






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

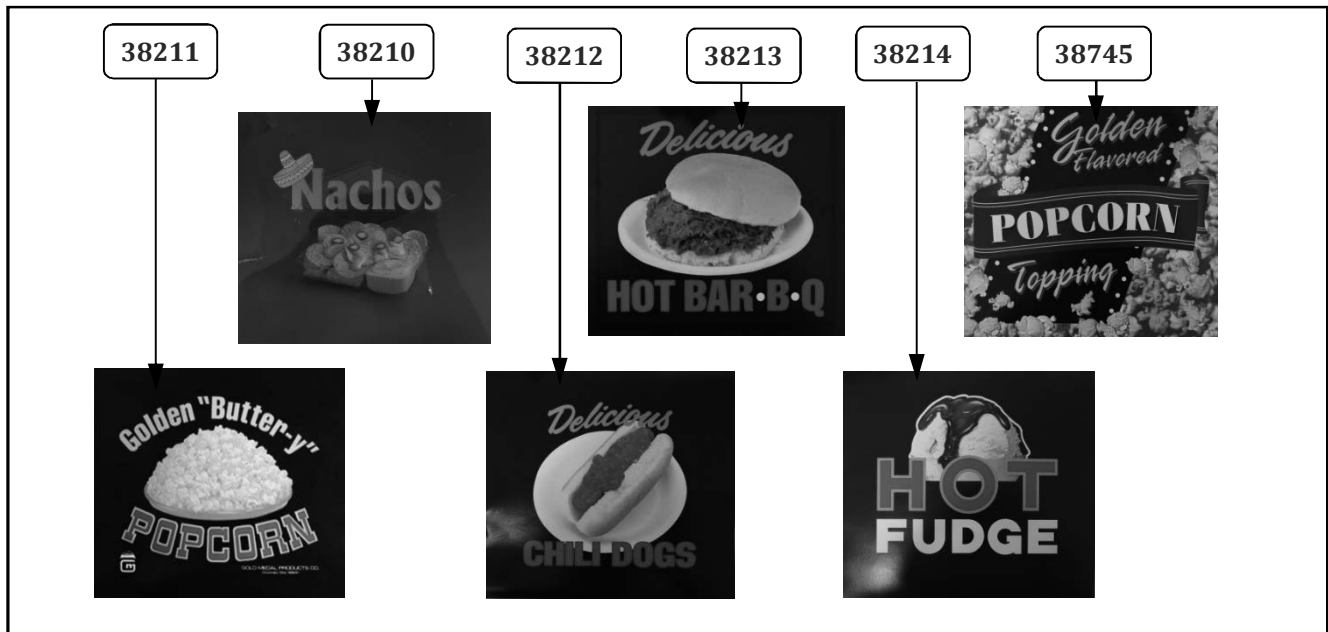




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

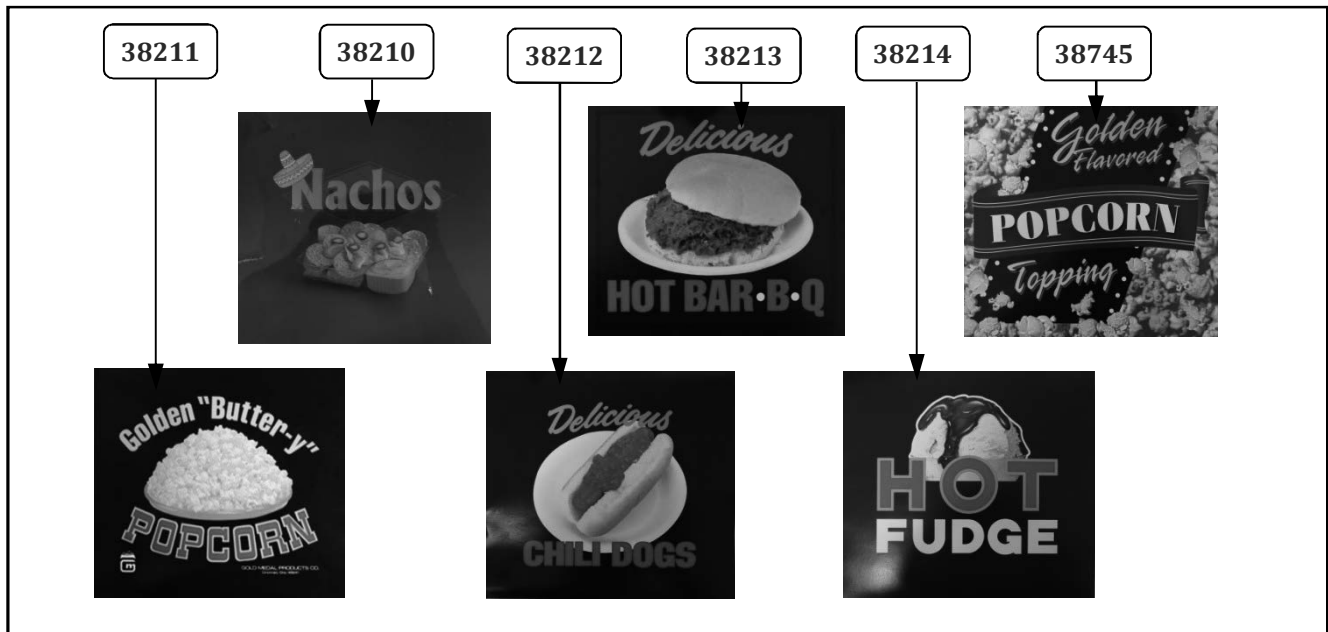




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

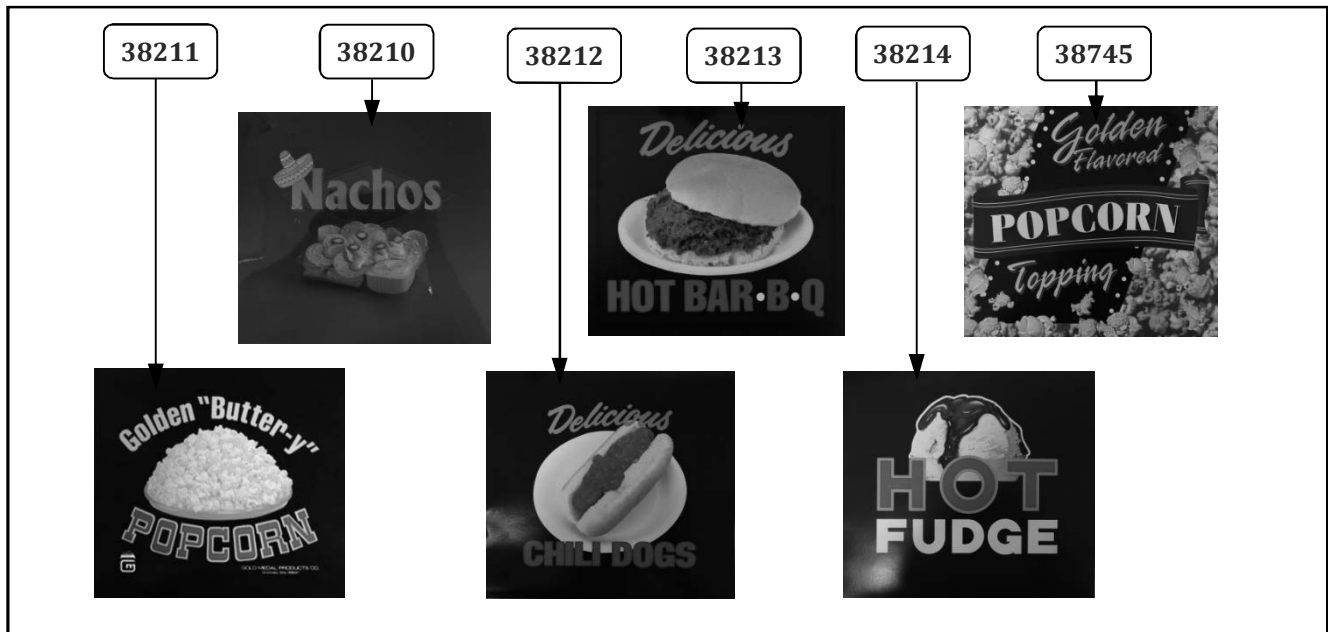




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

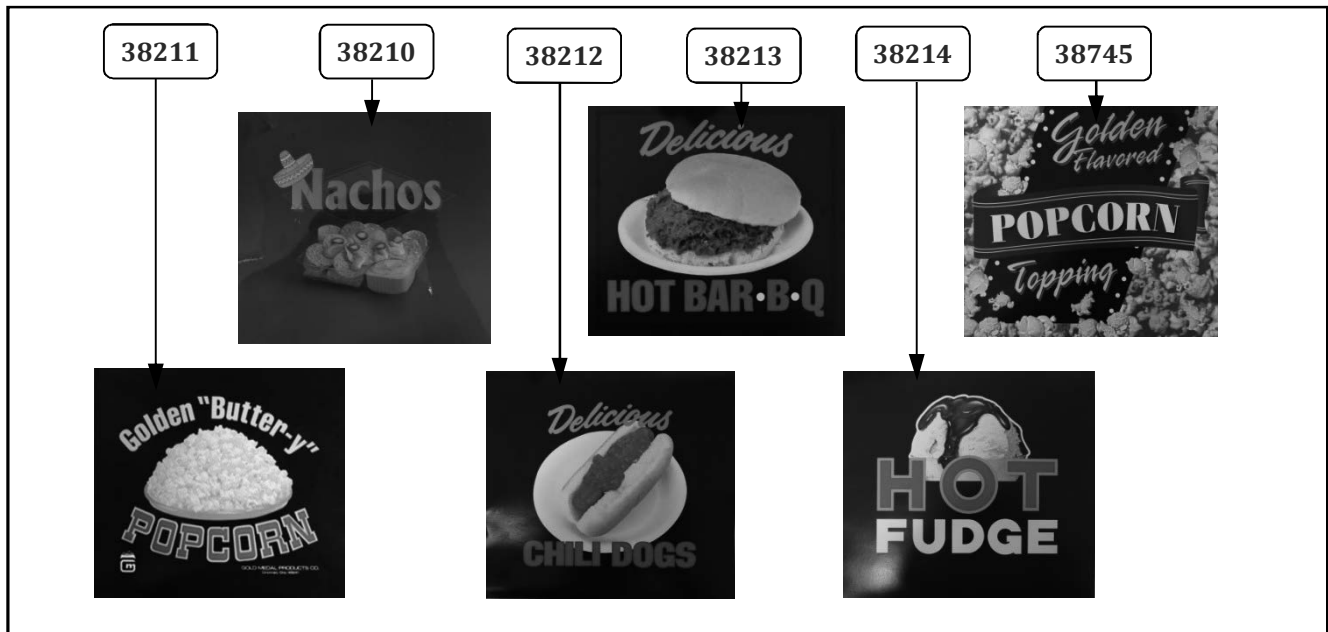




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

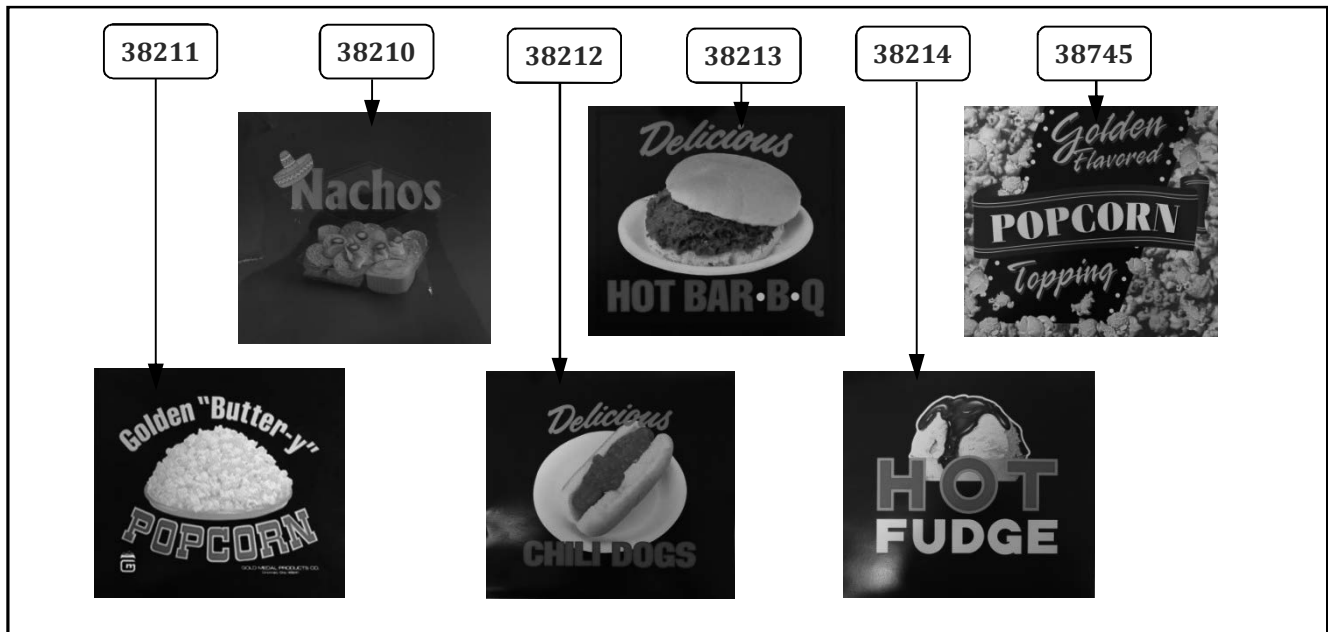




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

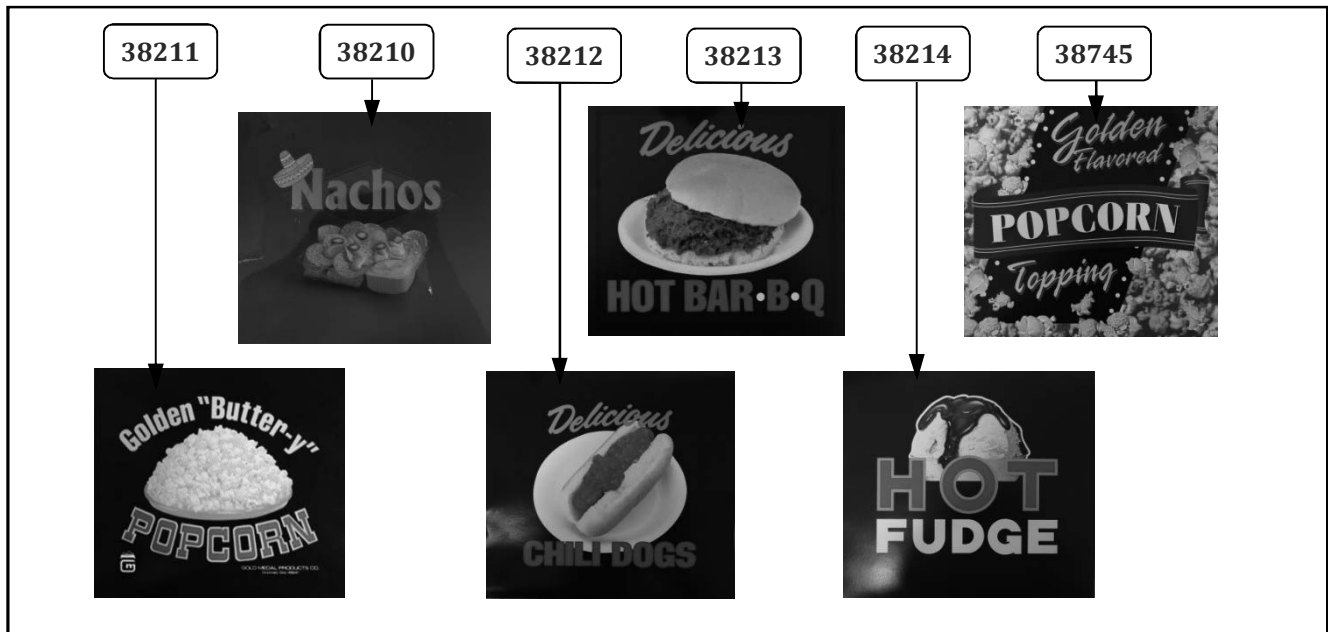




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

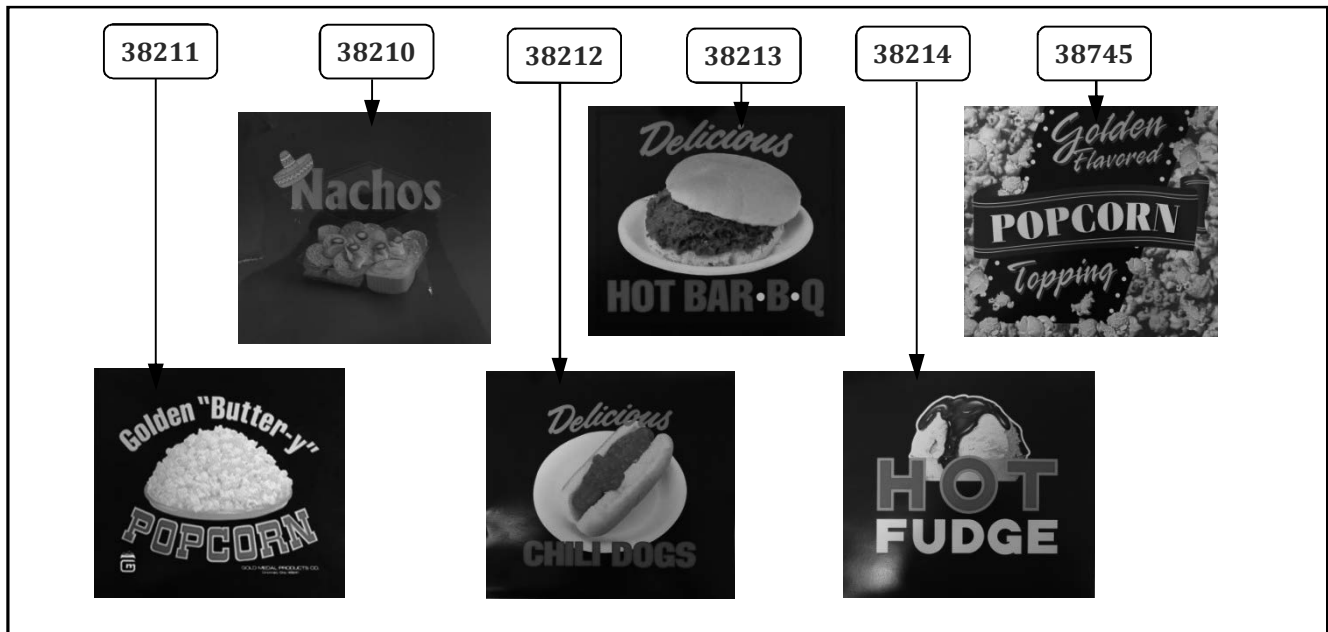




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

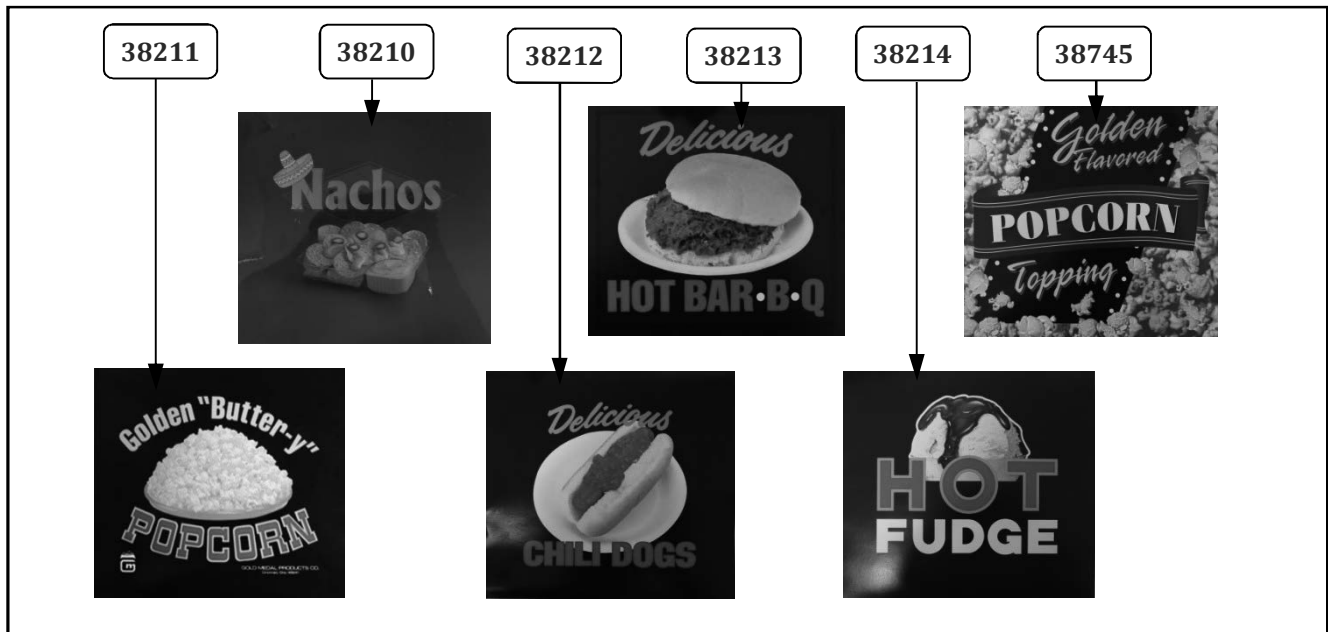






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

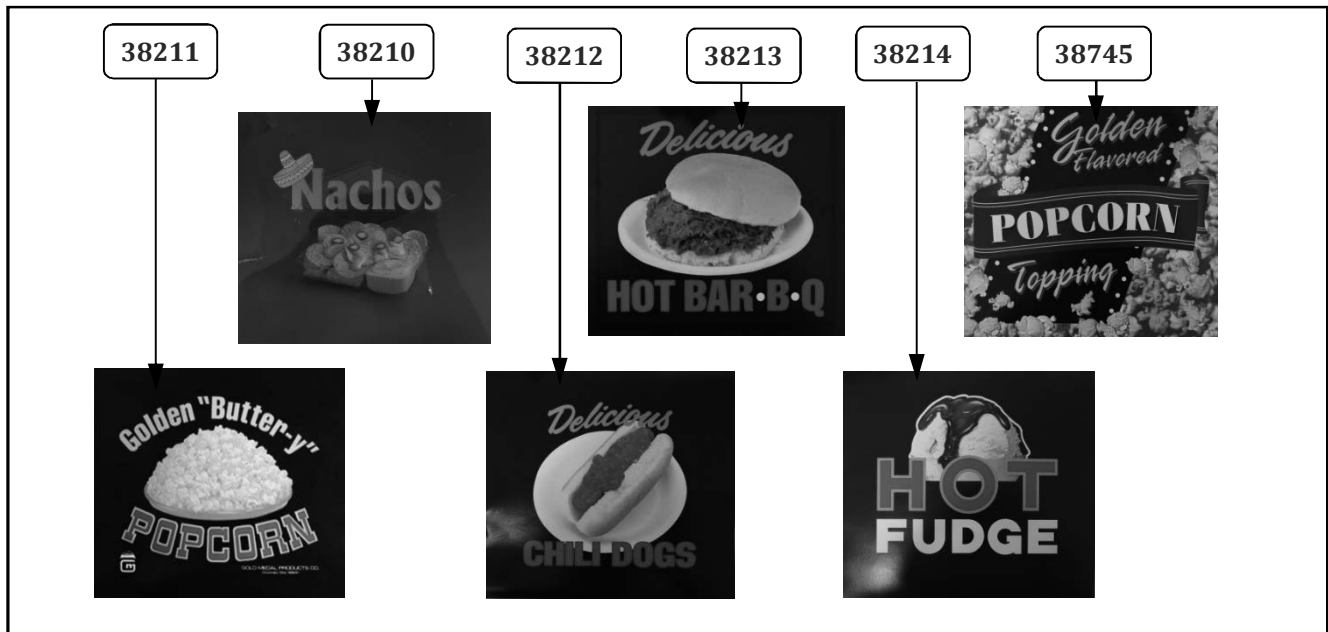




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

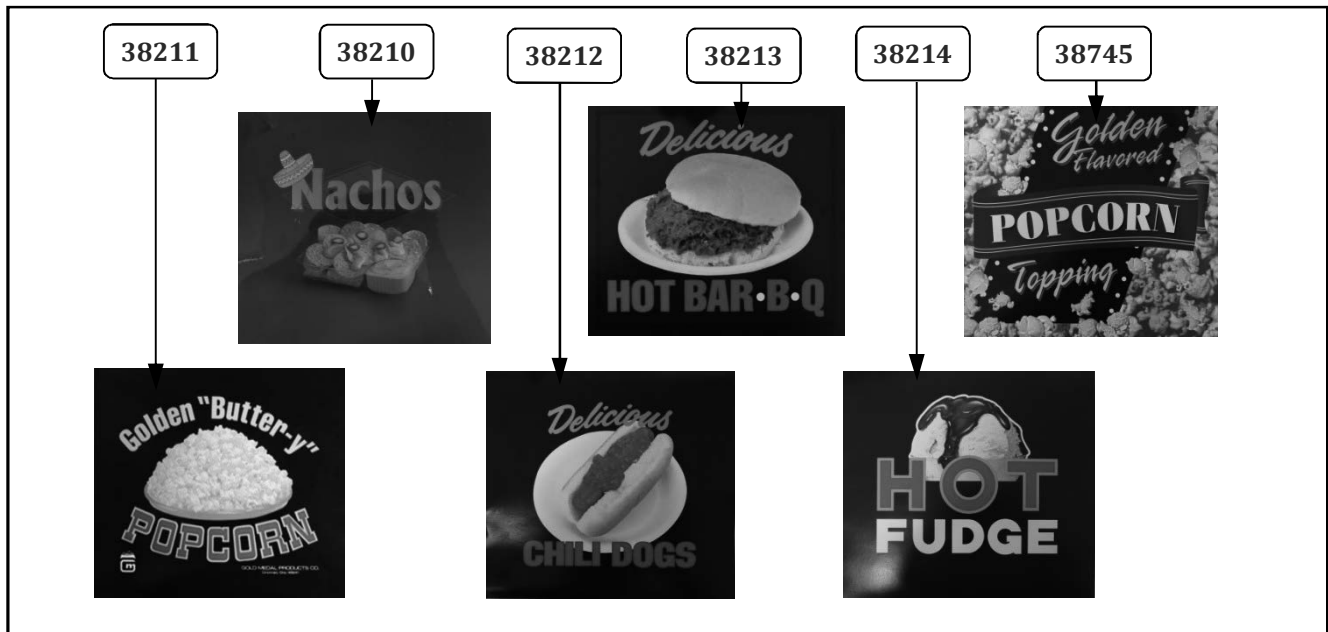




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

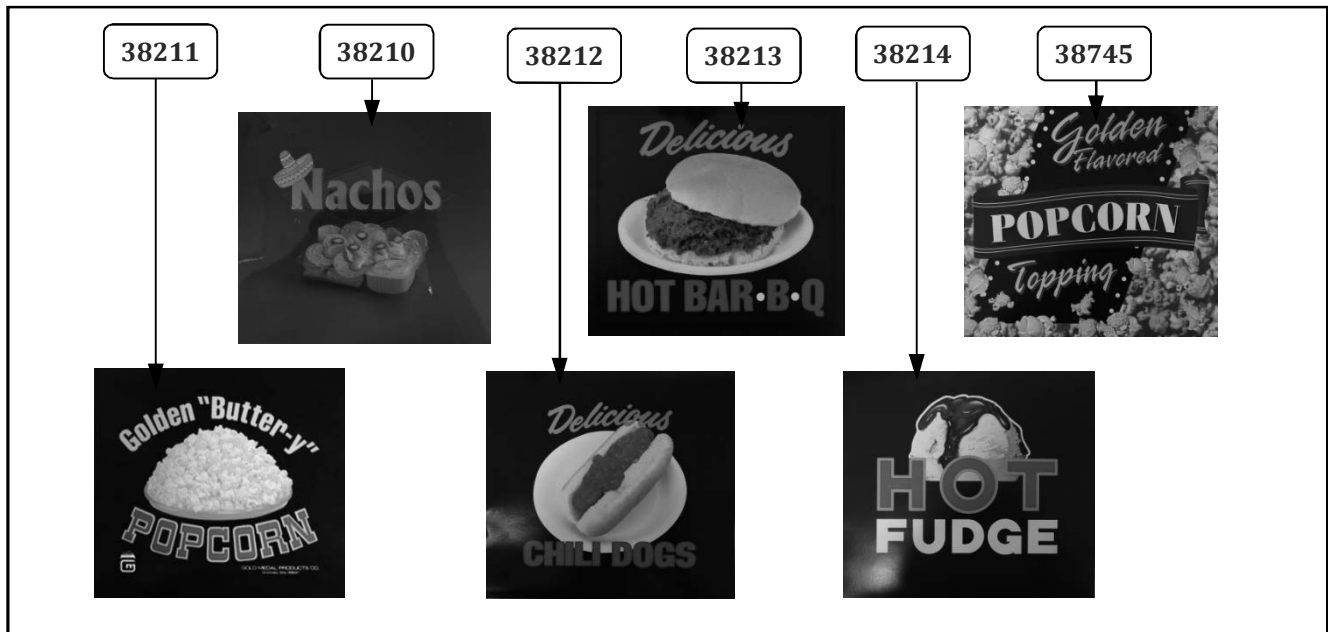




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

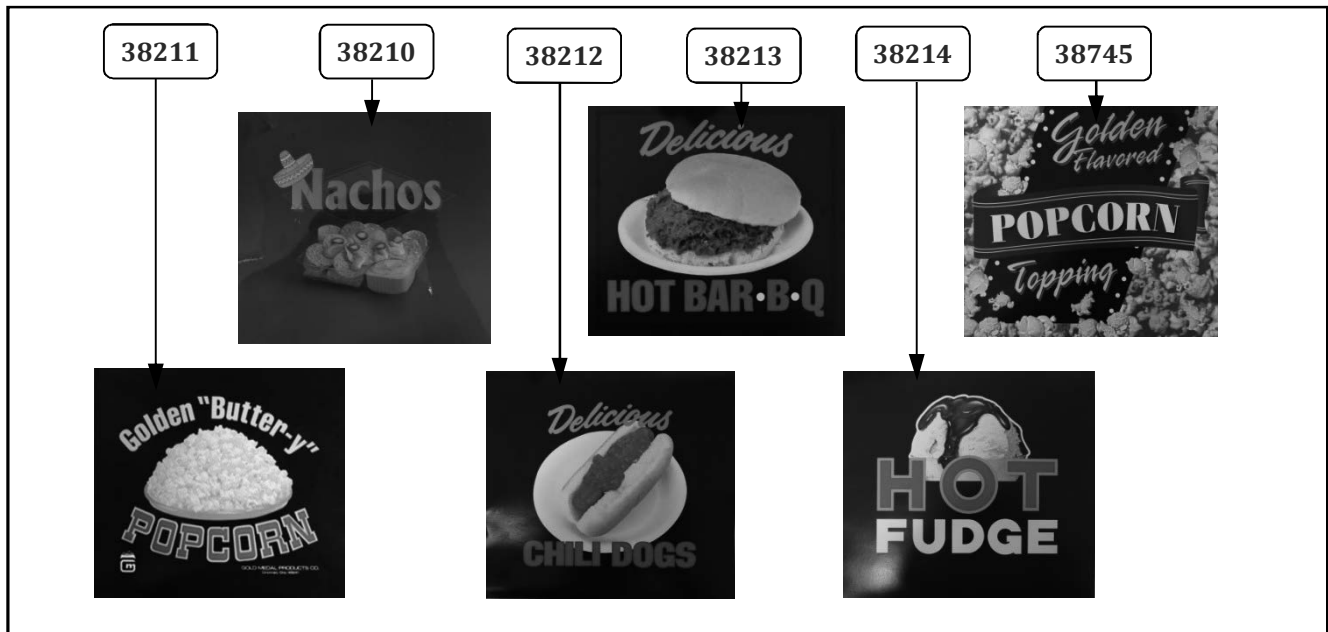




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

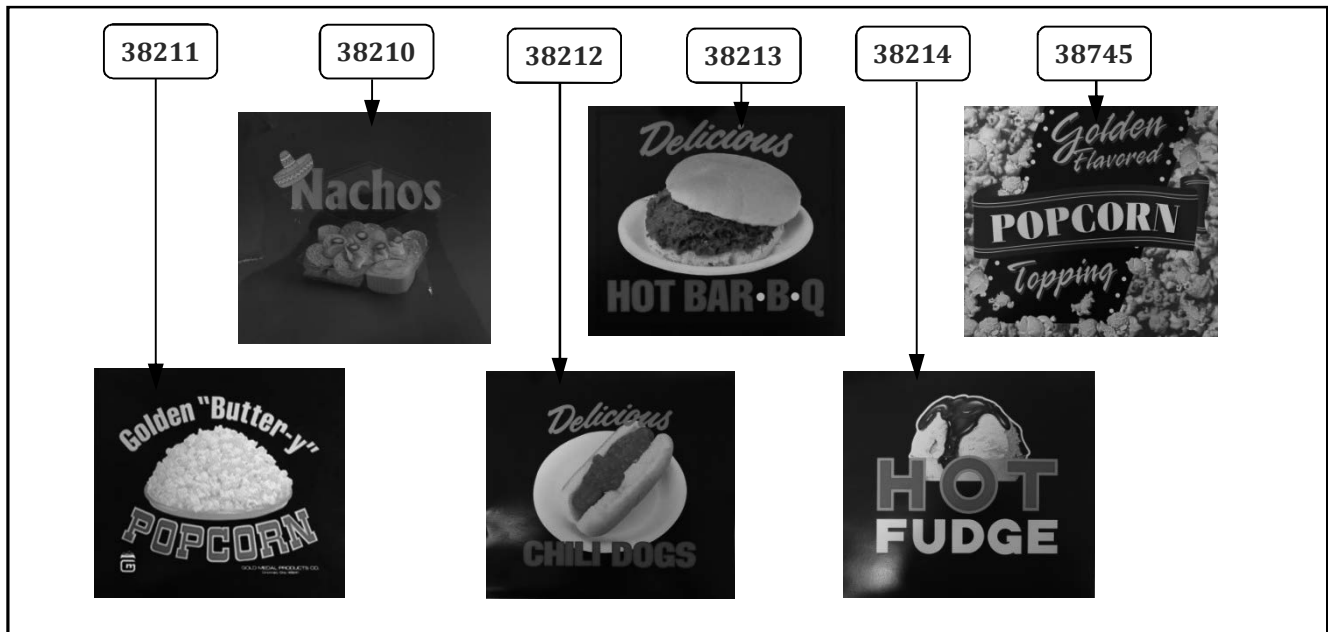




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

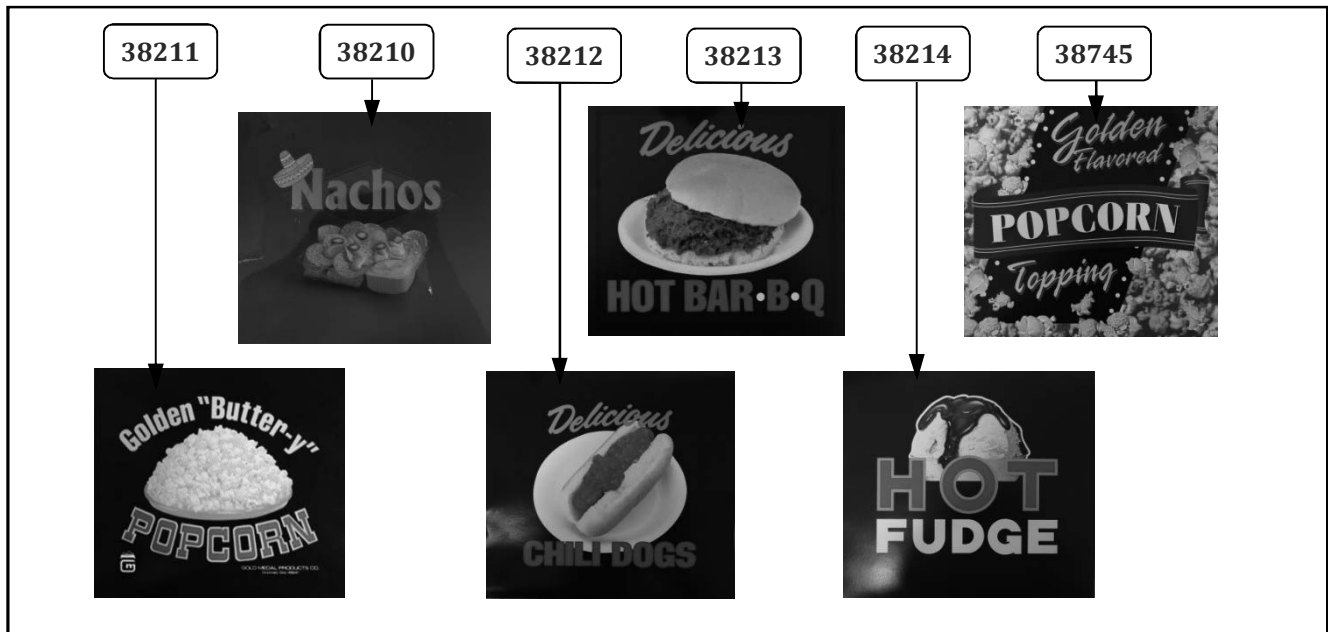




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

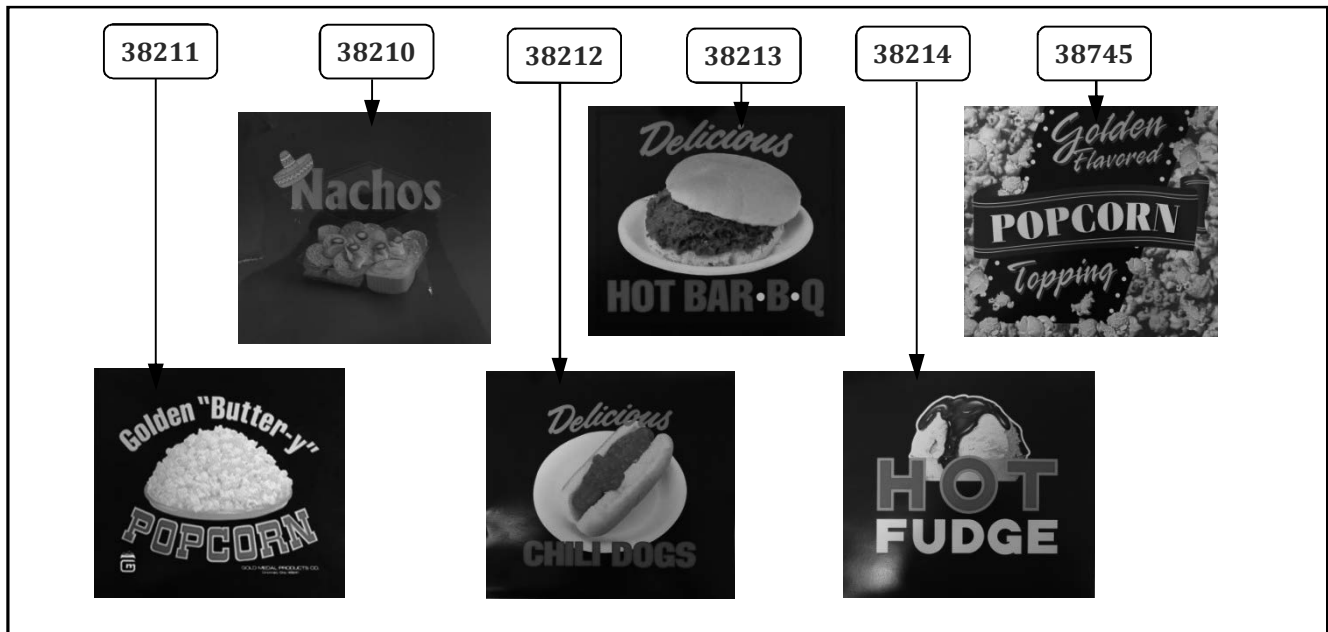




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

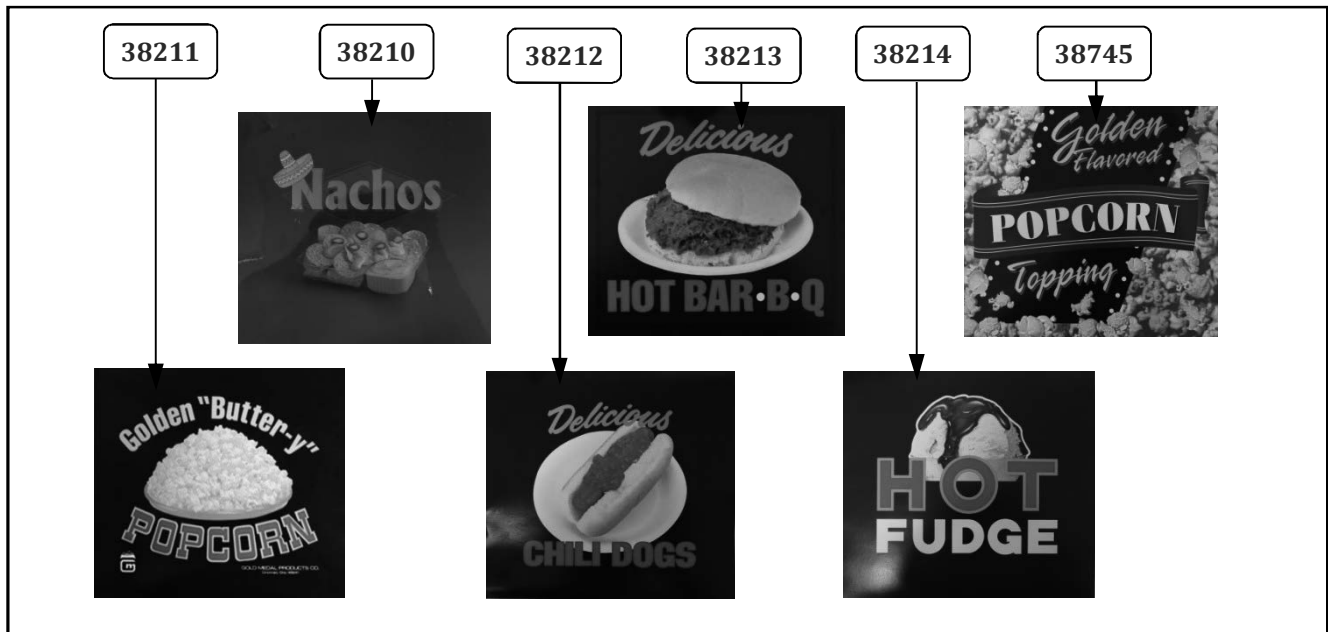






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

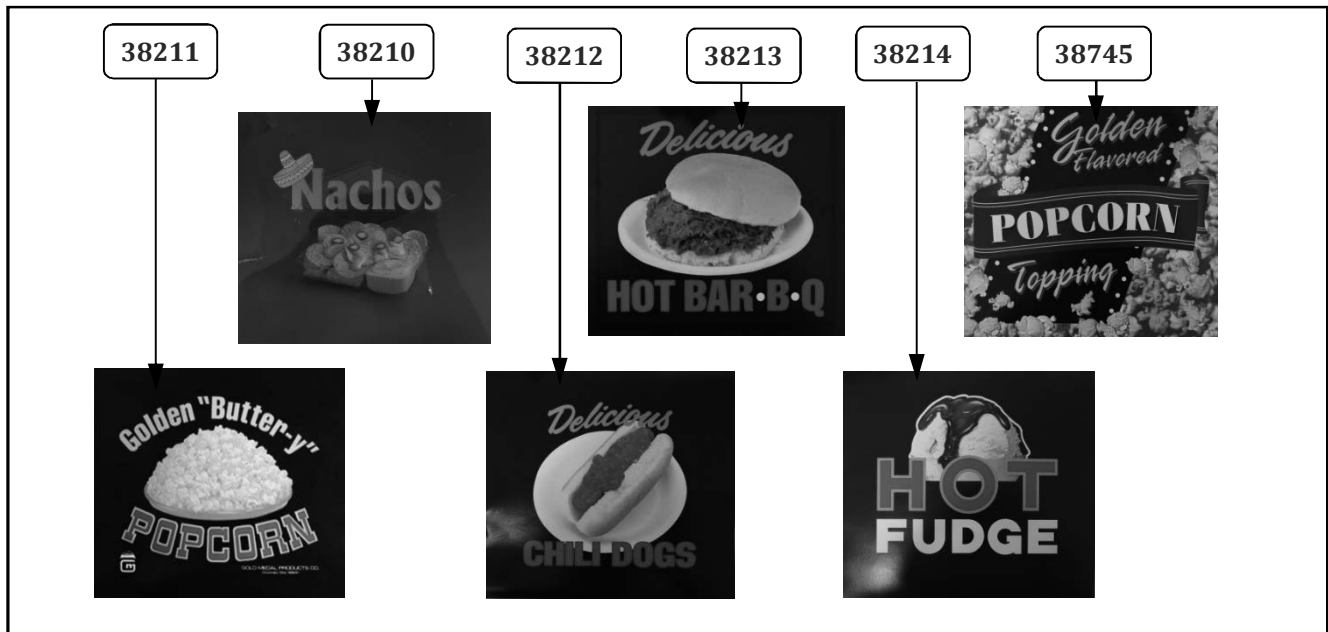




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

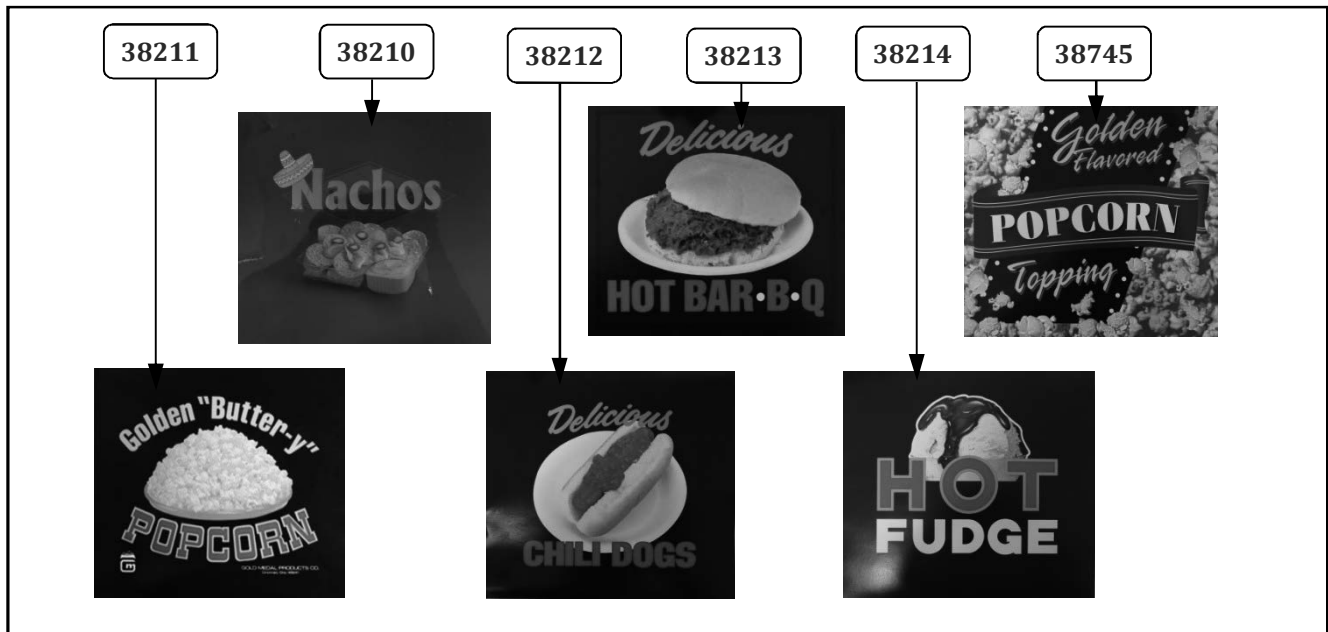




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

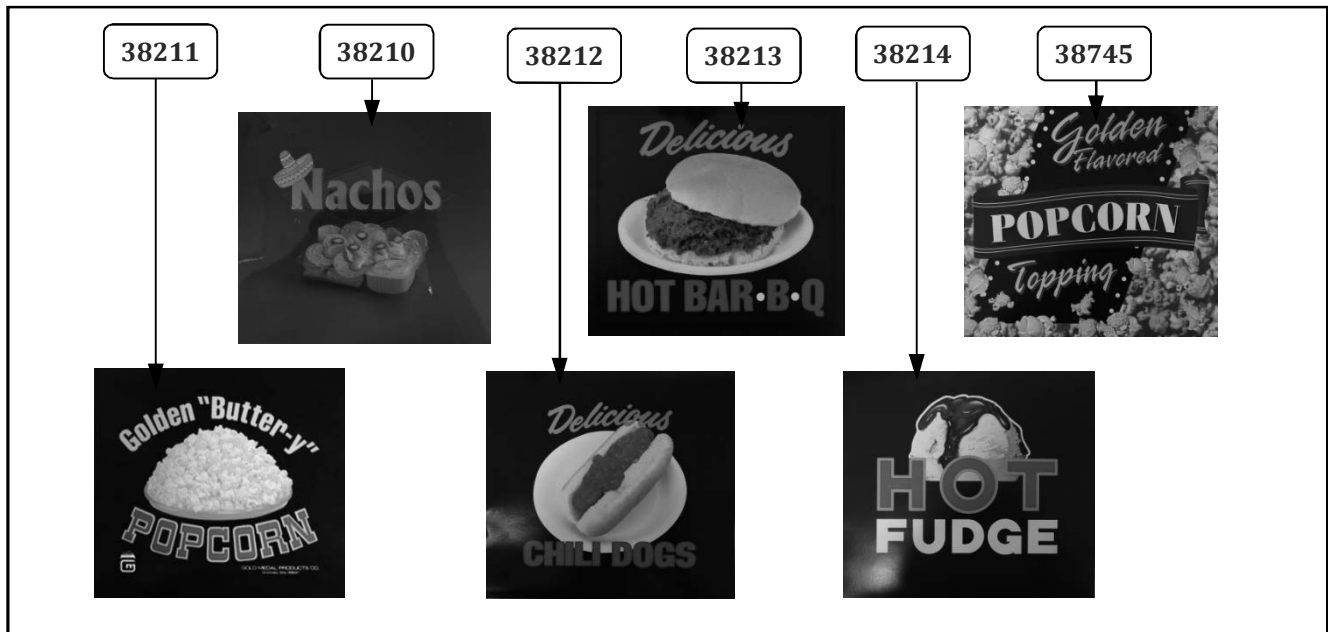




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

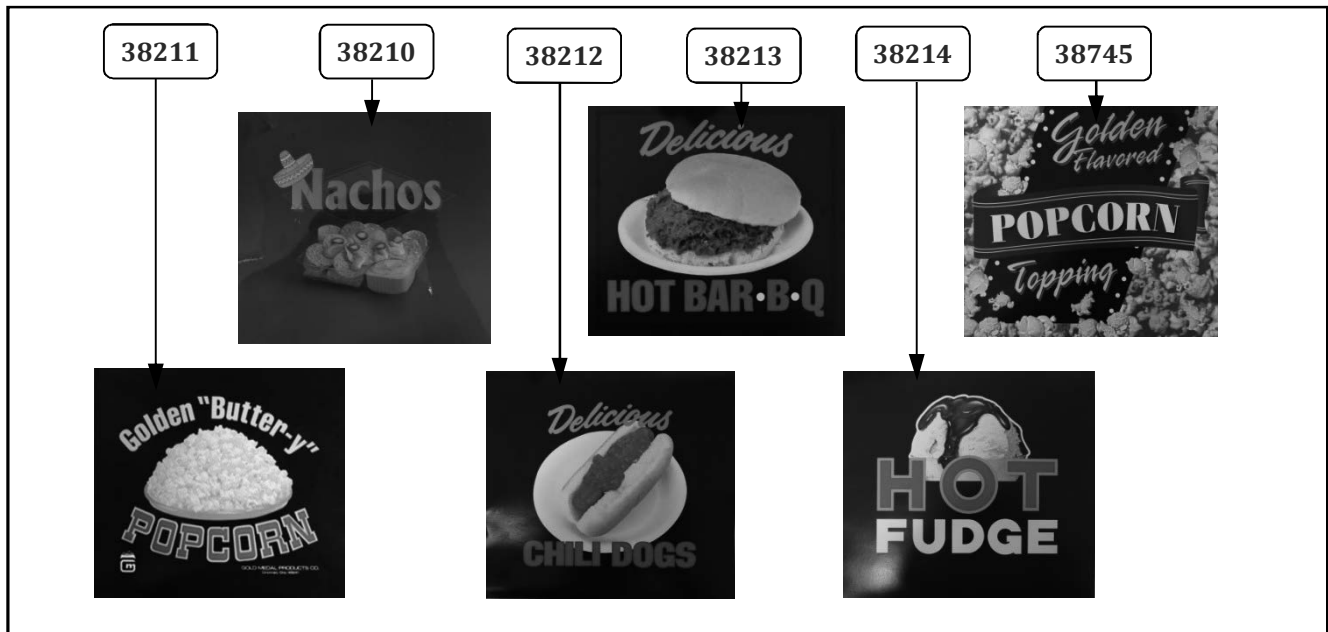




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

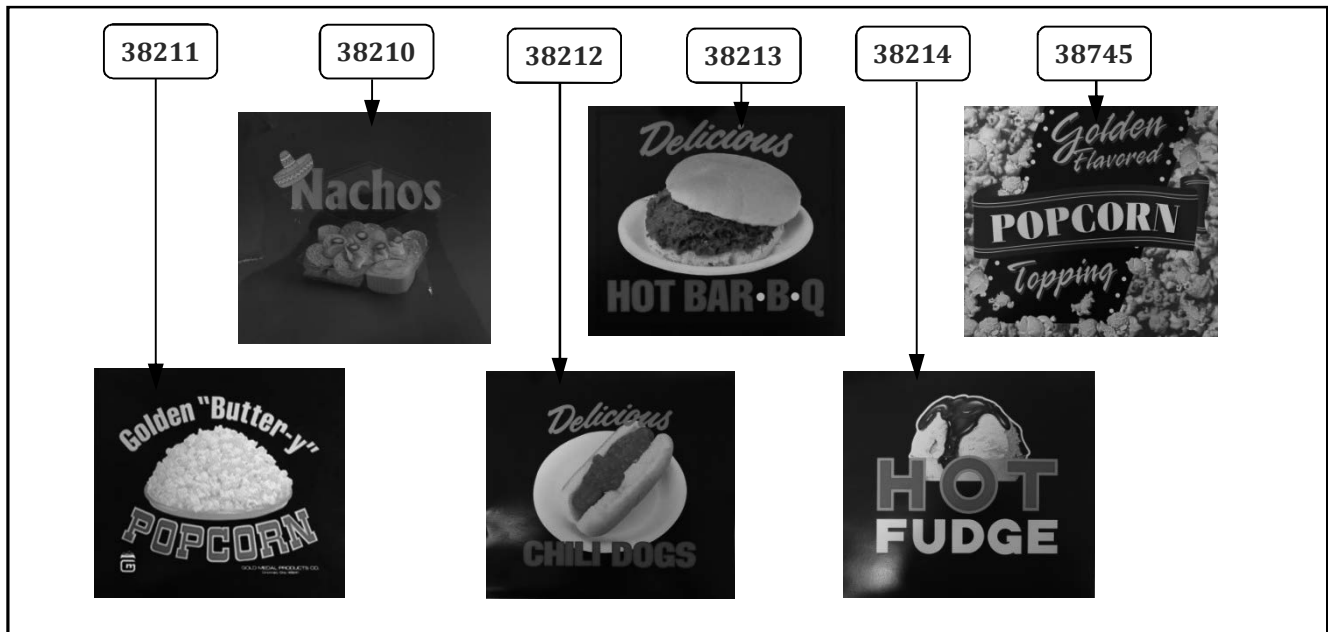




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

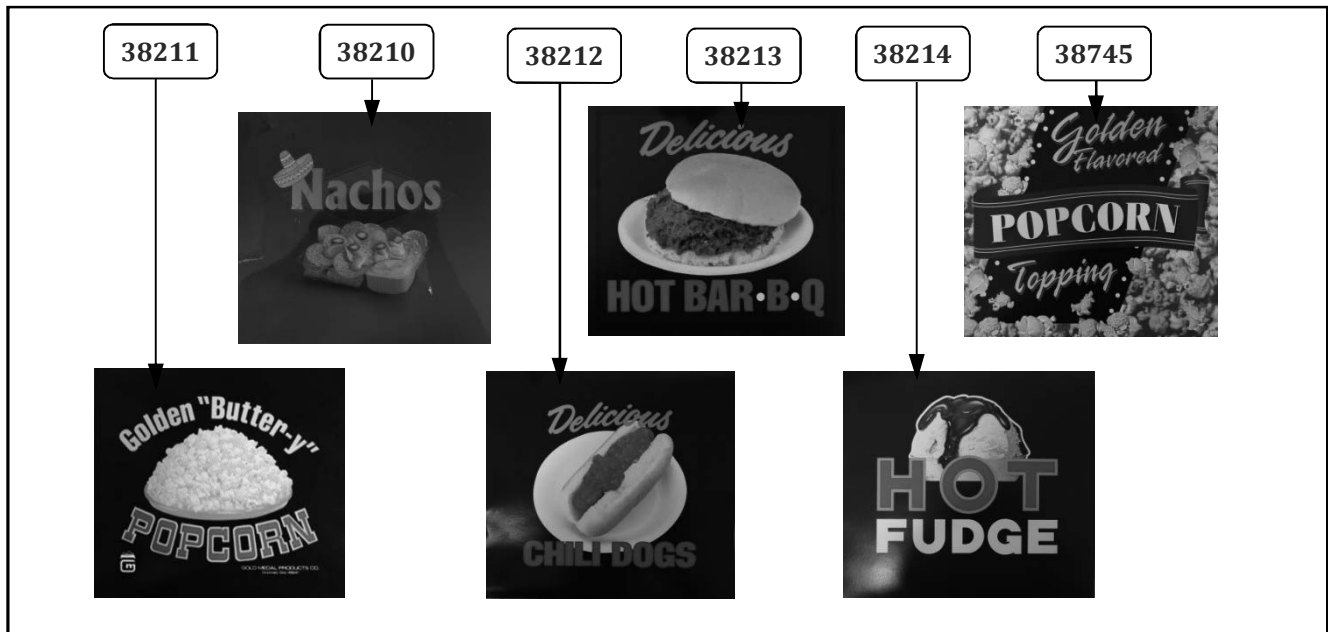




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

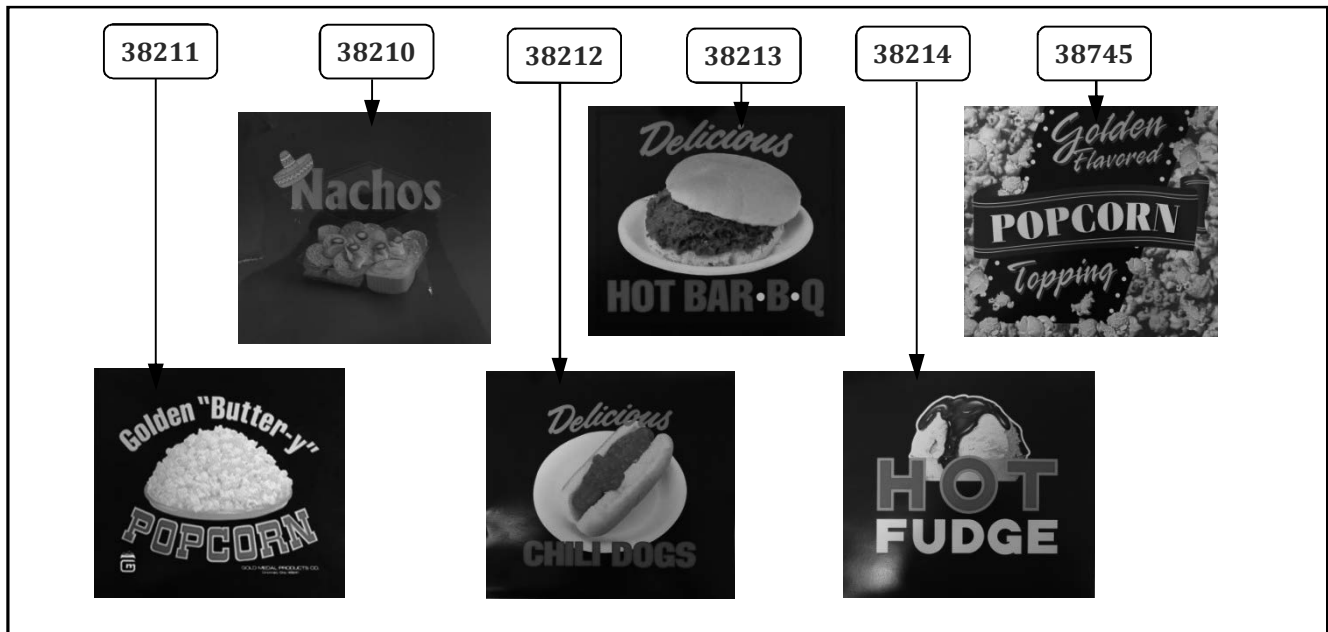




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

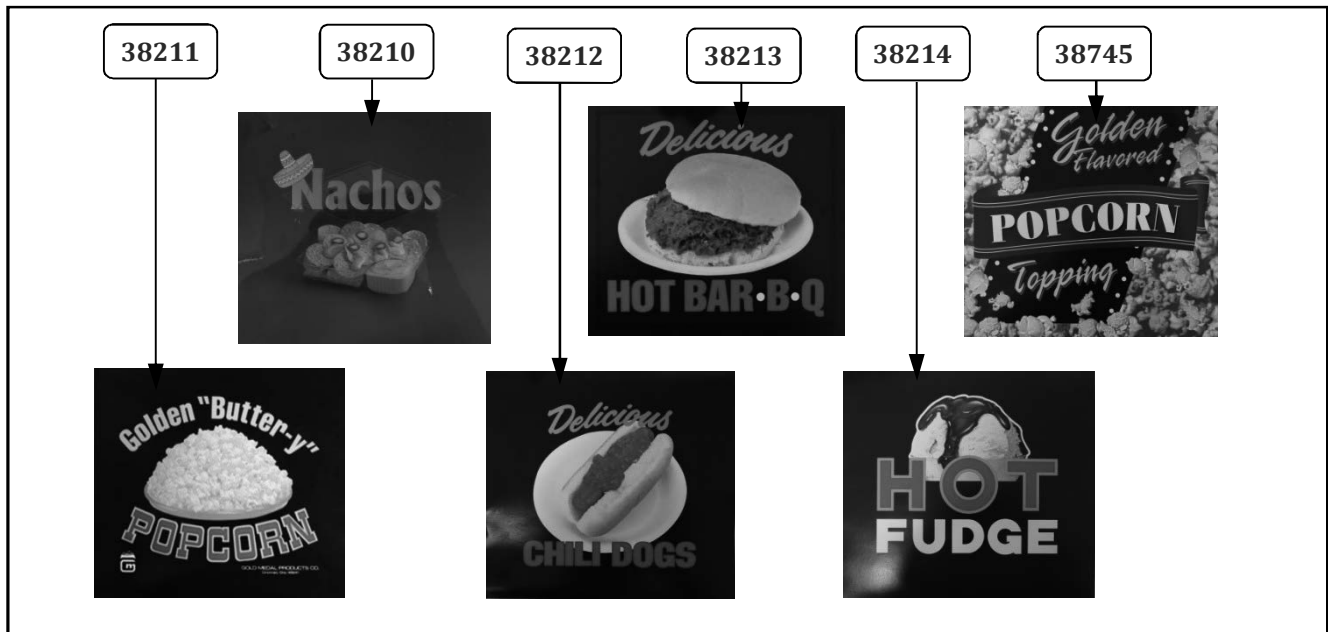






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

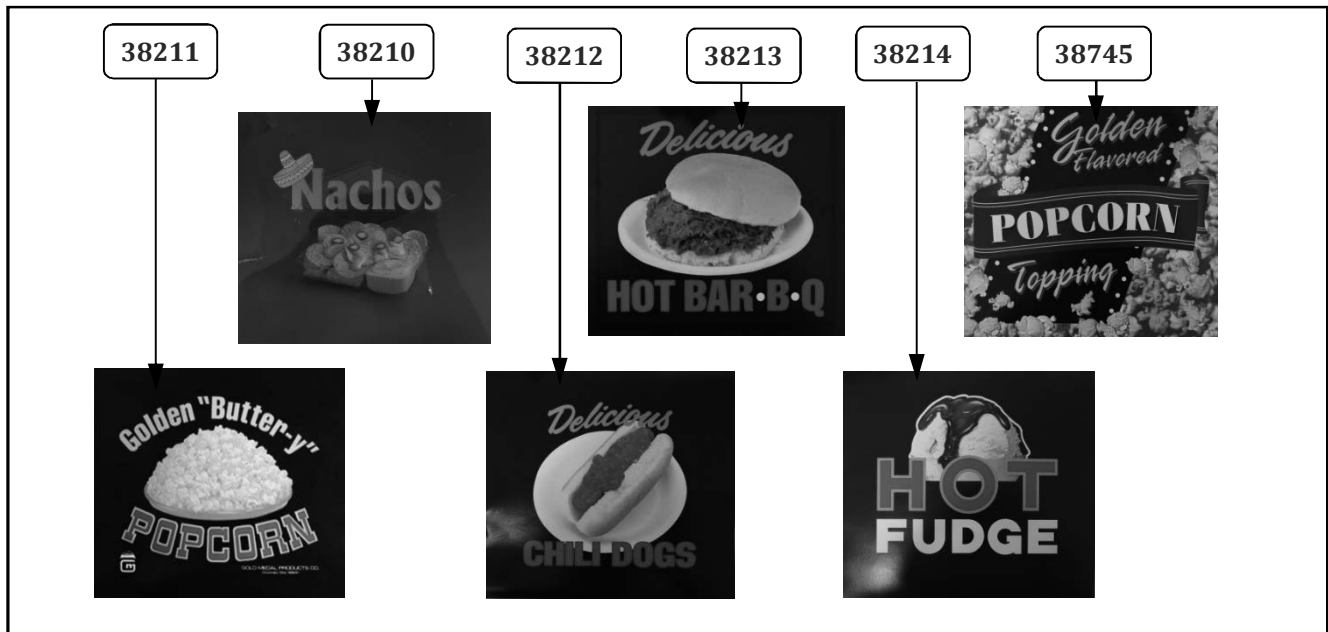




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

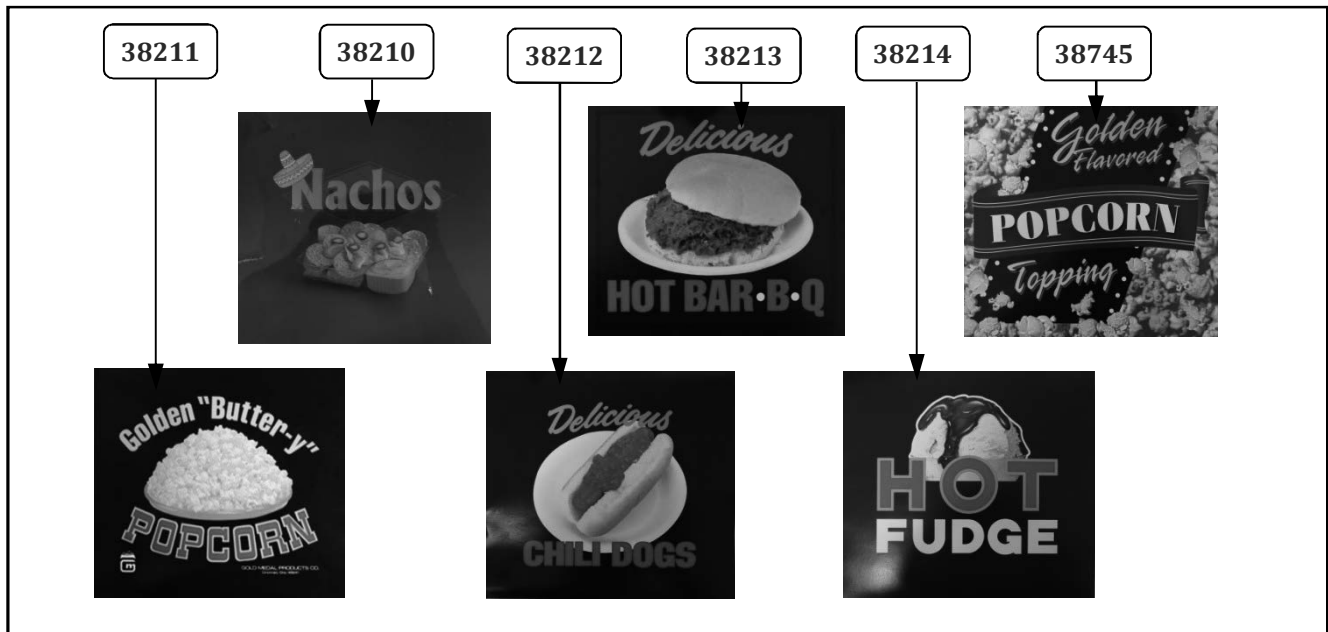




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

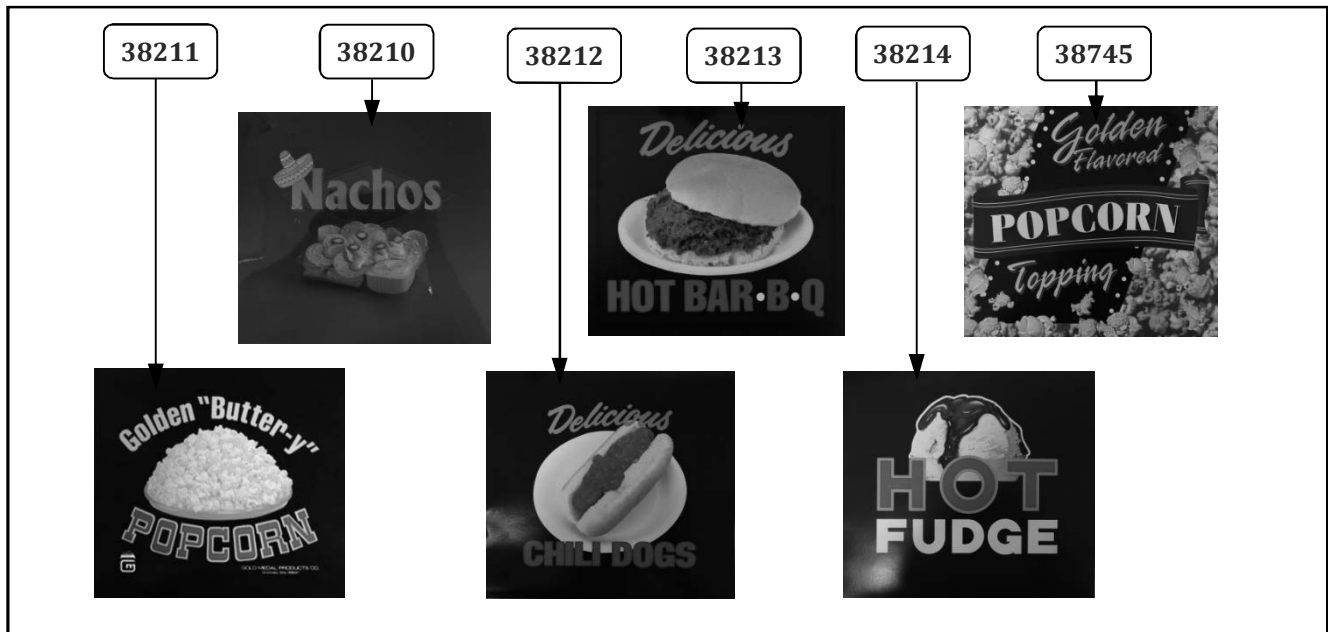




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

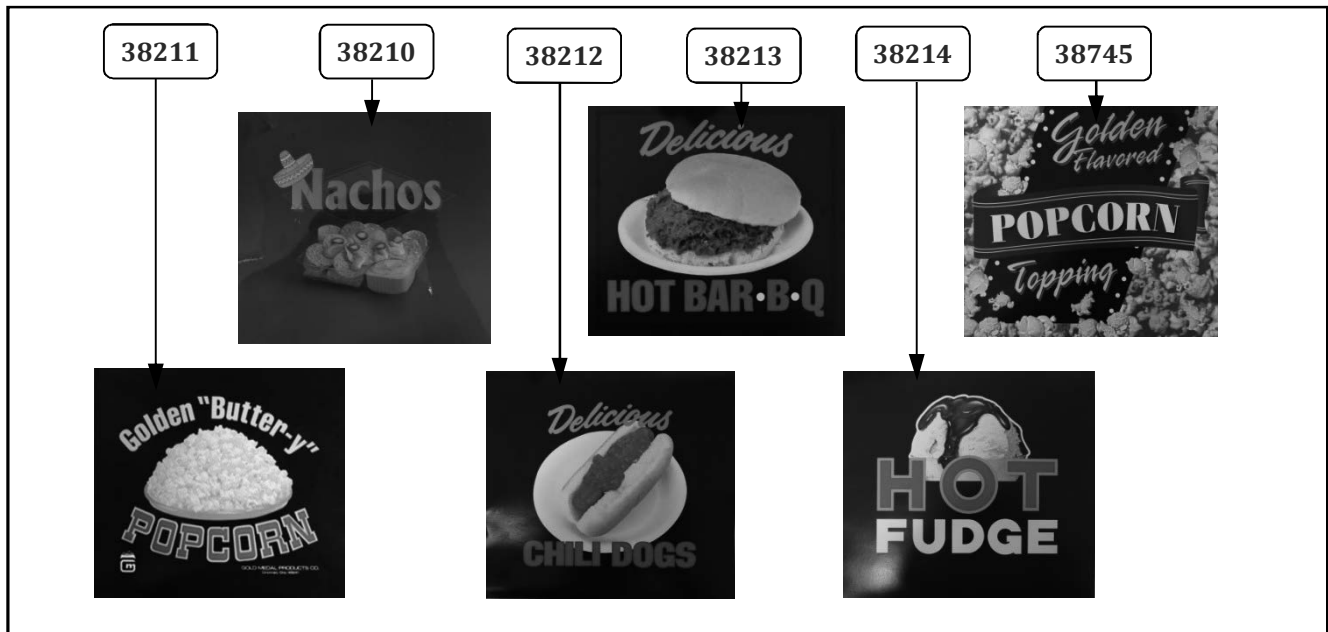




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

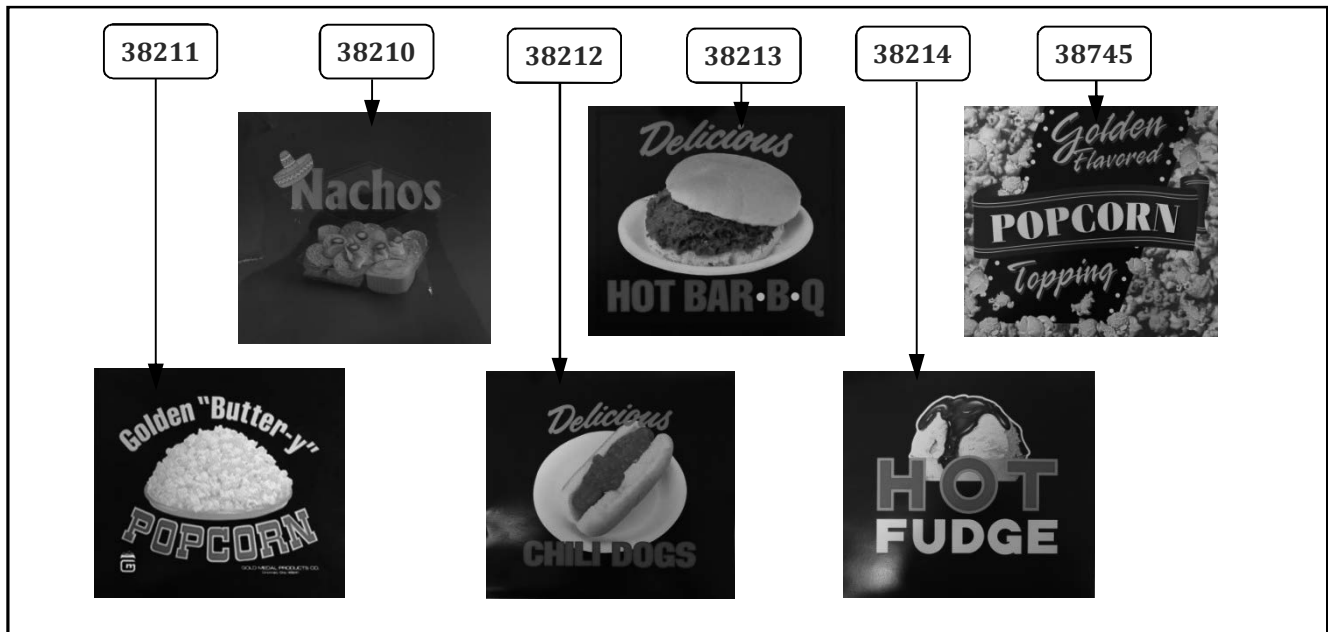




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

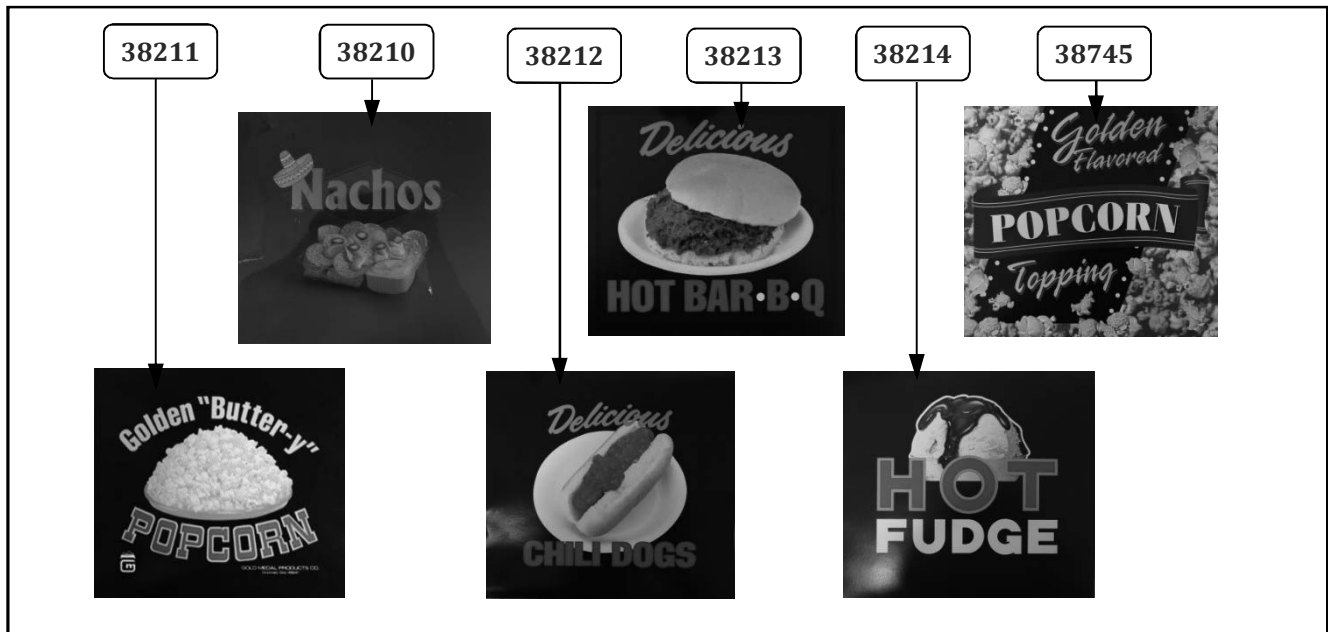




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

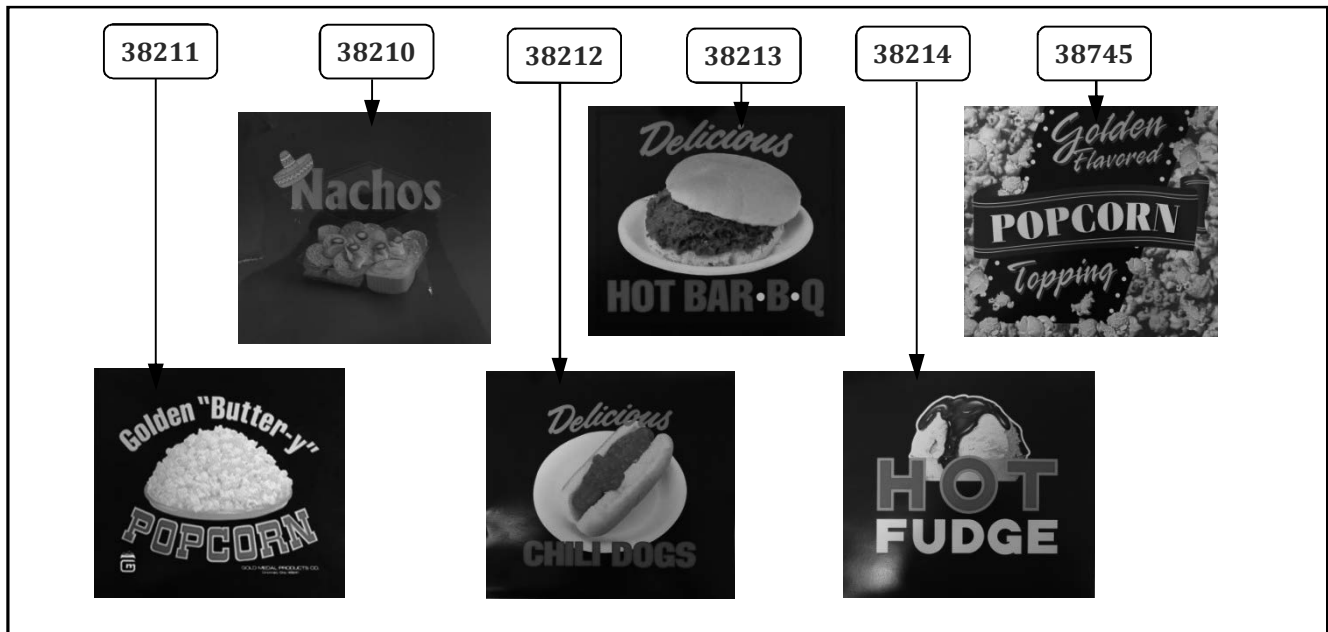




## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

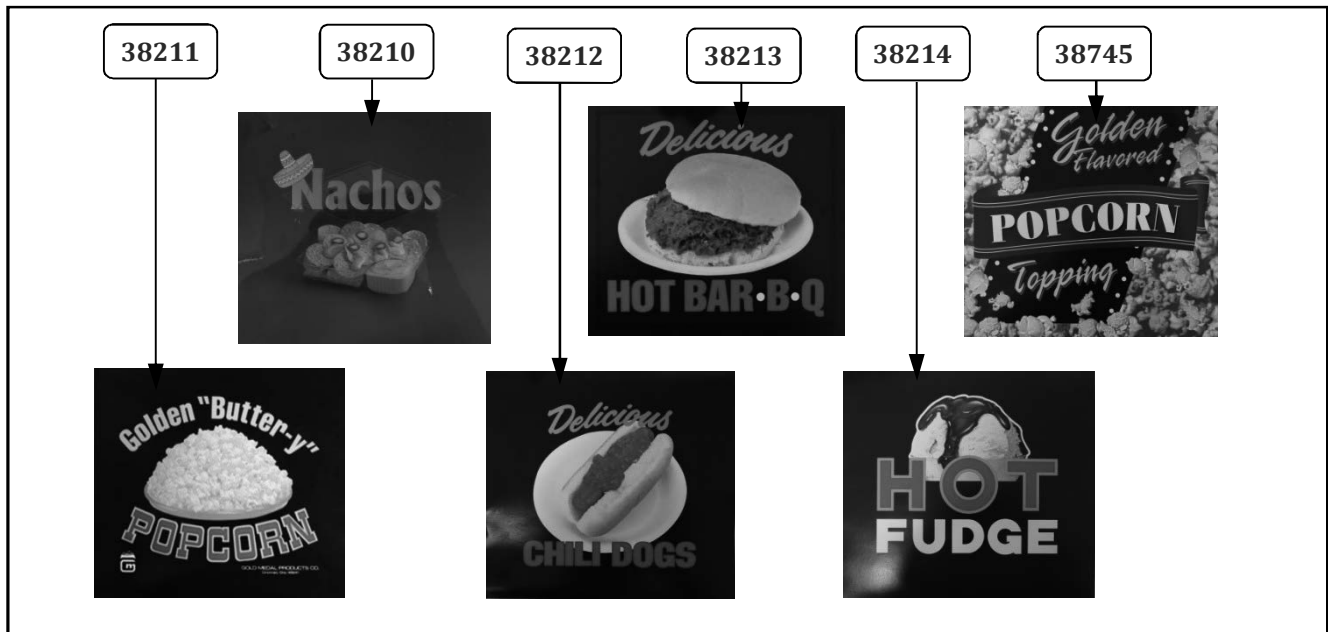






## Cabinet Exterior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38745	38213
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
8	LEAD-IN CORD	1	22038	22038	22038	22038	22038	22038
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247	87247

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	CABINET ASSEMBLY	1	38025	38025	38025	38025	38025
2	FRONT SIGN	1	38214	38214	38212	38210	38211
3	LEXAN SIGN COVER	1	38215	38215	38215	38215	38215
4	ACRYLIC FRONT SIGN	1	38217	38217	38217	38217	38217
5	KNOB HEAT CONTROL	1	87049	87049	87049	87049	87049
6	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
7	STRAIN RELIEF	1	44073	44073	44073	44073	44073
8	LEAD-IN CORD	1	42369	42369	42369	42369	42369
9	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
10	10-24 X 3/8 SLOT HWH T23	4	38085	38085	38085	38085	38085
11	BOTTOM PLATE	1	38011	38011	38011	38011	38011
12	SIGN RETAINER STRIP	1	38010	38010	38010	38010	38010
13	RUBBER BUMPER/FOOT	4	87247	87247	87247	87247	87247

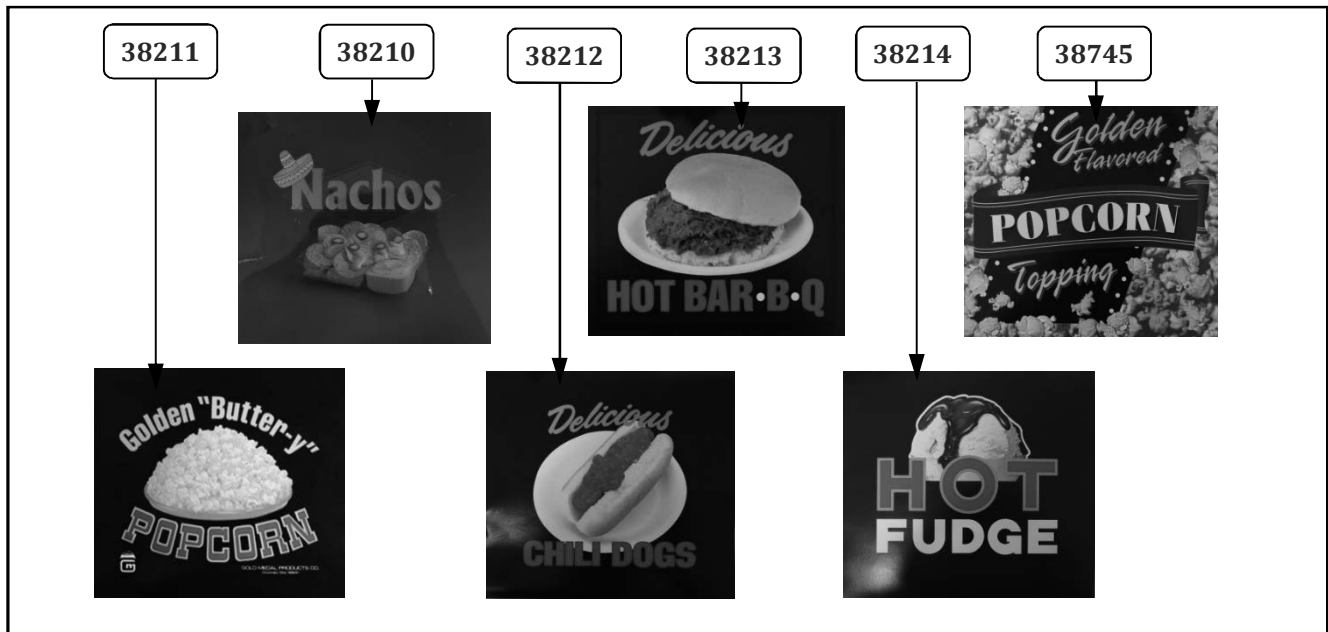



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



Condiment Warmers

**Cabinet Interior – Parts List**

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNERMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028





## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Cabinet Interior – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38012	38012	38012	38012	38012	38012
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	76026	76026	44073	76026	76026	76026
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422	47422	47422	47422	47422	47422
10	BAFFLE	1	38044	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028	38028

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	#8-32 TINNEMAN FASTENER	4	47300	47300	47300	47300	47300
2	HEAT ELEMENT	1	38074	38074	38074	38074	38074
3	ELEMENT SPRING	2	38033	38033	38033	38033	38033
4	210°F THERMOSTAT	1	38227	38227	38227	38227	38227
5	WATER TANK ASSEMBLY	1	38029	38029	38029	38029	38029
6	STRAIN RELIEF	1	44073	44073	44073	44073	44073
7	DPST ROCKER SWITCH	1	42532	42532	42532	42532	42532
8	INCANDESCENT LAMPHOLDER	2	75040	75040	75040	75040	75040
9	LIGHT BULB CLEAR	2	47422EX	47422EX	47422EX	47422EX	47422EX
10	BAFFLE	1	38044	38044	38044	38044	38044
11	RETAINING CLIP	2	38030	38030	38030	38030	38030
12	SIGN RETAINER ANGLE	2	38028	38028	38028	38028	38028



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			





## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			





## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			





## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			





## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			





## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			





## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			



## Pump and Dipper – Parts List

Item	Part Description	Qty.	Part Number					
			2200	2201	2205	2191	2195	2196
1	PUMP ASSEMBLY	1		38018			38037	
1a	KNOB (for pump assembly)						38061	
2	133 OZ INSERT BOWL	1					2194	
3	BOWL PLATFORM 1 1/16 IN	1	38120		38120	38120	38120	38120
4	2 OZ DIPPER	1			38015	38015		38015
5	BOWL SPRING	1			38022	38022		38022
6	CAN HOLDER WITH SPRING	1			38540	38540		38540
7	LOCK RING	1			38031	38031		38031
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042		38042
9	KNOB LID	1	47120		47120	47120		47120
10	WIRE BASKET SPRING LOADED			38096				

Item	Part Description	Qty.	Part Number				
			2200EX	2201EX	2205EX	2191EX	2195EX
1	PUMP ASSEMBLY	1		38018			38037
1a	KNOB (for pump assembly)						38061
2	133 OZ INSERT BOWL	1					2194
3	BOWL PLATFORM 1 1/16 IN	1			38120	38120	38120
4	DIPPER	1	38129		38015	38015	
5	BOWL SPRING	1			38022	38022	
6	CAN HOLDER WITH SPRING	1			38540	38540	
7	LOCK RING	1	38031	38031	38031	38031	
8	LID ASSEMBLY WITH KNOB	1	38042		38042	38042	
9	KNOB LID	1	47120	47120	47120	47120	
10	WIRE BASKET SPRING LOADED	1	38096	38096			