




# 8 oz. Kettle Assembly – 49472N



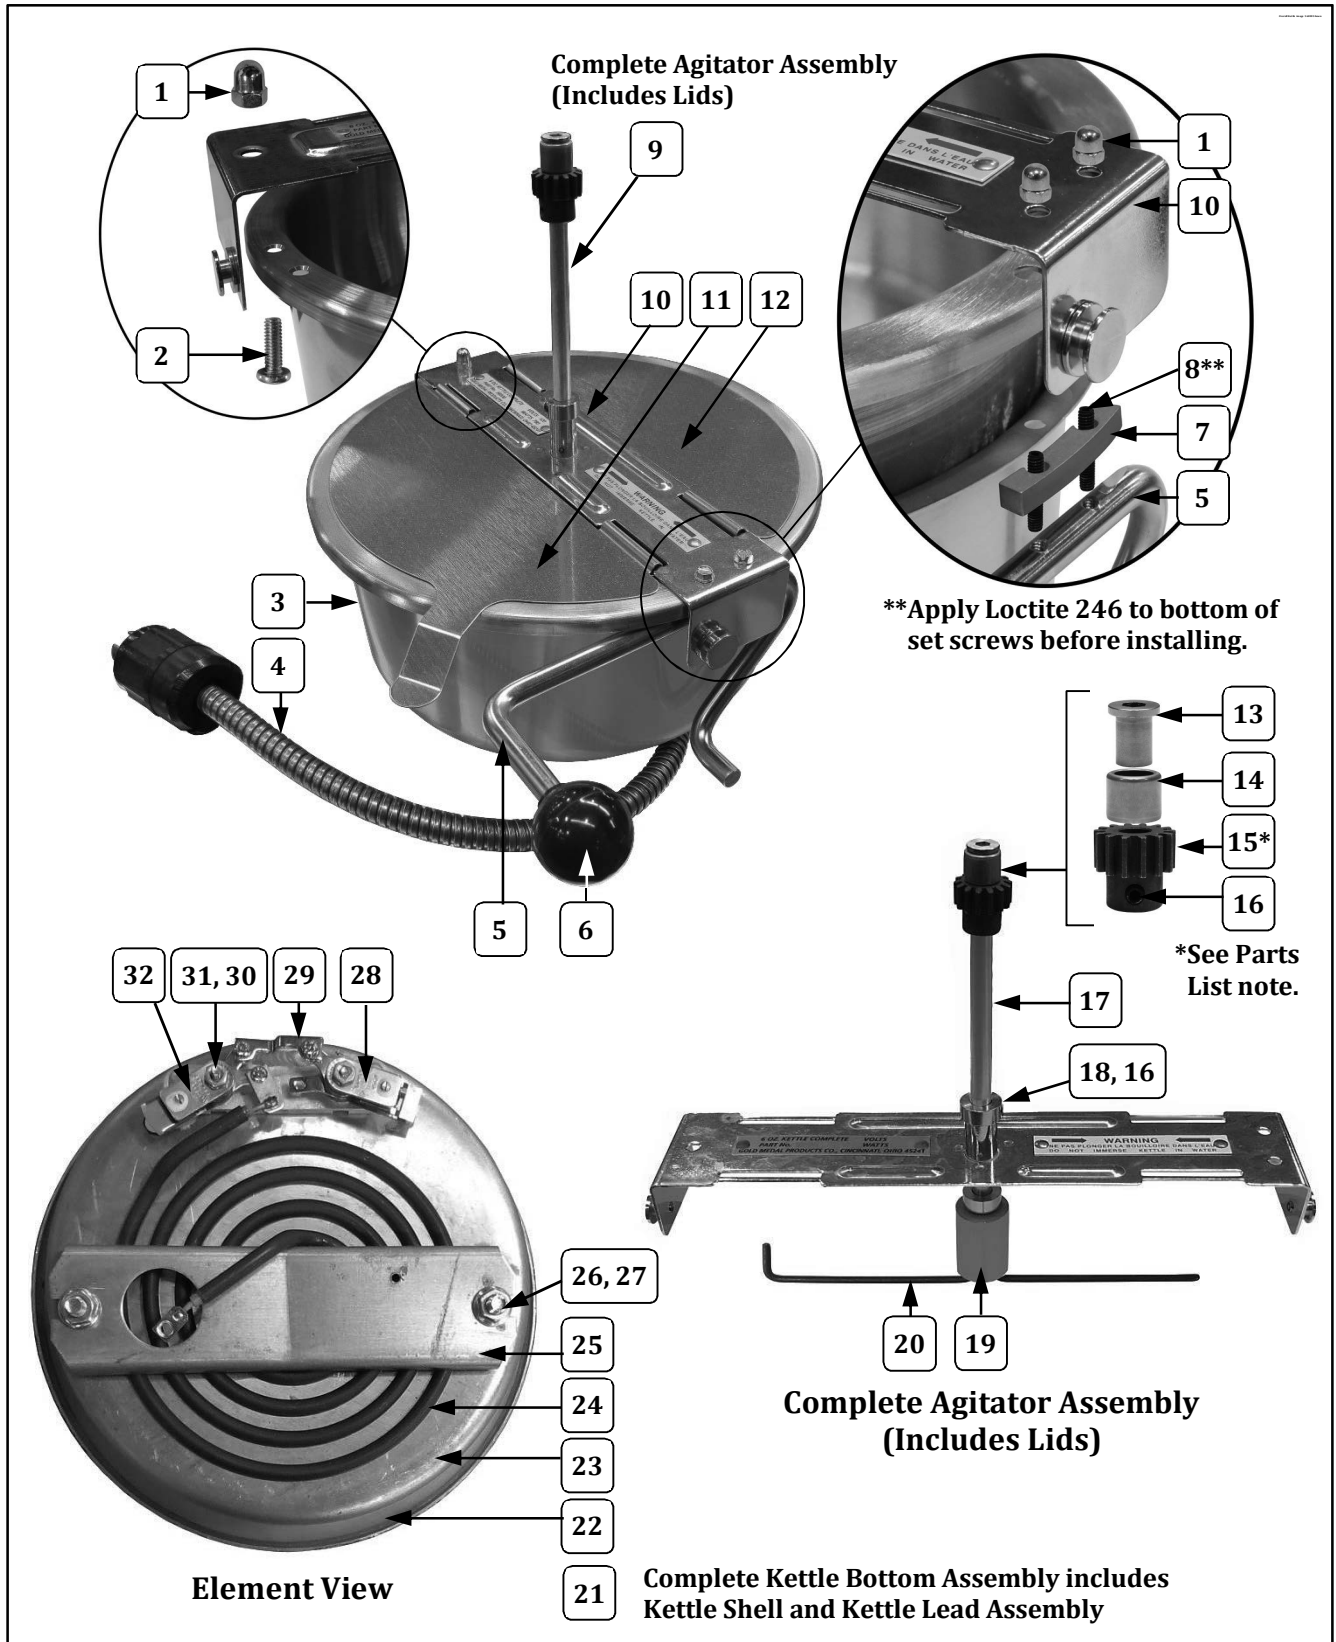

## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702





## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702





## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702





## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702



## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702






## Kettle Assembly – 49472N Parts List

Item	Part Description	Part No.
		49472N
1	ACORN NUT	47702
2	8-32 X 1/2 PHIL PAN M/S	47141
3	6 Oz. KETTLE SHELL	49431
4	6 Oz. KETTLE LEAD ASSY	49328
5	DUMP HANDLE RH	49314
6	DUMP HANDLE KNOB	47110
7	SPACER (For Dump Handle)	49362
8	8-32 X 1" SET SCREW	77933
9	LID & AGITATOR ASSY (Complete Assembly)	49906N
10	KETTLE CROSSBAR ASSEMBLY	49907N
11	FRONT LID W/FORMED LIFTER	49017
12	REAR KETTLE LID	49016
13	AGITATOR BEARING HUB	43434
14	NEEDLE BEARING	47106
15*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K
16	SET SCREW #10-32 X 3/16	41742
17	6 Oz. AGITATOR SHAFT	69710
18	SET COLLAR 5/16 ID 5/8 OD	46649
19	AGITATOR WEIGHT	69715
20	6 Oz. STIR ROD	69714
<b>Kettle Bottom Assembly – Element View</b>		
21	8 oz. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes Kettle Shell, Kettle Lead Assembly and parts listed below)	49489N
22	6 oz. KETTLE GASKET	49368
23	6 oz. CLAD KETTLE	49596
24	120 VOLT 1125 WATT HEAT ELEMENT	49529
25	ELEMENT CLAMP	49532
26	5/16-18 SERRATED LOCK NUT	49317
27	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
28	450°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76089
29	THERMOSTAT SHUNT BAR	47193
30	8-32 TOP LOCK NUT (where used, always replace lock nut if removed)	67943
31	8-32 x 1 SS HEX SC (Holds Thermostat)	49076
32	525°F THERMOSTAT (Two 6-32 X 3/16 Screws Included)	76702




## Kettle Lead Assembly (49328) – Individual Parts Breakdown

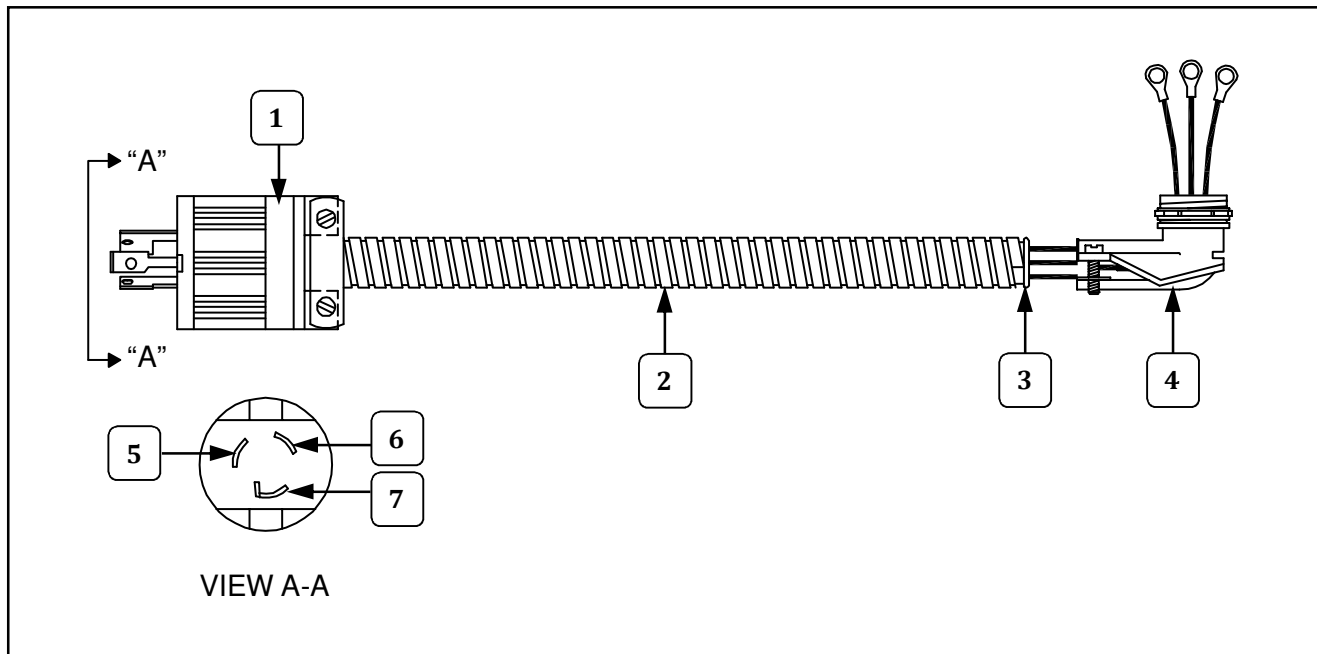

Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159




## Kettle Lead Assembly (49328) – Individual Parts Breakdown

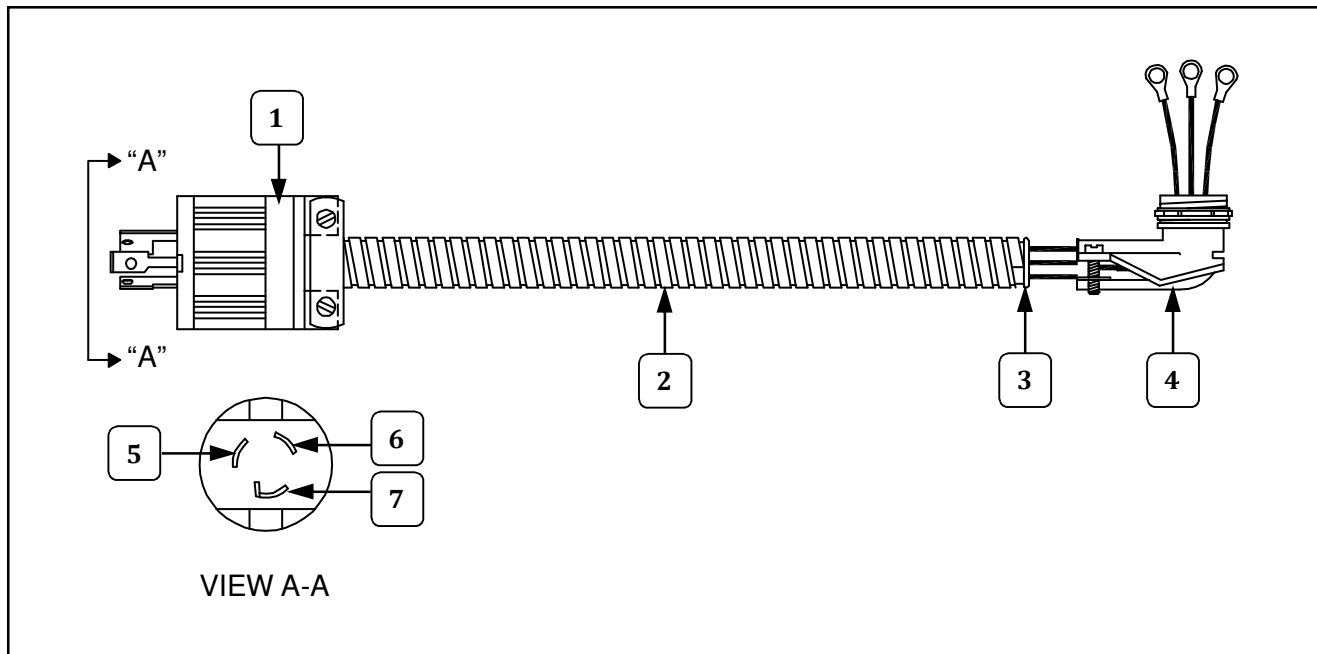

Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159




## Kettle Lead Assembly (49328) – Individual Parts Breakdown

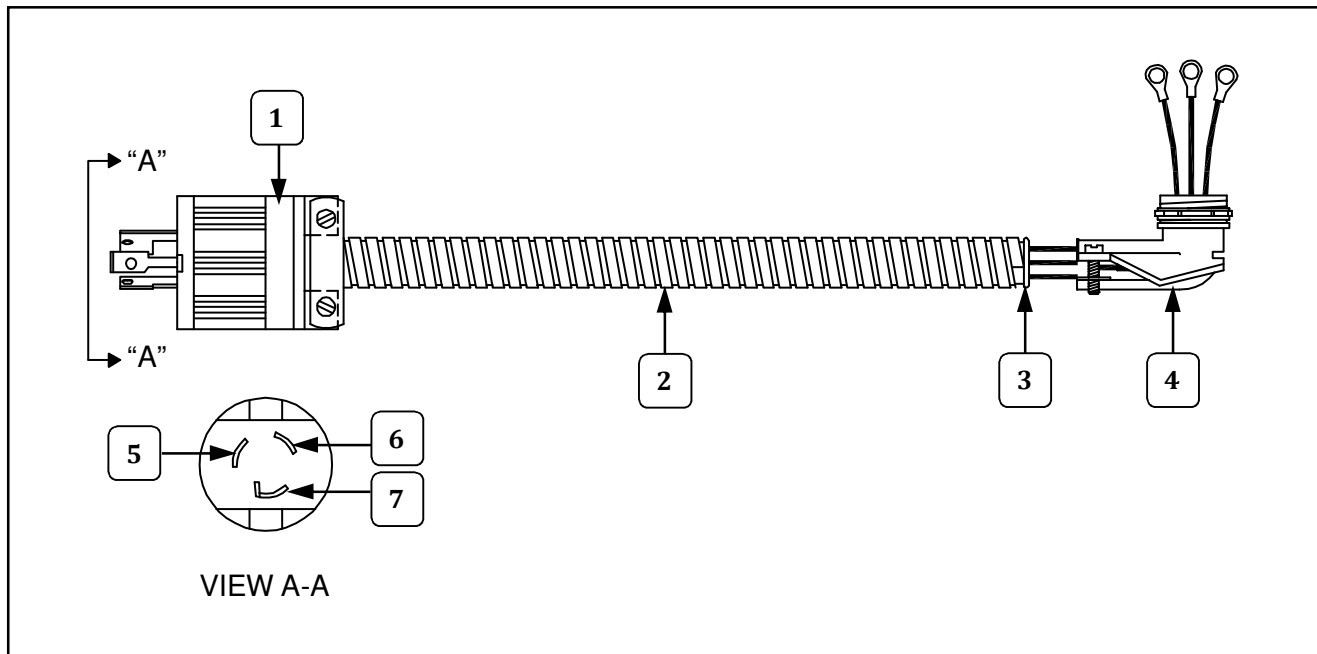

Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159




## Kettle Lead Assembly (49328) – Individual Parts Breakdown

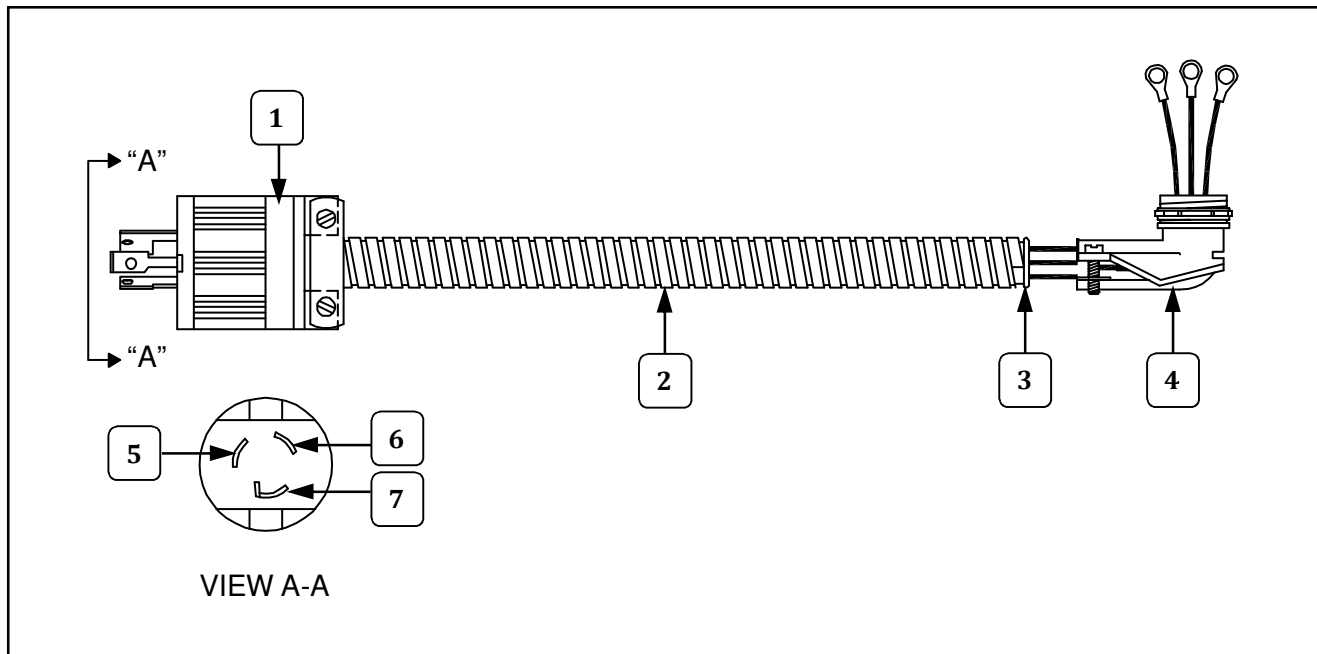

Item	Part Description	Qty.	Part No.
			<b>49328</b>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159




## Kettle Lead Assembly (49328) – Individual Parts Breakdown

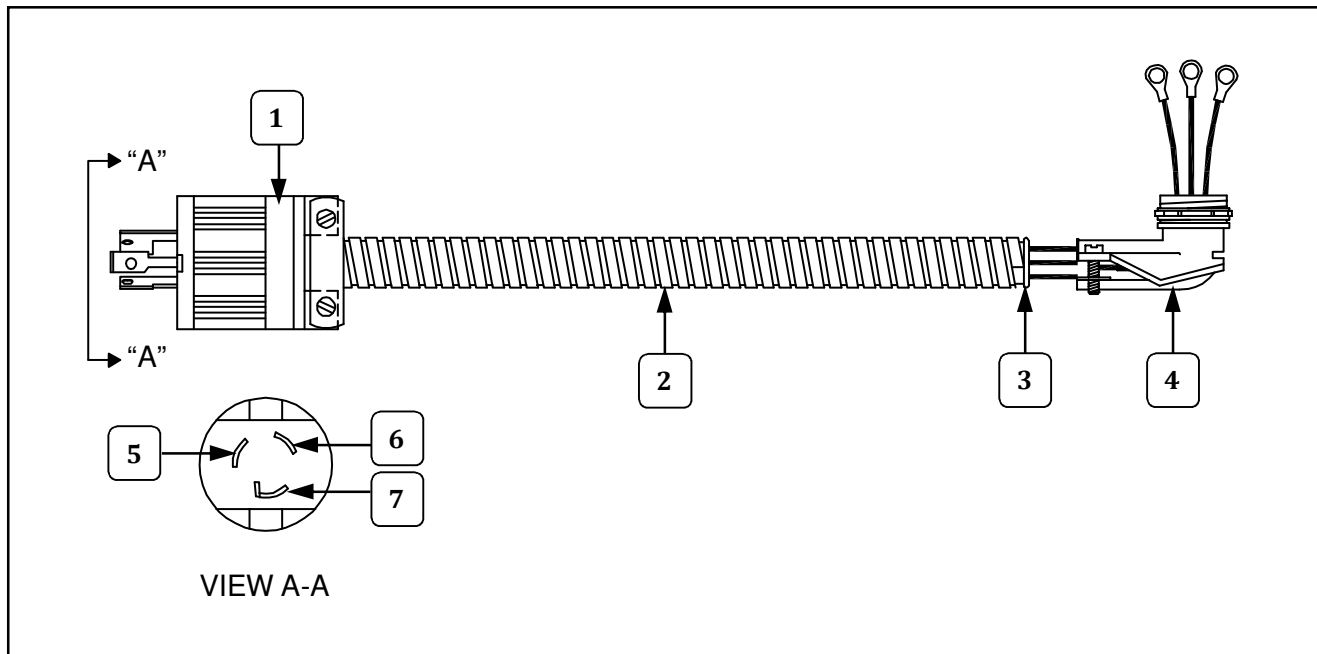

Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159




## Kettle Lead Assembly (49328) – Individual Parts Breakdown

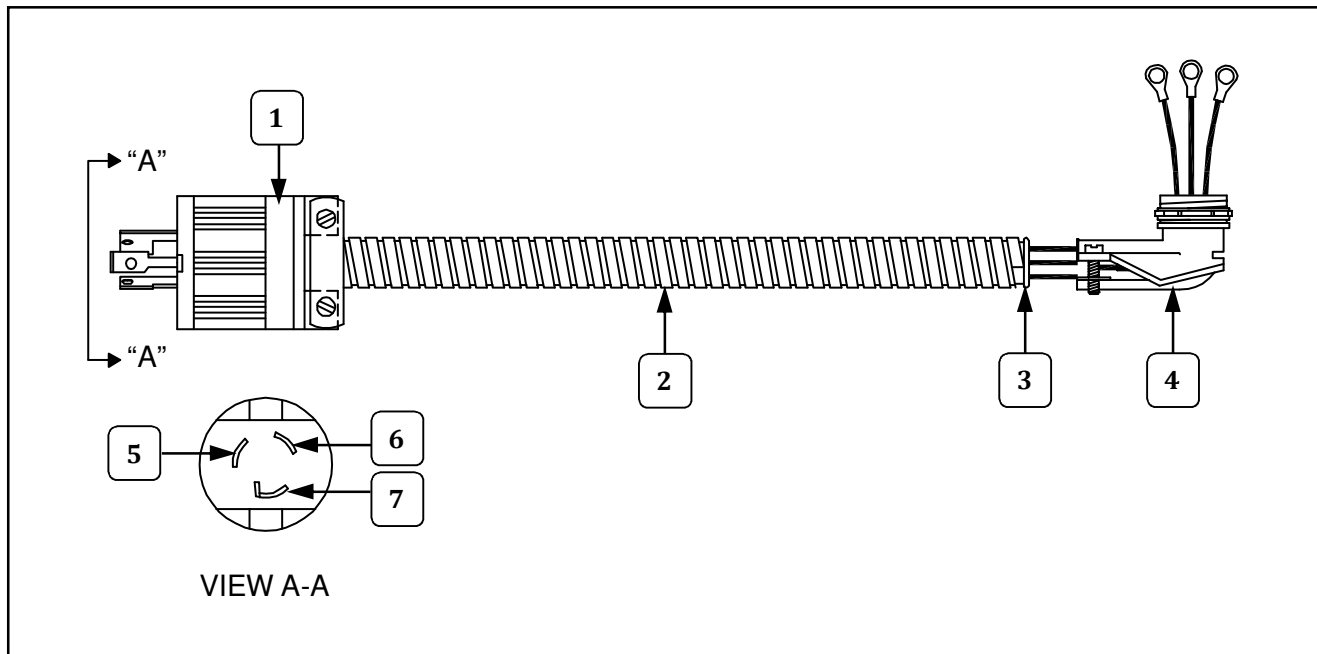

Item	Part Description	Qty.	Part No.
			<b>49328</b>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159



## Kettle Lead Assembly (49328) – Individual Parts Breakdown

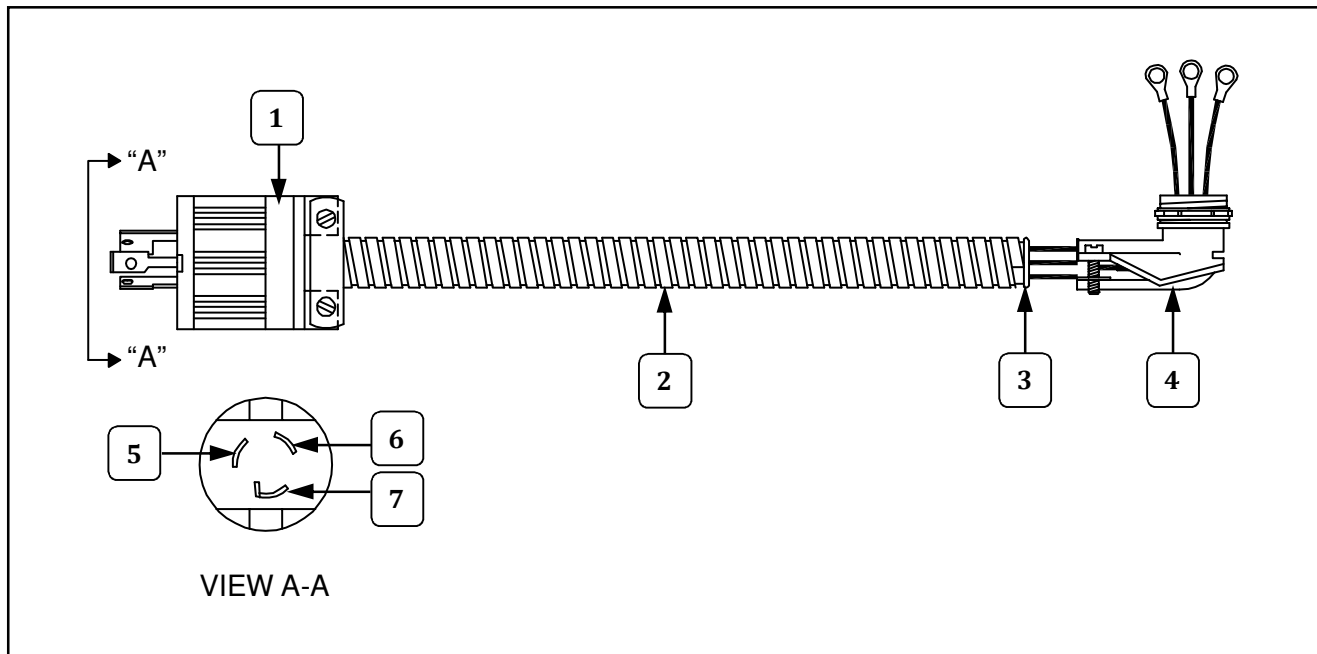


Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159






## Kettle Lead Assembly (49328) – Individual Parts Breakdown

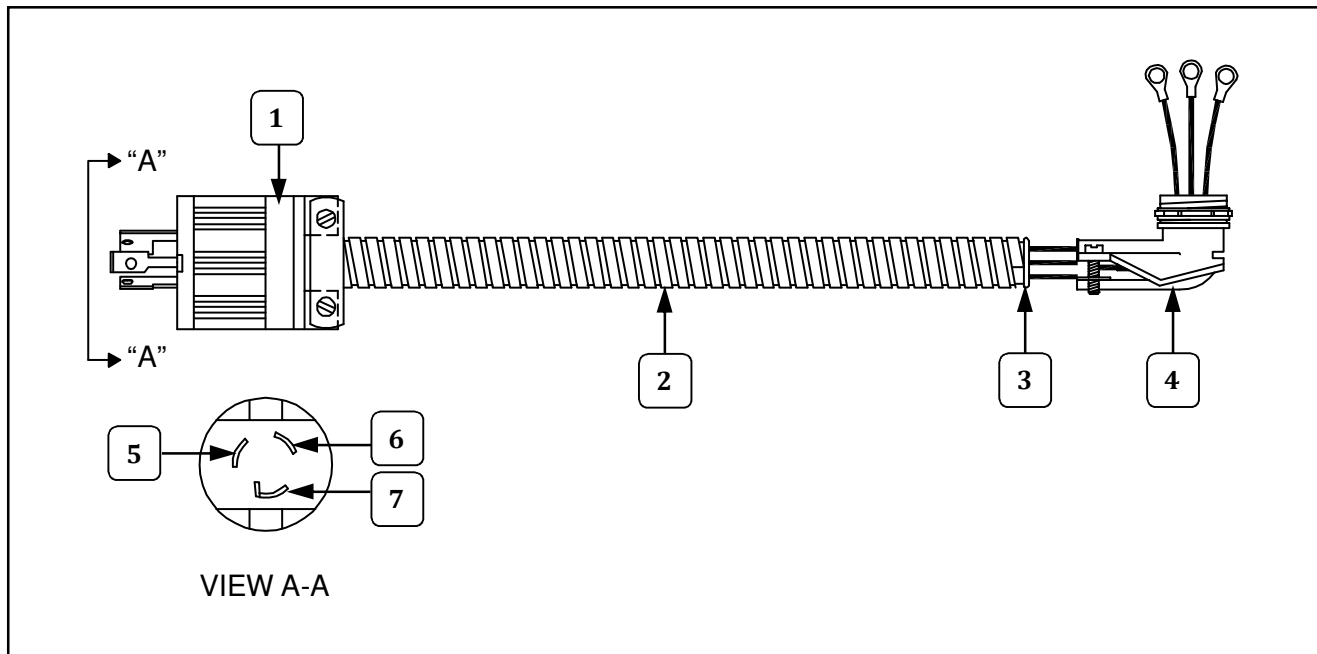

Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159



## Kettle Lead Assembly (49328) – Individual Parts Breakdown

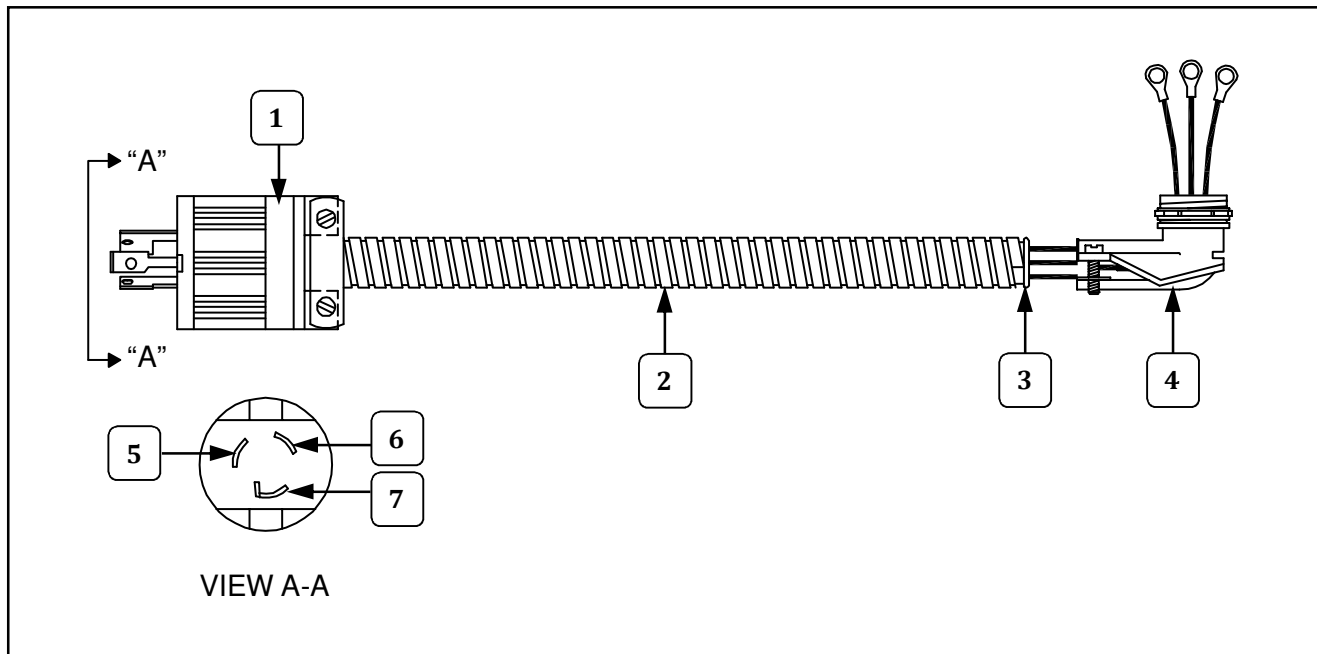

Item	Part Description	Qty.	Part No.
			<del>49328</del>
1	KETTLE PLUG 15A TWIST LOCK	1	49329
2	SS FLEX CONDUIT - 16 IN LONG	1	77079-16
3	7/16 CONDUIT BUSHING	1	77080NM
4	CONNECTOR 90 DEGREE	1	46241
5	KETTLE LEAD WIRE RED	1	49086
6	KETTLE LEAD WIRE WHITE	1	49087
7	KETTLE LEAD WIRE GREEN	1	49159

## Cabinet Breakdown – Exterior Front View



Item	Part Description	Qty.	Part No. 2660SR
1	CORD CLIP	2	46768
2	LEAD-IN CORD 15 AMP PLUG	1	22038
3	STRAIN RELIEF #SR-6P3-4	1	76026
4	SIDE PANEL (Thick Acrylic Side Window)	2	69957
5	FRONT PANEL (Thick Acrylic Front Window)	1	69956
6	FRONT GLASS DECAL	1	49158

## Cabinet Breakdown – Exterior Front View



Item	Part Description	Qty.	Part No. 2660SR
1	CORD CLIP	2	46768
2	LEAD-IN CORD 15 AMP PLUG	1	22038
3	STRAIN RELIEF #SR-6P3-4	1	76026
4	SIDE PANEL (Thick Acrylic Side Window)	2	69957
5	FRONT PANEL (Thick Acrylic Front Window)	1	69956
6	FRONT GLASS DECAL	1	49158

## Cabinet Breakdown – Exterior Front View



Item	Part Description	Qty.	Part No. 2660SR
1	CORD CLIP	2	46768
2	LEAD-IN CORD 15 AMP PLUG	1	22038
3	STRAIN RELIEF #SR-6P3-4	1	76026
4	SIDE PANEL (Thick Acrylic Side Window)	2	69957
5	FRONT PANEL (Thick Acrylic Front Window)	1	69956
6	FRONT GLASS DECAL	1	49158

## Cabinet Breakdown – Exterior Front View



Item	Part Description	Qty.	Part No. 2660SR
1	CORD CLIP	2	46768
2	LEAD-IN CORD 15 AMP PLUG	1	22038
3	STRAIN RELIEF #SR-6P3-4	1	76026
4	SIDE PANEL (Thick Acrylic Side Window)	2	69957
5	FRONT PANEL (Thick Acrylic Front Window)	1	69956
6	FRONT GLASS DECAL	1	49158

## Cabinet Breakdown – Exterior Front View



Item	Part Description	Qty.	Part No. 2660SR
1	CORD CLIP	2	46768
2	LEAD-IN CORD 15 AMP PLUG	1	22038
3	STRAIN RELIEF #SR-6P3-4	1	76026
4	SIDE PANEL (Thick Acrylic Side Window)	2	69957
5	FRONT PANEL (Thick Acrylic Front Window)	1	69956
6	FRONT GLASS DECAL	1	49158

## Cabinet Breakdown – Exterior Front View




Item	Part Description	Qty.	Part No. 2660SR
1	CORD CLIP	2	46768
2	LEAD-IN CORD 15 AMP PLUG	1	22038
3	STRAIN RELIEF #SR-6P3-4	1	76026
4	SIDE PANEL (Thick Acrylic Side Window)	2	69957
5	FRONT PANEL (Thick Acrylic Front Window)	1	69956
6	FRONT GLASS DECAL	1	49158






## Cabinet Breakdown – Exterior Rear View

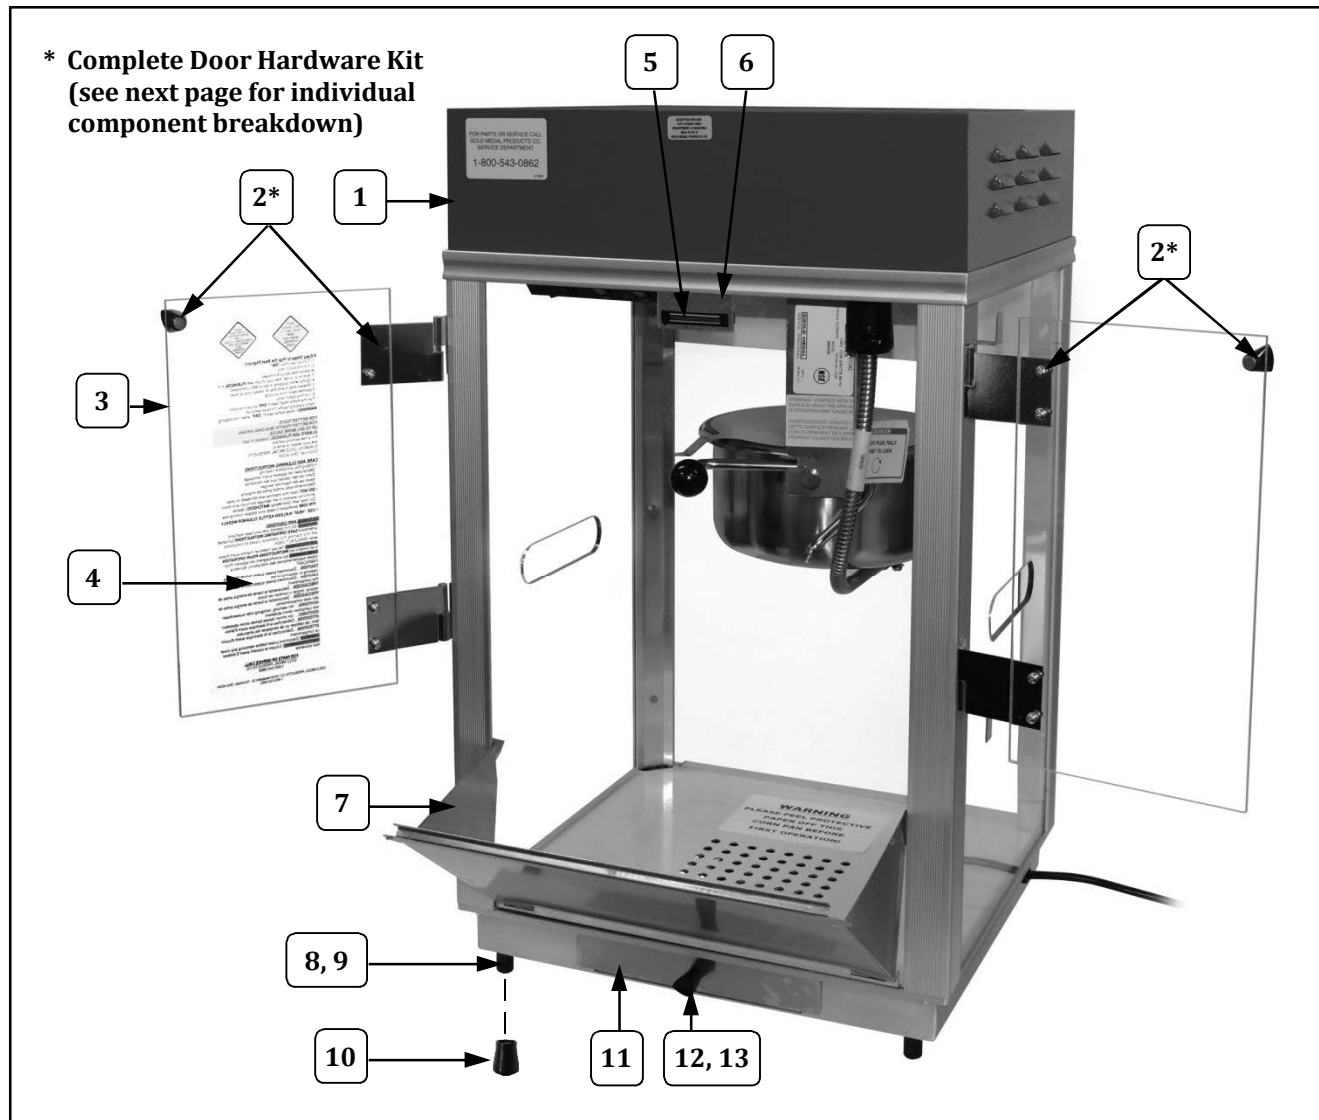

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

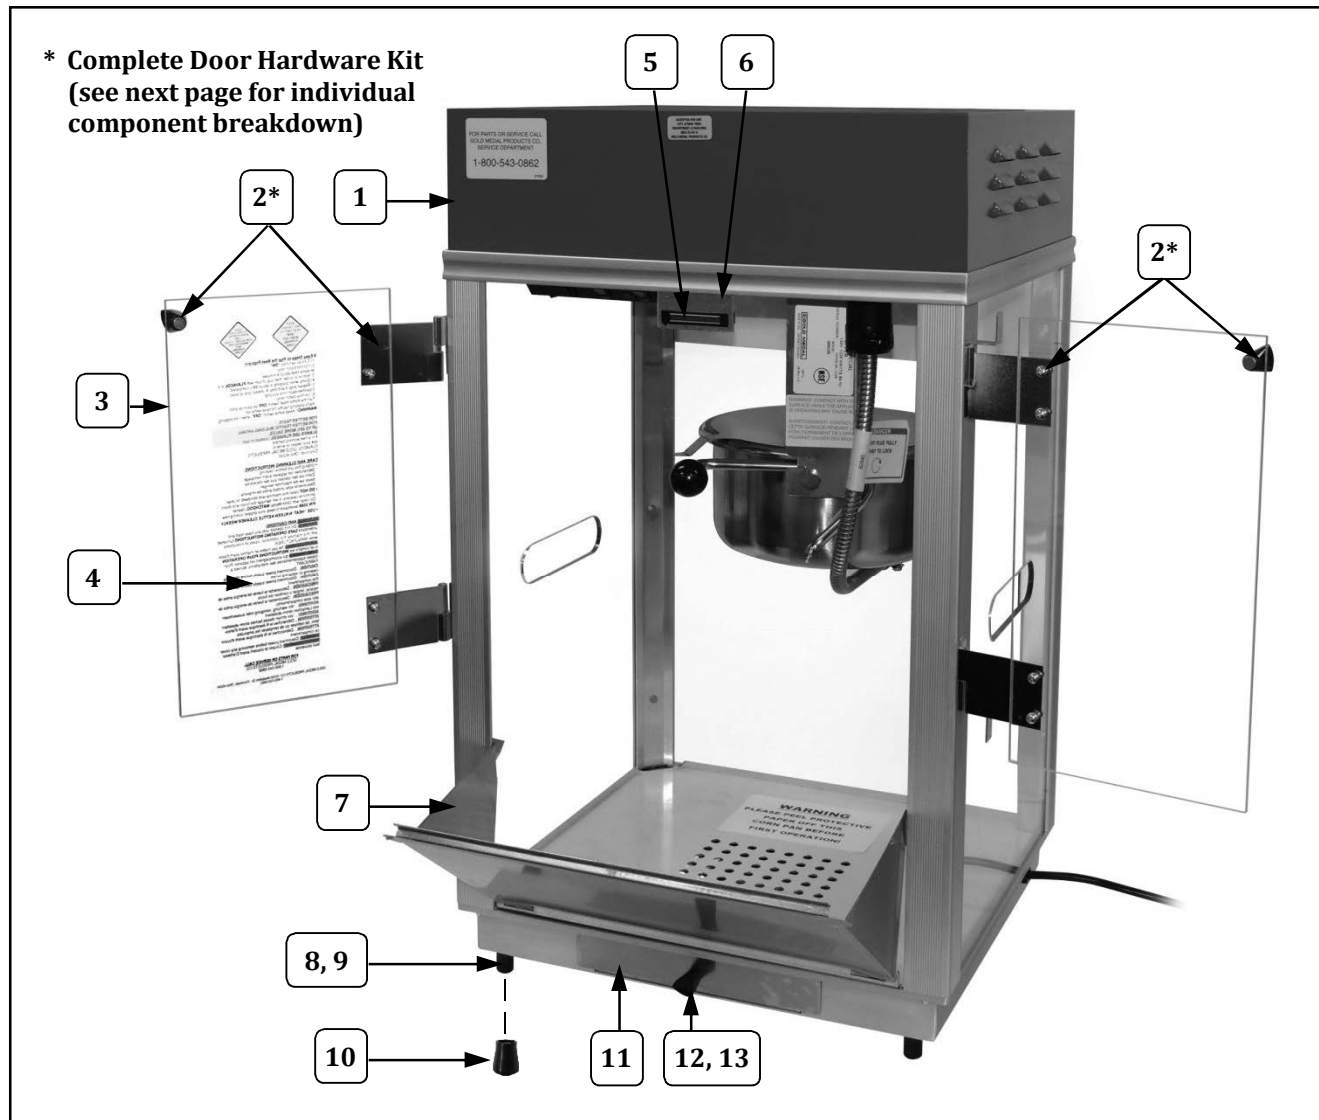

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

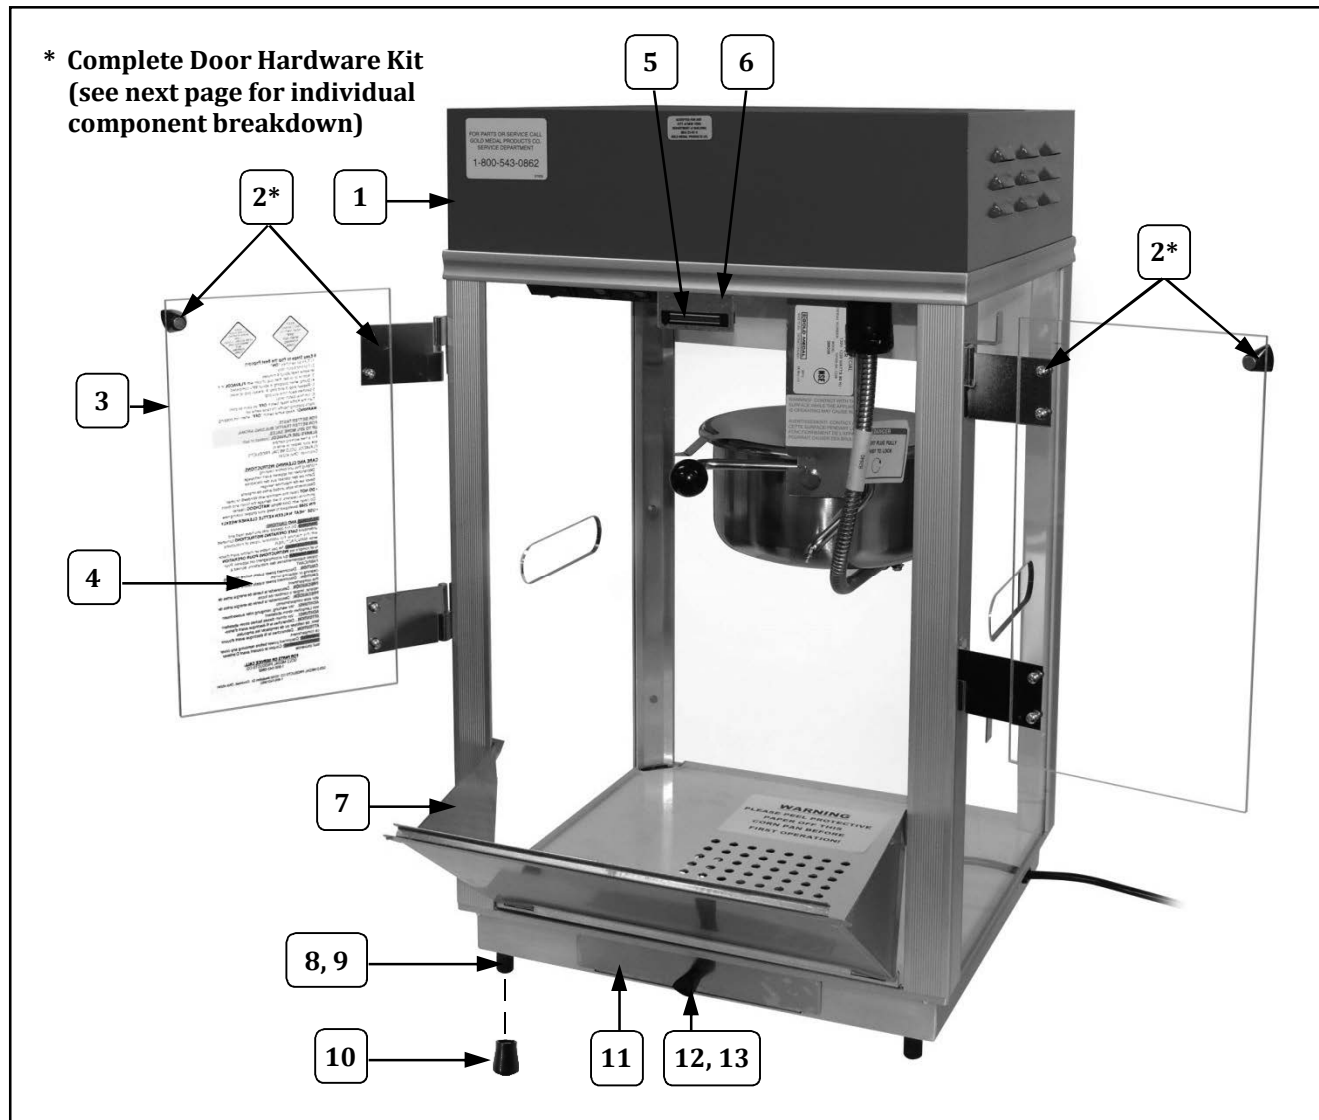

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

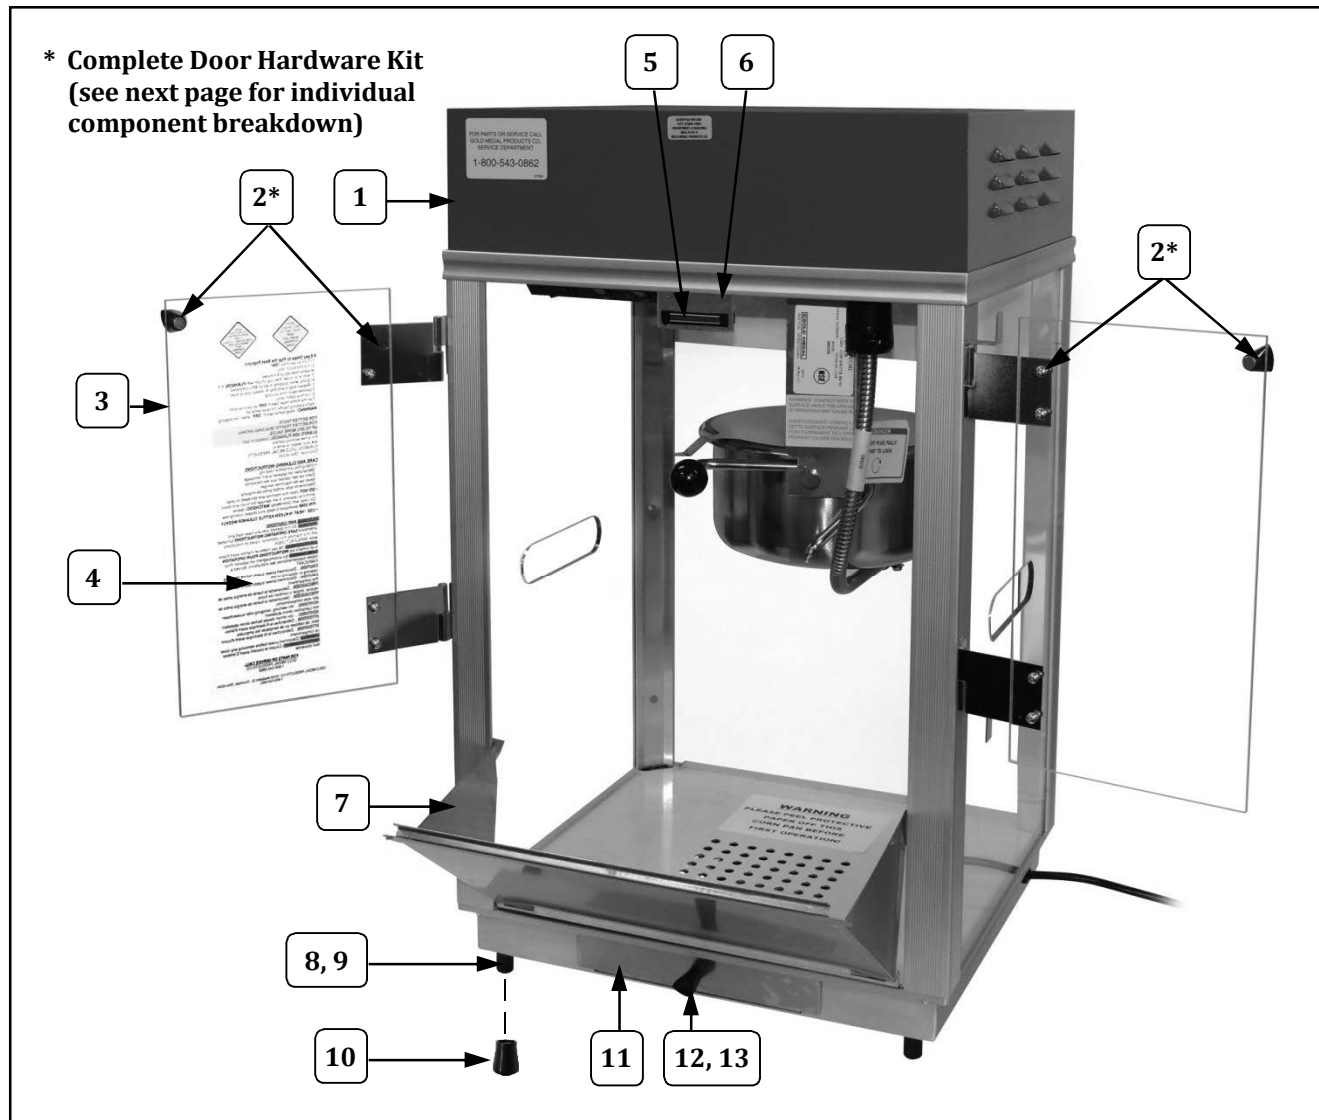

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

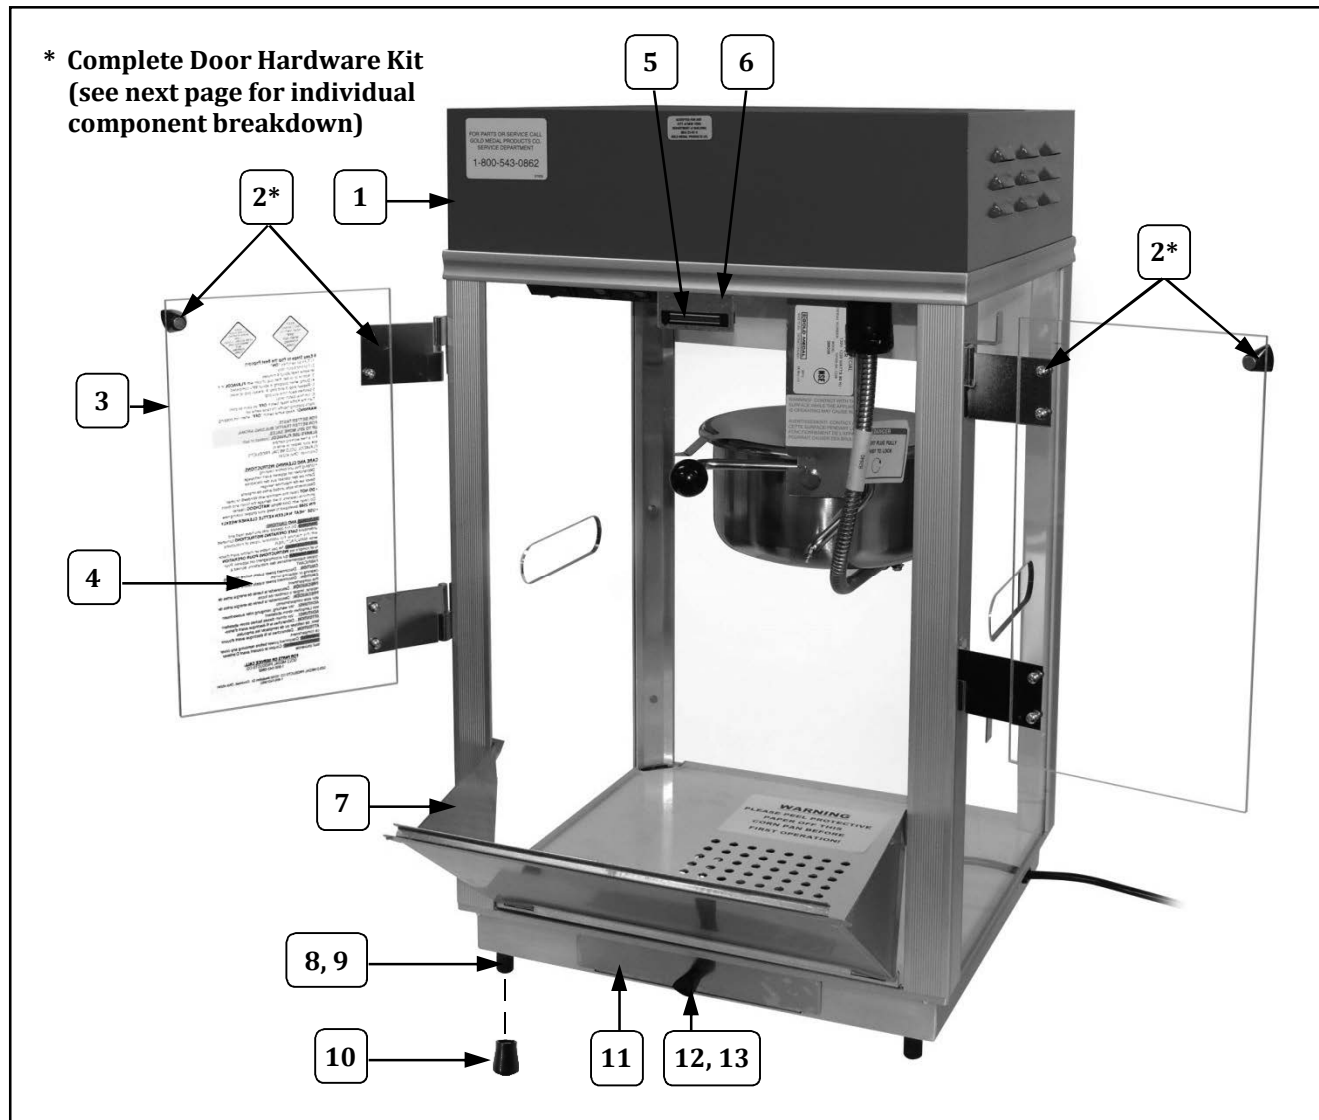

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

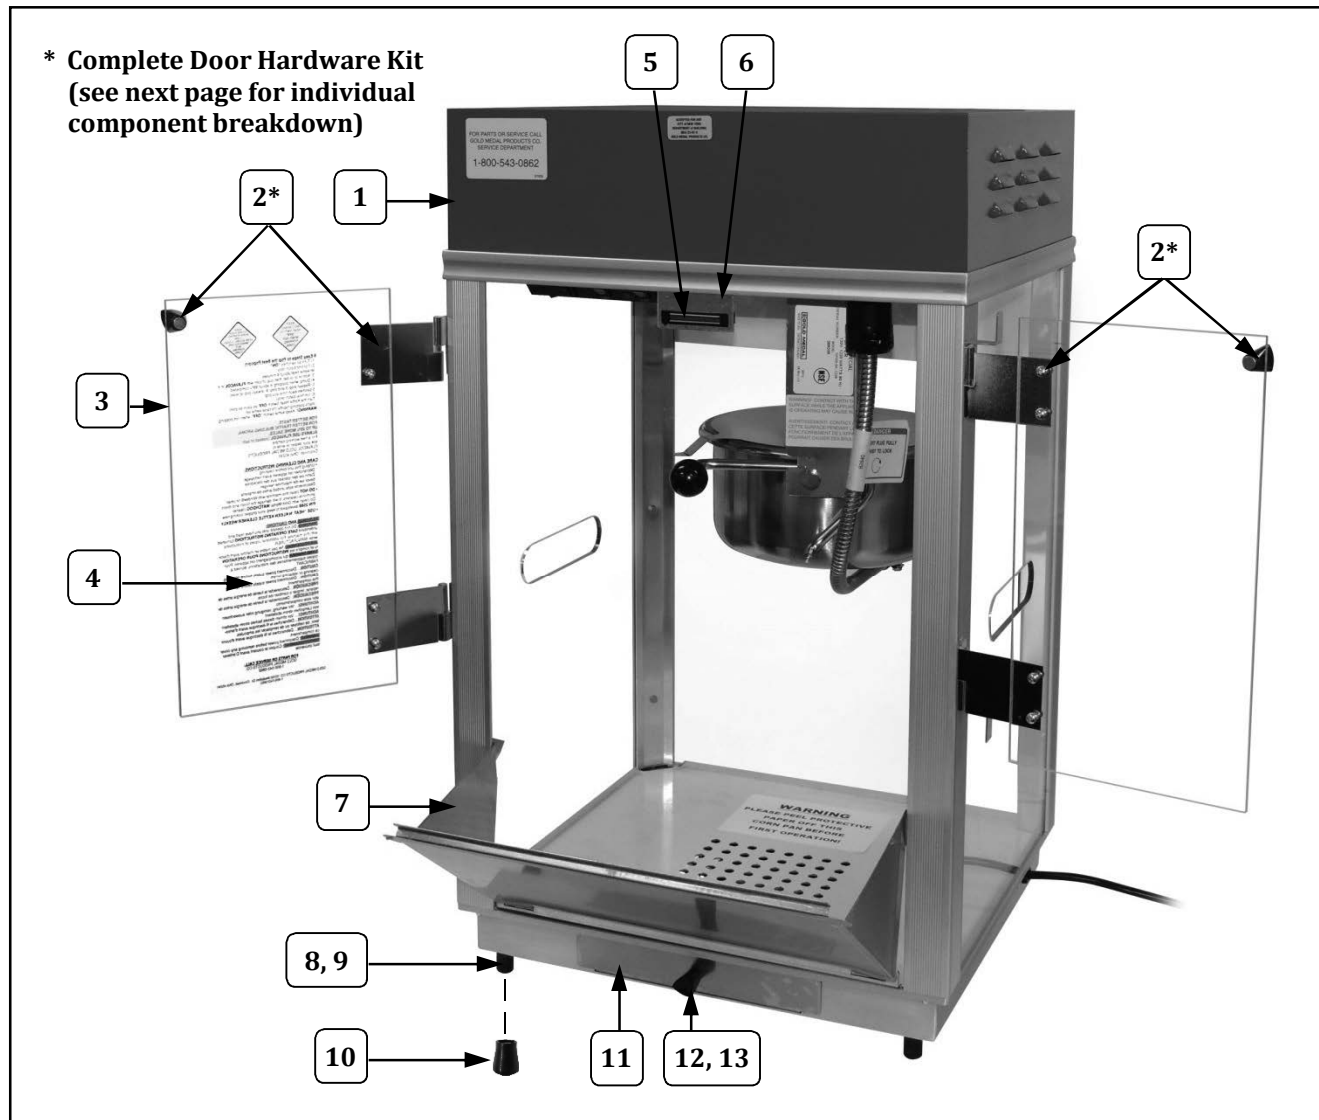

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

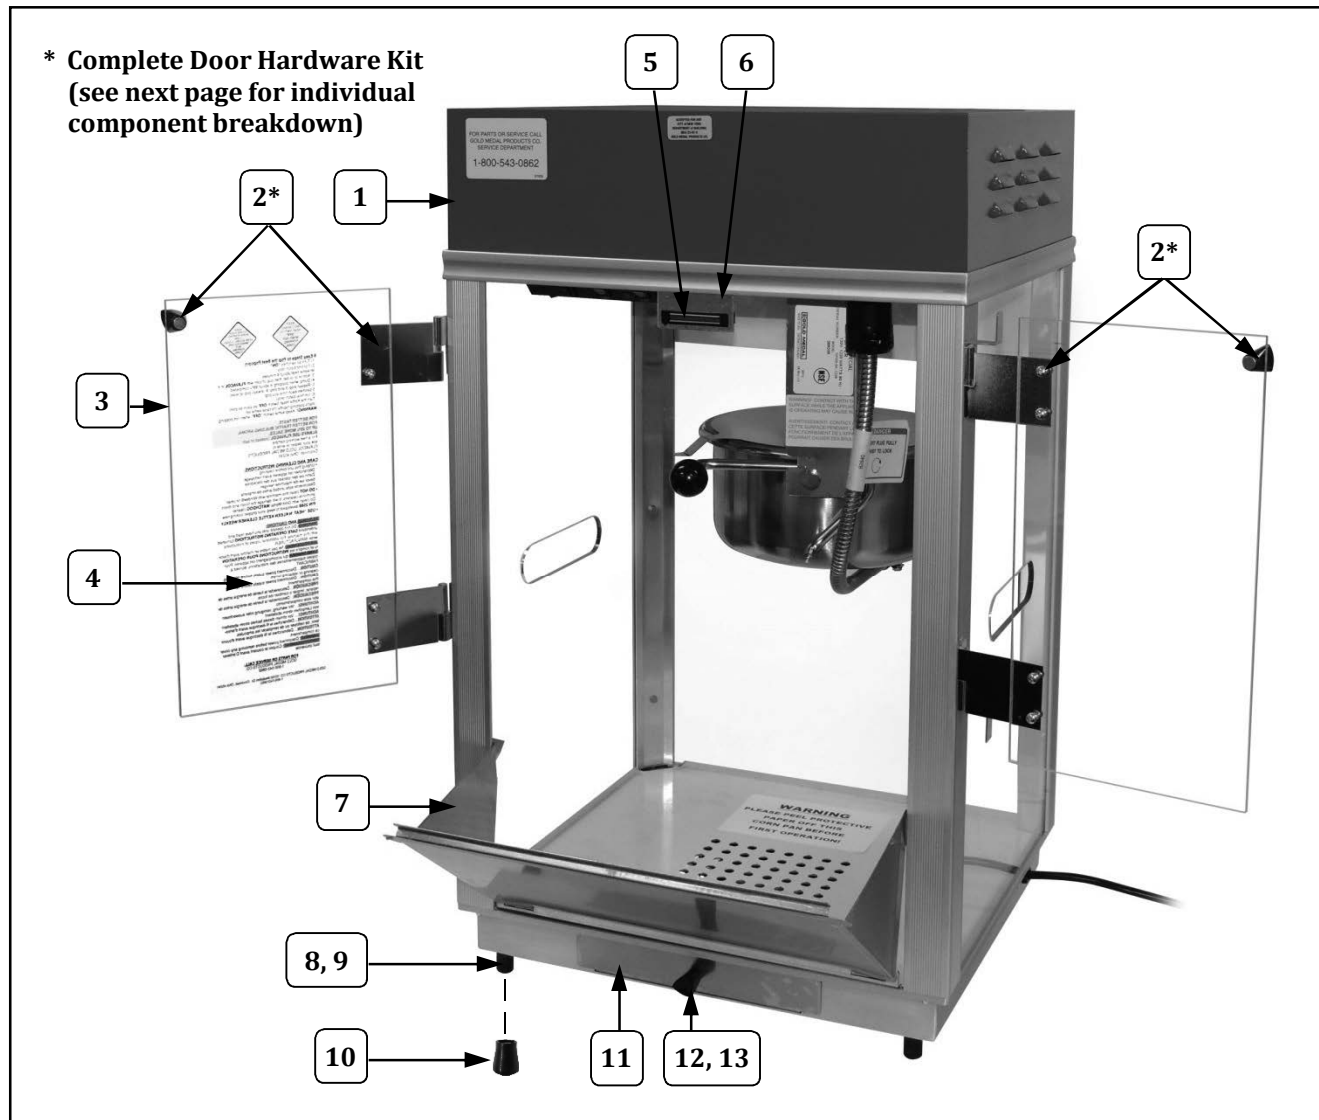

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227



## Cabinet Breakdown – Exterior Rear View

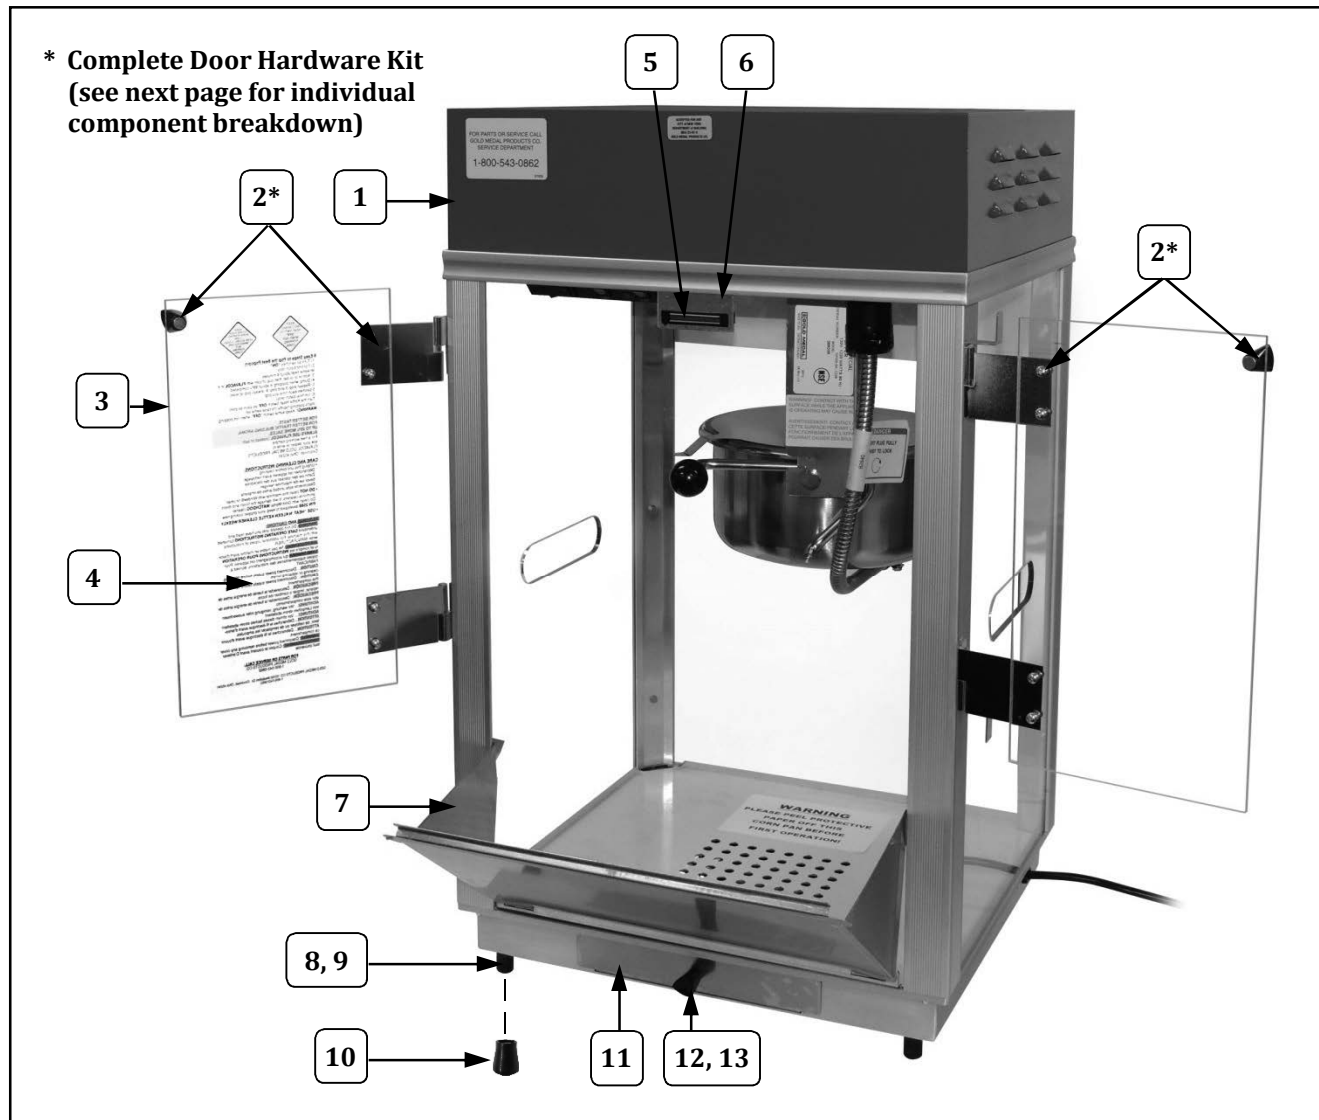


Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227






## Cabinet Breakdown – Exterior Rear View

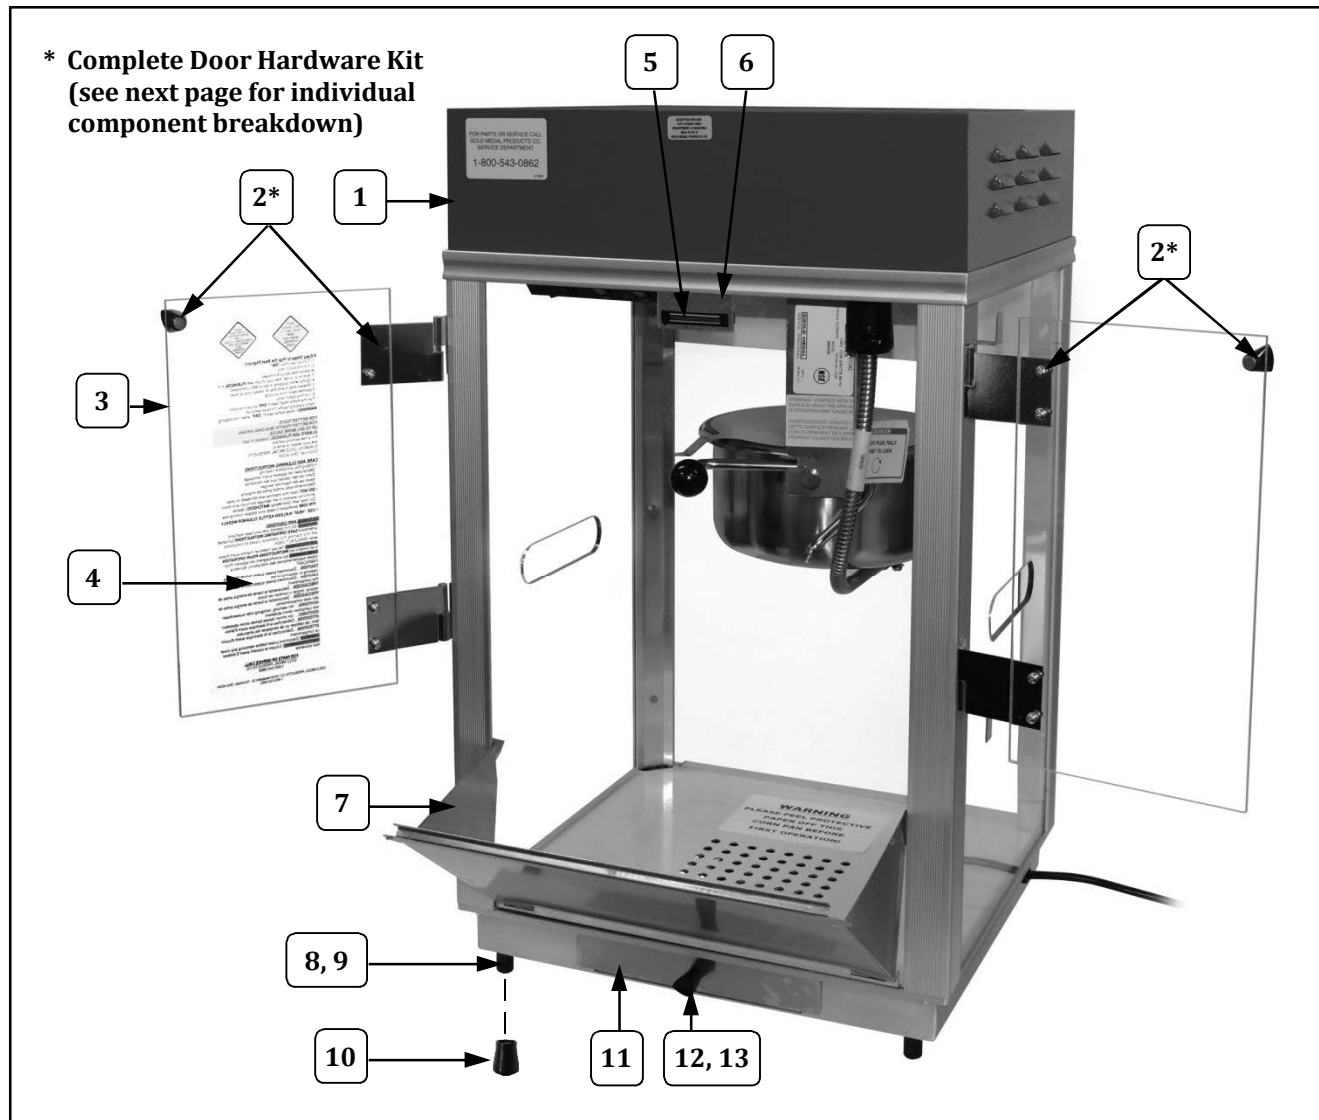

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

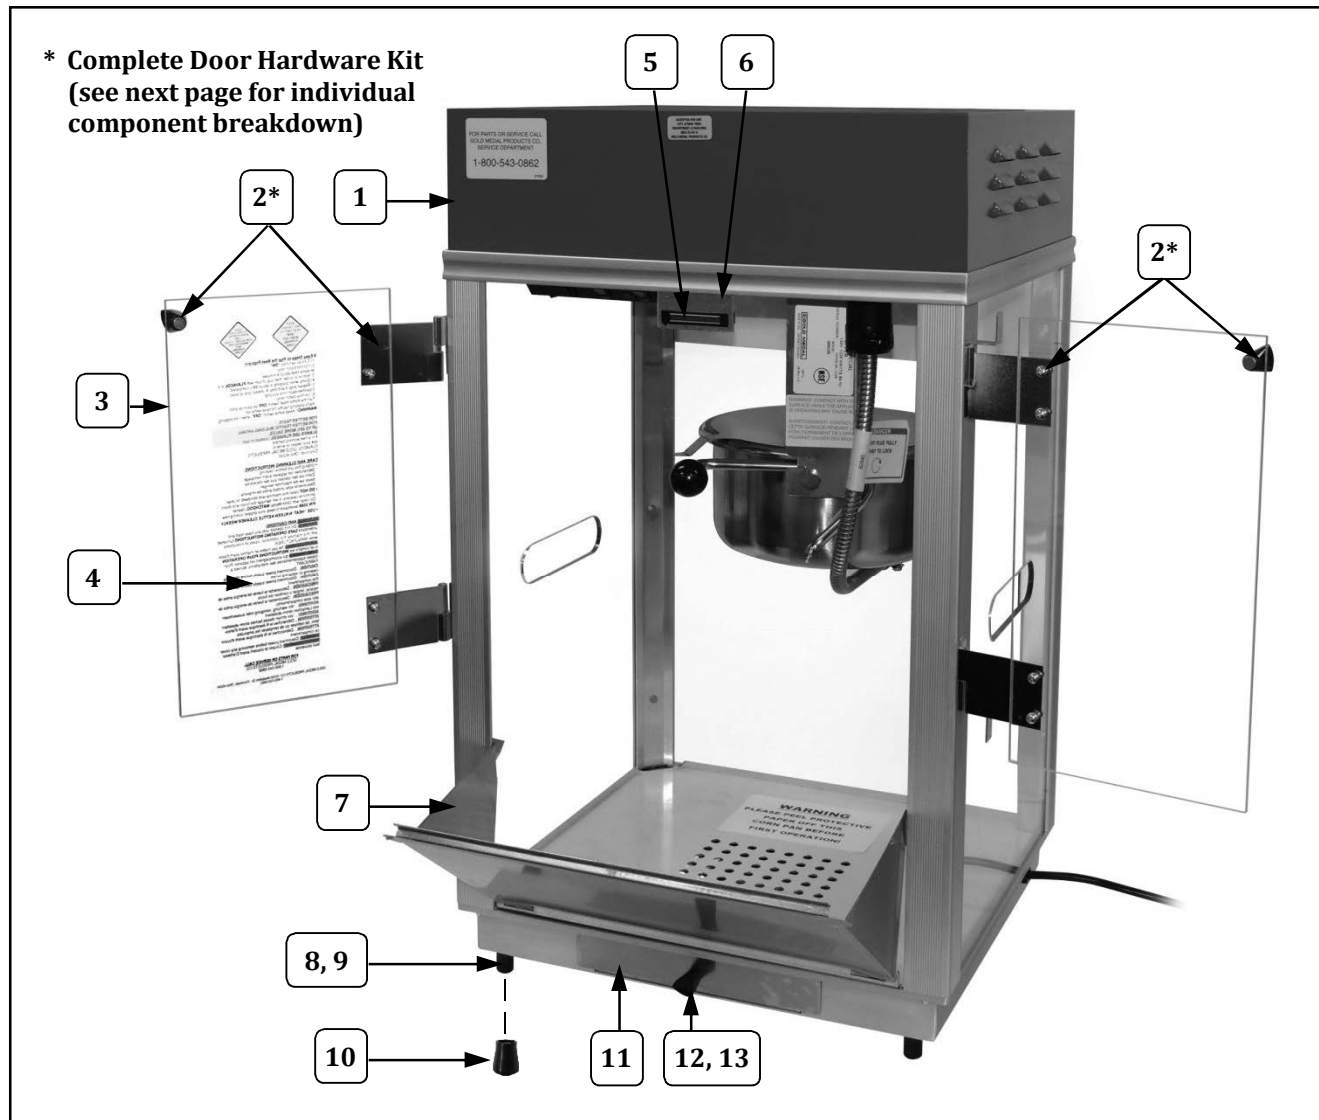

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

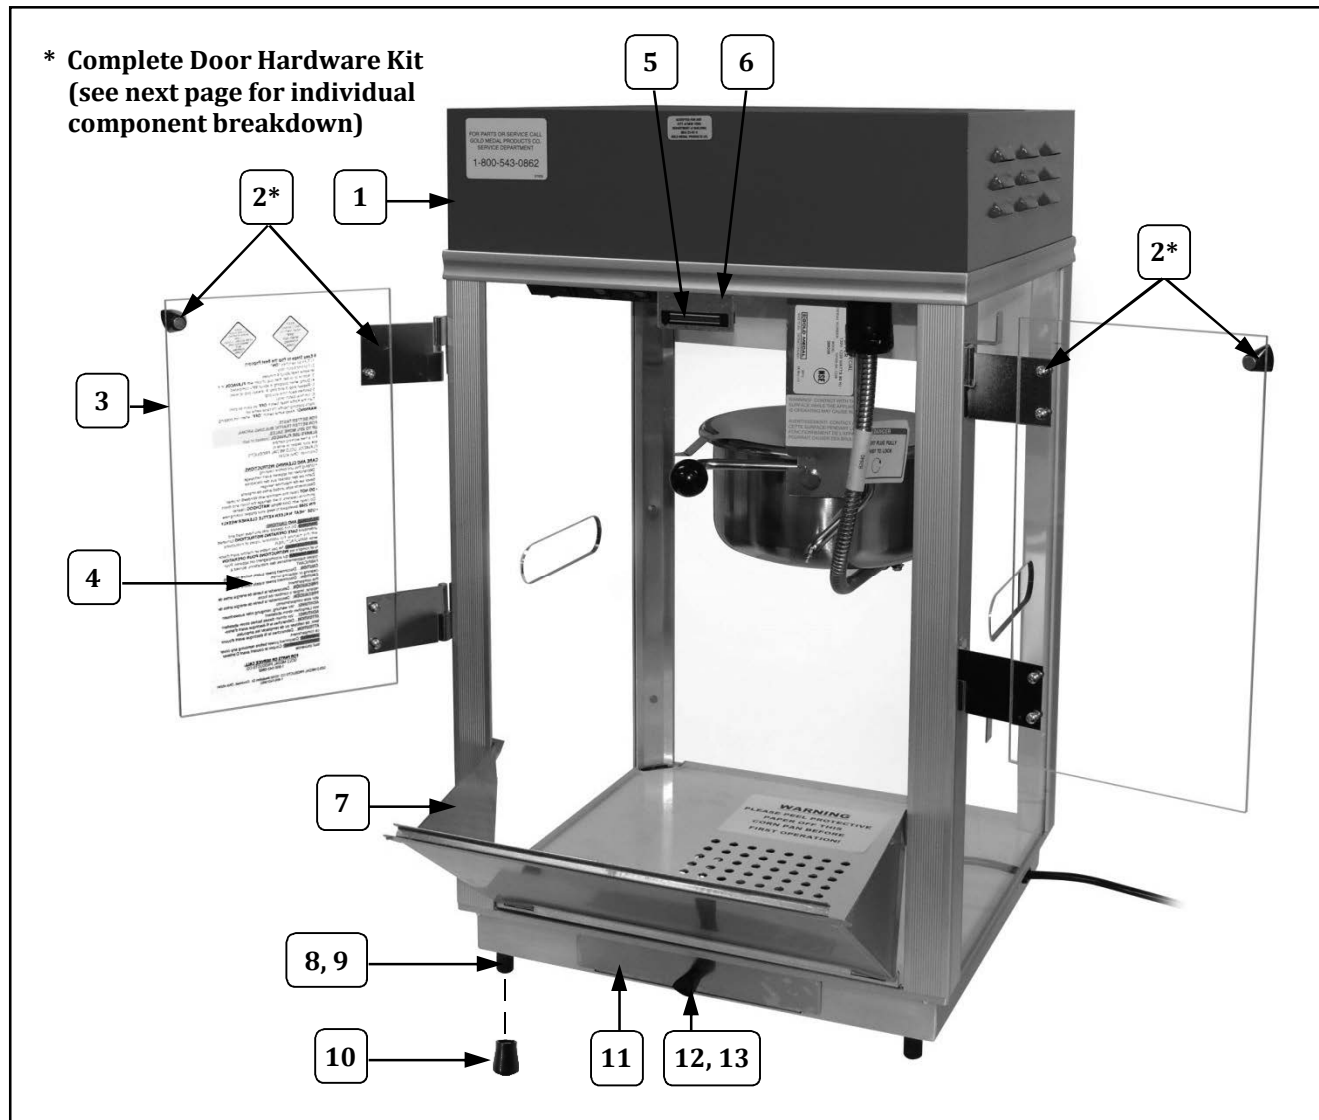

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

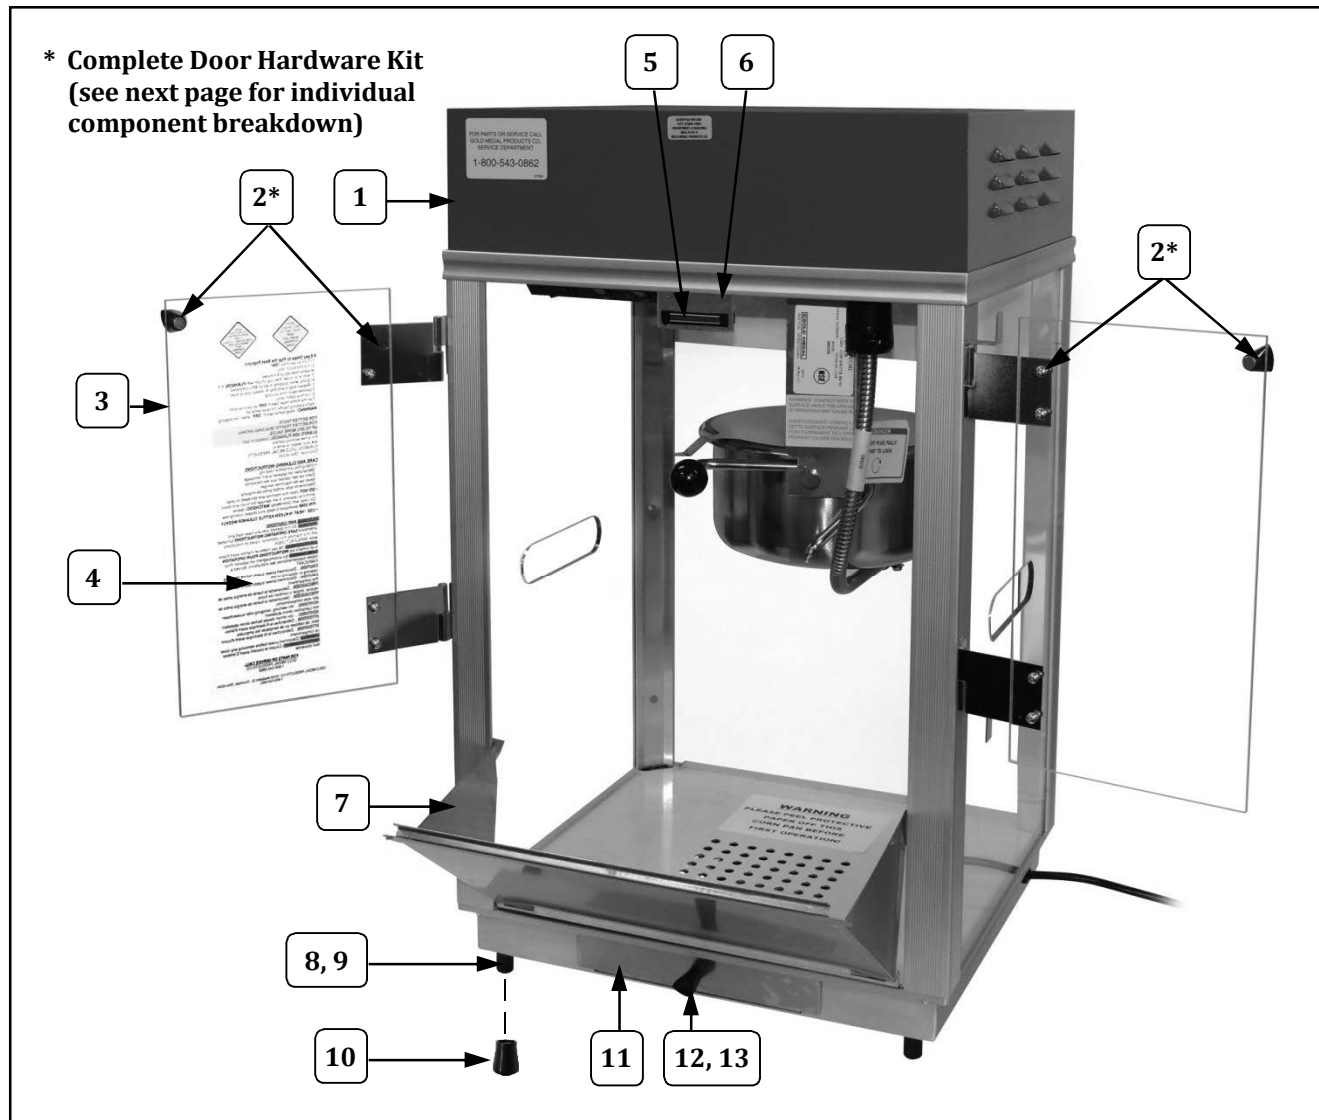

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Cabinet Breakdown – Exterior Rear View

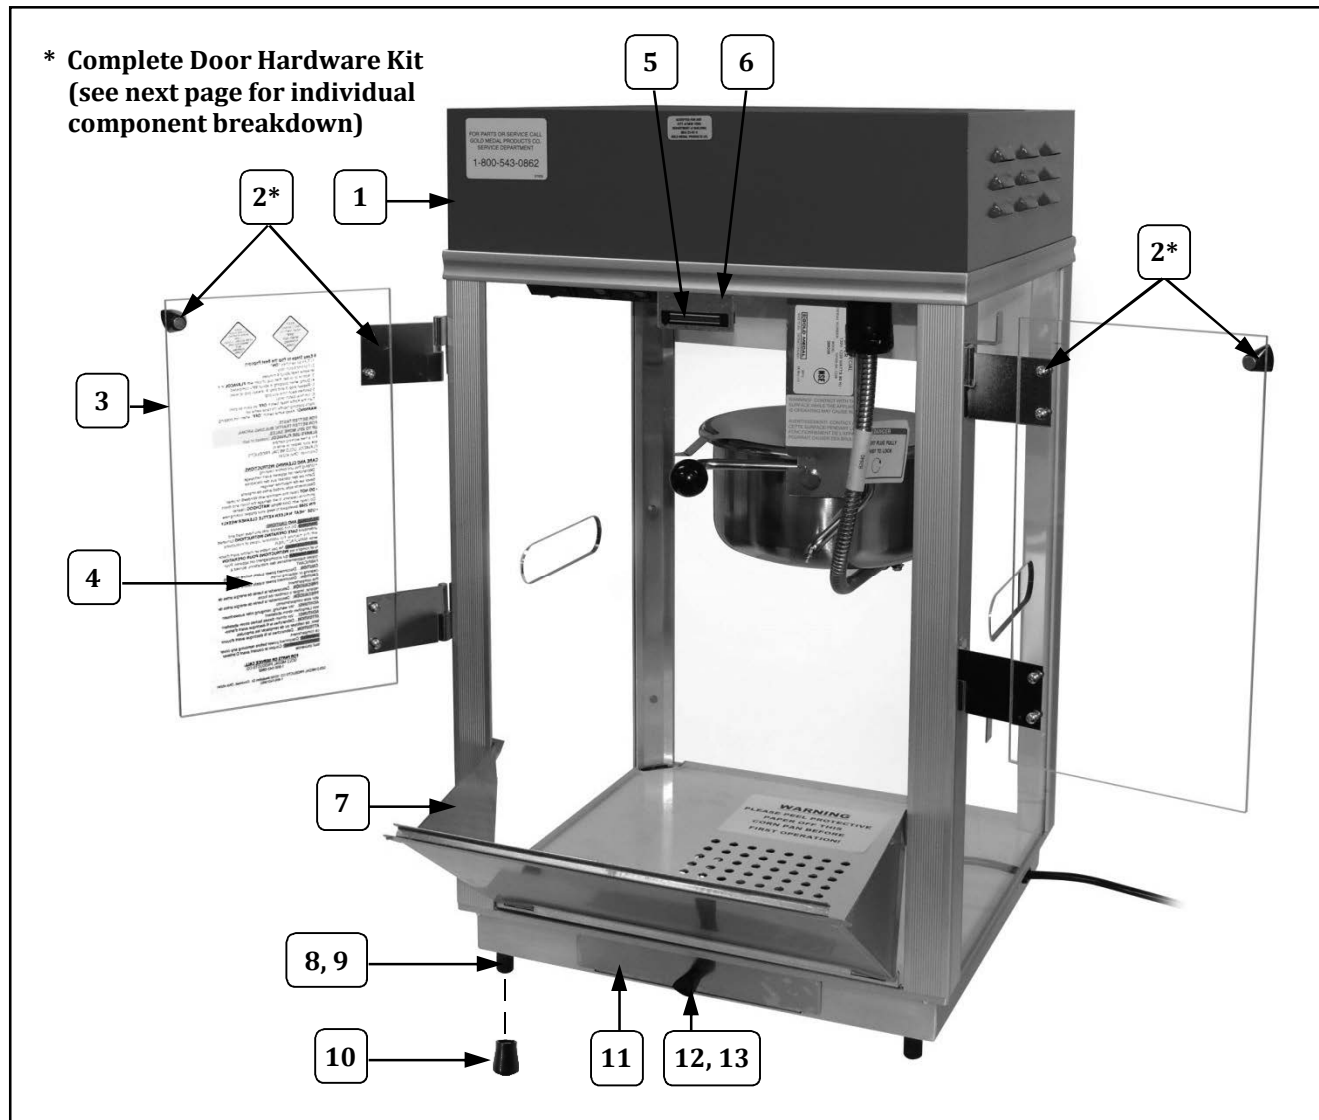

Item	Part Description	Part No.
		2660SR
1	RED DOME	49456
2*	COMPLETE DOOR HARDWARE KIT	61380
3	HEAVY DUTY DOOR 2660 (door does not include hardware)	49396HD
4	UNIVERSAL POPCORN DECAL	41019
5	MAGNETIC CATCH	47561
6	MAGNETIC CATCH MT BRACKET	77089
7	DROP PANEL	49210
8	GLIDE	47328
9	10-24 X 3/4 HX HD SCREW	41314
10	CRUTCH TIP BLACK 70 DURO	49123
11	OLD MAID PAN	49100
12	KNOB LID LIFT	47120
13	8-32 X 3/8 PH PAN W/SEMS	42227




## Door Hardware Kit 61380 - Individual Component Breakdown

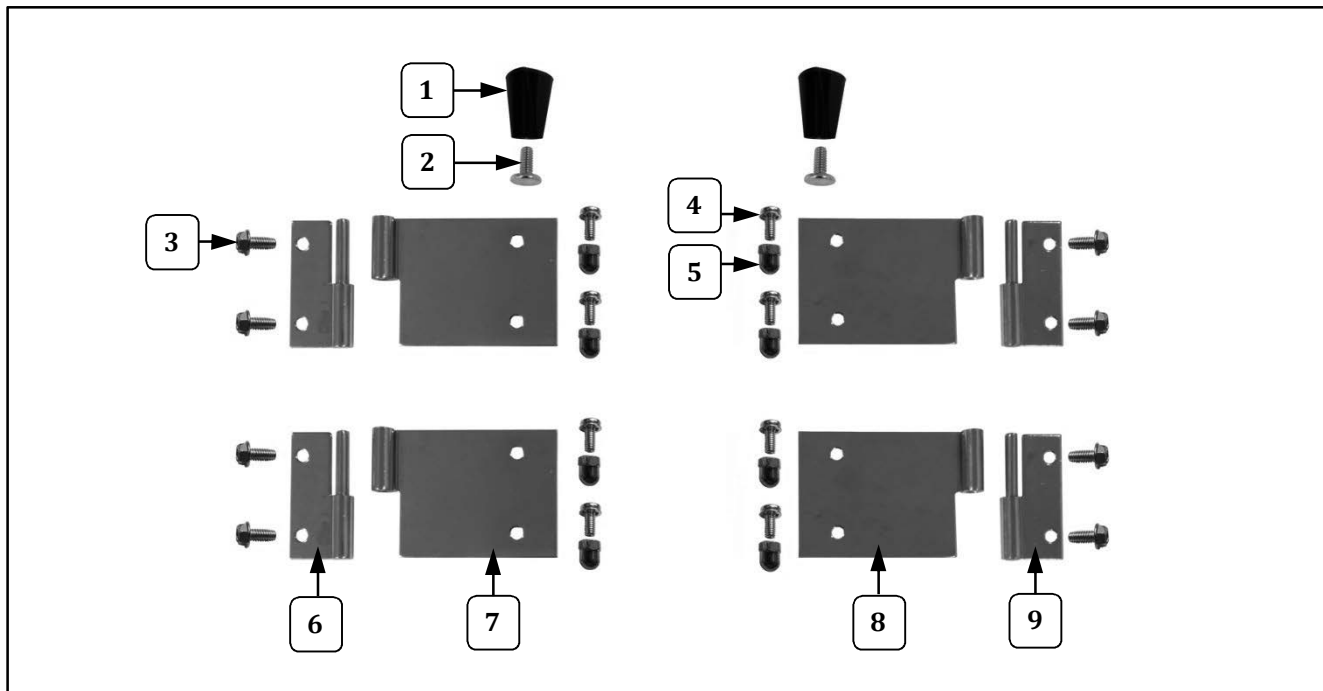

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

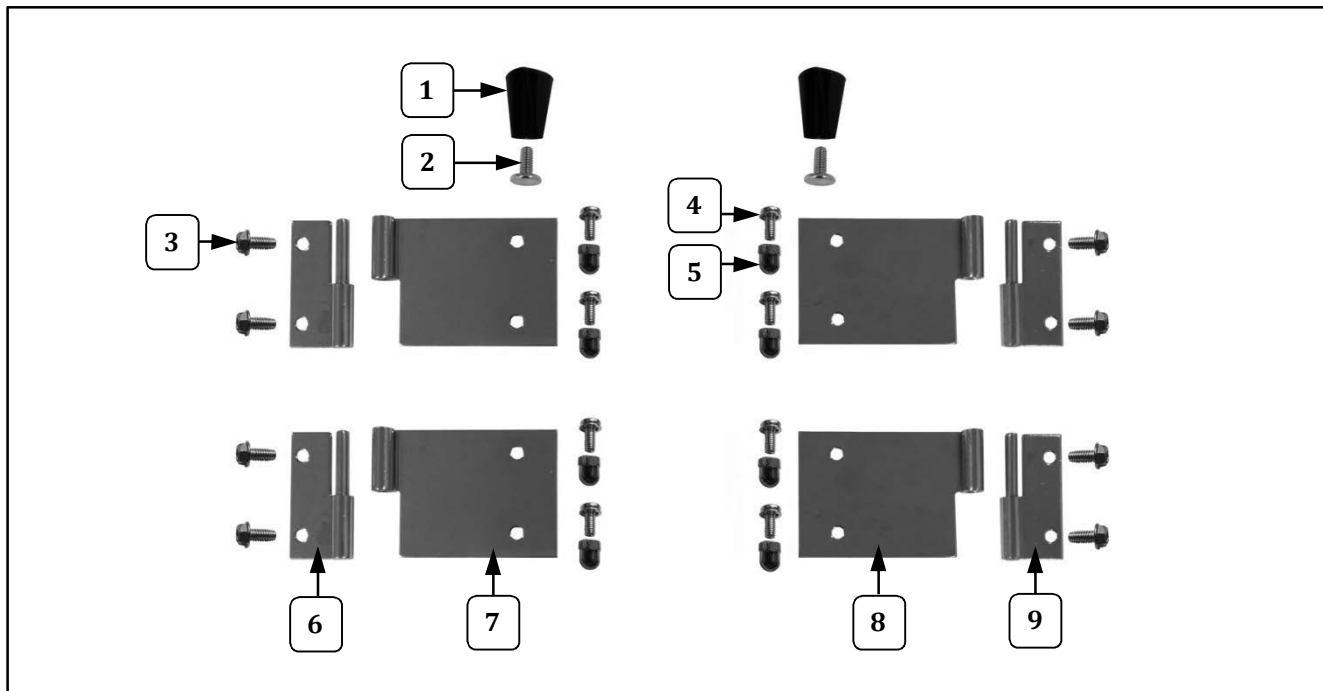

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350



## Door Hardware Kit 61380 - Individual Component Breakdown

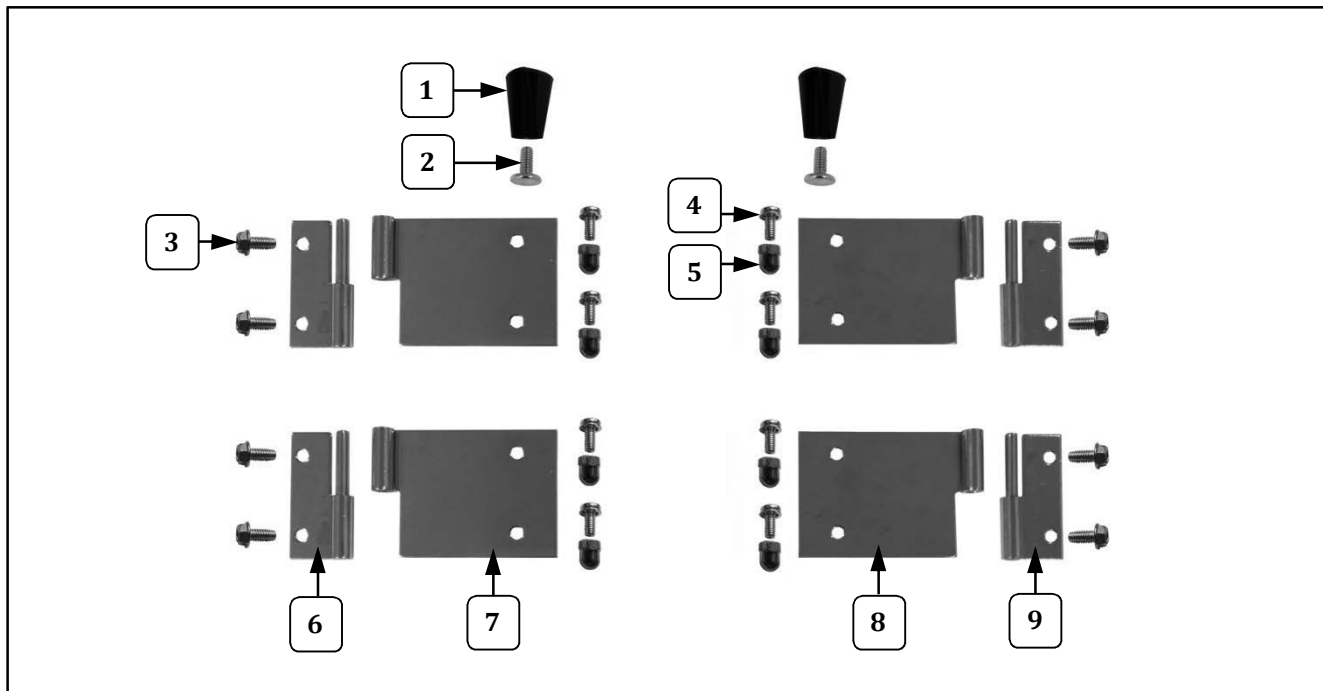


Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350






## Door Hardware Kit 61380 - Individual Component Breakdown

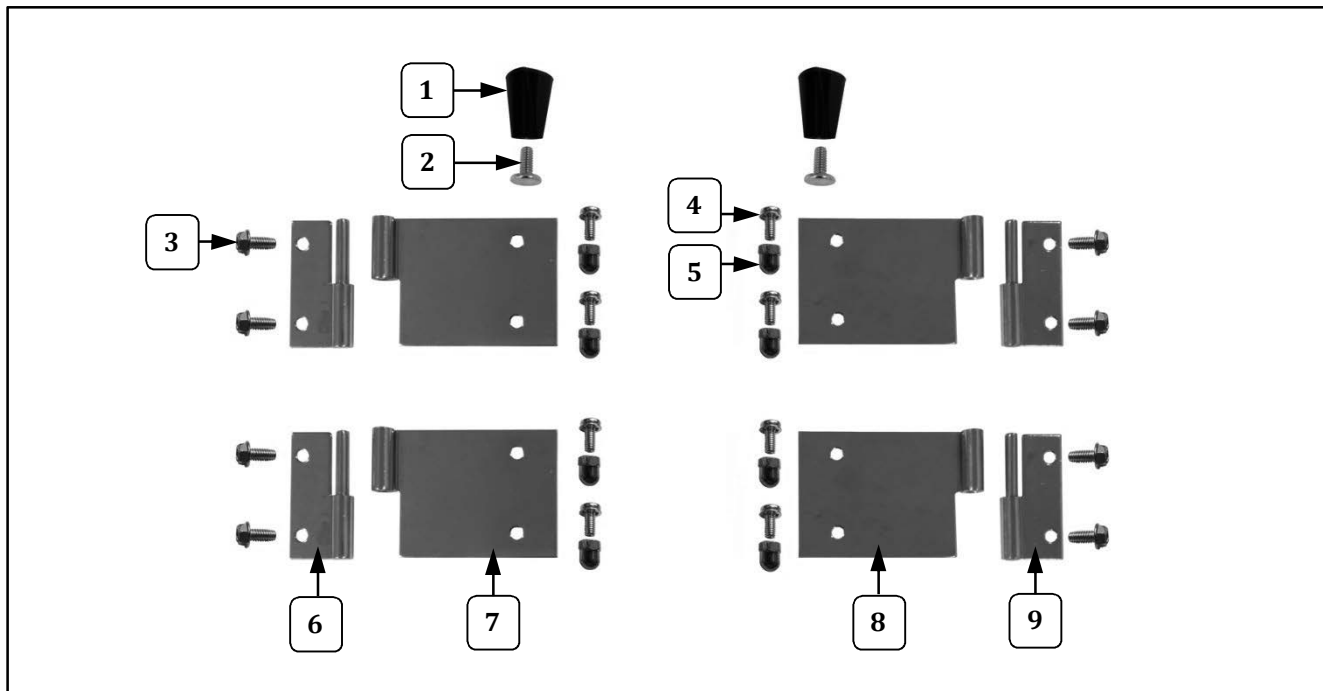

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

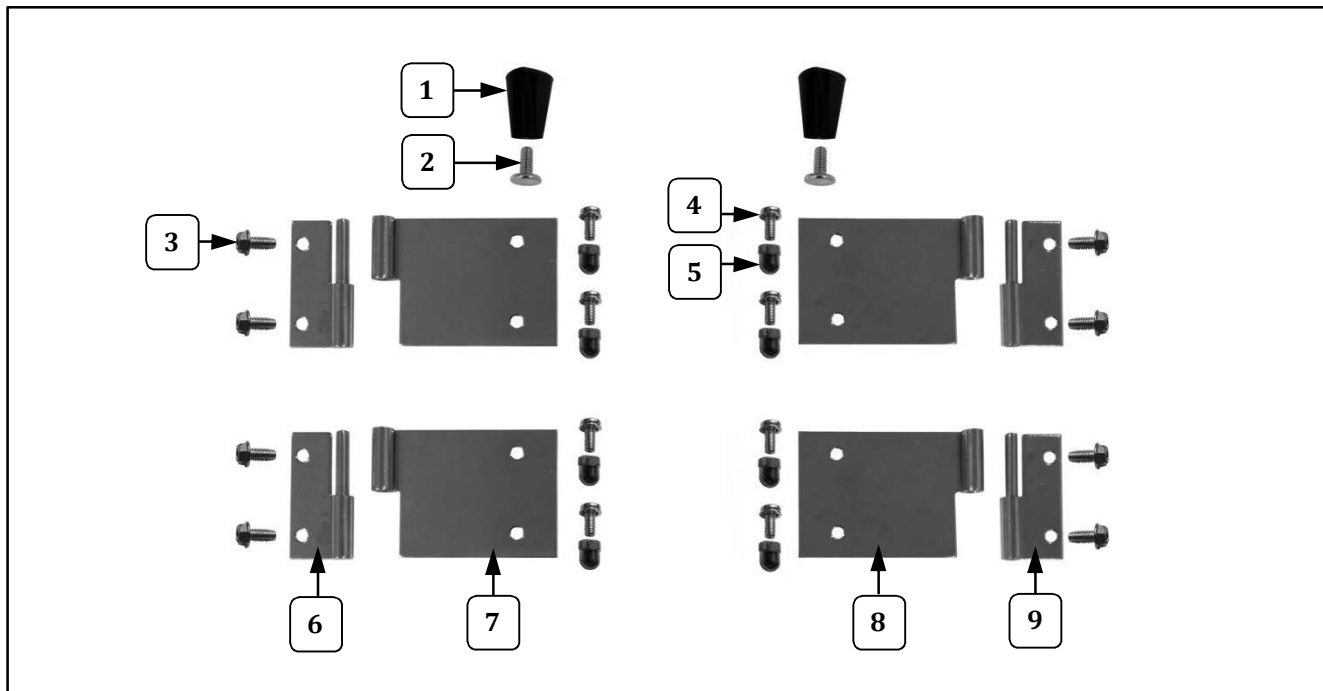

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

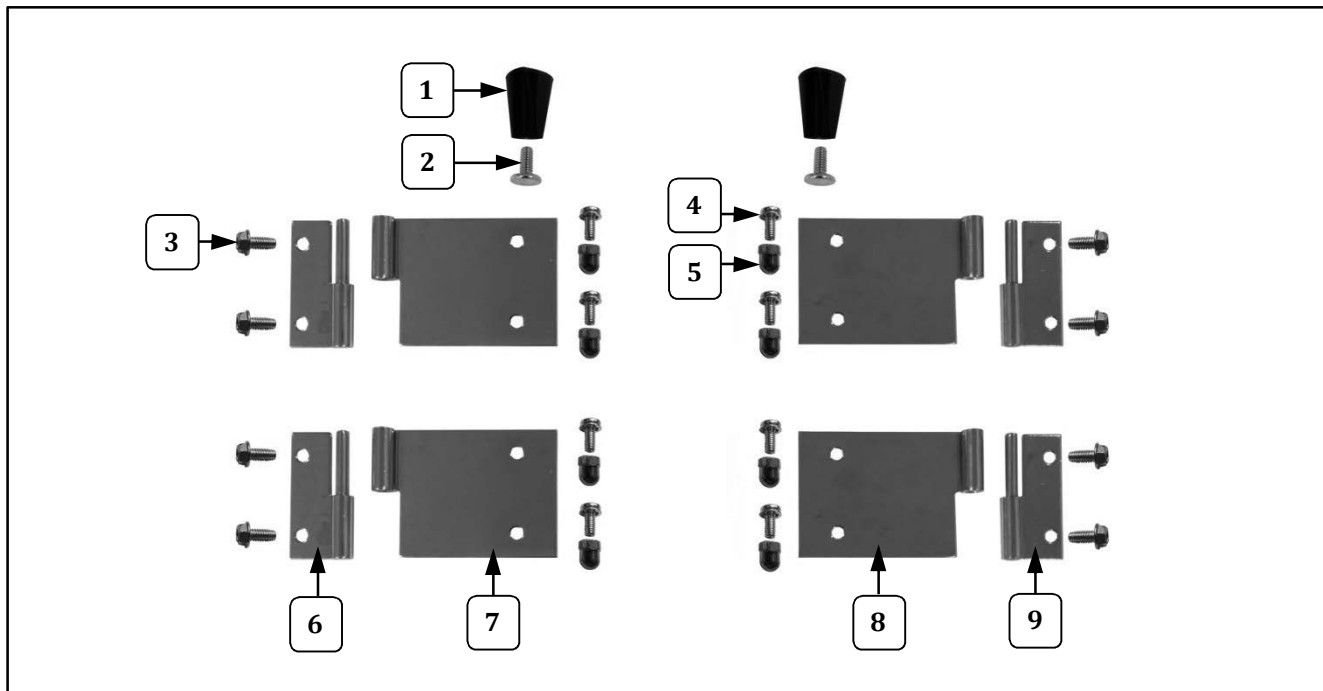

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

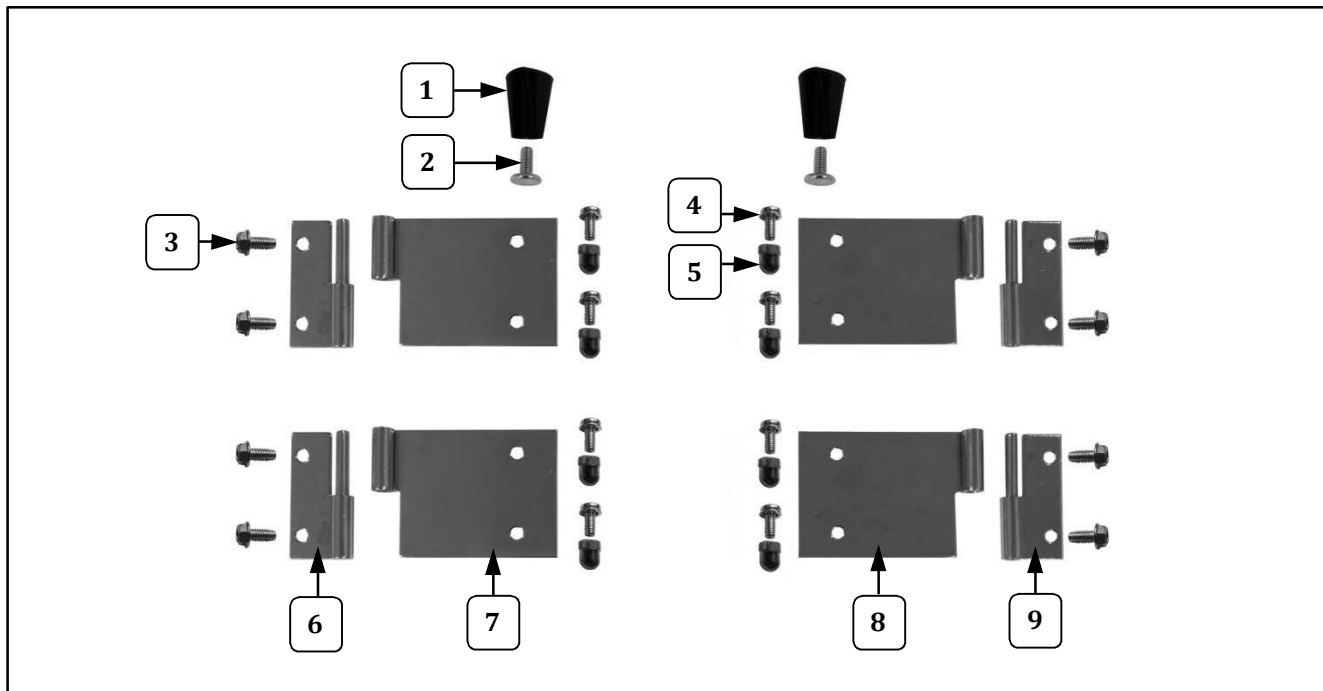

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

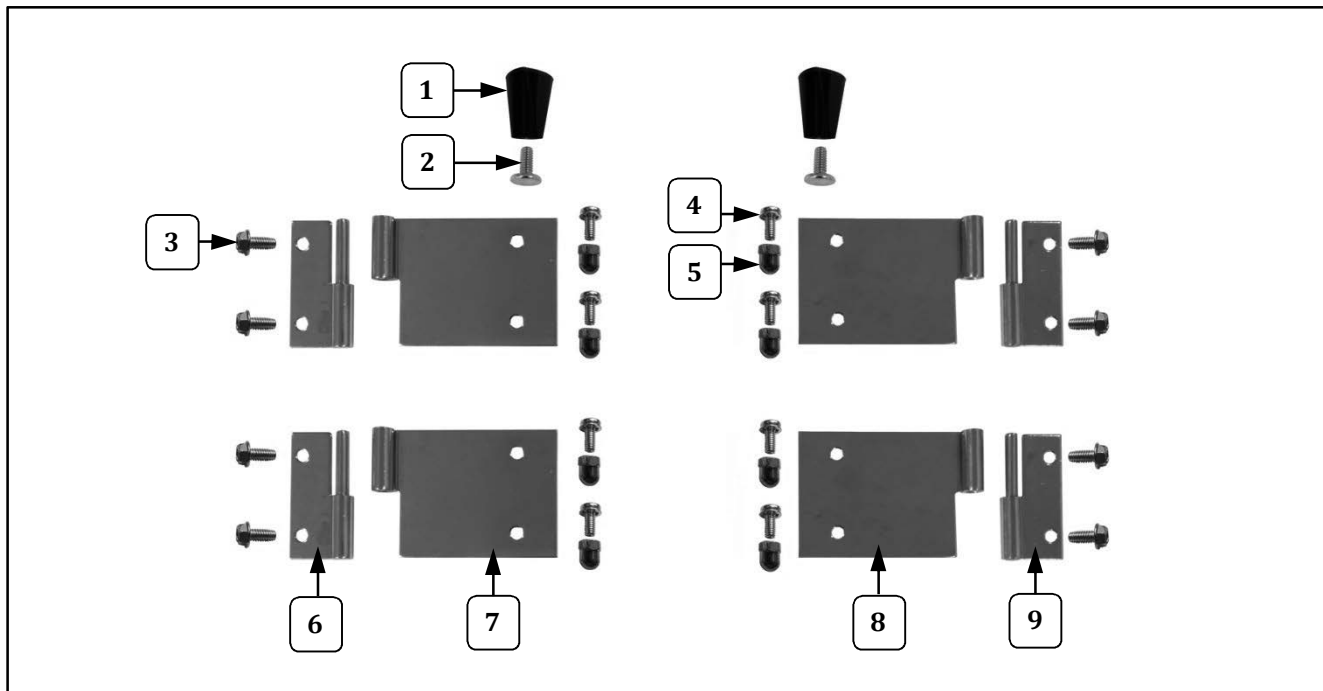

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

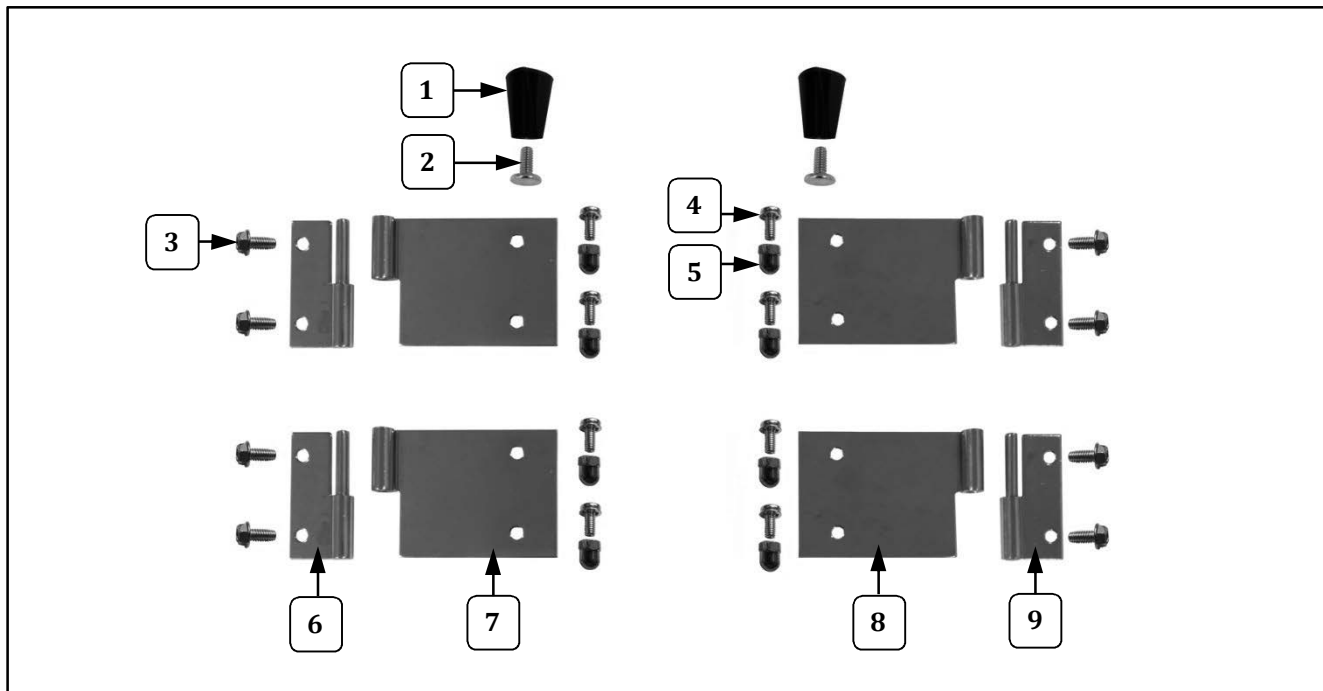

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350




## Door Hardware Kit 61380 - Individual Component Breakdown

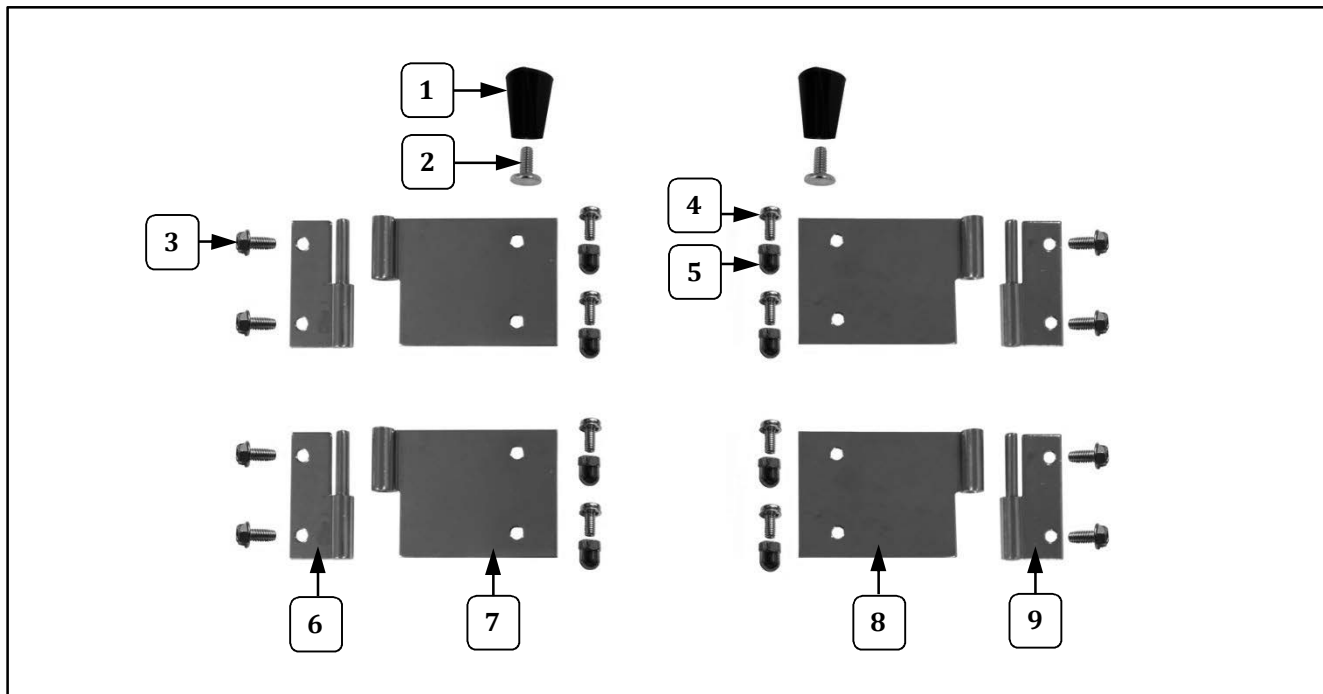

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350



## Door Hardware Kit 61380 - Individual Component Breakdown

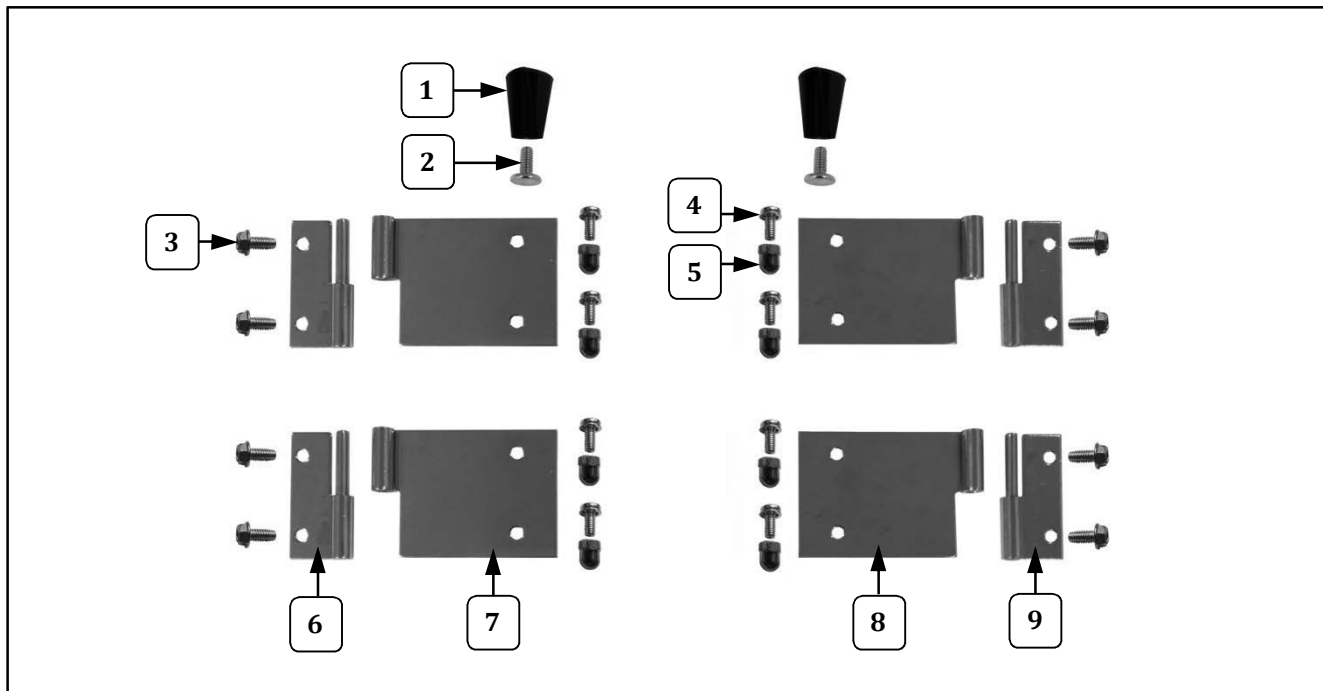

Item	Part Description	Qty.	Part No.
			61380
1	KNOB LID LIFT	2	47120
2	TEE BOLT	2	75267
3	8-32 X 5/16 SLOTTED HEX	8	49594
4	8-32 X 3/8 PH PAN W/SEMS	8	42227
5	ACORN NUT #8-32	8	47702
6	MALE HINGE SHORT LEFT	2	41349
7	FEMALE HINGE LEFT HAND	2	61359
8	FEMALE HINGE RIGHT HAND	2	61373
9	MALE HINGE SHORT RIGHT	2	41350





## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201



## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201






## Cabinet Breakdown - Interior



Item	Part Description	Qty.	Part No.
			2660SR
1	CORN PAN	1	49211
2	GLASS RETAIN STRIP, FRONT	1	49216
3	GLASS RETAIN STRIP, REAR	2	49215
4	GLASS STRIP	1	49318
5	GLASS STRIP COVER	1	49319
6	HEAT ELEMENT 120V, 50W	1	40031
7	STRIP HEATER BRACKET	1	49425
8	OLD MAID PAN	1	49100
9	WIRING GUARD	1	49201




## Cabinet Breakdown - Interior

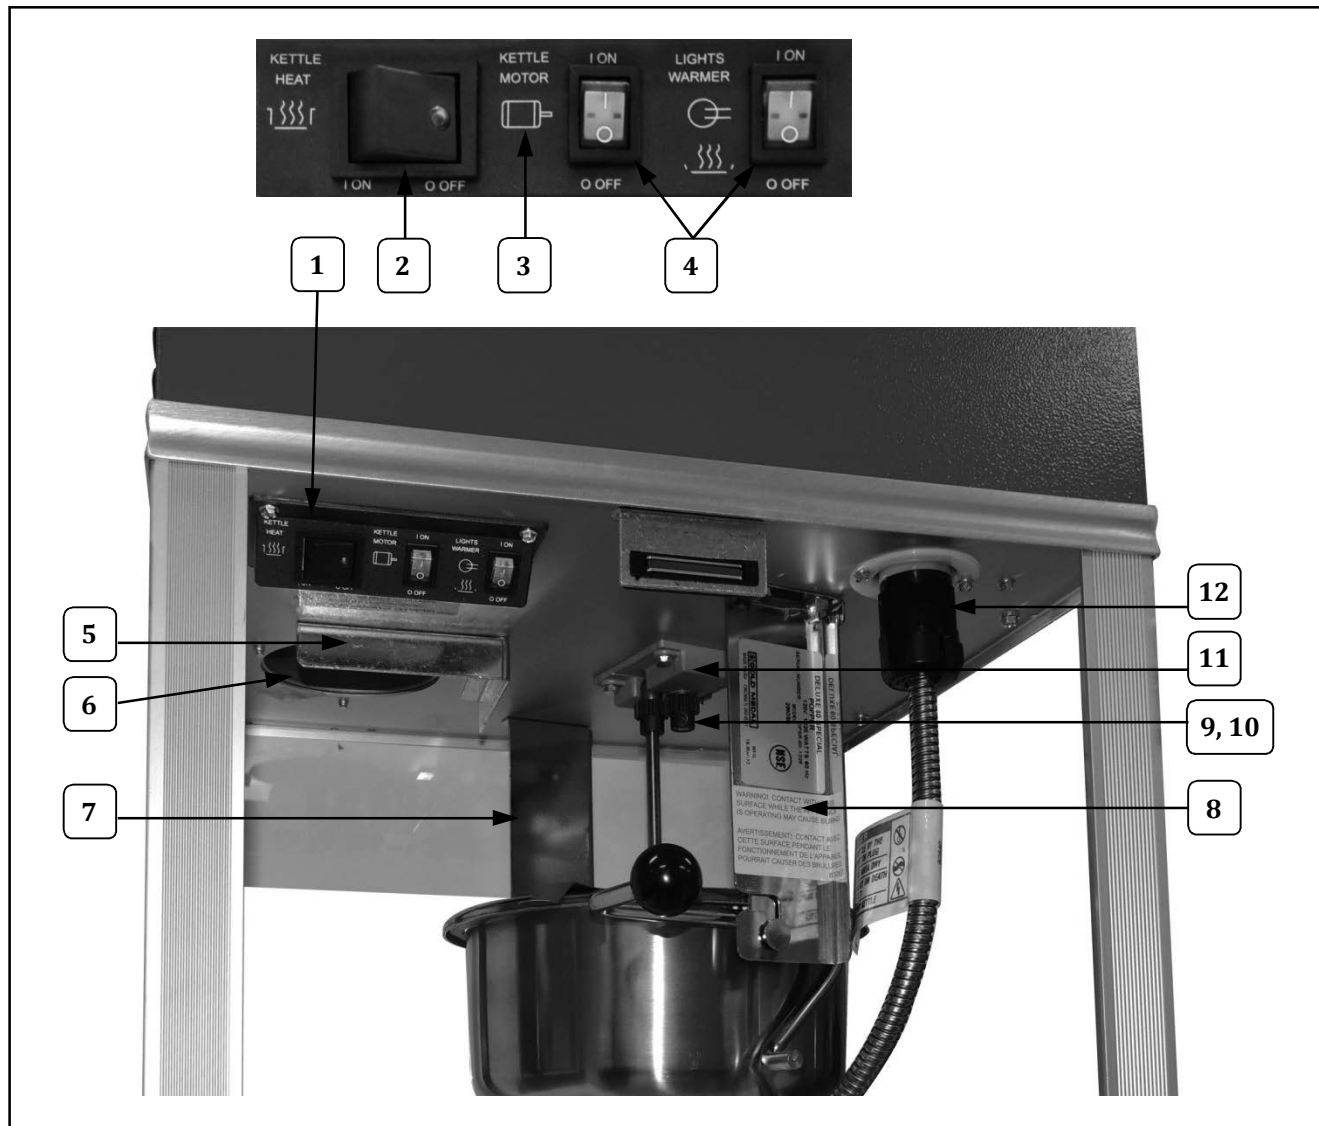

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330


## Cabinet Breakdown - Interior

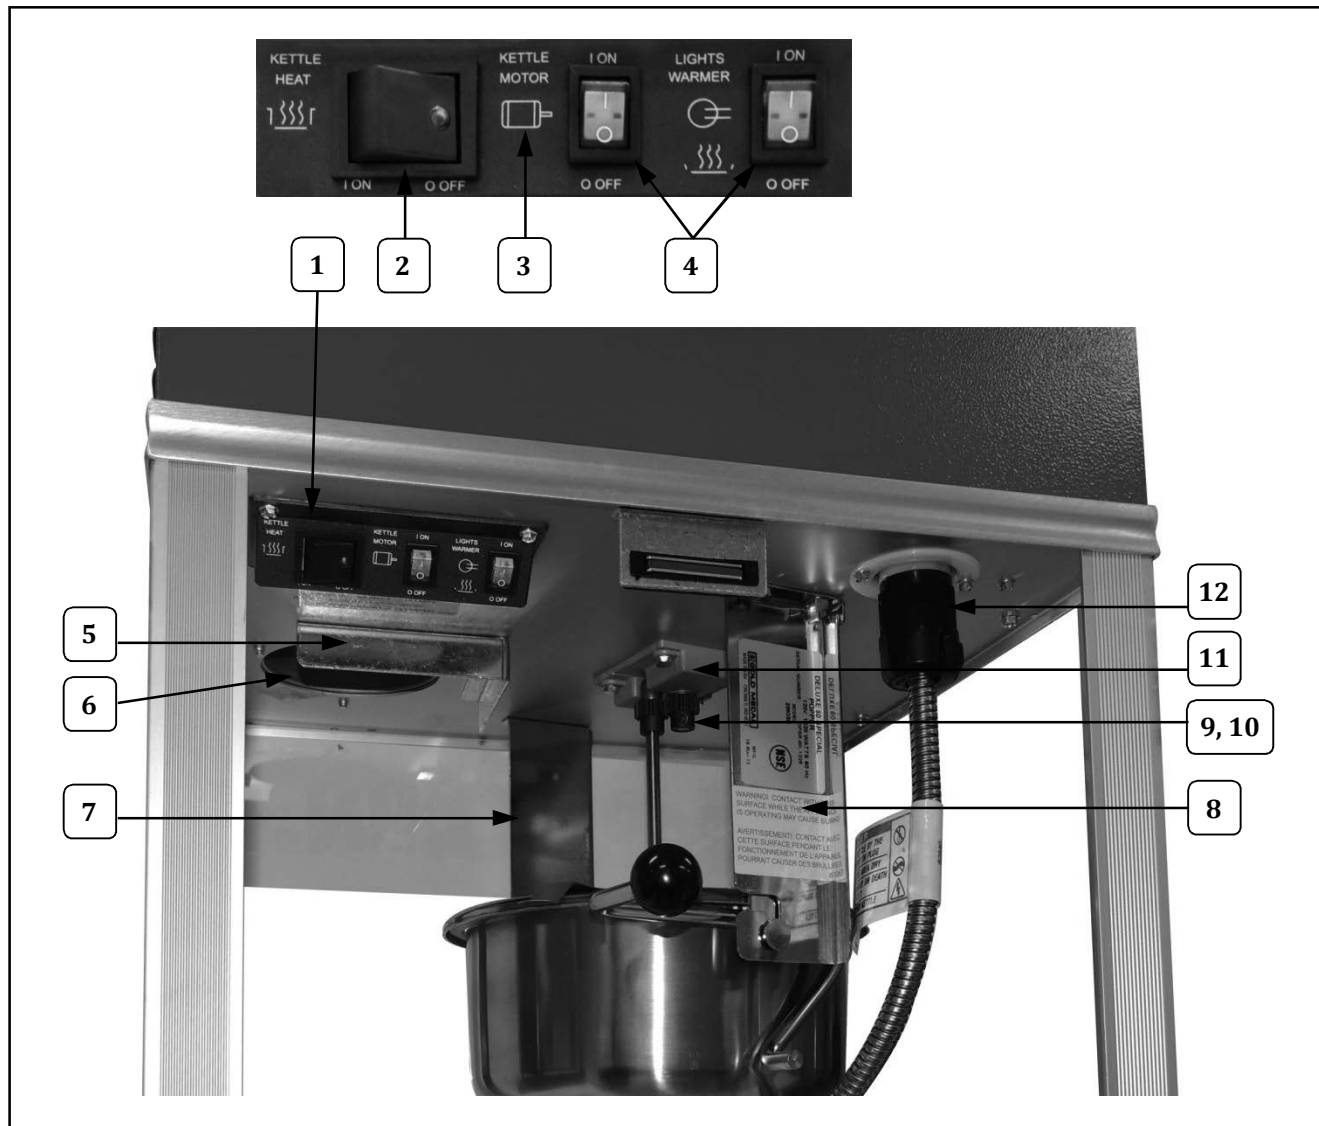

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

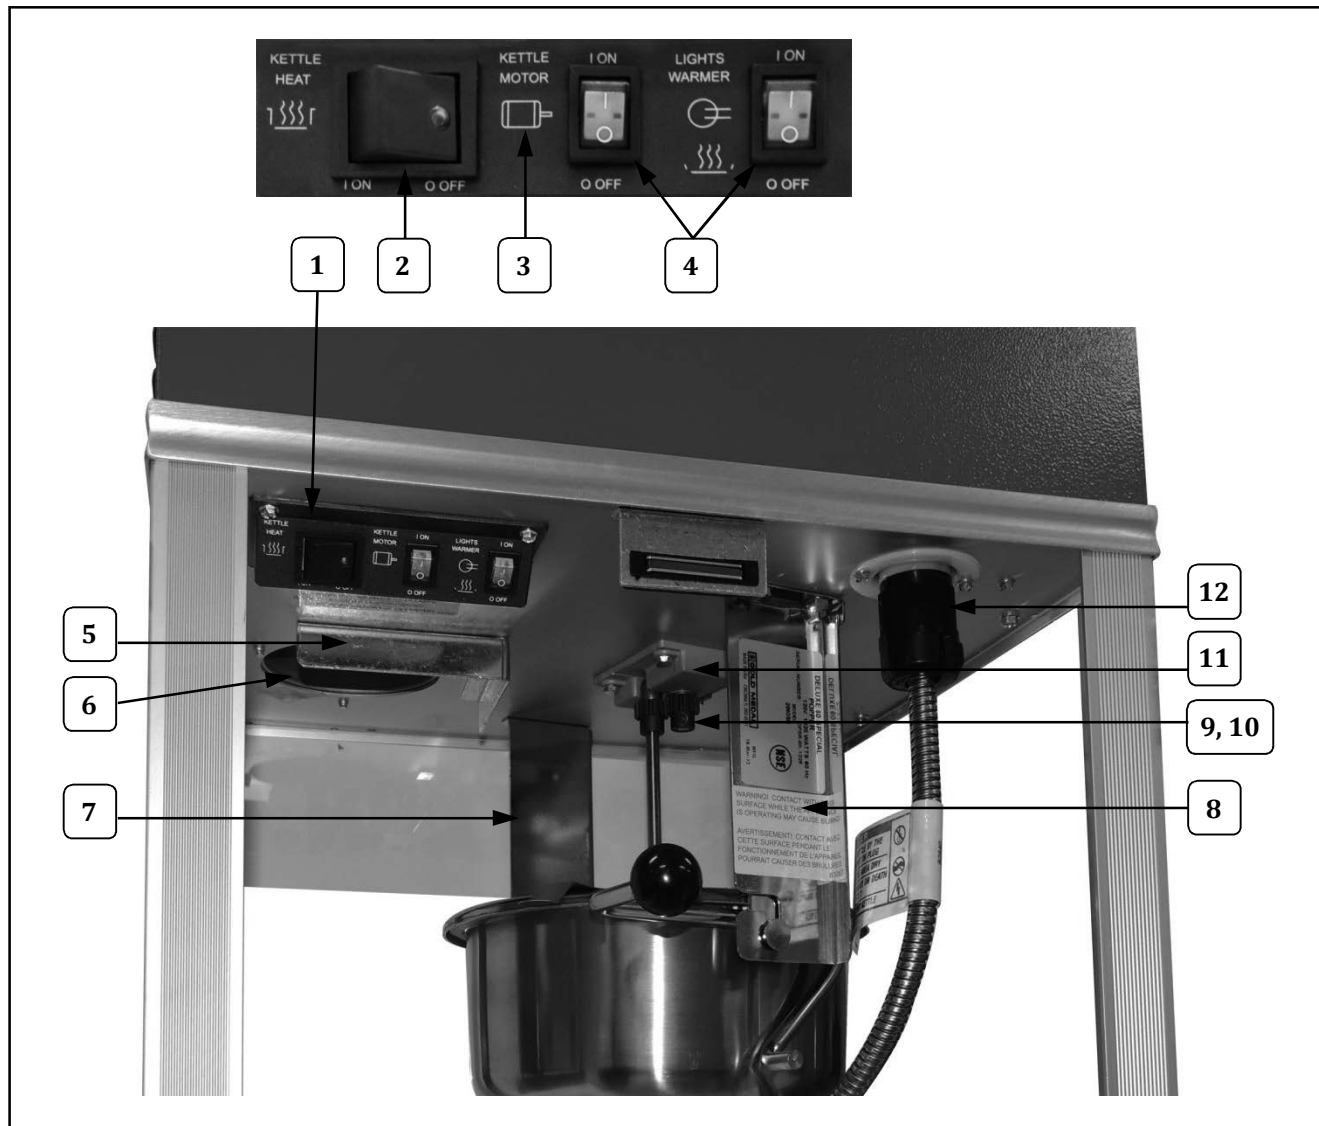

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

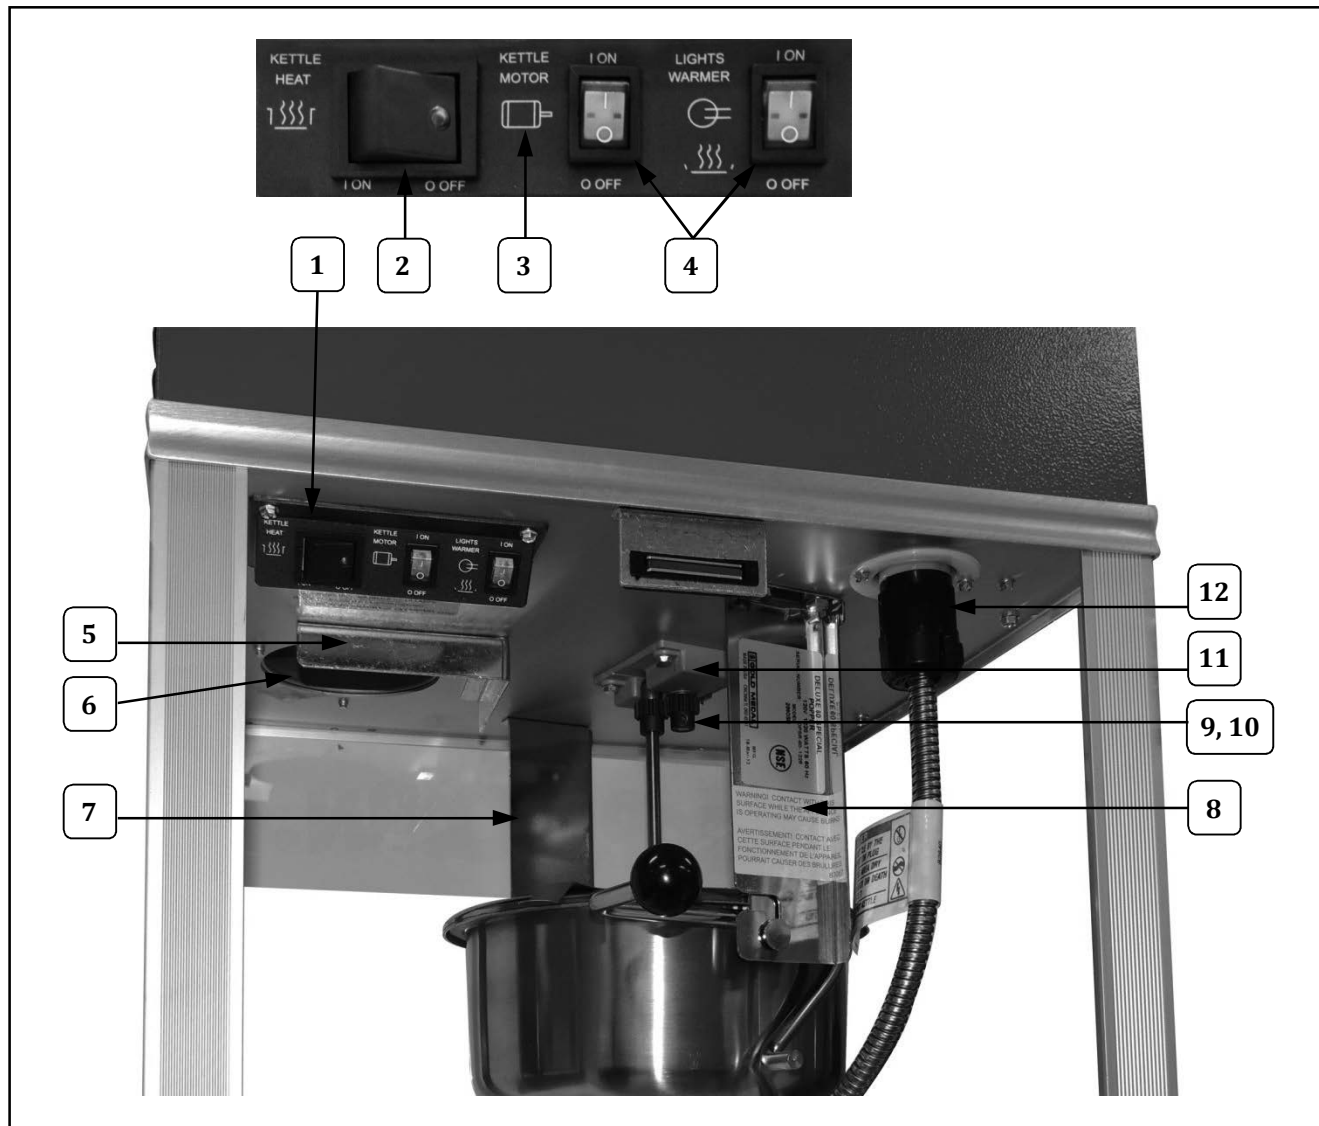

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

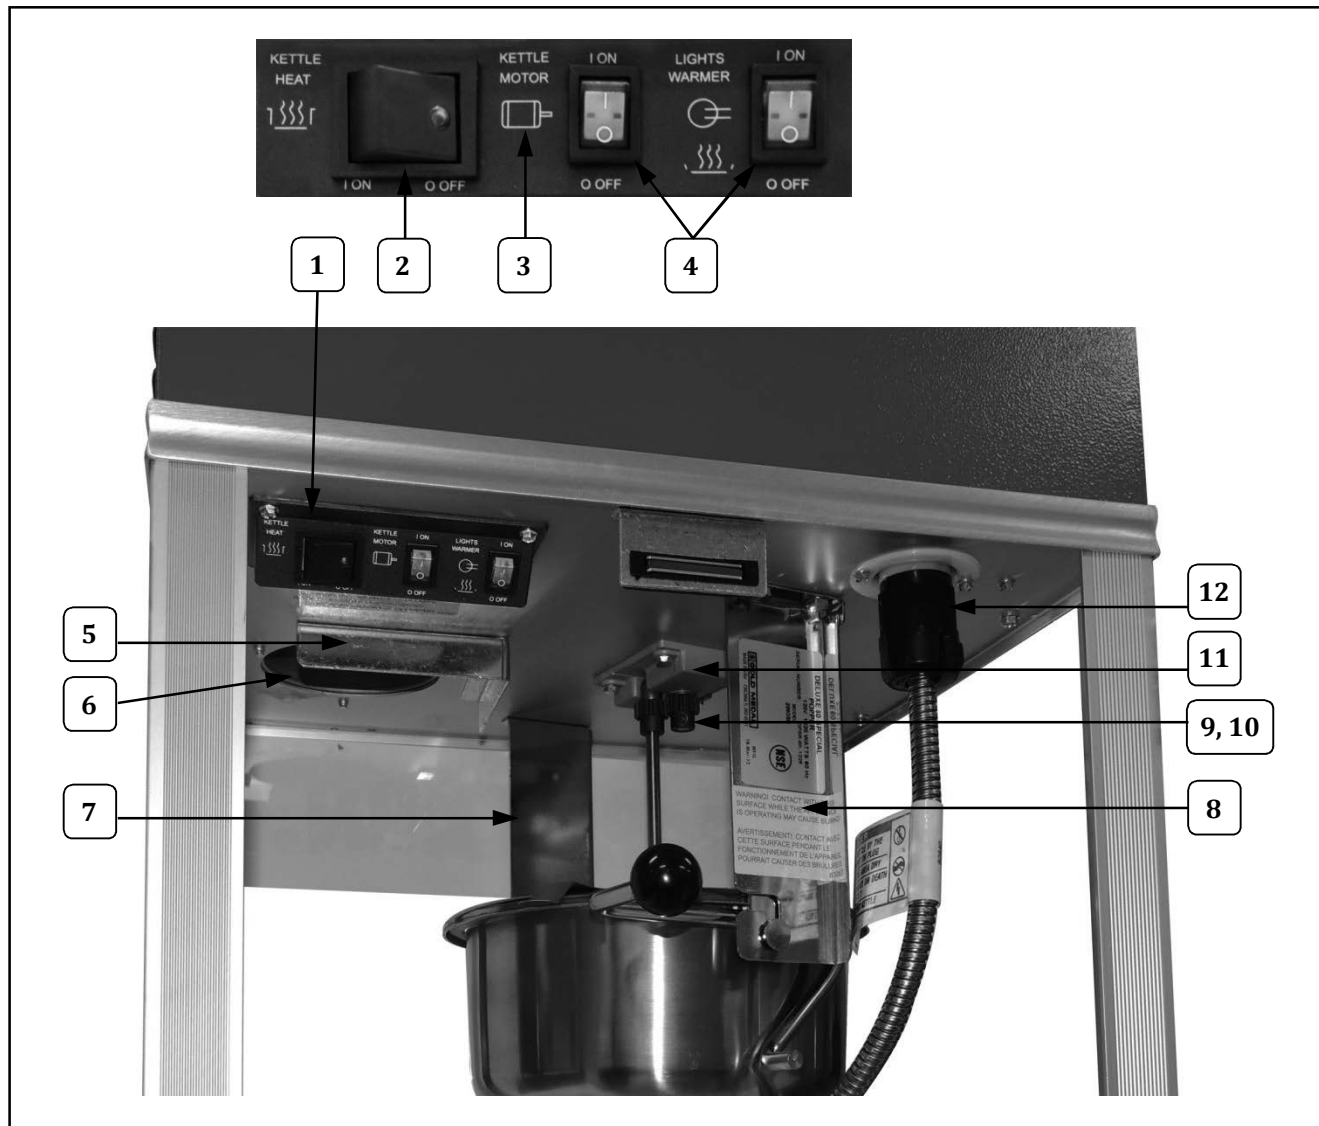

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

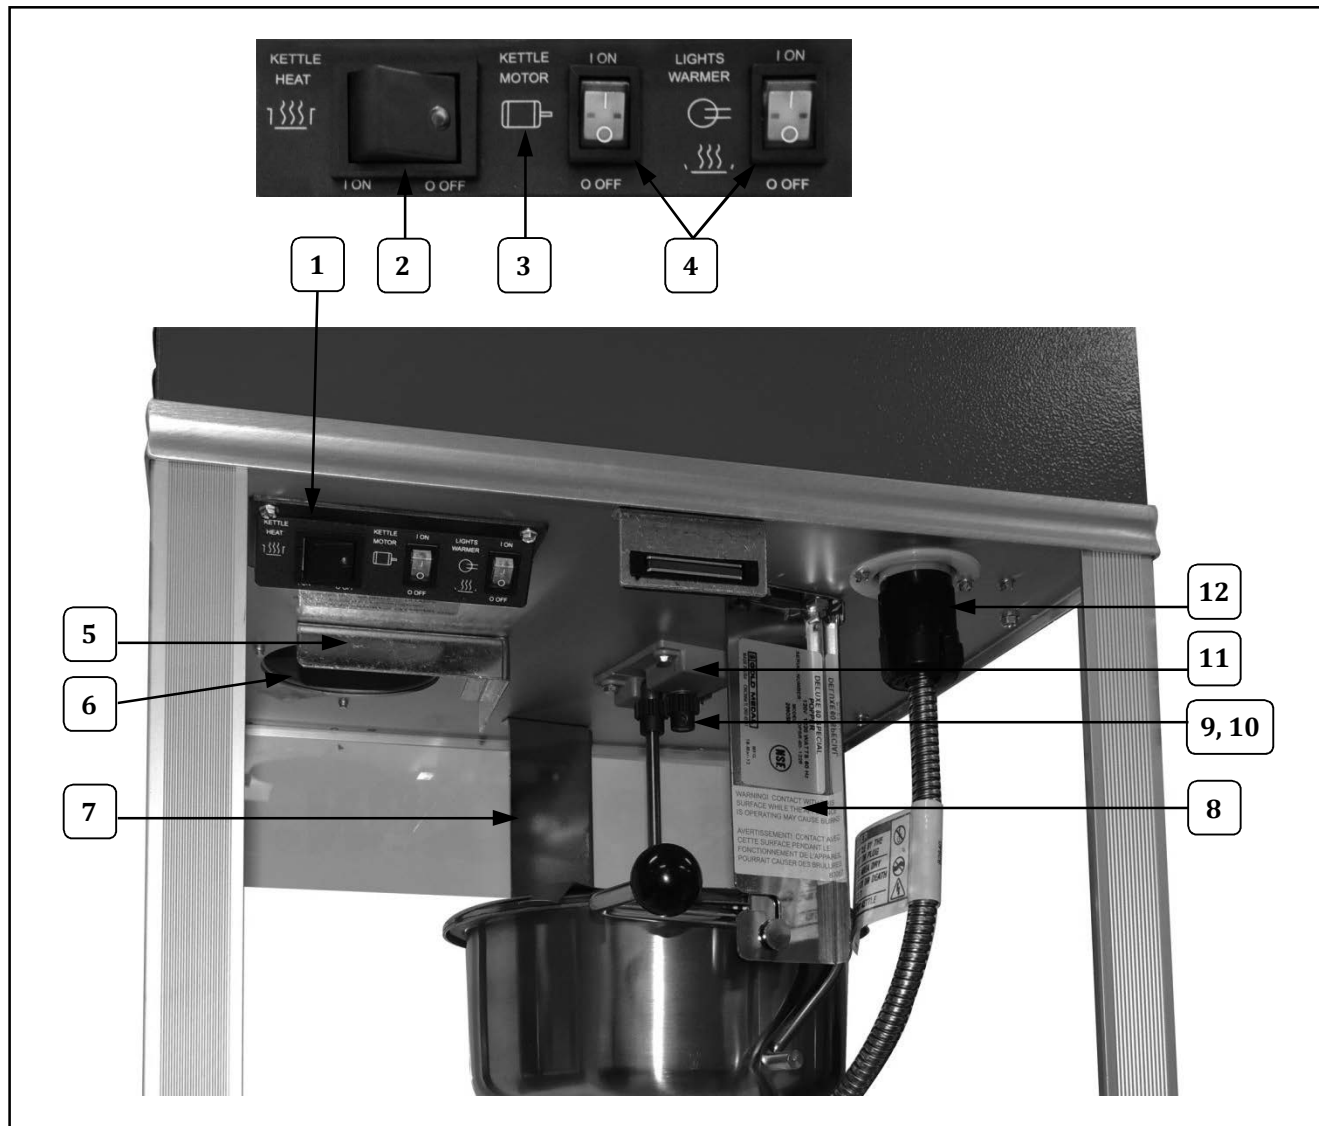

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330



## Cabinet Breakdown - Interior

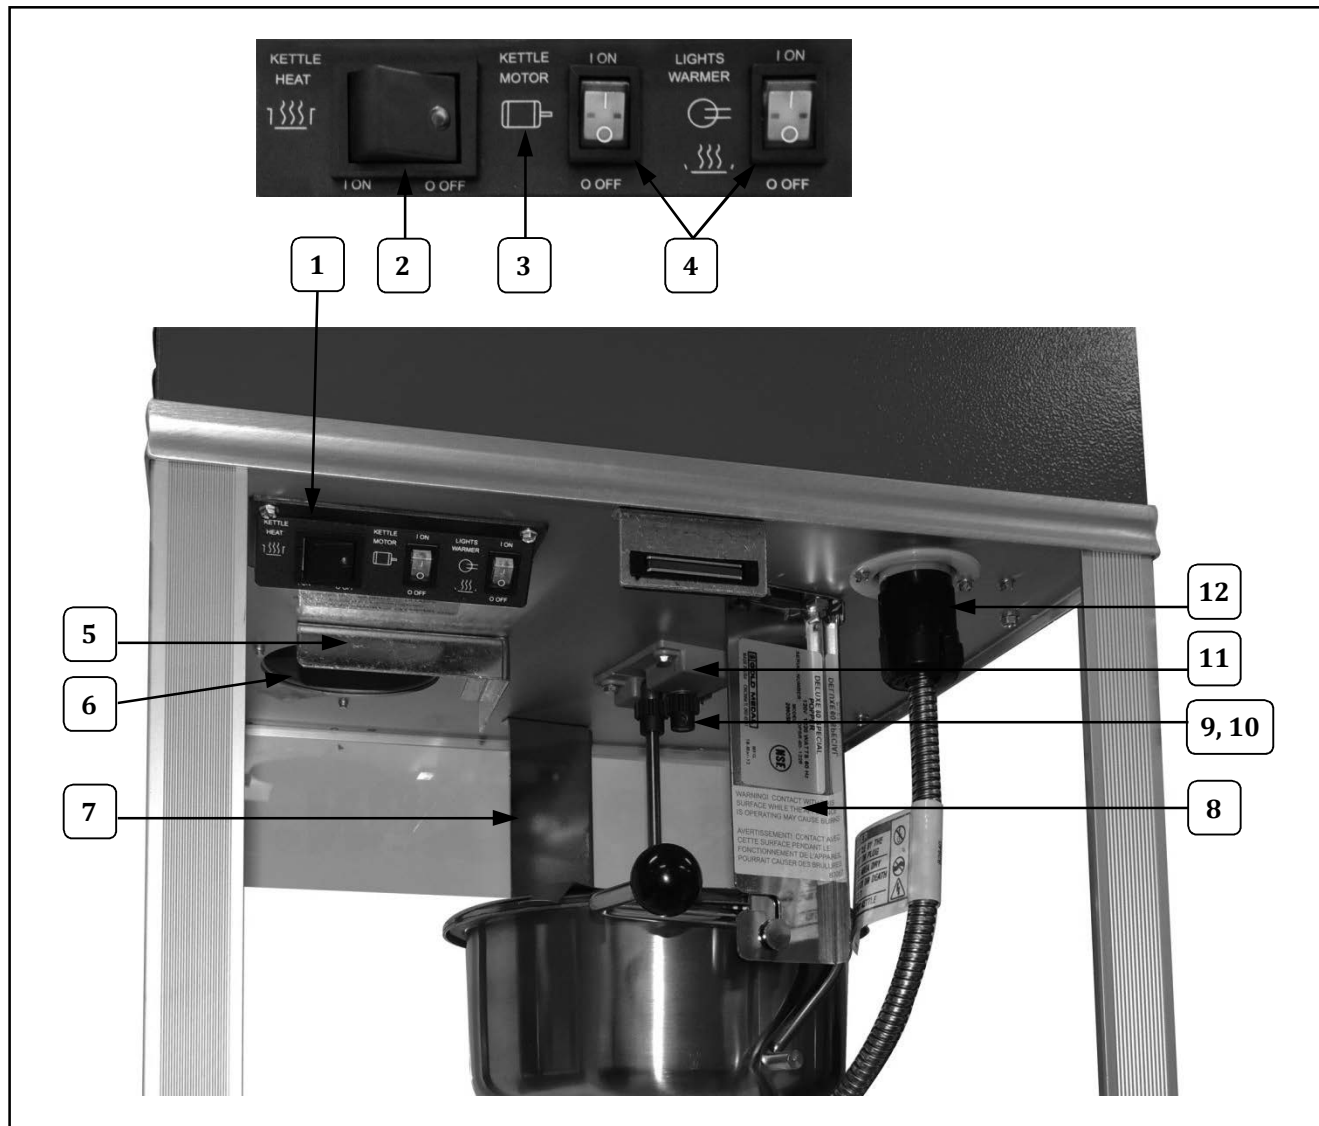


Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330






## Cabinet Breakdown - Interior

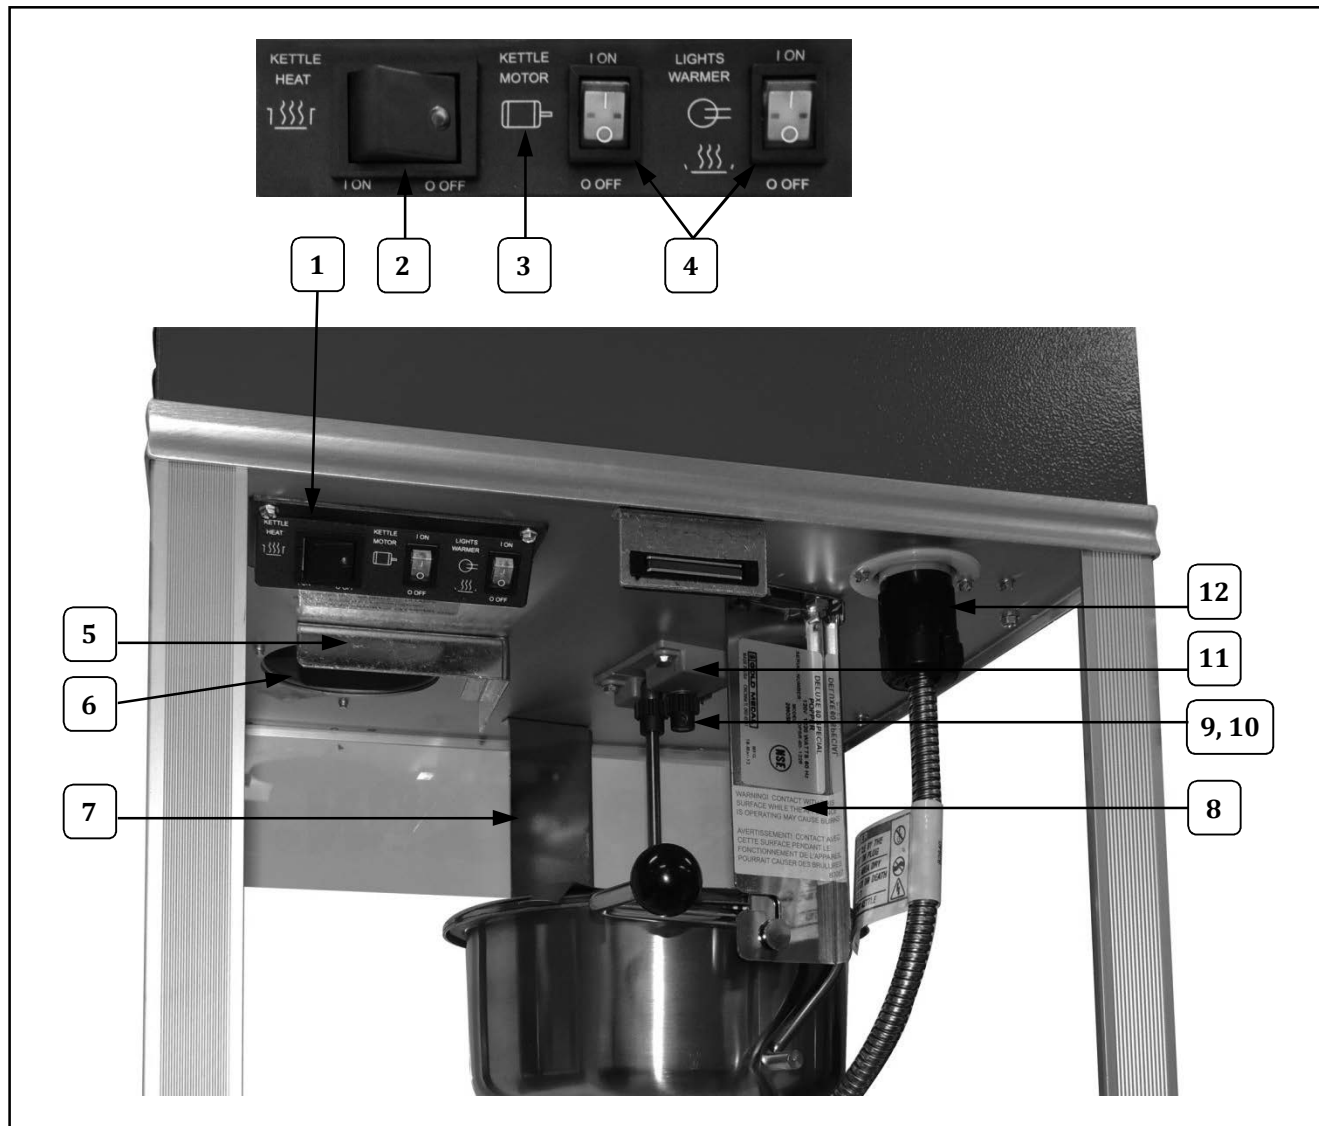

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

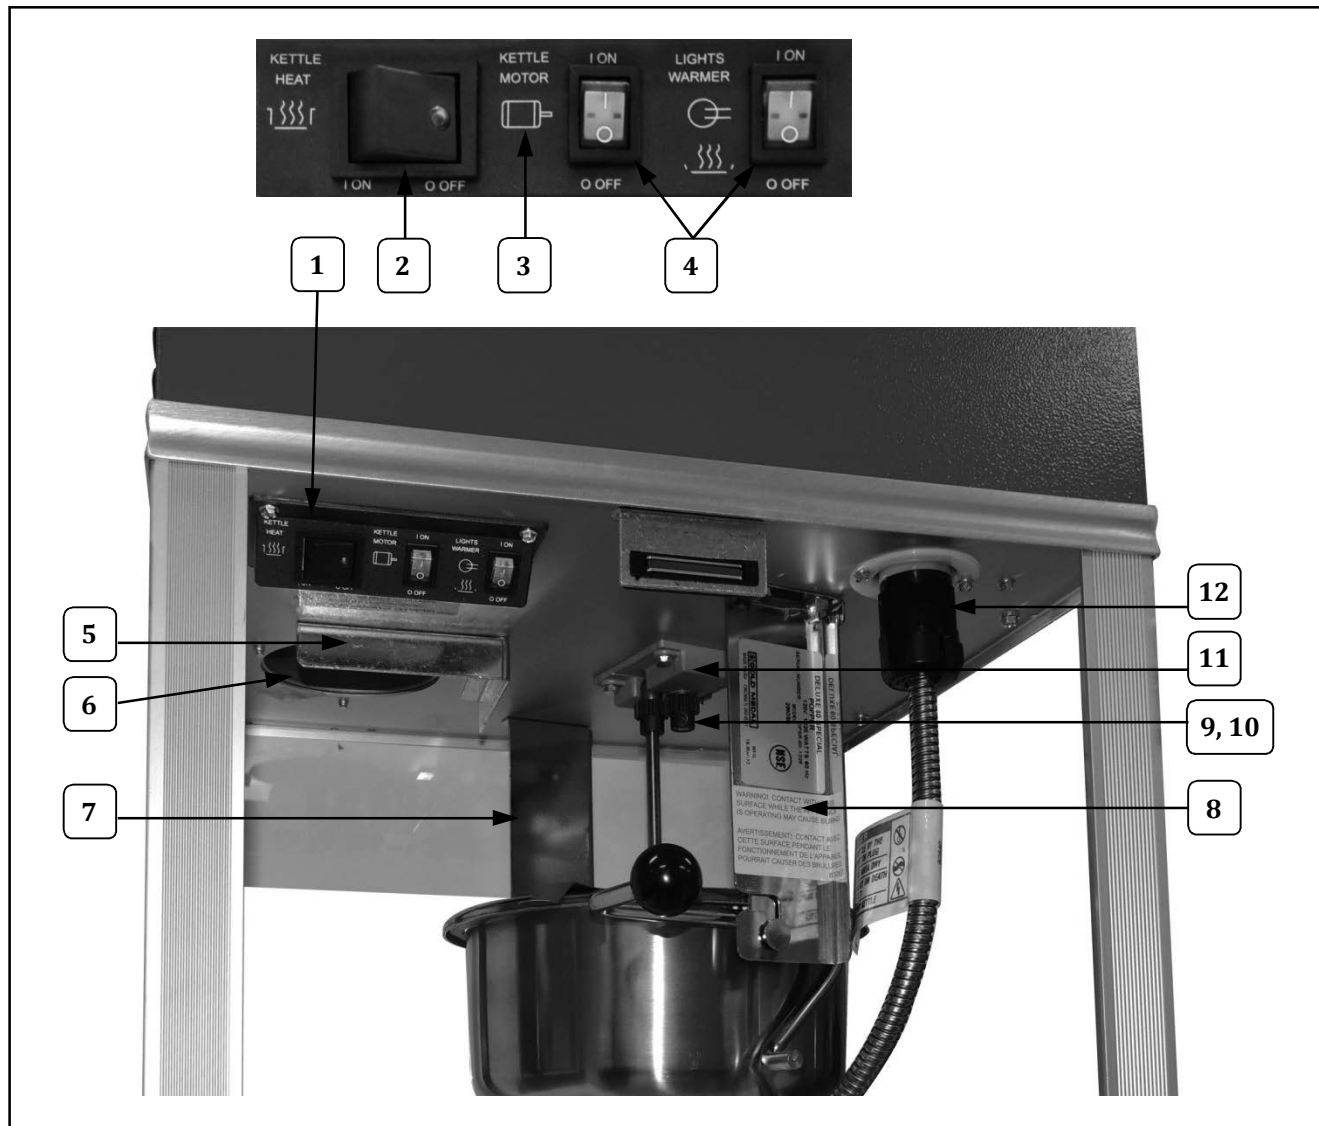

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

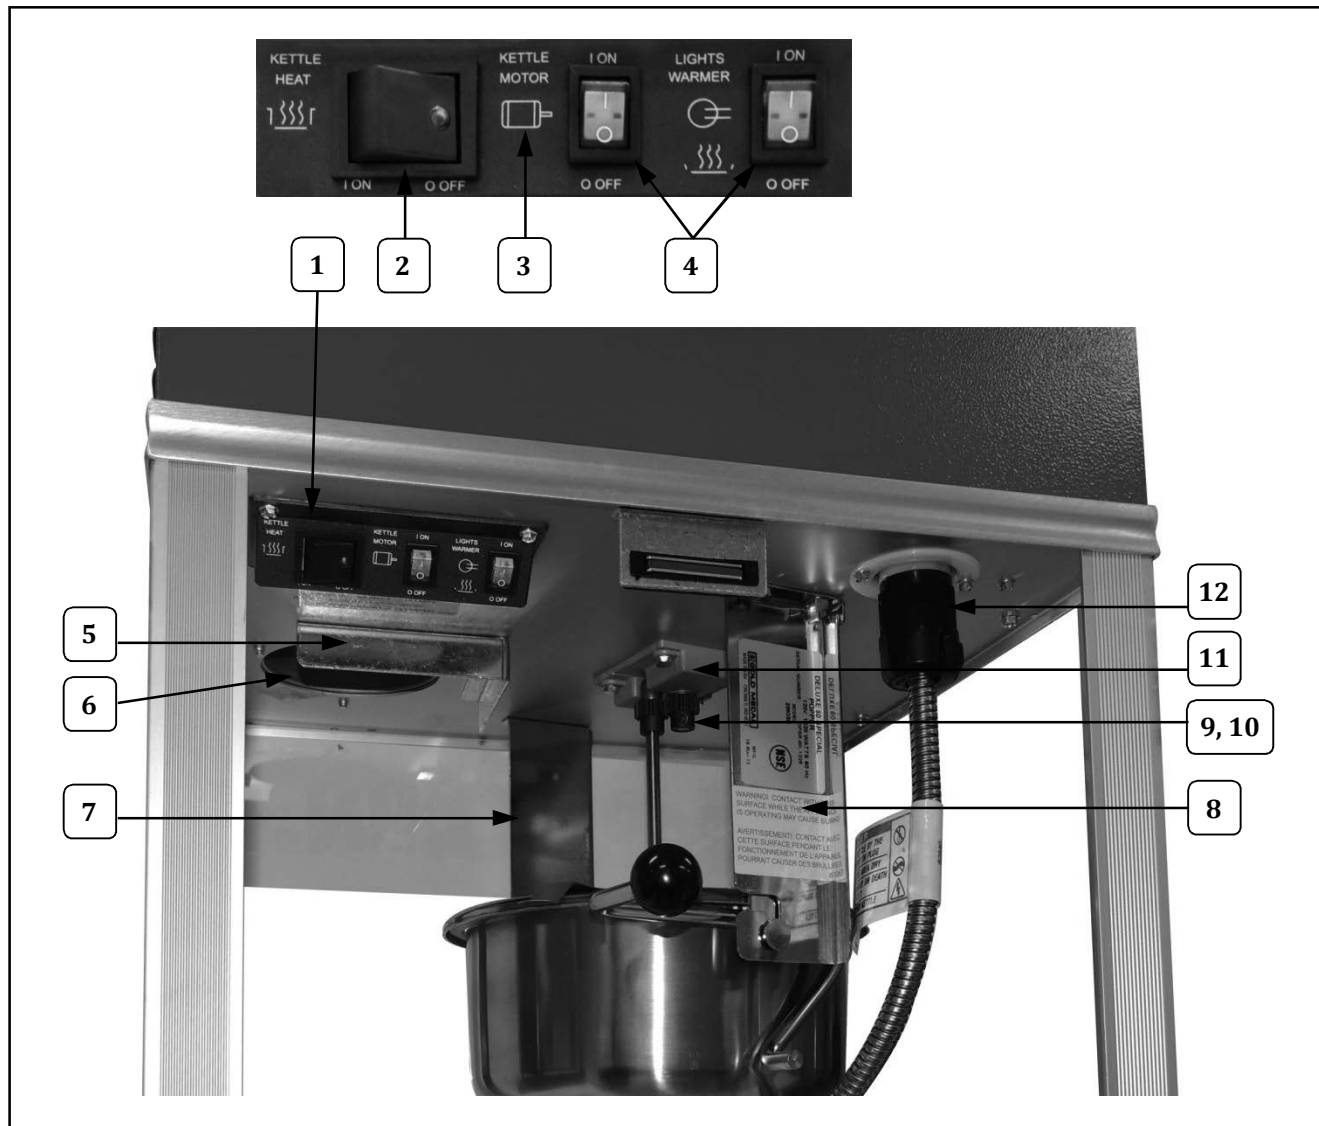

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330




## Cabinet Breakdown - Interior

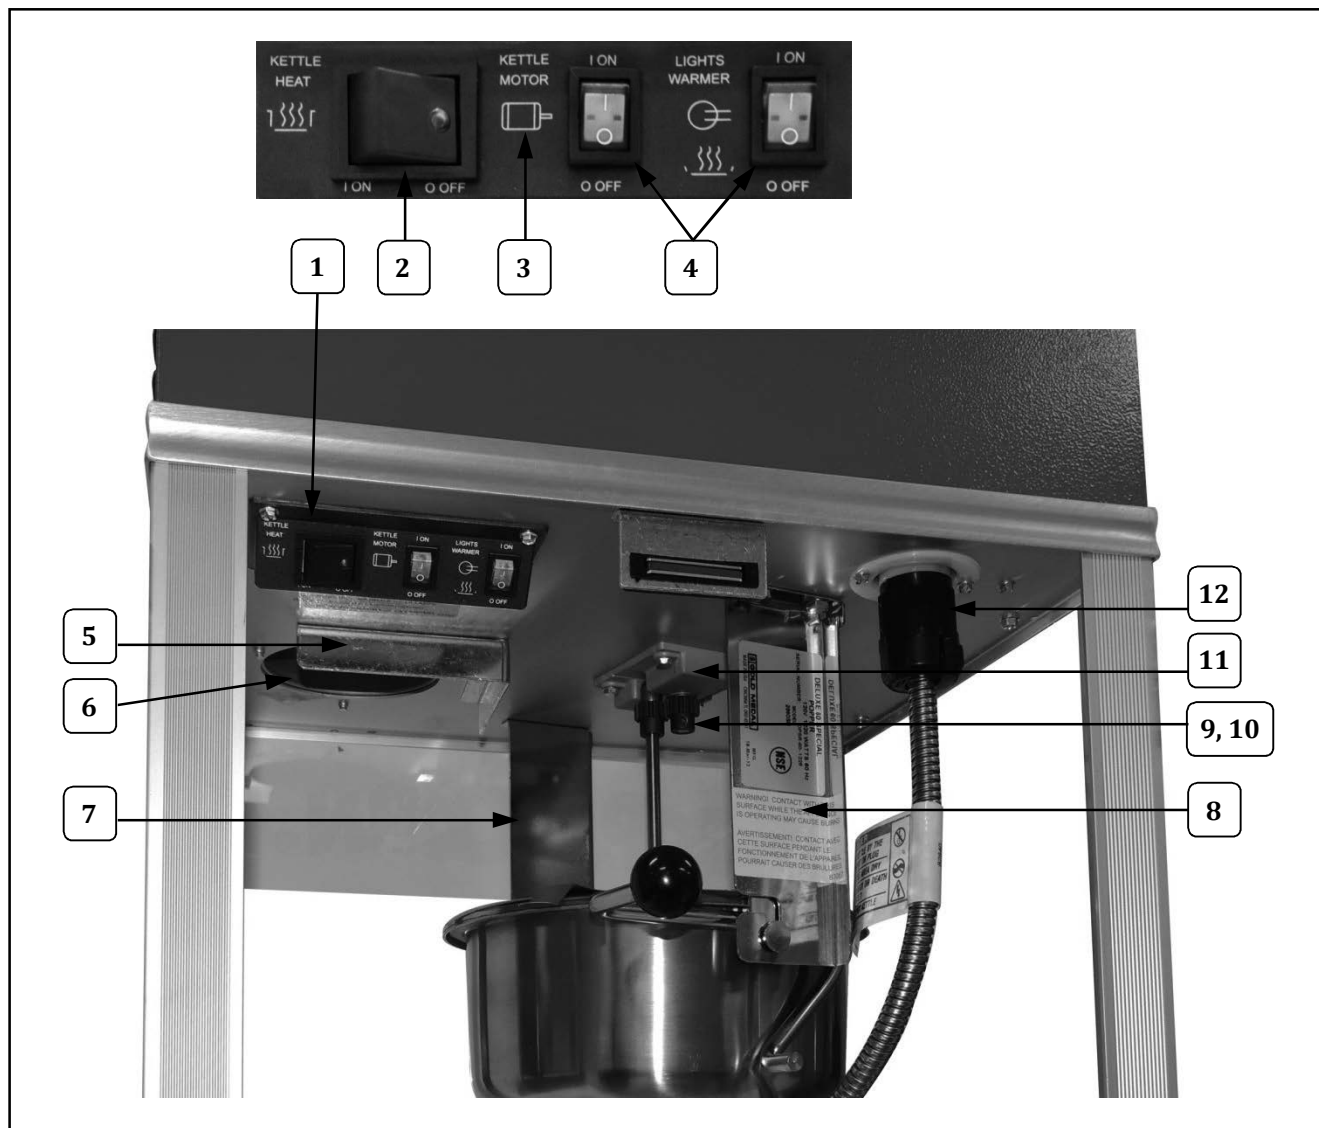

Item	Part Description	Qty.	Part No. 2660SR
1	SMALL SWITCH BOX	1	48501
2	LIGHTED ROCKER SWITCH	1	42798
3	SMALL SWITCH LABEL	1	48502
4	DPST ROCKER SWITCH	2	42532
5	LIGHT SHIELD ANGLE	1	47799
6	REFLECTOR FLOOD, 65W (not shown)	1	41671
7	REAR HANGER ARM	1	49009
8	FRONT HANGER ARM	1	49010
9	SPUR GEAR	1	47060
10	SET SCREW 10-32 X 3/16	1	41742
11	GEAR BLOCK ASSEMBLY	1	67194NM
12	KETTLE RECPT 15A, TWST LC	1	49330


## Dome Interior - Electrical Breakdown

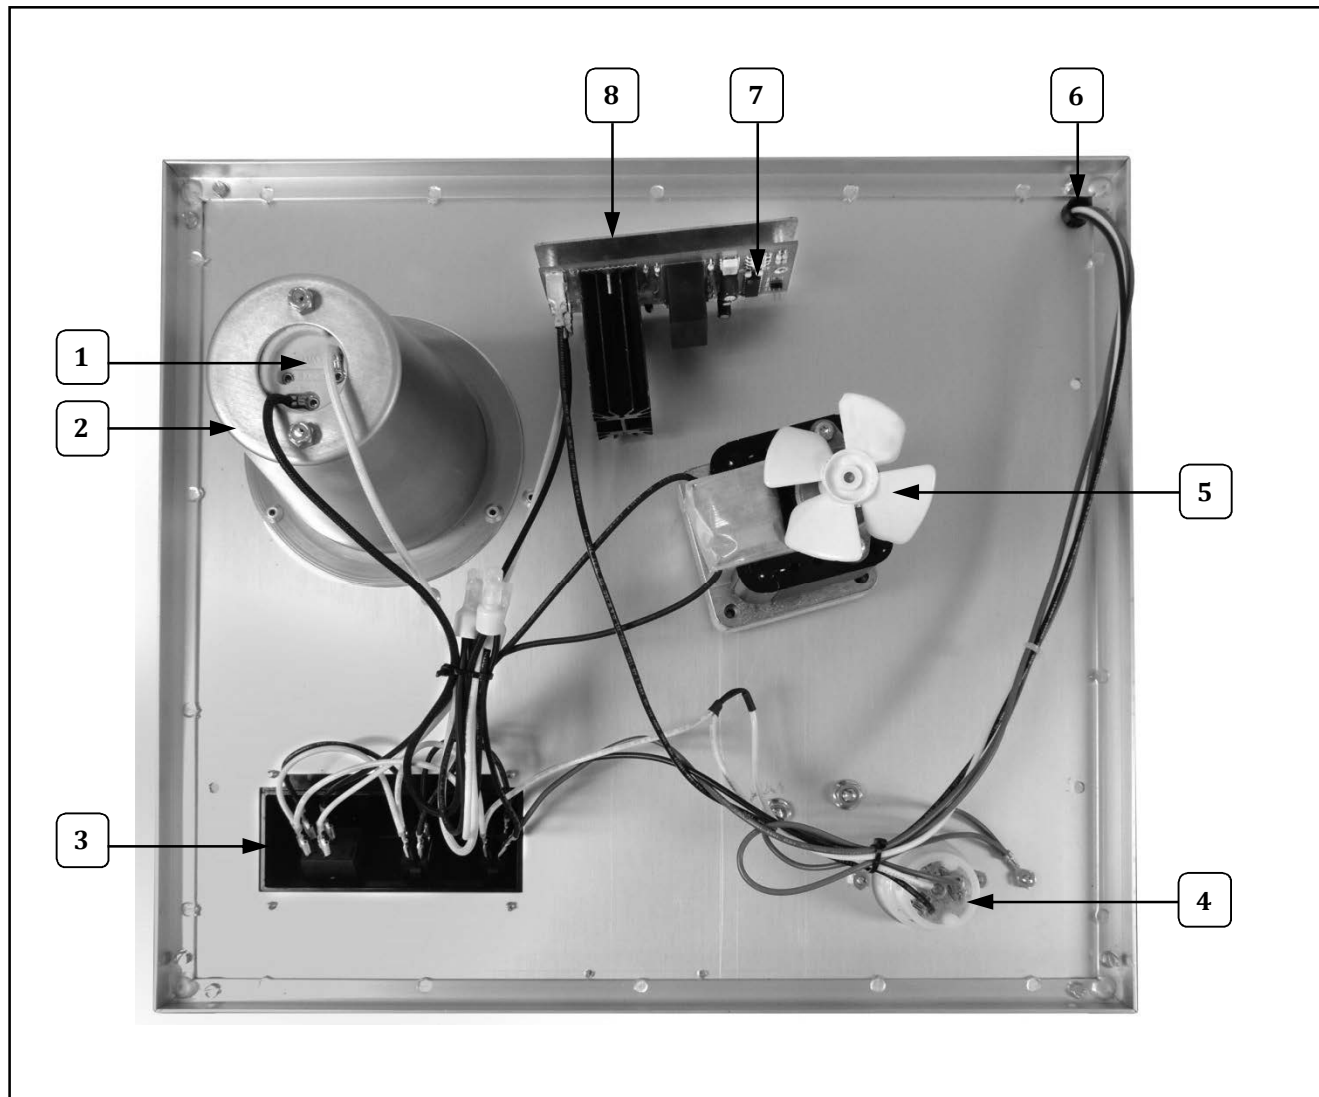

Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860




## Dome Interior - Electrical Breakdown

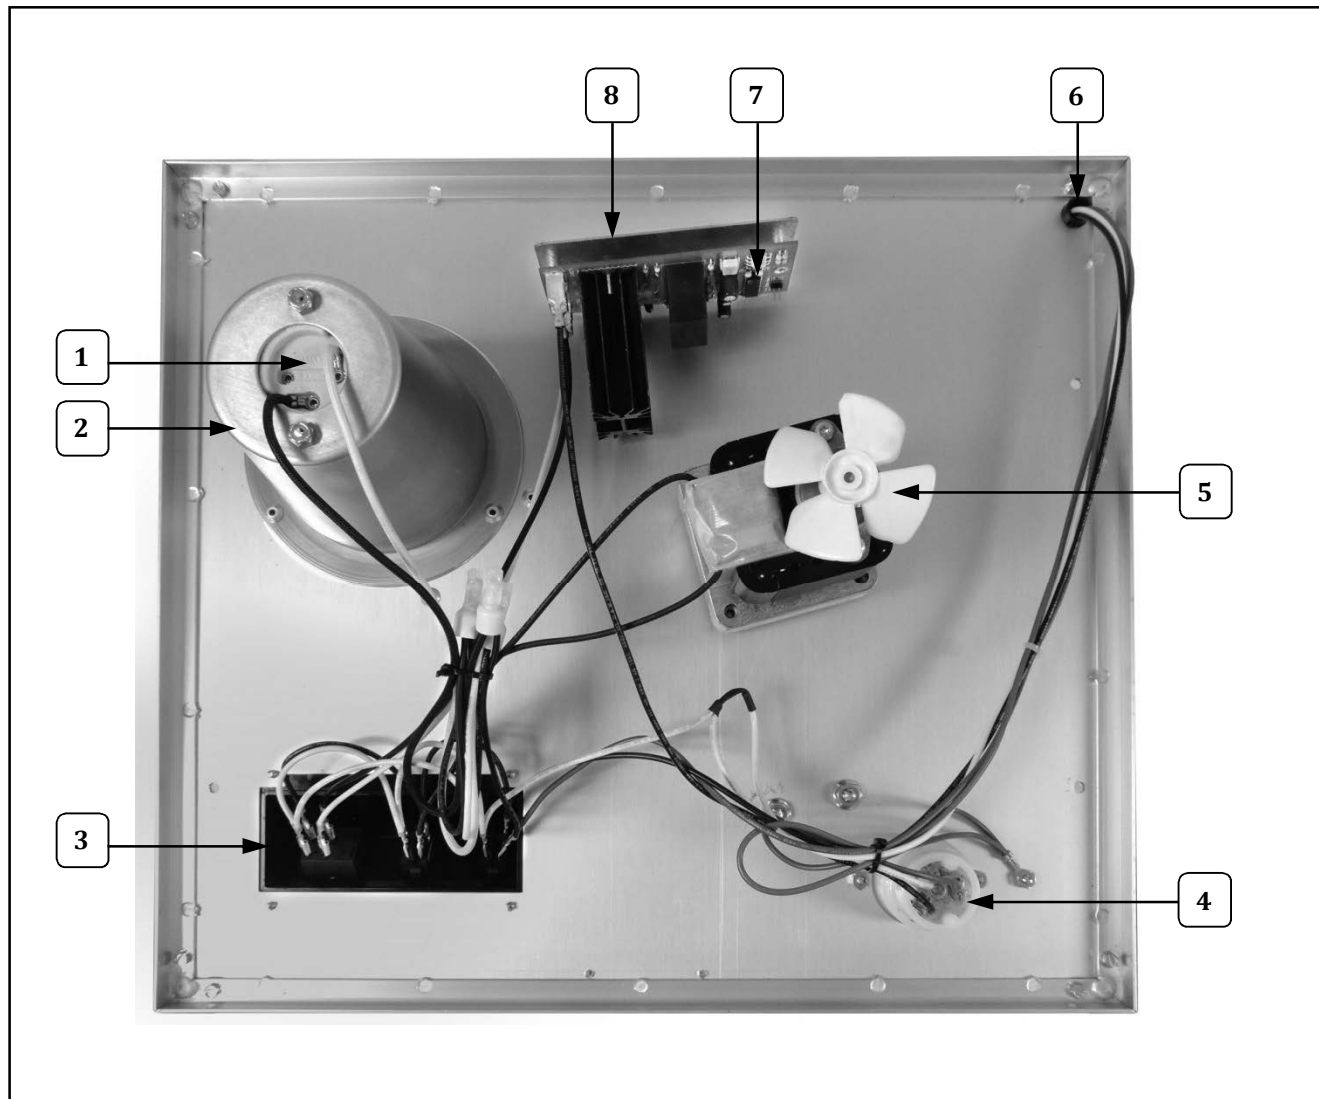


Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860

## Dome Interior - Electrical Breakdown

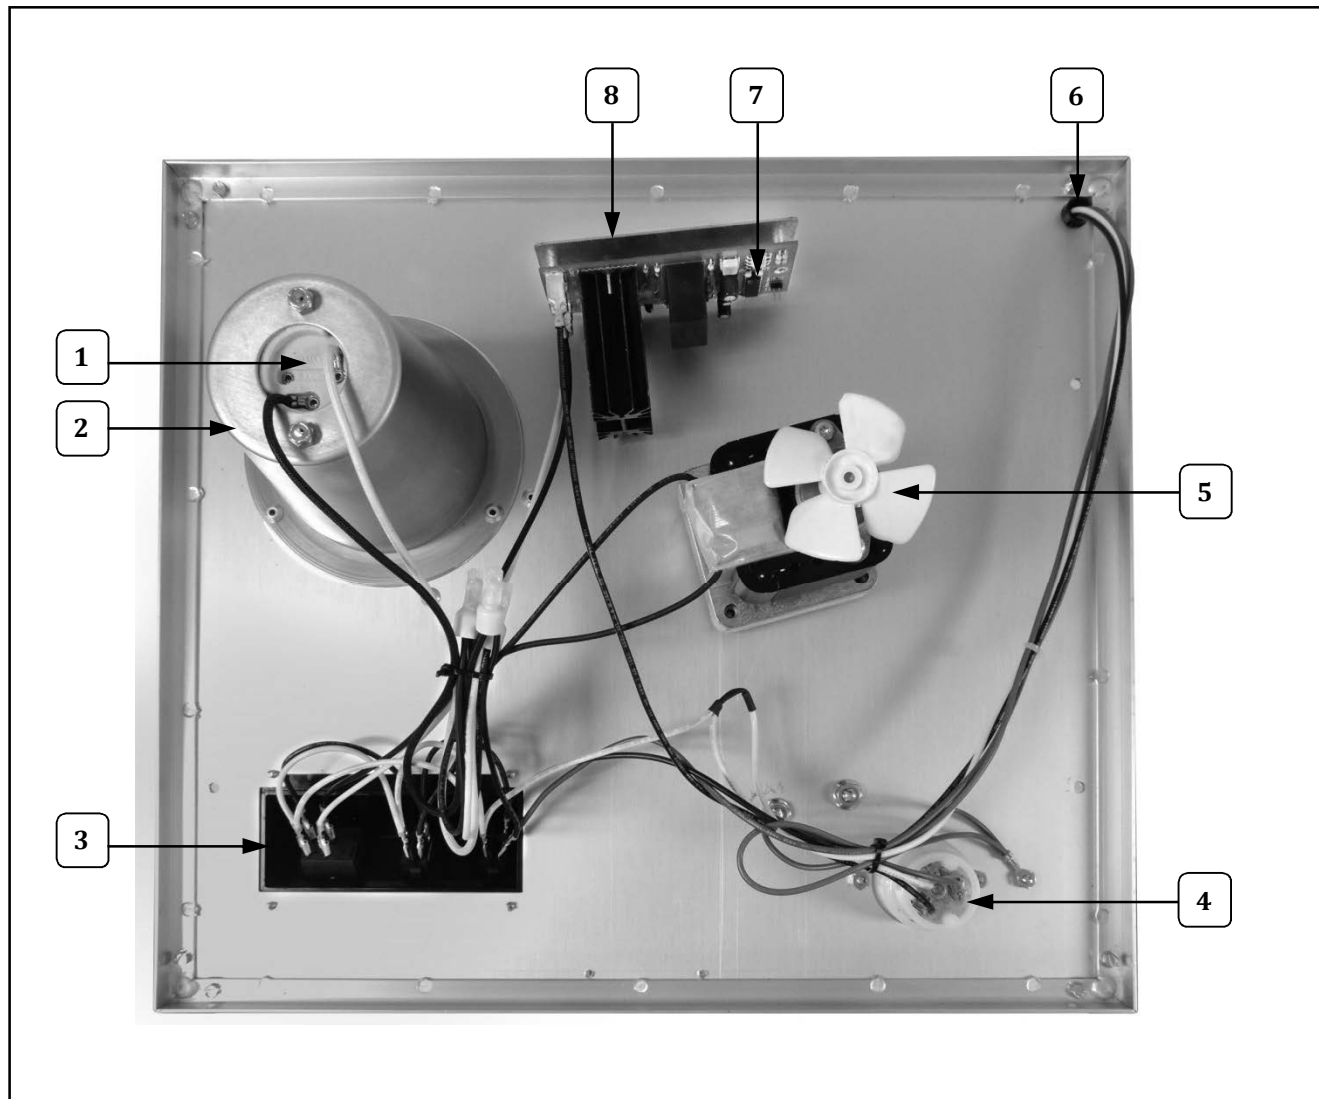

Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860

## Dome Interior - Electrical Breakdown

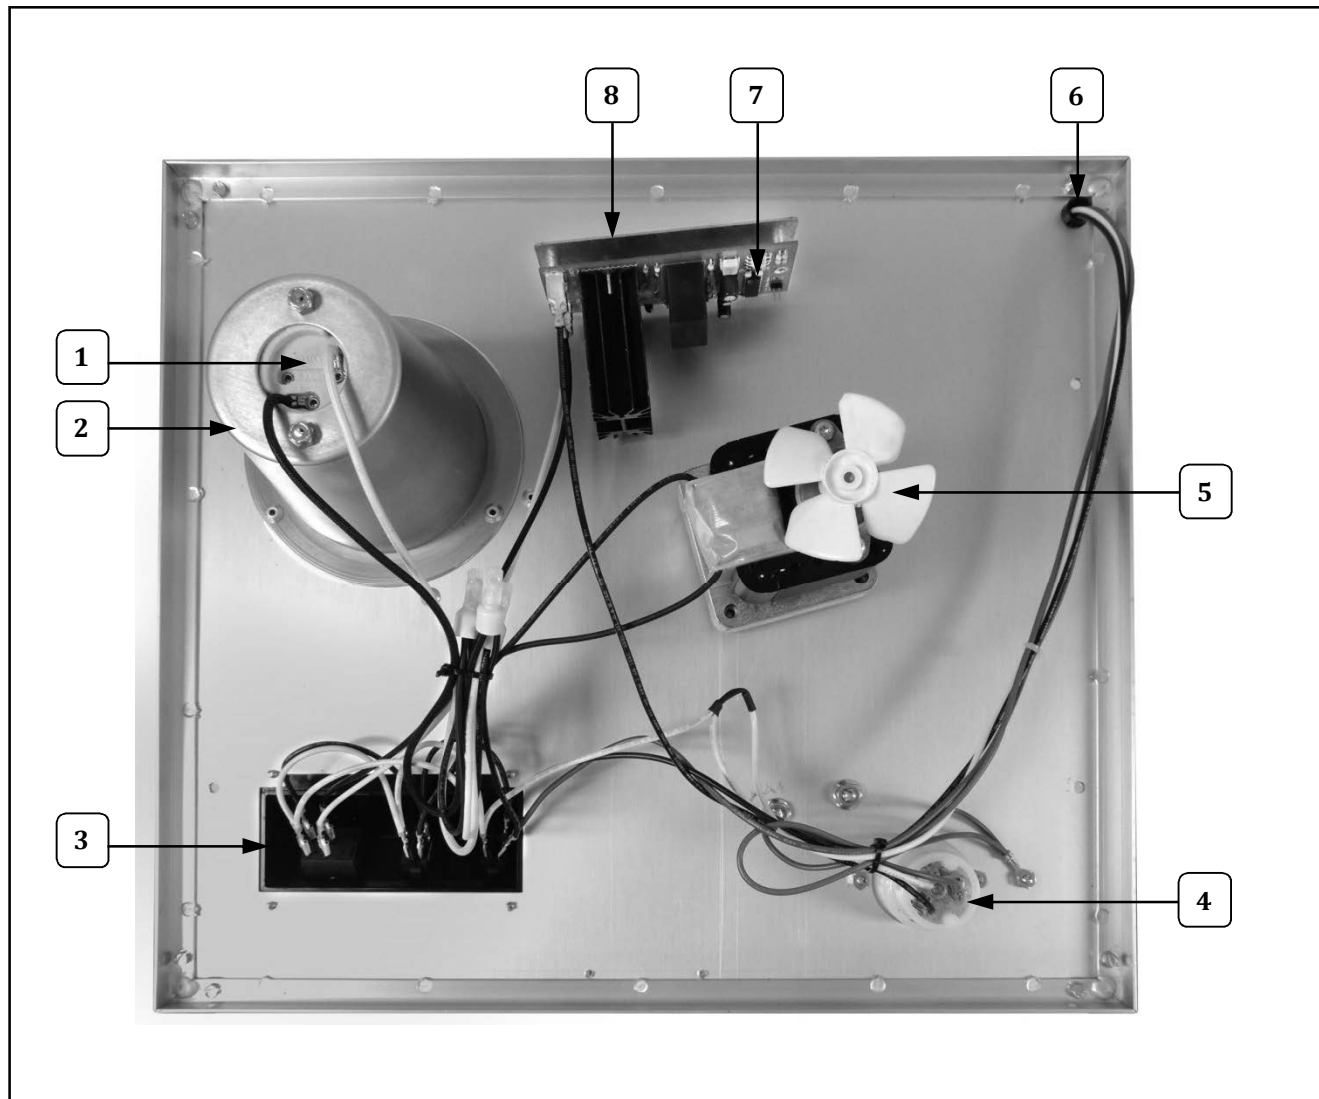


Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860






## Dome Interior - Electrical Breakdown

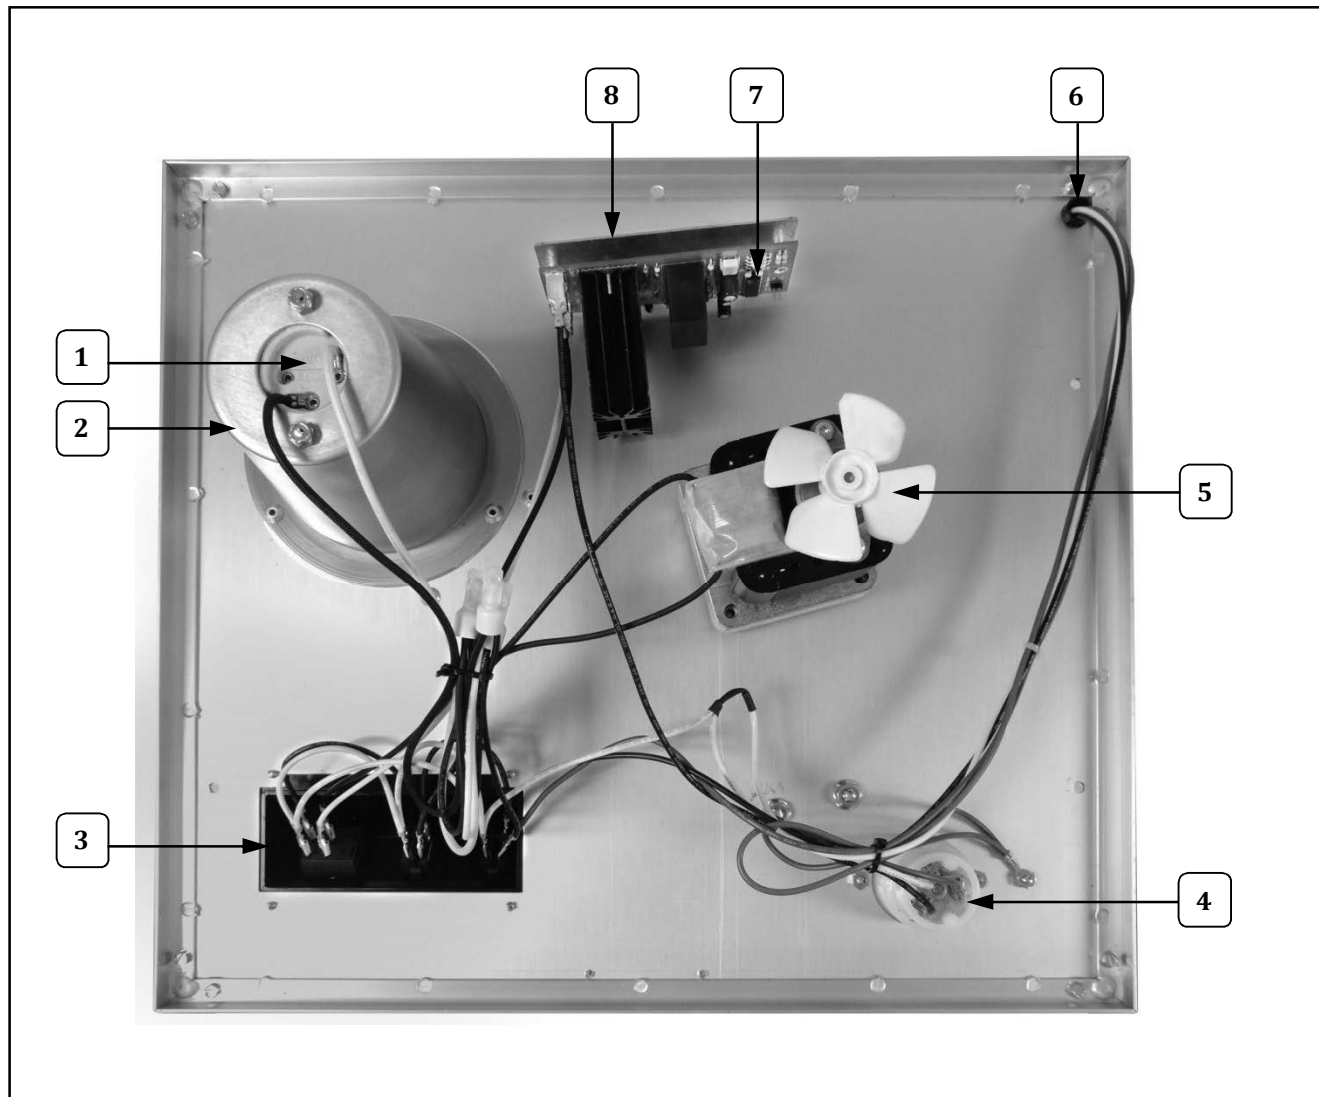

Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860




## Dome Interior - Electrical Breakdown

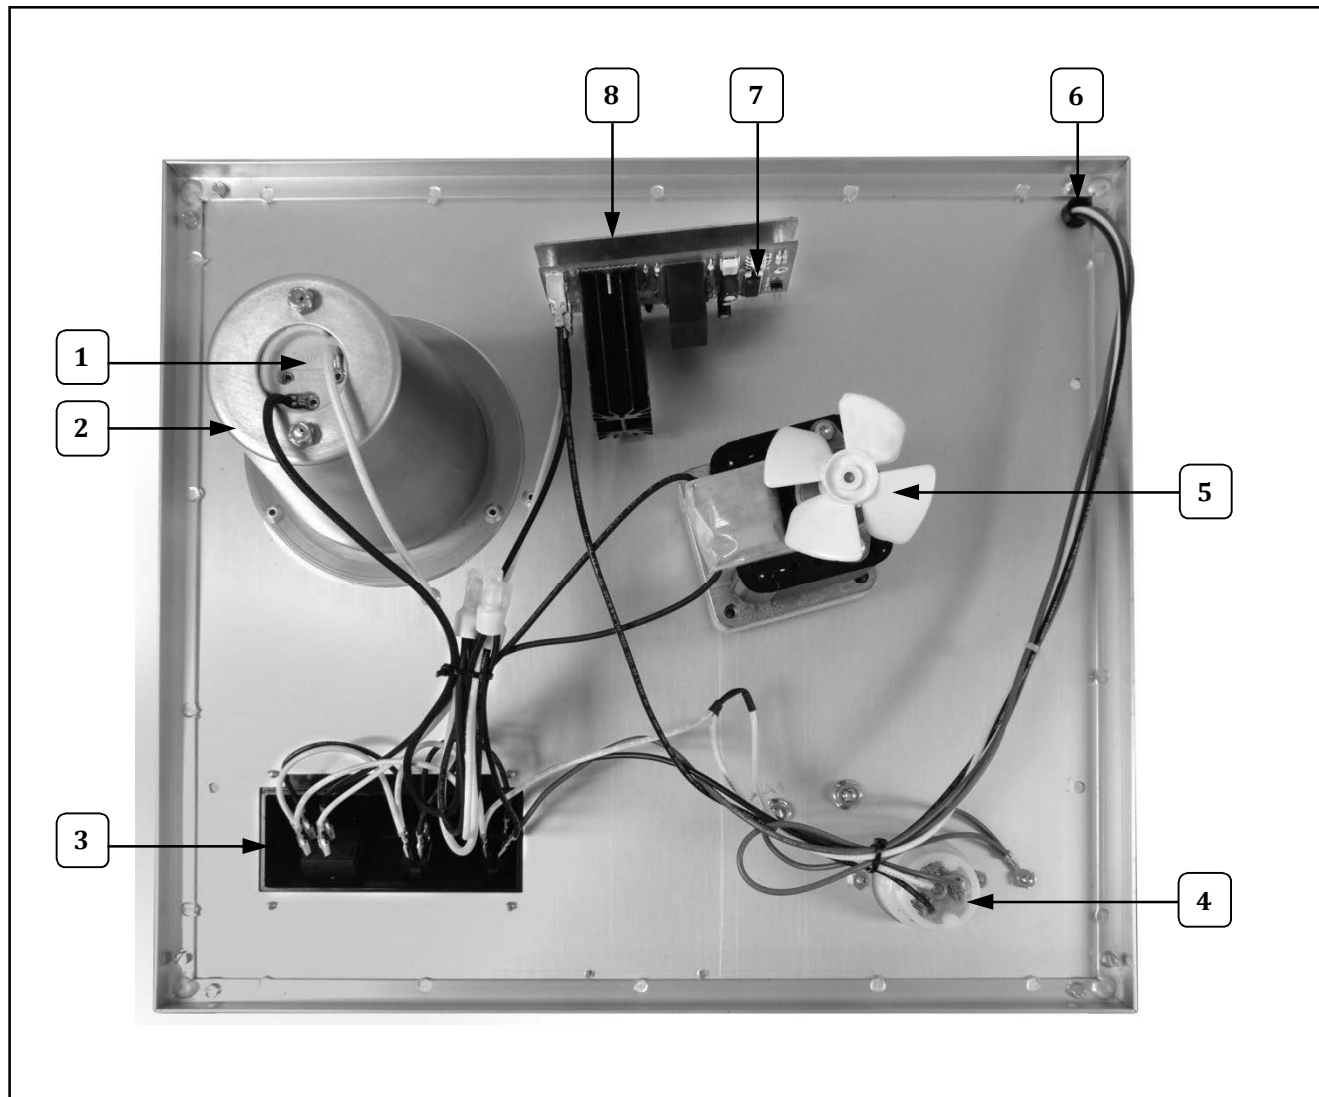

Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860



## Dome Interior - Electrical Breakdown

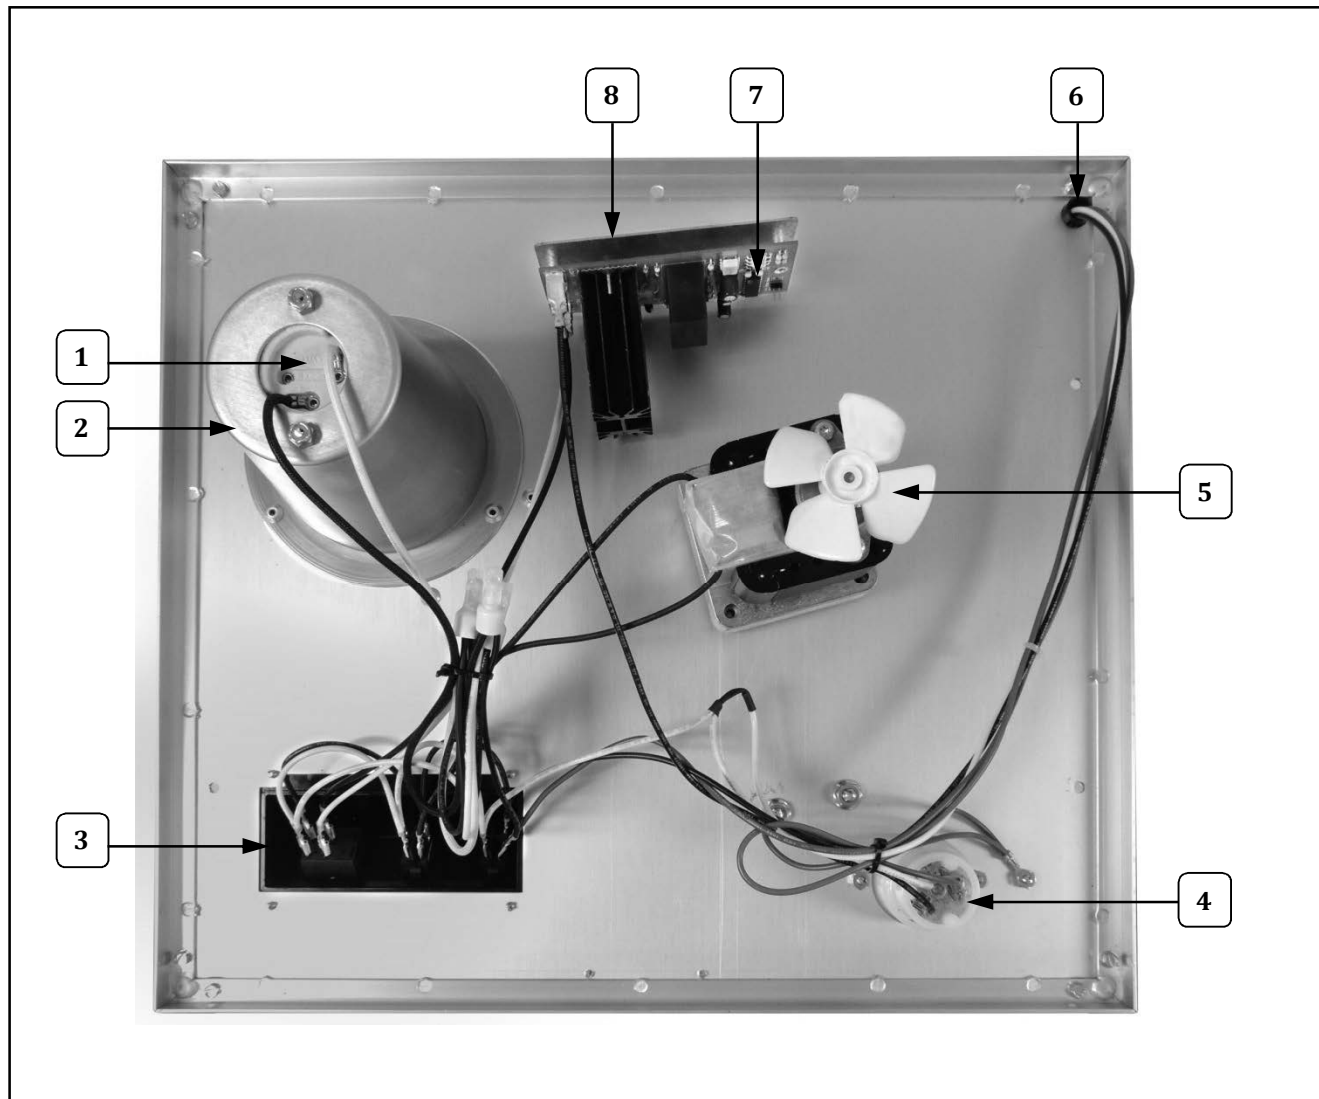

Item	Part Description	Qty.	Part No. 2660SR
1	LAMP HOLDER	1	47047
2	LIGHT SHIELD CONICAL	1	49480
3	SMALL SWITCH BOX	1	48501
4	KETTLE RECPT	1	49330
5	KETTLE DRIVE MOTOR	1	47038
6	SNAP BUSHING, .500 IN	1	47236
7	POPCORN HEAT CONTROL	1	55269
8	HEAT CONTROL BRACKET	1	77860



## Accessories



**Aluminum Scoop**



**Measure 6.5 cc**



**Measure 6 oz.**

Item	Part Description	Qty.	Part No.
1	STAMPED ALUMINUM SCOOP	1	2071
2	MEASURE 6.5CC (Flavacol Cup)	1	47678
3	6 OZ. MEASURE	1	49049



## Accessories



**Aluminum Scoop**



**Measure 6.5 cc**



**Measure 6 oz.**

Item	Part Description	Qty.	Part No.
1	STAMPED ALUMINUM SCOOP	1	2071
2	MEASURE 6.5CC (Flavacol Cup)	1	47678
3	6 OZ. MEASURE	1	49049