MH750 Parts List

Table of Contents

		4
Ca	hın	Δt
\mathbf{c}	WIII	·ι

Air Cooled

Water Cooled

Water System

Elbow & Switch

Evaporator

Drive Motor

Compressor

Control Box - Air Cooled

Control Box - Water Cooled

Wiring Diagrams

GENERAL

This section contains the Parts Illustrations and the Parts List for each of the major assemblies in the Model MH750 Modular Nugget Icemaker.

A No Number designation, when used in the Part Number Column indicates the unit is not available from SCOTSMAN as an assembly. This designation is used only for the convenience and clarity of division in cataloging.

HOW TO ORDER PARTS OR ASSEMBLIES

When ordering parts or assemblies, to avoid costly delays and errors in shipment, give the part number, the complete description shown in the list, and the quantities of each part or assembly required. Also include the model name, the serial number of the icemaker for which the part is required and for parts which require color matching, the color of the cabinet.

All part numbers have TEN DIGITS (spaces), required for use in the Computer System. BE SURE to fill in ALL SPACES in the CATALOG NUMBER column, on the parts order form.

Model MH750's have been manufactured in A through C Models. As in MH750AE-1A vs. MH750AE-1C. Refer to the complete model number to obtain the correct part number.

WIRING DIAGRAMS

This section is provided as an aid in understanding the electrical circuitry of the Model MH750 Modular Nugget Icemaker.

When conducting a continuity check of the modular cuber:

- 1. Disconnect the main power source.
- DO NOT use an incandescent lamp or jumper wire, conduct all tests with a volt-ohm-meter.


The wiring diagrams in this Section are:

MH750AE-1A Air-Cooled Models 115/60/1


MH750WE-1A Water-Cooled Models 115/60/1


MH750AE-1C Air-Cooled Models 115/60/1

MH750WE-1C Water-Cooled Models 115/60/1

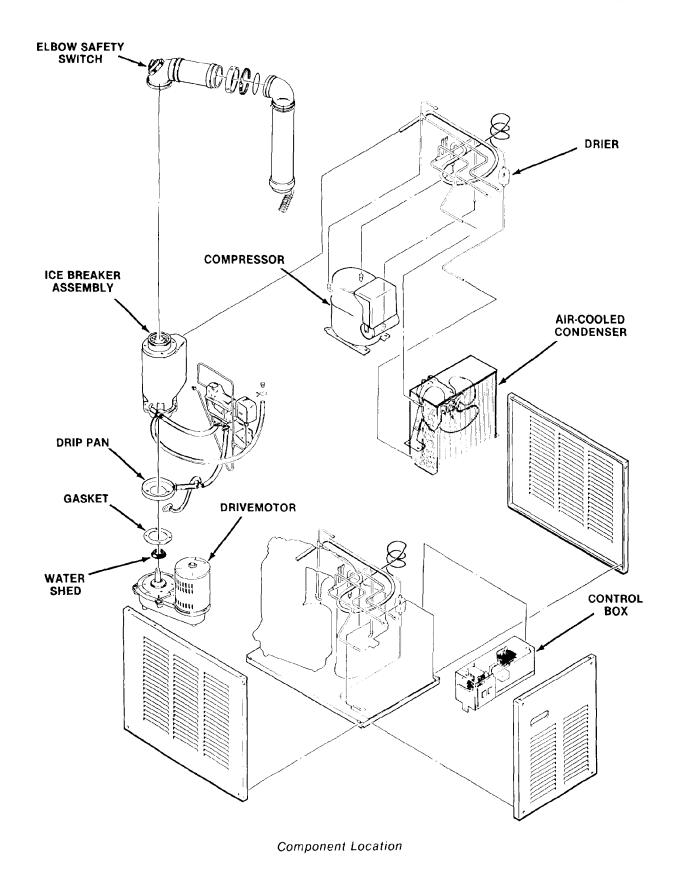


AUGUST, 1986 Page 2

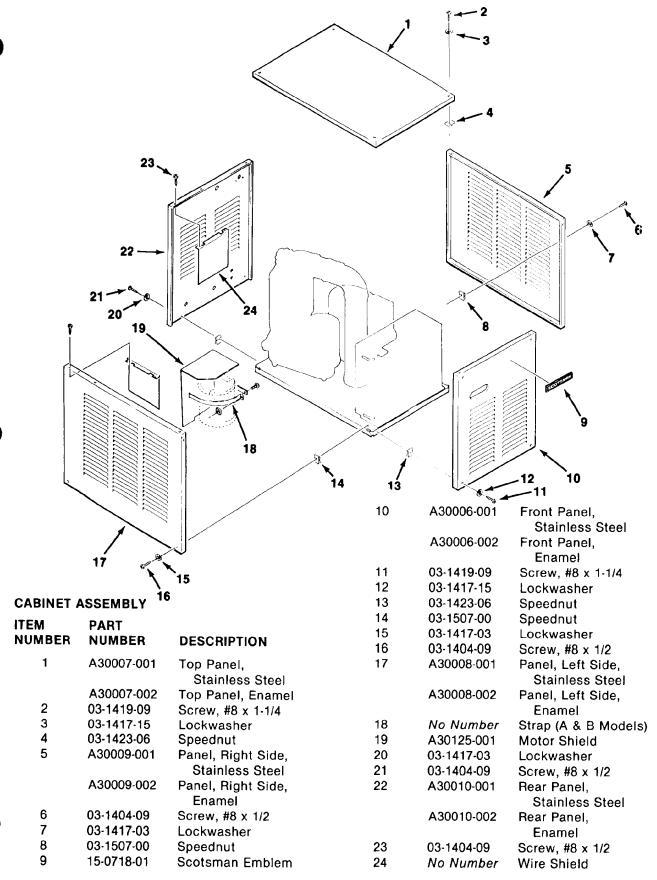


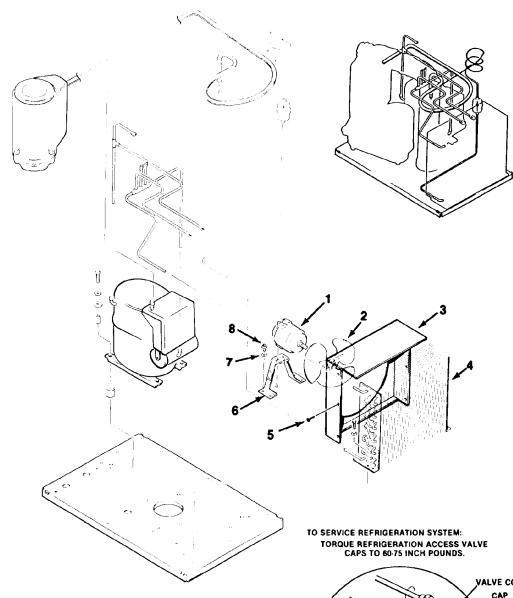

AIR-COOLED ASSEMBLIES

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	18-0559-01	Fan Motor (115/60/1)
2	18-0625-00	Fan Blade and Nut
3	A30003-001	Shroud
4	18-0396-01	Condenser
5	03-1404-03	Scew, #6 x 1/4
6	A25548-001	Fan Mounting Bracket
7	03-1417-09	Lockwasher, 1/4-inch
8	03-0571-00	Screw, 1/4-20 x 1/2-inch

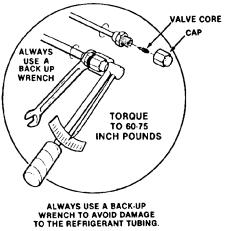


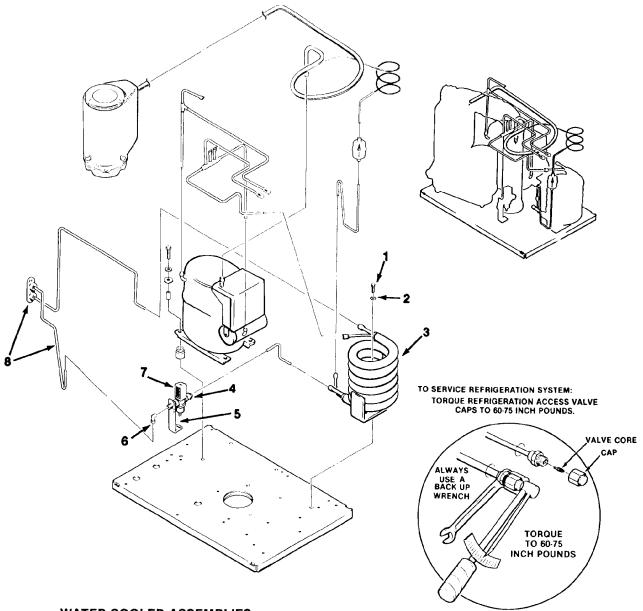


WATER-COOLED ASSEMBLIES

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	03-0571-00	Screw, 1/4-20 x 1/2
2	03-1417-09	Lockwasher, 1/4
3	18-3305-02	Condenser Assembly
4	No Number	Coupling
5	A15924-000	Pipe Nipple Assembly
6	No Number	Elbow
7	11-0198-02	Water Regulator
8	A3238-001	Condenser-Inlet Drain

ALWAYS USE A BACK-UP WRENCH TO AVOID DAMAGE TO THE REFRIGERANT TUBING.

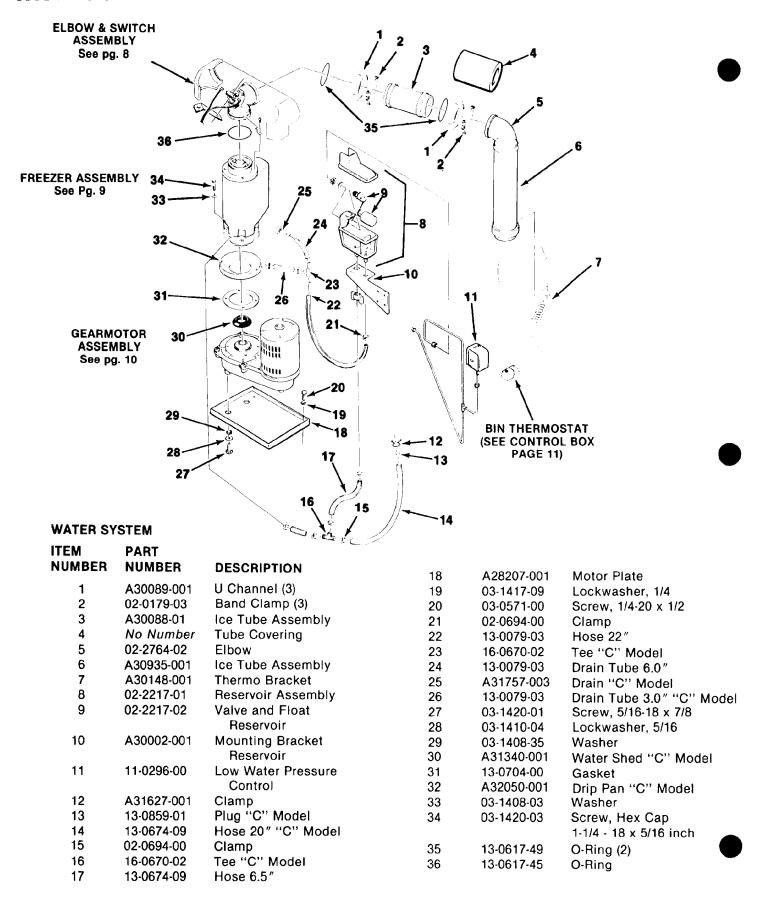


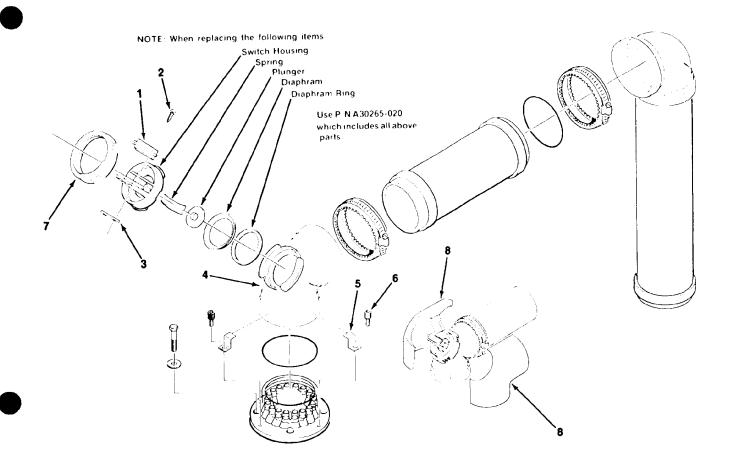


ELBOW AND SWITCH ASSEMBLY

ITEM Number	PART NUMBER	DESCRIPTION
1	12-2202-01	Switch
2	03-1403-08	Screw, No. 6-32 x 7/8
3	03-0886-00	Speednut
4	02-2764-01	Elbow Assembly
5	02-2604-01	Bracket, Spout Retaining
6	03-1544-04	Screw, No. 10-24 x 3/8 Stainless Soc HD Cap
7	02-2637-01	Retaining Ring
8	A31390-001	Insulation - Includes left and right sides

AUGUST, 1986 Page 7

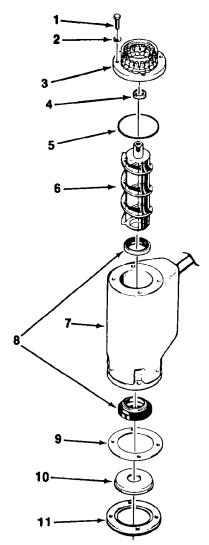

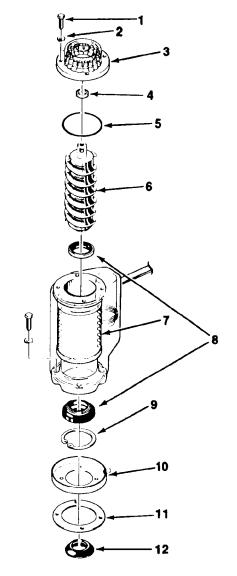

FREEZER ASSEMBLY (A MODEL ONLY)


PART NUMBER	DESCRIPTION
03-1405-42	Screw, No. 5/16 - 18 x 7/8 Hex Cap
03-1417-13	Lockwasher, No. 5/16 Helical Spring
A32571-020	Ice Breaker (Includes Bearing & Seal)
02-2853-01	Seal
13-0617-46	O-Ring
A31839-001	Auger
A32098-020	Freezer Assembly
02-0929-01	Seal, Water
13-0704-00	Gasket
A29463-001	Adapter Freezer
02-2577-01	Adapter Large
	NUMBER 03-1405-42 03-1417-13 A32571-020 02-2853-01 13-0617-46 A31839-001 A32098-020 02-0929-01 13-0704-00 A29463-001

FREEZER ASSEMBLY (C MODEL ONLY)

(C MODEL		
ITEM NUMBER	PART NUMBER	DESCRIPTION
1	03-1405-42	Screw
2	03-1417-13	Lockwasher
3	A32571-020	Ice Breaker (Includes
4	02-2853-01	Bearing & Seal) Seal
5		
=	13-0617-46	O-Ring
6	A31839-001	Auger
7	A32098-020	Freezer Assembly
		(Includes 10 & 11)
8	02-0929-01	Water Seal
9	03-1558-05	Snap Ring
10	A32050-001	Drip Pan
11	13-0704-00	Gasket
12	13-0709-02	Water Shed


DRIVE MOTOR ASSEMBLY

_	TOTT AGGEMENT	•
ITEM Number	PART NUMBER	DESCRIPTION
1	02-1606-00	Oil Seal
2	13-0709-02	Water Shed C Model Only
3	02-2853-01	Oil Seal - Faces Up
4	03-1251-01	Screw*
5	A31230-001	Gear Case Cover Assembly*
6	02-1681-00	Thrust Race
7	03-1363-00	Retaining Ring
8	02-2541-01	Shaft, Output
9	03-1630-01	Key (S)
10	02-2745-01	Gear, Output
11	02-1604-00	Third Pinion Assembly,
• • •	02-1004-00	Second Gear
12	02-1679-00	Thrust Race
13	A32368-020	Bearing (Includes 22
10	A02000-020	Items 12, 13, & 14)
14	02-1679-00	Thrust Page
15	A26103-001	"O" Ring
16	A31230-001	Gear Case Assembly Bottom*
17	03-1408-24	Washer
18	02-1603-00	Second Pinion Assembly,
		First Gear
19	03-1408-24	Washer
20	12-1741-29	Bearing Shaft GE
	12-1741-20	Bearing Shart Emerson
0.4	12-2314-20	GE P.S.C.
21 22	A32425-001	Drive Motor
22	12-1741-28	Switch, Start (General Electric) #1
	40 4744 00	(donoral Electric) in
	12-1741-32	Start Switch (Caparal Floatria) #3
	10 0014 01	(General Electric) #2
	12-2314-21	Continuogai Owiton 1:5.6.
00	12-1741-22	Switch, Start (Emerson)
23	A25835-001	Gearcase Oil (1) Pint Consents Assembly Complete 18.
24	A32404-021	Gearmotor Assembly Complete
25	12-2314-22	Capacitor - (For G.E.PSC only)
		23 PROTRUDING
		BOSS UP
	24	
	/	17 FLUSH MACHINED SURFACE BOSS DOWN
	<i>₹</i> /	
	1 /	*NOTE:Torque cover mounting screws 250-300 inch pounds.
91111		250-500 men pounds.
niiii .		
<u> </u>		/
75	変の変	*NOTE: Gearcase cover and
7		bottom are sold as a set only.
	(B)	Order Part Number A31230-001
	0	

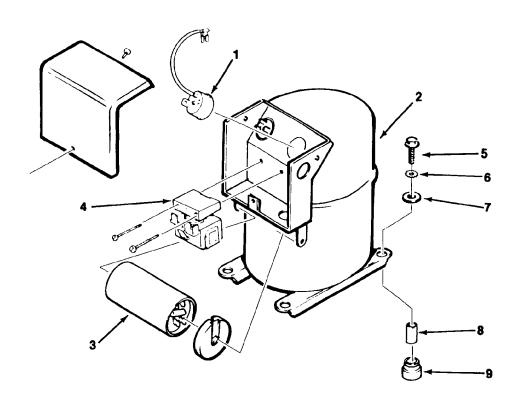


COMPRESSOR ASSEMBLY


ITEM NUMBER	PART NUMBER	DESCRIPTION			
1	18-2400-25	Overload (115/60/1)	4	18-2410-00	Relay (115/60/1)
2	18-3900-01	Compressor	5	03-1405-40	Screw
		Assembly (115/60/1)	6	03-1417-12	Lockwasher
		(208-230/60/1)	7	03-1408-29	Washer
3	18-2420-00	Capacitor (115/60/1)	8	18-2200-27	Sleeve
		With Cap	9	18-2200-28	Grommet

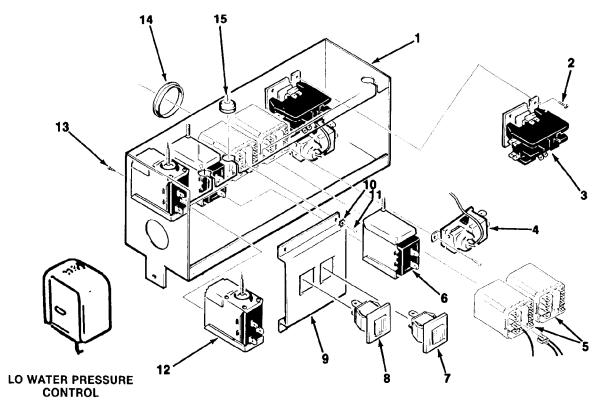


CONTROL BOX ASSEMBLY — AIR-COOLED

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	No Number	Control Box
2	03-1403-17	Screw, #8 x 3/8
3	12-2037-01	Contactor (115/60/1)
4	11-0354-00	Bin Thermostat
5	12-2090-01	Relay (115/60/1)
6	11-0420-01	Lo Pressure Control
7	12-2200-01	ON-OFF Switch
		(115/60/1)
8	12-2199-01	Start-Reset Switch
		(115/60/1)
9	A30543-001	Switch Housing
10	03-1417-03	Lockwasher
11	03-1531-01	Screw #8 x 3/8
12	11-0402-01	Auger Delay
13	03-1403-02	Screw, 6 x 1/4
14	12-1213-12	Snap Bushing
15	13-0557-00	Grommet

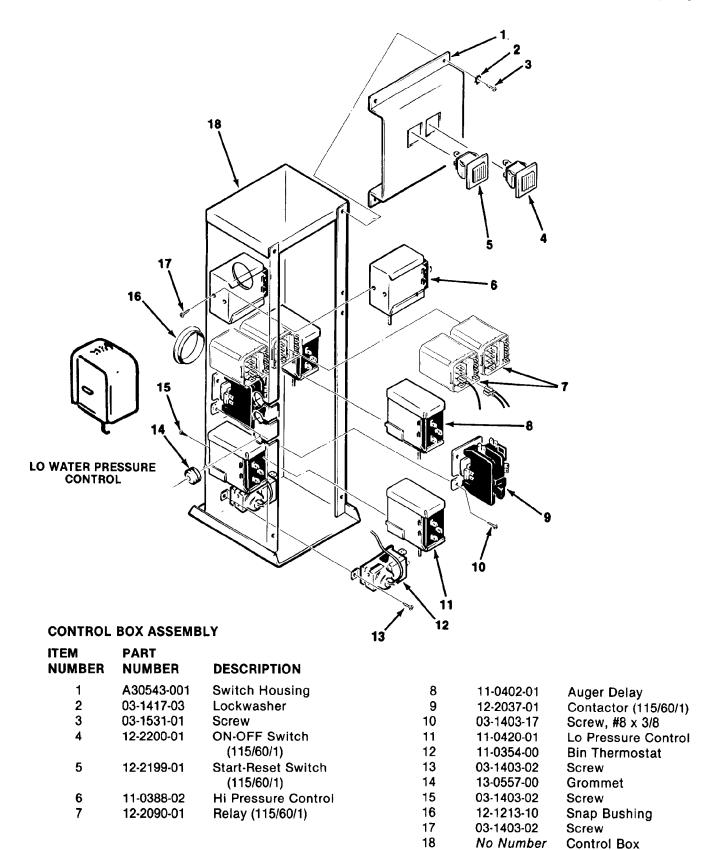


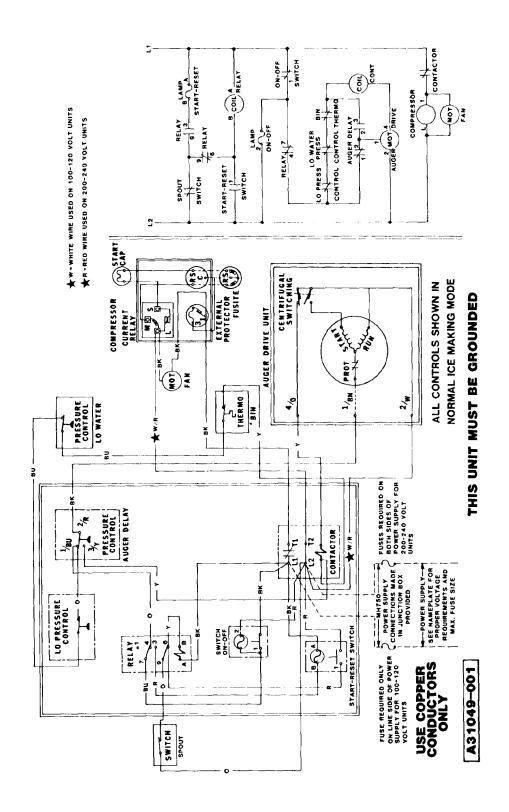


Wiring Diagram, MH750AE-1A (115/60/1)

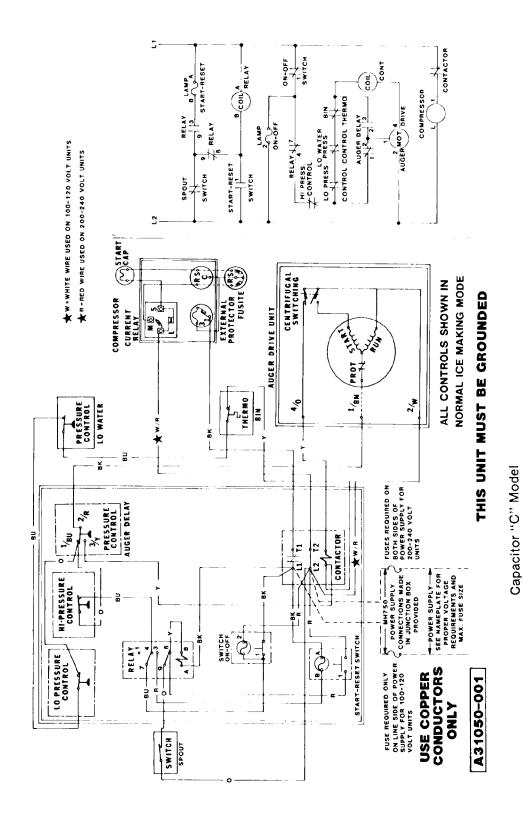

Wiring Diagram, MH750WE-1A (115/60/1)

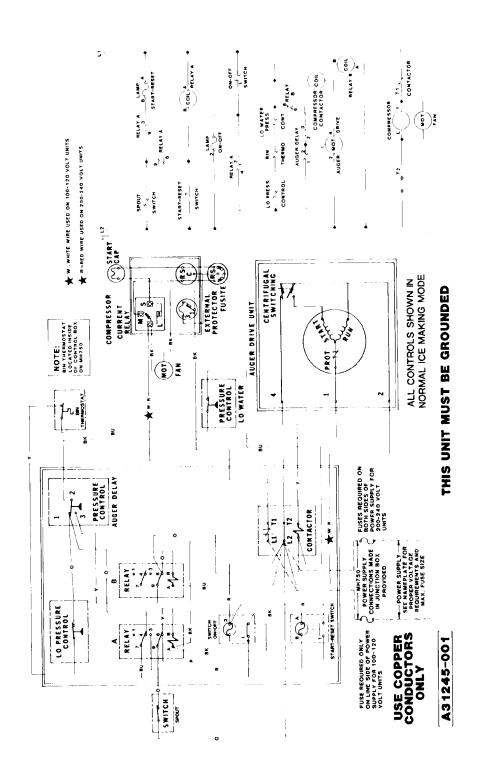

Wiring Diagram, MH750AE-1C (115/60/1)

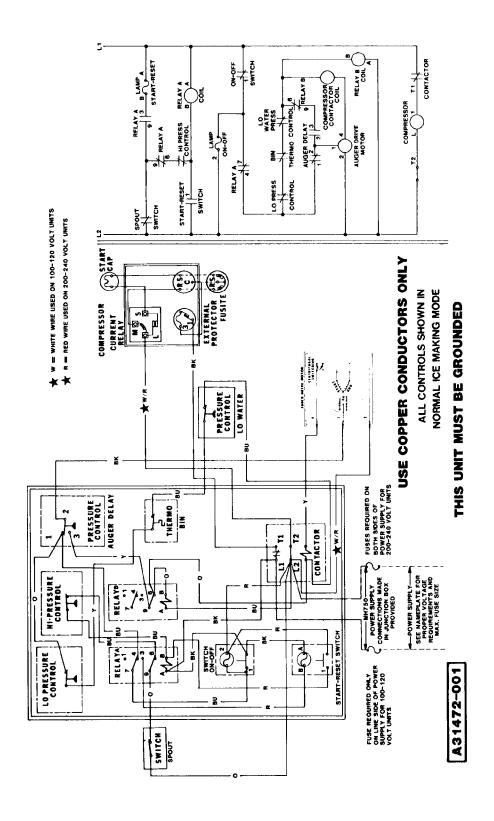

Wiring Diagram, MH750WE-1C (115/60/1)