PR760 Parts List

Table of Contents

\sim	1	•	4	T
l 'a	h	II	iet	•
\ \ \ \ \ \	.,			

Cabinet II

Air Cooled

Water Cooled

Water System

Evaporator

Spout

Gear Motor


Valve Tower


Compressor

Control Box - Air Cooled


Control Box - Water Cooled


Wiring Diagrams

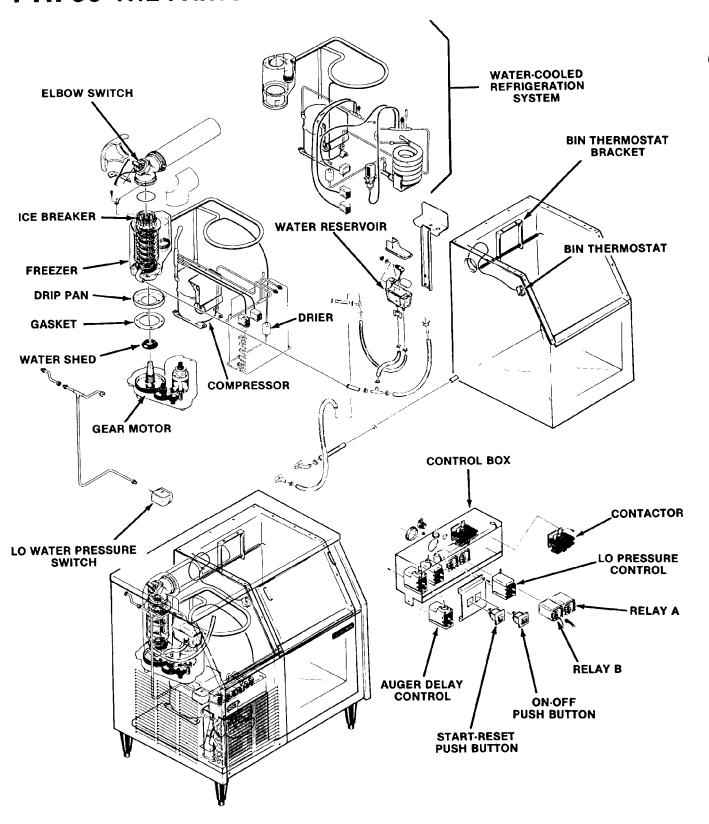


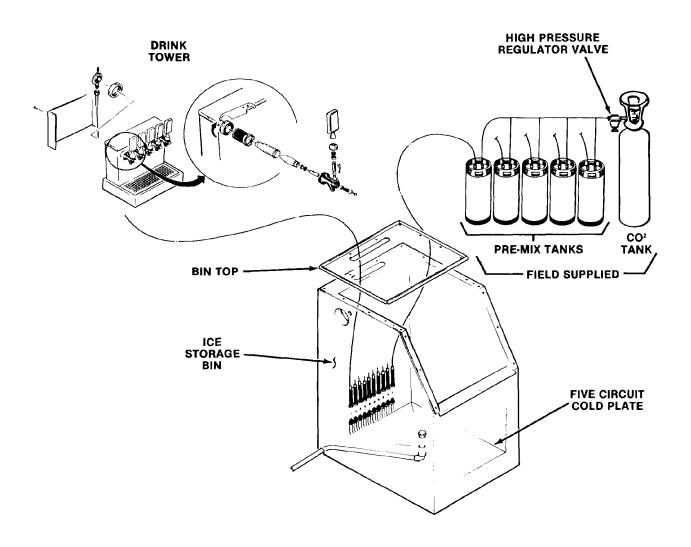



Pre-Mix Drink System

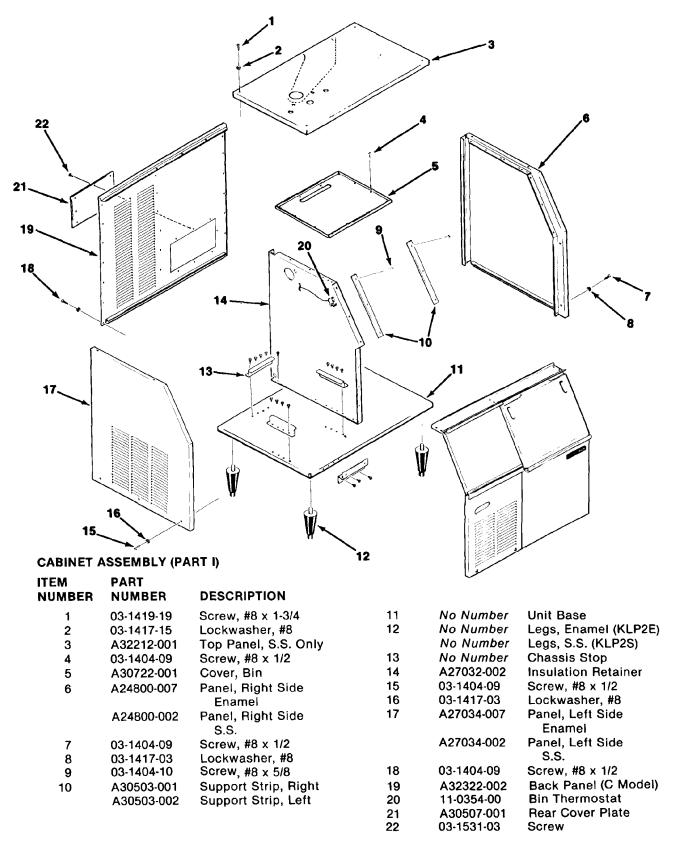

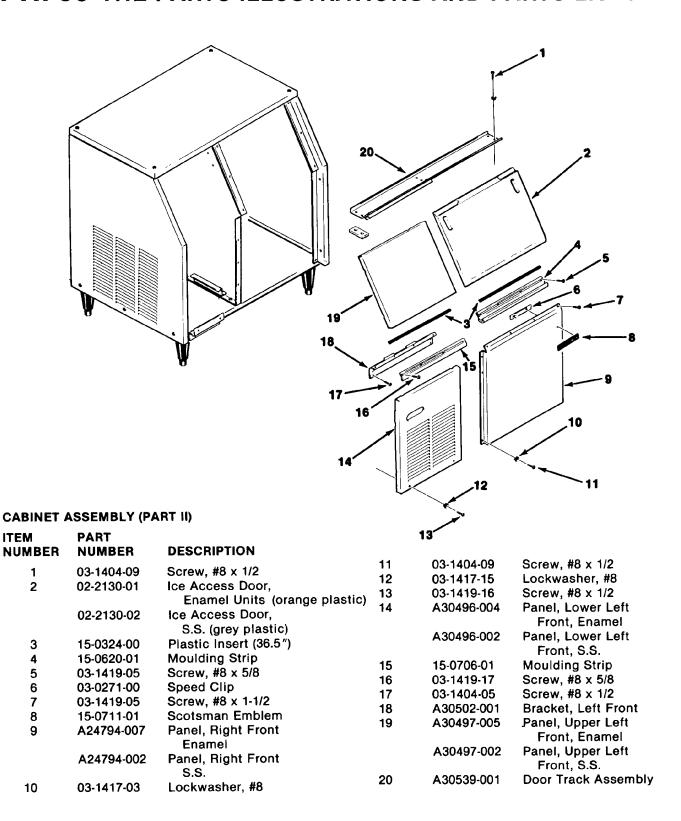

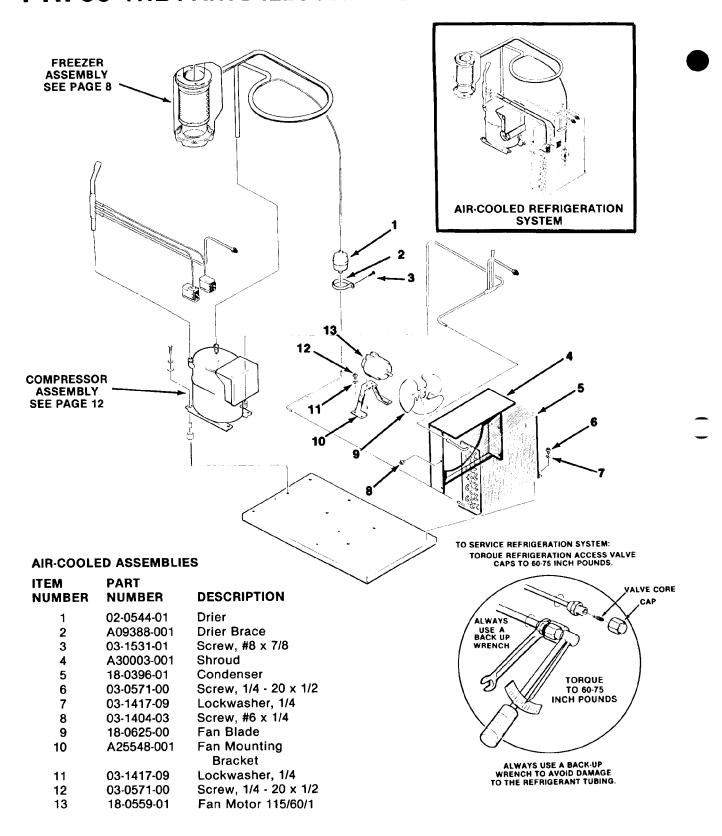


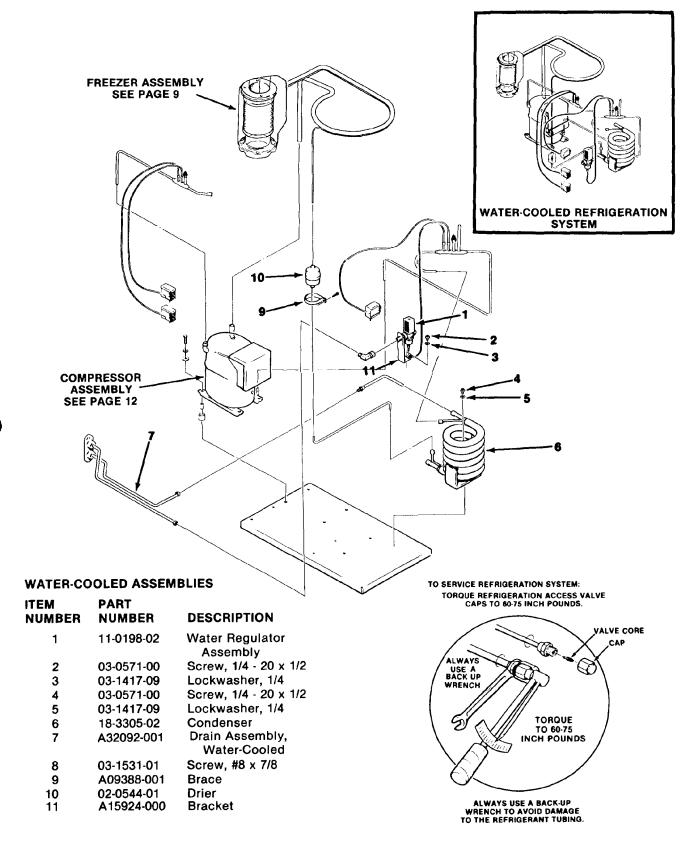


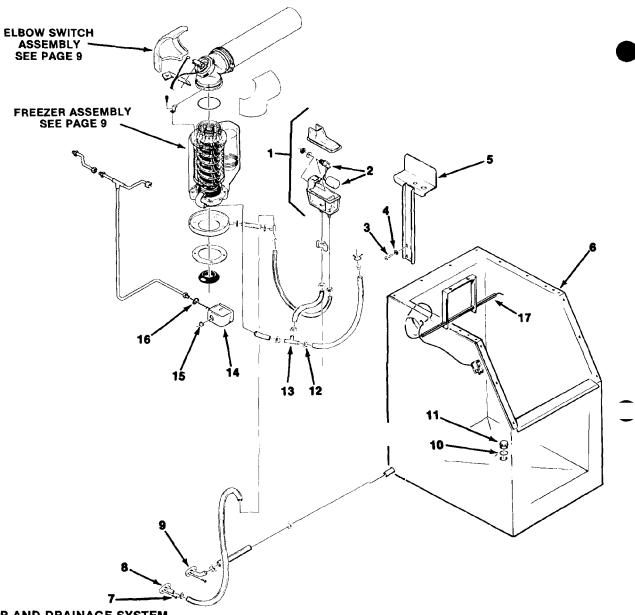

WATER AND DRAINAGE SYSTEM

ID DIIMIIMOL	O I O I E III			
PART		9	A32088-001	Drain Assembly
NUMER	DESCRIPTION	10	13-0617-11	O-ring
02 2217 01	Donorusia	11	02-1741-00	Drain Top
		12	02-0534-00	Hose Clamp
	vaive and Float	13	16-0670-02	Теє
03-0571-00	Screw, 1/4 - 20 x 1/2	14	11-0296-00	Lo Water Pressure Control
	•	15	12-1213-10	Snap Bushing
	Reservoir Bracket Storage Bin Screw, 1/4 - 20 x 1/2	16	No Number	Rubber Washer
			A30720-001	Bin Thermostat
03-1405-03		••	7100720001	Bracket
A32091-001	Drain Assembly (Water-Cooled only)			Didonot
	NUMER 02-2217-01 02-2217-02 03-0571-00 03-1417-09 A30538-001 A30464-002 03-1405-03	NUMER DESCRIPTION 02-2217-01 Reservoir 02-2217-02 Valve and Float 03-0571-00 Screw, 1/4 - 20 x 1/2 03-1417-09 Lockwasher, 1/4 A30538-001 Reservoir Bracket A30464-002 Storage Bin 03-1405-03 Screw, 1/4 - 20 x 1/2 A32091-001 Drain Assembly	NUMER DESCRIPTION 10 02-2217-01 Reservoir 12 02-2217-02 Valve and Float 13 03-0571-00 Screw, 1/4 - 20 x 1/2 14 03-1417-09 Lockwasher, 1/4 15 A30538-001 Reservoir Bracket 16 A30464-002 Storage Bin 17 03-1405-03 Screw, 1/4 - 20 x 1/2 A32091-001 Drain Assembly	NUMER DESCRIPTION 10 13-0617-11 02-2217-01 Reservoir 11 02-1741-00 02-2217-02 Valve and Float 12 02-0534-00 03-0571-00 Screw, 1/4 - 20 x 1/2 14 11-0296-00 03-1417-09 Lockwasher, 1/4 15 12-1213-10 A30538-001 Reservoir Bracket 16 No Number A30464-002 Storage Bin 17 A30720-001 03-1405-03 Screw, 1/4 - 20 x 1/2 A32091-001 Drain Assembly

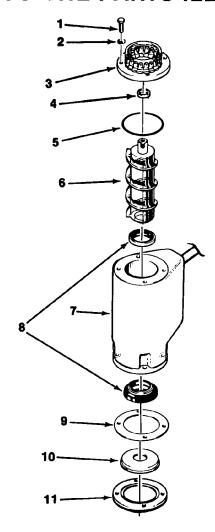

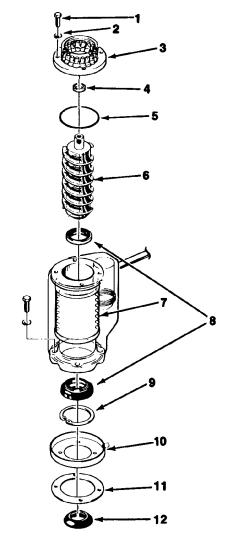


FREEZER ASSEMBLY (A & B MODELS ONLY)

TEM Number	PART NUMBER	DESCRIPTION
1	03-1405-42	Screw, No. 5/16 - 18 x 7/8 Hex Cap
2	03-1417-13	Lockwasher, No. 5/16 Helical Spring
3	A32571-020	lce Breaker (Includes Bearing & Seal)
4	02-2853-01	Seal
5	13-0617-46	O-Ring
6	A31839-001	Auger
7	A32098-020	Freezer Assembly
8	02-0929-01	Seal, Water
9	13-0704-00	Gasket
10	A29463-001	Adapter Freezer
11	02-2577-01	Adapter Large

FREEZER ASSEMBLY (C MODEL ONLY)

(C MODEL CALT)				
ITEM Number	PART NUMBER	DESCRIPTION		
1	03-1405-42	Screw		
2	03-1417-13	Lockwasher		
3	A32571-020	Ice Breaker (Includes Bearing & Seal)		
4	02-2853-01	Seal		
5	13-0617-46	O-Ring		
6	A31839-001	Auger		
7	A32098-020	Freezer Assembly (Includes 10 & 11)		
8	02-0929-01	Water Seal		
9	03-1558-05	Snap Ring		
10	A32050-001	Drip Pan		
11	13-0704-00	Gasket		
12	13-0709-02-	Water Shed		
	A31341.00	>> 1		


A31340-001

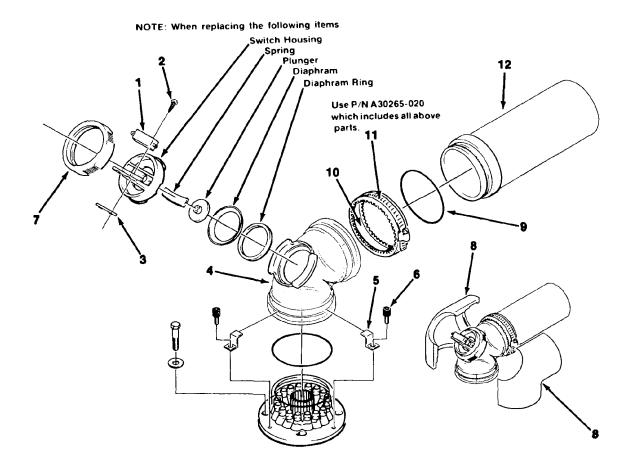



ELBOW AND SWITCH ASSEMBLY

ITEM Number	PART NUMBER	DESCRIPTION
1	12-2202-01	Switch
2	03-1403-08	Screw, No. 6-32 x 7/8
3	03-0886-00	Speednut
4	02-2764-01	Elbow Assembly
5	02-2604-01	Bracket, Spout Retaining
6	03-1544-04	Screw, No. 10-24 x 3/8 S.S. Soc Hd Cap
7	02-2637-01	Retaining Ring
8	A31390-001	Insulation (Includes left & right sides)
9	13-0619-49	O-Ring
10	A30089-001	U-Channel
11	02-0179-03	Clamp
12	A30087-004	Ice Tube

DRIVE MOTOR ASSEMBLY

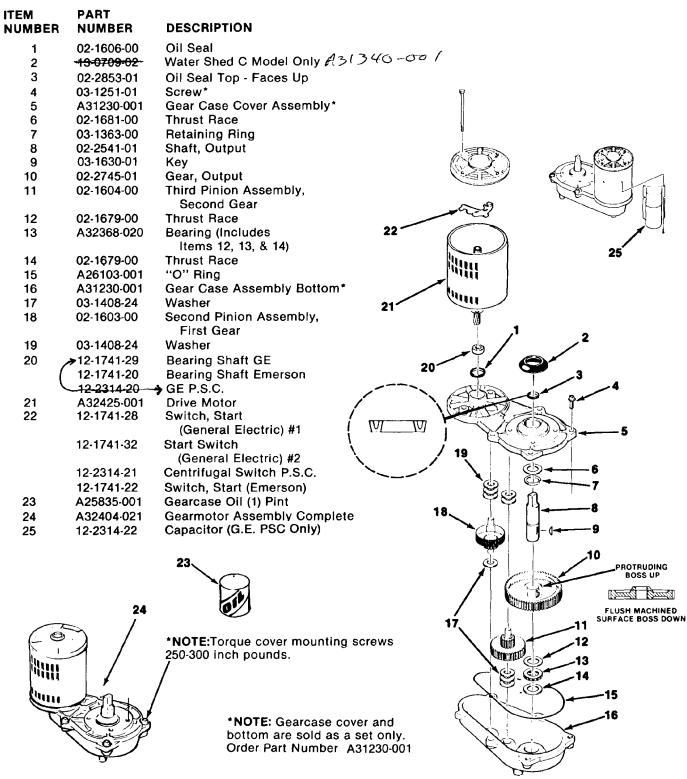


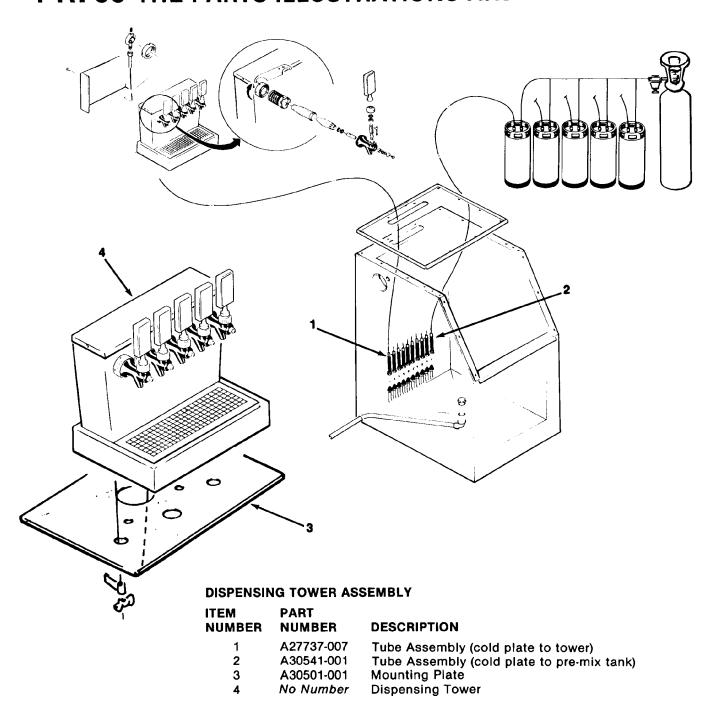

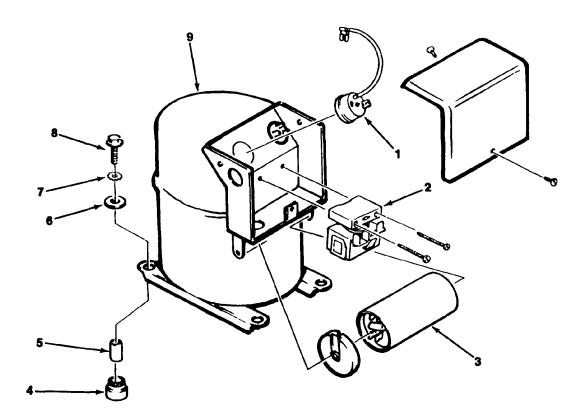


COMPRESSOR ASSEMBLY


ITEM Number	PART NUMBER	DESCRIPTION
1	18-2400-25	Overload (115/60/1)
2	18-2410-00	Relay (115/60/1)
3	18-2420-00	Capacitor with cap, (115/60/1)
4	18-2200-28	Grommet
5	18-2200-27	Sleeve
6	03-1408-29	Washer
7	03-1417-12	Lockwasher
8	03-1405-40	Screw
9	18-3900-01	Compressor
		Assembly,
		(115/60/1)

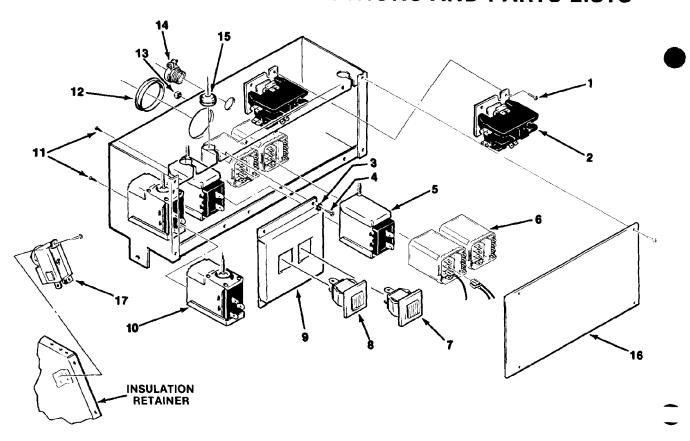


CONTROL BOX ASSEMBLY - AIR-COOLED

ITEM NUMBER	PART NUMBER	DESCRIPTION			
HOMBEN		DESCRIPTION			
1	03-1531-01	Screw, #8 x 3/8	8	12-2199-01	Start-Reset Switch,
2	12-2048-01	Contactor, (115/60/1)			(115/60/1)
3	03-1417-03	Lockwasher	9	A30543-001	Switch Housing
4	03-1531-01	Screw, #8 x 3/8	10	11-0420-01	Low Pressure Control
5	11-0402-01	Lo Pressure Control	11	03-1403-02	Screw, #6 x 1/4
		(Auger Delay)	12	12-1213-12	Snap Bushing
6	12-2090-01	Relay, (115/60/1)	13	03-1406-01	Nut
7	12-2200-01	ON-OFF Switch,	14	12-0256-00	Straight Connector
		(115/60/1)	15	13-0557-00	Grommet
		,	16	A31654-001	Control Box Cover
			17	11-0354-00	Bin Thermostat
					(Located on
					insulation Retainer)

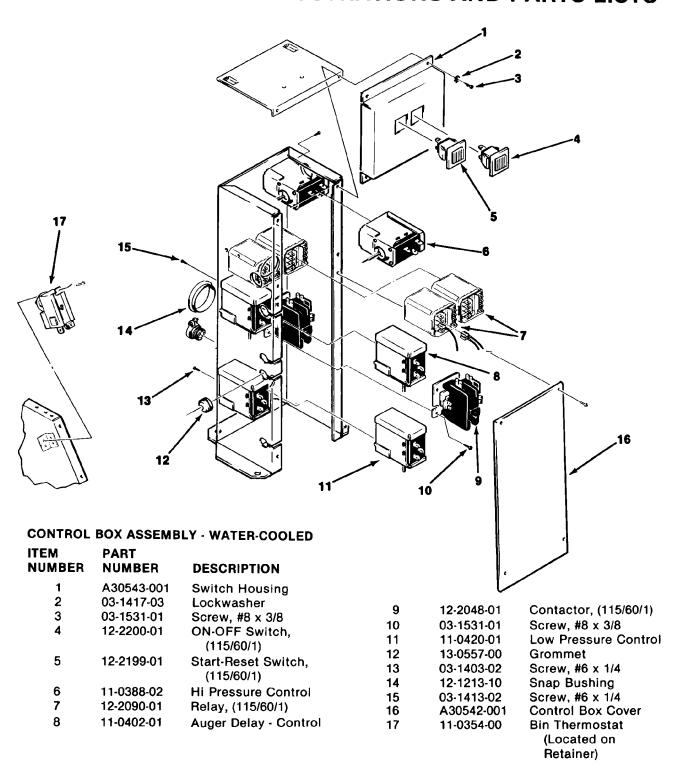


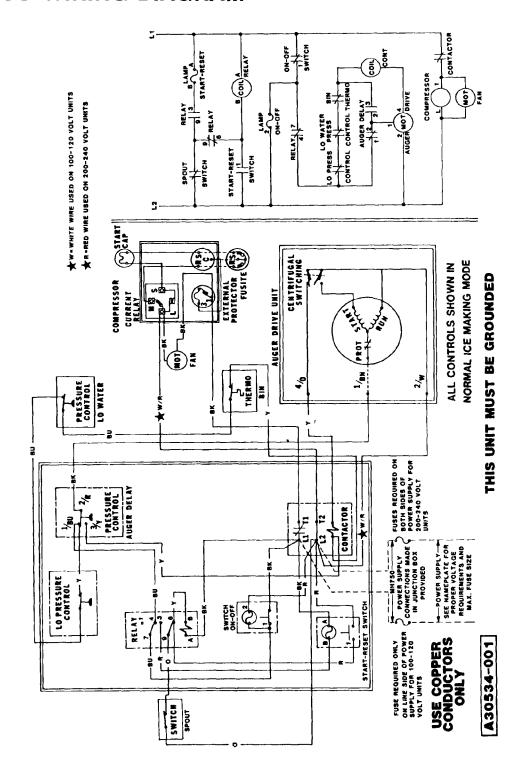


Wiring Diagram, PR760AE-1A (115/60/1) Air-Cooled

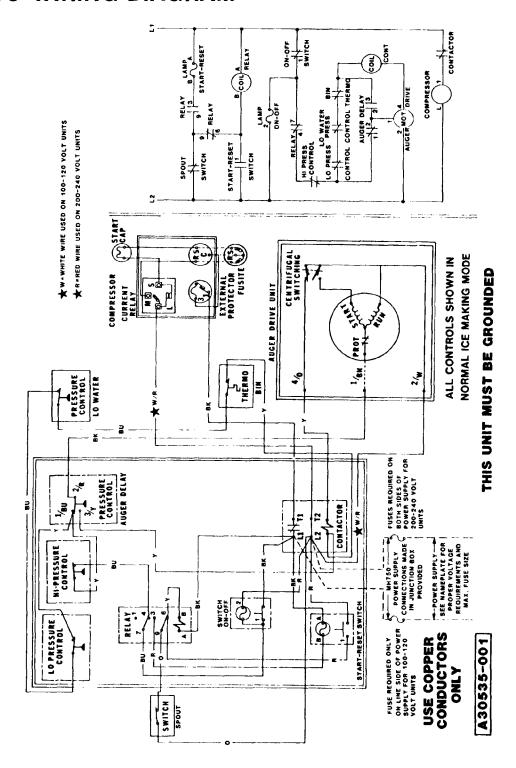

Wiring Diagram, PR760WE-1A (115/60/1) Water-Cooled

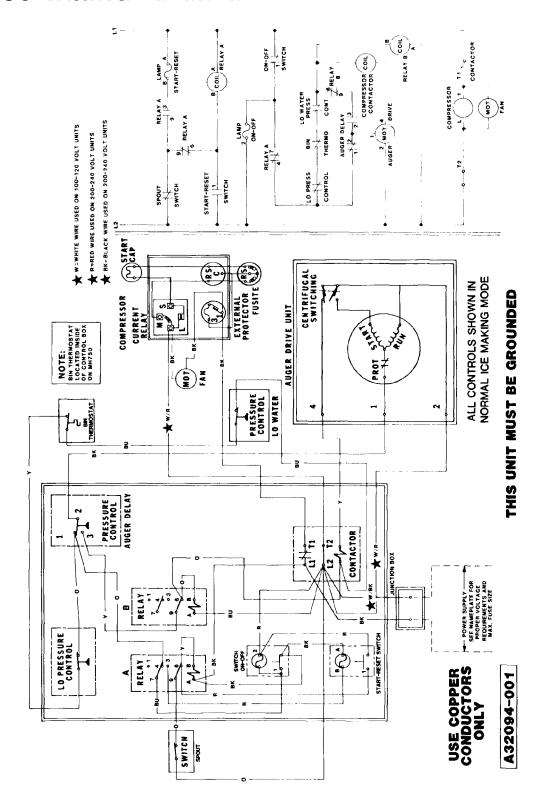

Wiring Diagram, PR760AE-1C (115/60/1) Air-Cooled

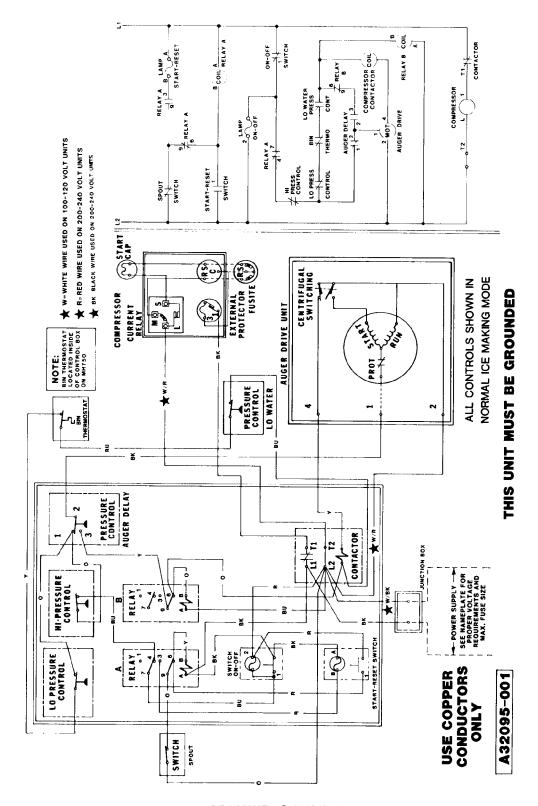

Wiring Diagram, PR760WE-1C (115/60/1) Water-Cooled