

Insulated Holding Cabinet	FL-0520-7	
Rev. 1 (10/08)	Page 1 of 4	

OPERATING and MAINTENANCE INSTRUCTIONS MODEL: H339127LJ & H339127PLJ (PASS THRU) BROILED HOLDING UNIT FOR LONG JOHN SILVER'S

ELECTRICAL SPECIFICATIONS:

MODEL	Volts	Watts	Amps	Hertz	Phase	NEMA
H-339-127-LJ H-339-127-PLJ	120	900	7.5	60	1	5-15

Models are designed for AC service.

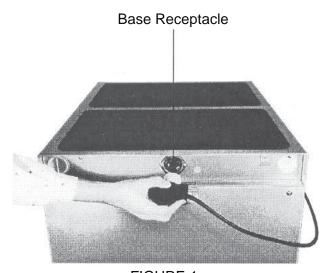


FIGURE 1

Thermostat Switch-Light ON/OFF

FIGURE 2

HOW TO INSTALL UNIT: (Figure 1)

- 1. Plug cord into receptacle in back of unit. (Side of unit for H339127PLJ)
- 2. Turn plug clockwise to lock.
- 3. Plug other end into 15 amp. wall outlet.
- 4. Place cabinet in a well ventilated area.
- 5. Push the switch on, turn the thermostat to No. 10 and run the unit for one hour.

NOTE: *DO NOT PUT IN FOOD!* This step is to burn off manufacturing oils and excessive adhesive.

6. Let the cabinet cool and wipe inside clean with detergent and hot water before use.

HOW TO OPERATE UNIT: (Figure 2)

- 1. Push switch "ON". Yellow light will come on.
- 2. Turn thermostat to the temperature you need.

NOTE: No. 7½ setting will give you about 180° F. Proper food holding temperature is 140° F or higher.

- 3. Preheat cabinet for 45 minutes
- 4. Put food into cabinet.

To Turn Off Unit:

Push switch "OFF". The yellow light will go off.

NOTE: Thermometer in the front door gives the inside cabinet temperature.

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com

Insulated Holding Cabinet	FL-0520-7	
Rev. 1 (10/08)	Page 2 of 4	



OPERATING and MAINTENANCE INSTRUCTIONS MODEL: H339127LJ & H339127PLJ (PASS THRU) BROILED HOLDING UNIT FOR LONG JOHN SILVER'S



BEFORE CLEANING CABINET:

- 1. Unplug power cord from wall.
- 2. Do NOT hose cabinet with water.
- 3. Do NOT get water on controls.
- 4. Do NOT use abrasives or harsh chemicals.

Hints:

- 1. Wipe up spills as soon as possible.
- 2. Clean cabinet regularly to avoid heavy dirt build-up.
- 3. Make a test spot with cleaner.
- 4. Follow manufacturer's directions on cleaner.
- 5. Do not mix cleaners.
- 6. Avoid drips and splashes.

HOW TO CLEAN UNIT:

	SOIL	CLEANER	METHOD
CABINET	ROUTINE CLEANING	Soap, Ammonia, or mild* detergent and water	 Sponge on with cloth. Rinse with water. Wipe dry.
Inside and Outside (Stainless Steel)	STUBBORN SPOTS AND STAINS	Mild abrasive made for stainless steel	Apply with damp sponge or cloth. Rub lightly.
	BURNT-ON FOODS OR GREASE	Chemical oven cleaner for stainless steel	Follow oven cleaner manufacturer's directions.
	HARD WATER SPOTS and SCALE	Vinegar	Swab or wipe with cloth. Rinse and dry.

^{*} Mild detergents include soaps and non-abrasive cleaners

TROUBLE-SHOOTING CHART

FAILURE1. Unit does not heat:

POSSIBLE CAUSE/CHECK
1a. Thermostat turned up.

1b. Switch is "ON".

1c. Cord is plugged into cabinet.1d. Cord is plugged into outlet.1e. Circuit breaker/fuse for

wall outlet.

2. Unit will not turn off: 2a. Thermos

2a. Thermostat turned down.

2b. Switch is "OFF"

If cause is none of the above, refer to our list of authorized service agencies, FL-1400.

Instructions for replacing parts are included in replacement parts kits.

REPLACEMENT PARTS

Cabinet Receptacle	0713-011
Cord Set	0810-031-1
Switch	0808-103
Heater Kit	0811-066-K
Thermostat Kit	0848-008-ACK
Terminal Block	0852-008
Door Latch Kit	1006-142-K1
Strike Kit	1006-142-01-K
Hinge Kit	6507-005
Thermometer Kit	5238-008-K
Gasket Kit	0861-077
Door Kit (w/Thermometer)	H339037-15-K
Door Kit (w/o Thermometer)	H339037-41-K
Rack Insert	H339037-28
Pan Support Frame	H339031-33

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com



Insulated Holding Cabinet	FL-0520-7	
Rev. 1 (10/08)	Page 3 of 4	

OPERATING and MAINTENANCE INSTRUCTIONS MODEL: H339127LJ & H339127PLJ (PASS THRU) BROILED HOLDING UNIT FOR LONG JOHN SILVER'S

HOW TO REVERSE DOOR HARDWARE FOR OPPOSITE HAND

(Refer to Figure 3 [hinge] and Figure 4 [latch]):


- 1. Remove hinge covers with a screwdriver.
- 2. Remove screws from hinges to door (Item 1) and hinge brackets to cabinet (Item 2).
- 3. Remove screws from latch to door (Item 3) and latch bracket to cabinet.


NOTE: Keep hinges and latch strike mounted to the brackets.

- 4. Remove all remaining screws from both sides of door and cabinet in that area. Keep all screws.
- 5. Turn latch strike bracket 180° and mount it to the opposite side of the cabinet with the same screws you removed. Do the same with the hinge brackets.
- 6. Line up (4) latch holes to door holes on the opposite side of the door. Mount latch with same screws that were removed.
- 7. Mount hinges to the opposite side of the door and snap on the hinge covers.
- 8. Plug remaining holes with screws.

HOW TO ADJUST THE DOOR LATCH: (Refer to Figure 4)

- 1. For vertical adjustment (up and down movement):
 - a. Loosen (2) screws located in magnetic strike attached to bracket on cabinet.
 - b. Move strike up or down for alignment to magnet on latch.
 - c. Tighten screws to secure.
- 2. For horizontal adjustment (greater or lesser magnetic draw):
 - a. Loosen (4) screws in door latch.
 - b. Move latch forward or backward to adjust magnetic draw.
 - c. Tighten screws to secure.

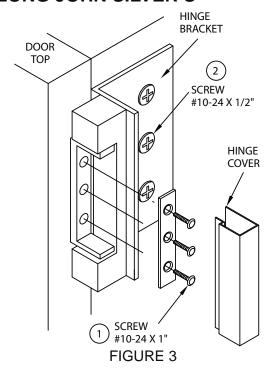

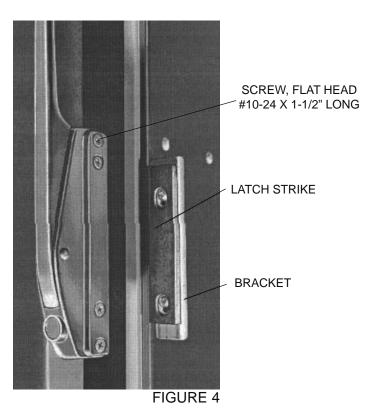


Insulated Holding Cabinet FL-0520-7

Rev. 1 (10/08) Page 4 of 4



OPERATING and MAINTENANCE INSTRUCTIONS MODEL: H339127LJ & H339127PLJ (PASS THRU) BROILED HOLDING UNIT FOR LONG JOHN SILVER'S

WIRING DIAGRAM

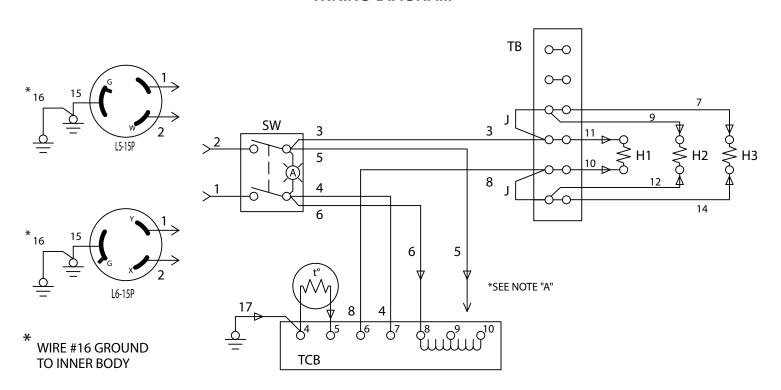

LEGEND

	<u>ITEM</u>	DESCRIPTION	
1.	H1	HEATER - BOTTOM	NOTE "A"
2.	H2 & 3	HEATER - RIGHT AND LEFT SIDE	FOR 120V ATTACH
3.	L5-15P	FLANGED INLET, 120V. 15A.	FOR 120V., ATTACH
4.	L6-15P	FLANGED INLET, 250V. 15A.	WIRE #5 TO TERMINAL #9
5.	S	SENSOR - AIR	FOR 250V., ATTACH
6.	SW	SWITCH - POWER (LIGHTED)	WIRE #5 TO TERMINAL #10
7.	TB	TERMINAL BLOCK	
8.	TCB	TEMPERATURE CONTROL BOARD	
9.	Δ	SLEEVING 4-PLACES	
10.	J	JUMPER #807-107	

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com