




Installation, Operation, Maintenance, & Troubleshooting Model: CLF-15-U Electric Cruise Line Fryer Serial:

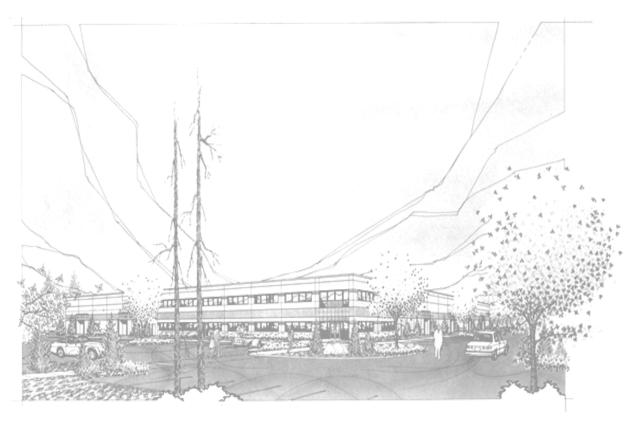

Lang Manufacturing Company

6500 Merrill Creek Parkway Phone: 425-349-2400 Fax: 425-349-2733 WWW.LANGWORLD.COM Everett, WA 98203

© Copyright 2000

THIS MANUAL MUST BE RETAINED FOR FUTURE REFERENCE.
READ, UNDERSTAND AND FOLLOW THE INSTRUCTIONS AND
WARNINGS CONTAINED IN THIS MANUAL.

## **FOR YOUR SAFETY**

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

NOTICE: THIS EQUIPMENT IS APPROVED FOR INSTALLATION ONLY ON VESSELS GREATER THAN 65 FEET IN LENGTH, IN ACCORDANCE WITH USCG REGULATIONS IN TITLE 46 CFR 110-113. ANY WIRING USED IN THE INSTALLATION OF THIS APPLAINCE MUST BE STRANDED COPPER.

# **TABLE OF CONTENTS**

|     | CHAPTER                           | <b>PAGE</b> |
|-----|-----------------------------------|-------------|
| 1.  | TABLE OF CONTENTS                 | 3           |
| 2.  | READ FIRST                        | 4           |
| 3.  | UNPACKING                         | 6           |
| 4.  | INSTALLATION                      | 7           |
| 5.  | INITIAL START-UP                  | 8           |
| 6.  | OPERATION                         | 9           |
| 7.  | CLEANING & MAINTENANCE PROCEDURES | 10          |
| 8.  | TROUBLESHOOTING                   | 12          |
| 9.  | PARTS LISTS                       | 14          |
| 10. | EXPLODED VIEW                     | 16          |
| 11. | WIRING DIAGRAMS                   | 19          |
| 12. | WARRANTY                          | 20          |

# IMPORTANT READ FIRST IMPORTANT

**CAUTION:** THE FRYER WEIGHS 145 LBS. (65.91 KILOGRAMS).

FOR SAFE HANDLING, INSTALLER SHOULD OBTAIN HELP AS NEEDED, OR EMPLOY APPROPRIATE MATERIALS HANDLING EQUIPMENT (SUCH AS A FORKLIFT, DOLLY, OR PALLET JACK) TO REMOVE THE UNIT FROM THE SKID AND MOVE IT TO THE

PLACE OF INSTALLATION.

**CAUTION:** ANY STAND, COUNTER OR OTHER DEVICE ON

WHICH FRYER WILL BE LOCATED MUST BE DESIGNED TO SUPPORT THE WEIGHT OF THE

FRYER (145 LBS.).

**CAUTION:** SHIPPING STRAPS ARE UNDER TENSION AND CAN

SNAP BACK WHEN CUT.

**DANGER:** THIS APPLIANCE MUST BE GROUNDED AT THE

TERMINAL PROVIDED. FAILURE TO GROUND THE APPLIANCE COULD RESULT IN ELECTROCUTION

AND DEATH.

**WARNING:** INSTALLATION OF THE UNIT MUST BE DONE BY

PERSONNEL QUALIFIED TO WORK WITH ELECTRICITY. IMPROPER INSTALLATION CAN CAUSE INJURY TO PERSONNEL AND/OR DAMAGE

TO EQUIPMENT. UNIT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE CODES.

**NOTICE:** The data plate is located behind the front control

panel. The fryer voltage, wattage, serial number, wire size, and clearance specifications are on the data plate. This information should be carefully read and understood before proceeding with the installation.

**NOTICE:** The installation of any components such as a vent

hood, grease extractors, fire extinguisher systems, must conform to their applicable National, State and

locally recognized installation standards.

CAUTION: NEVER ENERGIZE THE HEATING ELEMENTS WITH

NO OIL IN THE KETTLE OR WITH THE OIL LEVEL MORE THAN 3 INCHES FROM THE LOWER FILL

LEVEL.

**CAUTION:** ALWAYS KEEP THE AREA NEAR THE APPLIANCE

FREE FROM COMBUSTIBLE MATERIALS.

CAUTION: KEEP FLOOR IN FRONT OF EQUIPMENT CLEAN

AND DRY. IF SPILLS OCCUR, CLEAN IMMEDIATELY,

TO AVOID THE DANGER OF SLIPS OR FALLS.





















# IMPORTANT READ FIRST IMPORTANT

WARNING: ALWAYS TURN THE FRYER POWER SWITCH OFF BEFORE LIFTING THE HEATING ELEMENTS OUT OF

THE FRYER OIL.

WARNING: BE SURE TO DRAIN THE OIL INTO A SUITABLE

CONTAINER.

**WARNING:** KEEP WATER AND SOLUTIONS OUT OF CONTROLS.

**NEVER SPRAY OR HOSE CONTROL CONSOLE,** 

**ELECTRICAL CONNECTIONS, ETC.** 

**CAUTION:** MOST CLEANERS ARE HARMFUL TO THE SKIN, EYES,

MUCOUS MEMBRANES AND CLOTHING.

PRECAUTIONS SHOULD BE TAKEN TO WEAR RUBBER

GLOVES, GOGGLES OR FACE SHIELD AND PROTECTIVE CLOTHING. CAREFULLY READ THE WARNING AND FOLLOW THE DIRECTIONS ON THE

LABEL OF THE CLEANER TO BE USED.

NOTICE: Service on this, or any other, LANG appliance must be

performed by qualified personnel only. Consult your authorized service station directory or call the factory at 1-800-224-LANG (5264), or WWW.LANGWORLD.COM for

the service station nearest you.

WARNING: BOTH HIGH AND LOW VOLTAGES ARE PRESENT

INSIDE THIS APPLIANCE WHEN THE UNIT IS

PLUGGED/WIRED INTO A LIVE RECEPTACLE. BEFORE REPLACING ANY PARTS, DISCONNECT THE UNIT

FROM THE ELECTRIC POWER SUPPLY.

CAUTION: USE OF ANY REPLACEMENT PARTS OTHER THAN

THOSE SUPPLIED BY LANG OR THEIR AUTHORIZED DISTRIBUTORS CAN CAUSE BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT AND

WILL VOID ALL WARRANTIES.













#### 3.1 Receiving the Fryer

Upon receipt, check for freight damage, both visible and concealed. Visible damage should be noted on the freight bill at the time of delivery and signed by the carrier's agent. Concealed loss or damage means loss or damage, which does not become apparent until the merchandise has been unpacked. If concealed loss or damage is discovered upon unpacking, make a written request for inspection by the carrier's agent within 15 days of delivery. All packing material should be kept for inspection. Do not return damaged merchandise to Lang Manufacturing Company. File your claim with the carrier.

#### 3.2 Location

Prior to un-crating, move the fryer as near its intended location as practical. The crating will help protect the unit from the physical damage normally associated with moving it through hallways and doorways.

#### 3.3 Un-crating

The fryer will arrive completely assembled inside a wood frame covered by cardboard box and strapped to a skid. Remove the cardboard cover, cut the straps and remove the wood frame.

CAUTION: FRYER WEIGHS 145 LBS (65.91 kilograms). FOR SAFE

HANDLING, INSTALLER SHOULD OBTAIN HELP AS NEEDED, OR EMPLOY APPROPRIATE MATERIALS HANDLING EQUIPMENT (SUCH AS A FORKLIFT, DOLLY, OR PALLET JACK) TO REMOVE THE UNIT FROM THE SKID AND MOVE IT TO THE PLACE OF

INSTALLATION.

**CAUTION:** ANY STAND, COUNTER OR OTHER DEVICE ON WHICH

FRYER WILL BE LOCATED MUST BE DESIGNED TO SUPPORT THE WEIGHT OF THE FRYER (145 LBS.).

CAUTION: SHIPPING STRAPS ARE UNDER TENSION AND CAN

**SNAP BACK WHEN CUT.** 

Remove fryer from skid and place in intended location.







#### INSTALLATION

DANGER: THIS APPLIANCE MUST BE GROUNDED AT THE

TERMINAL PROVIDED. FAILURE TO GROUND THE APPLIANCE COULD RESULT IN ELECTROCUTION AND

DEATH.

WARNING: INSTALLATION OF THE UNIT MUST BE DONE BY

PERSONNEL QUALIFIED TO WORK WITH ELECTRICITY. IMPROPER INSTALLATION CAN CAUSE INJURY TO PERSONNEL AND/OR DAMAGE TO EQUIPMENT. UNIT MUST BE INSTALLED IN ACCORDANCE WITH ALL

APPLICABLE CODES.

**NOTICE:** The data plate is located behind the front control panel.

The fryer voltage, wattage, serial number, wire size, and clearance specifications are on the data plate. This information should be carefully read and understood

before proceeding with the installation.

NOTICE: The installation of any components such as a vent hood,

grease extractors, fire extinguisher systems, must conform to their applicable National, State and locally

recognized installation standards.

#### 4.1 Electrical Connection

Electrical service may be made through a standard 1¼-inch conduit. A hole should be cut out in one of two locations, the first is behind the unit on the right side (if looking from the back). It should be made 3" from the side and 3" from the bottom. The second location is on the bottom back right corner (if looking form the back). It should be made 2" from the side, and 3" from the back. Check the National Electrical Code for fuse for circuit breaker requirements.

#### 4.2 Fryer Voltage

The Lang Model CLF-15-U can be operated on 480 Volts.









# **INITIAL START UP**

#### **5.1 PRE-POWER ON**

#### **Boil Out Fryer**

Ensure the elements are lowered into the fry pot. Fill the fry pot with a mixture of Vinegar and water (1:10 mix). Fill until the Vinegar and water level is maintained between the lower and upper fill marks. Heat to 200°F and let stand for 30 minutes. After 30 minutes drain water and vinegar mix (see operation section for instructions). Be sure to wipe out and dry fry pot to remove any water spots.

#### Fill levels

There are two fill marks on the sides of the fryer kettle. The lower level indicates the fill mark with the elements out, the upper level indicates the fill mark when the elements are lowered. Fill and maintain the oil level between the upper and lower levels.

#### **OPERATION**

**CAUTION:** NEVER ENERGIZE THE HEATING ELEMENTS WITH

NO OIL IN THE KETTLE OR WITH THE OIL LEVEL MORE THAN 3 INCHES FROM THE LOWER FILL

LEVEL.

**CAUTION:** ALWAYS KEEP THE AREA NEAR THE APPLIANCE

FREE FROM COMBUSTIBLE MATERIALS.

**CAUTION:** KEEP FLOOR IN FRONT OF EQUIPMENT CLEAN AND

DRY. IF SPILLS OCCUR, CLEAN IMMEDIATELY, TO

AVOID THE DANGER OF SLIPS OR FALLS.



The power switch, located on the control box at the front of the fryer, energizes the control circuits. When this switch is on, the "power" pilot lamp will be illuminated.

Turn the temperature selector dial to the desired temperature setting. This control is located next to the power switch. The "heat" pilot lamp will illuminate indicating power is applied to the heating elements.

The lamp marked "overtemp" will illuminate if the oil reaches an over-temperature condition. The over-temperature thermostat shuts off the fryer before the oil reaches a dangerously high temperature.

#### **6.2 Heating Elements**

The elements may be raised and locked in the up position. The latch is located on the rear top surface of the fryer and may be activated by lifting the handle at either side of the fryer.

#### 6.3 Draining the Fryer Oil

WARNING: ALWAYS TURN THE FRYER POWER SWITCH OFF

BEFORE LIFTING THE HEATING ELEMENTS OUT OF

THE FRYER OIL.

WARNING: BE SURE TO DRAIN THE OIL INTO A SUITABLE

CONTAINER.

A drain valve is provided inside the lower cabinet door.

To drain the cooking oil remove the steel cap from the drain pipe located at the bottom, lower, front left corner of the fryer. Connect a drain pipe extension to the drainpipe. Pull the lever located in the front bottom left corner of the fryer.











# **MAINTENANCE & CLEANING**

#### 7.1 Daily Cleaning

WARNING: KEEP WATER AND SOLUTIONS OUT OF CONTROLS.

NEVER SPRAY OR HOSE CONTROL CONSOLE,

**ELECTRICAL CONNECTIONS, ETC.** 

**CAUTION:** MOST CLEANERS ARE HARMFUL TO THE SKIN,

EYES, MUCOUS MEMBRANES AND CLOTHING.
PRECAUTIONS SHOULD BE TAKEN TO WEAR
RUBBER GLOVES, GOGGLES OR FACE SHIELD AND

PROTECTIVE CLOTHING. CAREFULLY READ THE WARNING AND FOLLOW THE DIRECTIONS ON THE

LABEL OF THE CLEANER TO BE USED.

It is recommended the fryer oil be kept as clean as possible by straining regularly (several times a day) and filtering daily. This will lengthen the life of your oil and improve the performance of the fryer.

#### 7.2 Daily Severe Duty Cleaning

- 1. Turn power switch off.
- 2. Remove the baskets, let baskets drain and then set aside.
- 3. Raise heating elements out of oil and lock in up position.
- 4. Remove cap from oil drainpipe on bottom of fryer.
- 5. Place a suitable container under drainpipe.
- 6. Pull drain valve lever forward to open drain valve.
- 7. Remove loose food particles from heating units with spatula and wire brush.
- 8. Flush out scrapings and sediment with a small quantity of hot oil, and allow to drain thoroughly.
- 9. Close drain valve and fill with a commercial fryer cleaning agent or soapy solution of non-corrosive grease dissolving cleaner.
- 10. Lower heating elements and set selector switch to 250°F (be sure to read and follow cleaner manufactures instructions) and boil solution for 15 to 20 minutes.
- 11. Turn power switch off.
- 12. Raise heating elements and lock in up position, then drain solution from well. Refill with water and add 1/2 cup of white vinegar to neutralize alkaline left by soap. Lower heating elements and bring solution to a boil and let stand for a few minutes.
- 13. Turn power switch off.
- 14. Raise heating elements and lock in up position and drain well and rinse with clear, hot water. Dry well and heating units thoroughly, and close drain valve.
- 15. Refill fryer with oil, and lower heating elements slowly.
- 16. Operate fryer as normal.

#### 7.3 Over-Temperature Protection

The over-temperature thermostat located next to the left heating element provides protection in case of malfunction of the main temperature control. It will open both the "control contactor" and the "safety contactor" removing all power from the heating elements.





# **MAINTENANCE & CLEANING CONT'D**

#### 7.4 Thermostat Bulb Check

The two thermostat bulbs, (temperature control thermostat bulb and over-temp thermostat bulb), are all connected to the fryer heating elements. The brackets that hold these bulbs in place should be checked on a regular basis for tightness. If any of the brackets/bulbs become loose, the brackets that hold the bulbs should be tightened right away.

#### 7.5 Component Access

All maintenance may be done from the front. Opening the front by removing 4 bolts gains access to all circuitry, with the exception of the thermostat, which is located on the top where the thermostat knob is located. To gain access to the safety thermostat, the thermostat, and element terminals remove the 4 screws from the front of the access cover located above and to the rear of the oil well.

# **TROUBLESHOOTING**

# 9.1 Symptoms

What follows is a chart of Symptoms and Possible Causes to aid in diagnosing faults with the oven.

Refer to the Symptoms column to locate the type of failure then to the Possible Cause for the items to be checked.

To test for a possible cause, refer to the TEST section and locate the Possible Cause then refer to test to identify test procedures.

| SYMPTOM                        | POSSIBLE CAUSE                                                                                                                                                                                   |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power indicator is not lit.    | <ul> <li>No power to cord outlet</li> <li>Fryer unplugged from outlet</li> <li>Failed power cord or plug</li> <li>Failed power switch</li> <li>Failed pilot light</li> </ul>                     |
| Fryer will not heat            | <ul> <li>Failed element</li> <li>Power switch is not ON</li> <li>Failed contactor</li> <li>Failed thermostat</li> <li>Failed transformer</li> <li>Tripped over temperature thermostat</li> </ul> |
| Product burning                | <ul><li>Product is cooked too long</li><li>Failed thermostat</li><li>Failed contactor</li></ul>                                                                                                  |
| Product under done             | <ul><li>Failed temperature sensor</li><li>Failed circuit board</li><li>Failed temperature selector</li></ul>                                                                                     |
| Heat indicator is not lit      | <ul><li>Failed heat light</li><li>Failed thermostat</li><li>Failed contactor</li></ul>                                                                                                           |
| Overtemp. indicator is not lit | <ul><li>Failed indicator light</li><li>Normal</li></ul>                                                                                                                                          |
| Overtemp. indicator is lit     | <ul> <li>Overtemp. thermostat tripped</li> <li>Failed indicator light</li> <li>Failed overtemp. thermostat</li> </ul>                                                                            |

## TROUBLESHOOTING CONT'D

#### **9.2 TESTS**

NOTICE: Service on this, or any other, LANG appliance must be

performed by qualified personnel only. Consult your authorized service station directory or call the factory at 1-800-224-LANG (5264), or WWW.LANGWORLD.COM

for the service station nearest you.

WARNING: BOTH HIGH AND LOW VOLTAGES ARE PRESENT

INSIDE THIS APPLIANCE WHEN THE UNIT IS PLUGGED/WIRED INTO A LIVE RECEPTACLE.

BEFORE REPLACING ANY PARTS, DISCONNECT THE

UNIT FROM THE ELECTRIC POWER SUPPLY.

If an item on the list is followed by an asterisk (\*), the work should be done by a factory authorized service representative.

| Possible Cause                           | TEST                                                                                                         |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Product is cooked too long               | No test available, operational condition                                                                     |
| Failed thermostat                        | Check poles on thermostat for continuity                                                                     |
| Failed element                           | Remove the wires and check for continuity across the element                                                 |
| Failed heat contactor                    | Remove the wires from the contactor coil and<br>check for continuity across the contactor coil<br>connection |
|                                          | <ul> <li>Ensure the contactor moveable points move<br/>freely up and down</li> </ul>                         |
|                                          | • Check for 24 volts at the contactor coil when the computer is running*                                     |
| Failed or disconnected safety thermostat | Check across the thermostat connectors for continuity                                                        |

**CAUTION:** USE OF ANY REPLACEMENT PARTS OTHER THAN

THOSE SUPPLIED BY LANG OR THEIR AUTHORIZED DISTRIBUTORS CAN CAUSE BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT AND

WILL VOID ALL WARRANTIES.







# **PARTS LIST**


# **CLF-15-S**


| Item # | Description                             | Part<br>Number | Qty |
|--------|-----------------------------------------|----------------|-----|
| 1      | Body and Bucket Assembly                | C28-001-CL     | 1   |
| 2      | Front                                   | C28-503-CL     | 1   |
| 3      | Drain Cap                               | C28-505-CL     | 1   |
| 4      | Fryer Drain Cover                       | C28-108-1-CL   | 1   |
| 5      | Threaded Pipe                           | 70302-25       | 1   |
| 6      | 90° Elbow                               | 70304-06       | 1   |
| 7      | Ball Valve                              | 70400-01       | 1   |
| 8      | Drain Valve Bracket Assembly            | C28-545-CL     | 1   |
| 9      | Drain Valve Rod                         | C28-547-CL     | 1   |
| 10     | Shoulder Screw, 5/16 X 1/2,1/4-20 SKT   | 20106-01       | 1   |
| 11     | Lift Handle                             | C28-163        | 1   |
| 12     | Smother Cover                           | C28-205-CL     | 1   |
| 13     | Head Pivot Support                      | C28-136-CL     | 1   |
| 14     | Stanchion Trimlock                      | C28-540-CL     | 2   |
| 15     | Head Pivot                              | C28-137-CL     | 1   |
| 16     | 3/32 X 1-1/2 Stainless Steel Cotter Pin | 71801-03       | 2   |
| 17     | 3 Feet of Black Rubber-Lock             | 71100-03       | 1   |
| 18     | Wire Cover                              | C28-508-2-CL   | 1   |
| 19     | Body Back                               | C28-506-CL     | 1   |
| 20     | Large 2 Pole Terminal Block, 175 Amp    | 30500-11       | 2   |
| 21     | 2 Position Rotary Switch                | 30304-30       | 1   |
| 22     | Contact Block                           | 30304-31       | 1   |
| 23     | 3 Pole Contactor, 35A, 208/240 V        | 30700-05       | 2   |
| 24     | 15 Amp Fuse (ABC-15)                    | 30900-01       | 2   |
| 25     | 15 Amp Fuse Holder                      | 30901-02       | 2   |
| 26     | Transformer, 480/240 VAC, 100 VA        | 31400-04       | 1   |
| 27     | Two Pole Circuit Breaker, 2/10 Amp      | 31800-07       | 1   |
| 28     | Thermostat, Fixed Temp.                 | 30401-13       | 1   |
| 29     | Pilot Light, 250 V                      | 31601-01       | 3   |
| 30     | Thermostat, Adjustable                  | 30402-12       | 1   |
| 1      | <u> </u>                                |                |     |


# PARTS LIST CONT'D

## **CLF-15-S**


| 31 | Knob Assembly                         | 70701-06     | 1 |
|----|---------------------------------------|--------------|---|
| 32 | Harness                               | C28-560-CL   | 1 |
| 33 | Wireway Top Trimlock                  | C28-542-CL   | 4 |
| 34 | Wireway Side Trimlock                 | C28-537-CL   | 4 |
| 35 | Electrical Mount                      | C28-527-CL   | 1 |
| 36 | Lower Element Clip                    | C28-164-CL   | 7 |
| 37 | Upper Element Clip                    | C28-165-CL   | 4 |
| 38 | Bulb Spacer                           | C28-166-CL   | 2 |
| 39 | Large Bulb Clip                       | C28-167-CL   | 4 |
| 40 | Small Bulb Clip                       | C28-168-CL   | 2 |
| 41 | Limitstat Bulb Spacer                 | C28-168-1-CL | 2 |
| 42 | Element Washer                        | C28-160-CL   | 6 |
| 43 | Over Temperature Thermostat Insulator | C28-131-2    | 1 |
| 44 | Over Temperature Thermostat Spacer    | C28-131-1-CL | 1 |
| 45 | Element Clamp                         | C28-161      | 1 |
| 46 | Element, 480 V, 4 KW                  | 11110-39     | 3 |
| 47 | 5/8-18 Stainless Steel Jam Nut        | 20303-14     | 6 |
| 48 | Basket Hanger Assembly                | C28-531-CL   | 1 |
| 49 | Head Wrap                             | C28-130-2-CL | 1 |
| 50 | Fryer Basket                          | 50600-09     | 2 |

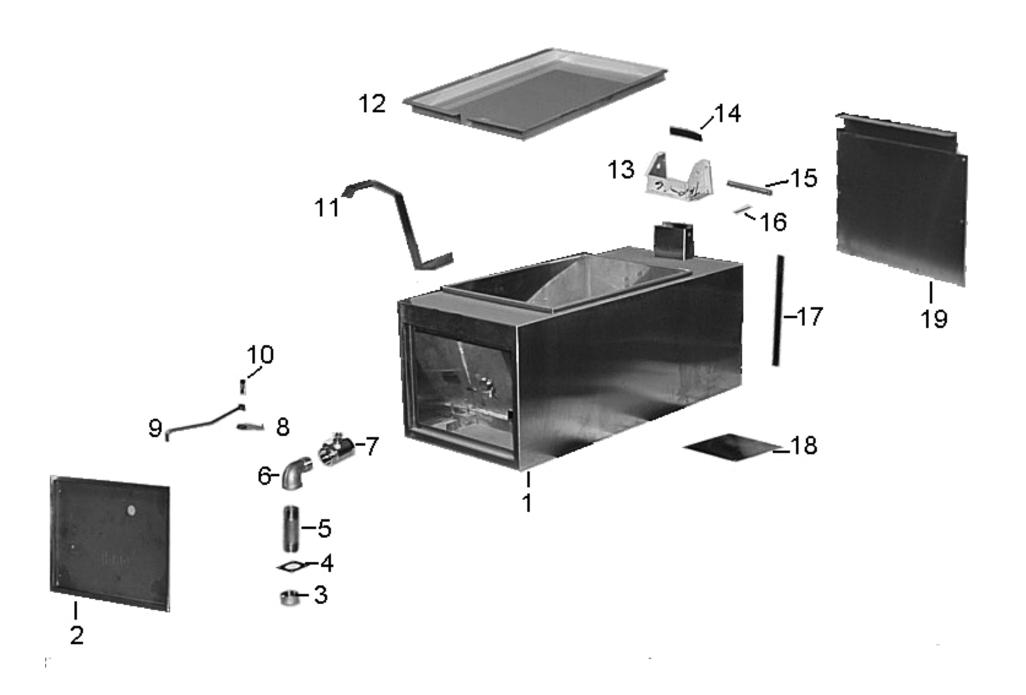

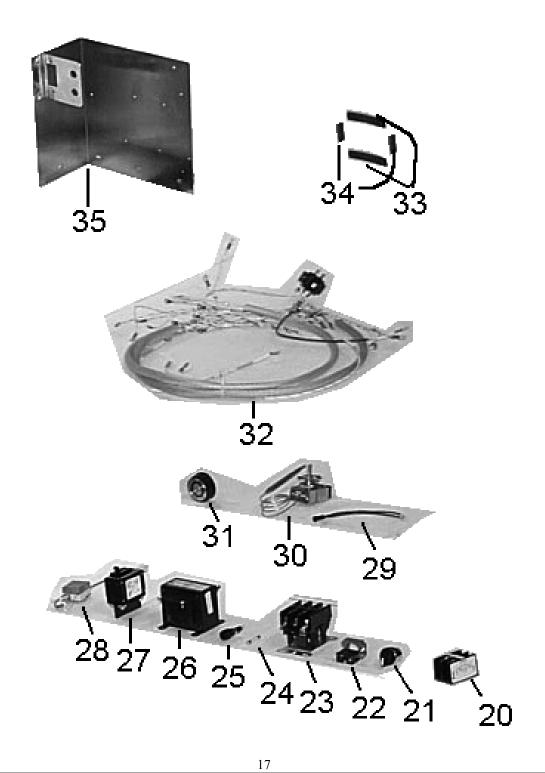

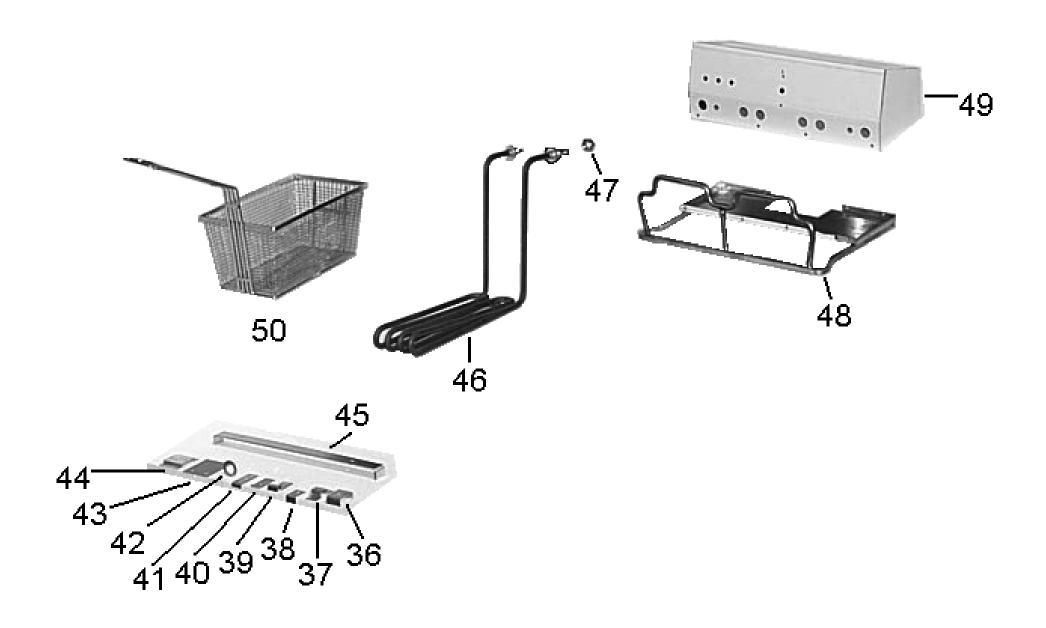

# **WIRING DIAGRAM**

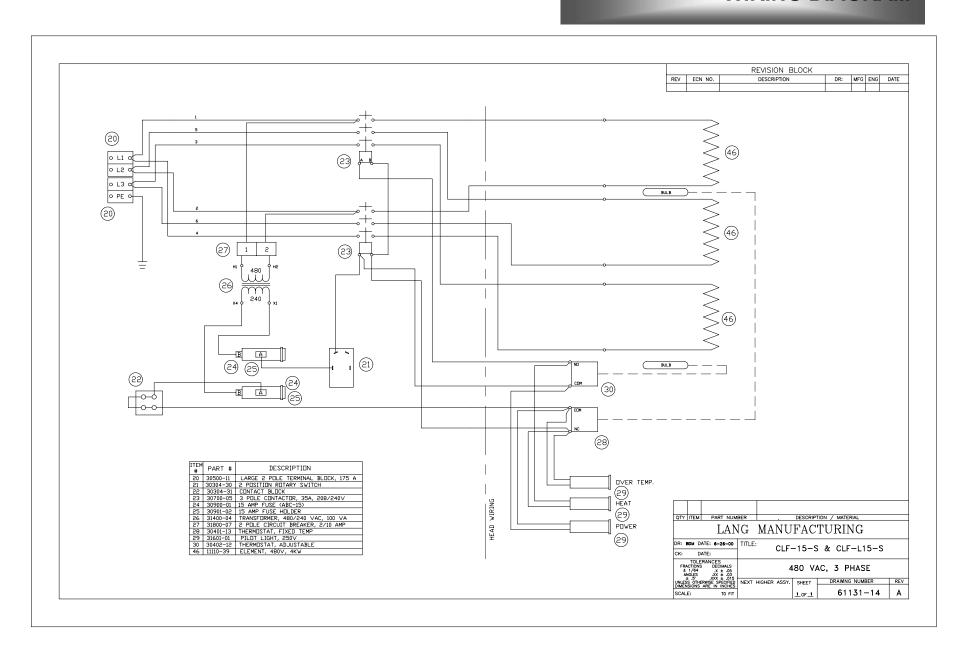

# Lang Manufacturing Limited Warranty to Cruise Line Purchasers

Lang Manufacturing Equipment ("Lang Equipment") has been skillfully manufactured, carefully inspected and packaged to meet rigid standards of excellence. Lang warrants its Equipment to be free from defects in material and material-related workmanship for (13) thirteen consecutive months from the date of initial shipboard installation or (18) eighteen consecutive months from date of initial factory shipment, which ever comes first. The aforementioned warranty statement is subject to the following conditions and limitations.

I. This warranty is limited to the provision of replacement components for Product sold by Lang to a joiner company for installation aboard a cruise ship, or a cruise ship company for installation aboard its own ship. The provision of replacement components to affect Product repairs will be on a nocharge basis during the term of the warranty. Replacement components will be sent to the address required within 48 hours of Lang receiving written notification of the description of the defect and the model and serial number of the Product affected by the repair.

Quartz elements are warranted for ninety (90) days from the date of installation.

**II.** Damage during shipment is to be reported to the carrier, is not covered under this warranty, and is the sole responsibility of purchaser/user.

- **III.** Replacement components will be shipped F.O.B. factory with freight prepaid. Replacement component damage related to shipment is not covered under this warranty.
- **IV.** This warranty does not cover consumable parts such as quartz elements, and does not cover defects caused by improper installation, abuse, careless operation, or improper maintenance of Product.
- V. All warranties are conditioned upon Lang's receipt of written notice of any defect prior to the end of the applicable warranty period.
- VI. THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY EXPRESSLY DISCLAIMED. THE REMEDIES DESCRIBED ABOVE ARE EXCLUSIVE AND IN NO EVENT SHALL LANG BE LIABLE FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OR DELAY IN PERFORMANCE OF THIS WARRANTY.
- VII. Lang Equipment is for cruise line use only. If sold as a component of another (OEM) manufacturer's equipment, or if used as a consumer product, such Equipment is sold AS IS and without any warranty.