
NO. U2AC-194

ISSUED: AUG. 31, 1995

REVISED: JAN. 26, 1996



**HOSHIZAKI
MODULAR FLAKER**

MODEL F-1000M

SERVICE MANUAL

FOREWORD

IMPORTANT

Only qualified service technicians should attempt to service or maintain this icemaker. No such service or maintenance should be undertaken until the technician has thoroughly read this Service Manual.

HOSHIZAKI provides this manual primarily to assist qualified service technicians in the service and maintenance of the icemaker.

Should the reader have any questions or concerns which have not been satisfactorily addressed, please call or write to the HOSHIZAKI Care Department for assistance.

HOSHIZAKI AMERICA, INC.
618 Highway 74 South
Peachtree City, GA 30269

Attn: HOSHIZAKI Care Department

Phone: 1-800-233-1940 Technical Service
(770) 487-2331
Fax: (770) 487-3360

NOTE: To expedite assistance, all correspondence/communication **MUST** include the following information:

- Model Number
- Serial Number
- Complete and detailed explanation of the problem

- Please review this manual. It should be read carefully before the icemaker is serviced or maintenance operations performed. Only qualified service technicians should service and maintain the icemaker. This manual should be made available to the technician prior to service or maintenance.
- The Flaker and Cubelet (-C) models of the F-1000 are (for the purposes of troubleshooting) electrically identical. Mechanically they differ only in the Extruding Head and Cutter at the top of the Evaporator.

CONTENTS

	PAGE
I. SPECIFICATIONS	1
1. ICEMAKER	1
F-1000MAB	1
F-1000MWB	2
F-1000MRB	3
F-1000MAE	4
F-1000MWE	5
F-1000MRE	6
F-1000MAE-C	7
F-1000MWE-C	8
F-1000MRE-C	9
2. CONDENSER UNIT	10
URC-6B, URC-6E	10
II. GENERAL INFORMATION	12
1. CONSTRUCTION	12
F-1000MAB, F-1000MAE(-C)	12
F-1000MWB, F-1000MWE(-C)	13
F-1000MRB, F-1000MRE(-C)	14
2. CONTROL BOX LAYOUT	15
III. TECHNICAL INFORMATION	16
1. WATER CIRCUIT AND REFRIGERANT CIRCUIT	16
F-1000MAB, F-1000MAE(-C)	16
F-1000MWB, F-1000MWE(-C)	17
F-1000MRB, F-1000MRE(-C)	18
2. WIRING DIAGRAM	19
F-1000MAB, F-1000MWB	19
F-1000MRB	20
F-1000MAE(-C)	21
F-1000MWE(-C), F-1000MRE(-C)	22
3. SEQUENCE OF ELECTRICAL CIRCUIT	23
4. TIMING CHART	31
5. PERFORMANCE DATA	34
F-1000MAB	34
F-1000MWB	35

F-1000MRB	36
F-1000MAE	37
F-1000MWE	38
F-1000MRE	39
F-1000MAE-C	40
F-1000MWE-C	41
F-1000MRE-C	42
IV. ADJUSTMENT OF COMPONENTS	43
1. ADJUSTMENT OF WATER REGULATING VALVE	
- WATER-COOLED MODEL ONLY	43
2. ADJUSTMENT OF EXPANSION VALVE - F-1000M#B SERIES ONLY	44
3. ADJUSTMENT OF FLAKE SIZE	45
V. SERVICE DIAGNOSIS	46
1. NO ICE PRODUCTION	46
2. LOW ICE PRODUCTION	48
3. OTHERS	49
VI. REMOVAL AND REPLACEMENT OF COMPONENTS	50
1. SERVICE FOR REFRIGERANT LINES	50
[a] REFRIGERANT RECOVERY	50
[b] EVACUATION AND RECHARGE	50
2. BRAZING	51
3. REMOVAL AND REPLACEMENT OF COMPRESSOR	51
4. REMOVAL AND REPLACEMENT OF DRIER	53
5. REMOVAL AND REPLACEMENT OF EXPANSION VALVE	54
6. REMOVAL AND REPLACEMENT OF WATER REGULATING VALVE	
- WATER-COOLED MODEL ONLY	55
7. REMOVAL AND REPLACEMENT OF CONDENSING PRESSURE	
REGULATOR (C.P.R.) - REMOTE AIR-COOLED MODEL ONLY	56
8. REMOVAL AND REPLACEMENT OF EVAPORATOR ASSEMBLY	57
9. REMOVAL AND REPLACEMENT OF FAN MOTOR	61
10. REMOVAL AND REPLACEMENT OF CONTROL WATER VALVE	61
11. REMOVAL AND REPLACEMENT OF FLUSH WATER VALVE	62
VII. MAINTENANCE AND CLEANING INSTRUCTIONS	63
1. PREPARING THE ICEMAKER FOR LONG STORAGE	63
2. CLEANING INSTRUCTIONS	65
3. MAINTENANCE	69

I. SPECIFICATIONS

1. ICEMAKER

F-1000MAB

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.5 RLA	34 LRA																							
GEAR MOTOR	120 V	0.9 RLA	1/8 HP																							
FAN MOTOR	120 V	1 FLA	30 W																							
OTHER	120 V	0.03 A																								
MINIMUM CIRCUIT AMPACITY	15 A																									
MAXIMUM FUSE SIZE	15 A																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>*1020(463)</td> <td>920(417)</td> <td>840(381)</td> </tr> <tr> <td>80</td> <td>950(431)</td> <td>865(392)</td> <td>790(358)</td> </tr> <tr> <td>90</td> <td>880(399)</td> <td>* 800(363)</td> <td>740(336)</td> </tr> <tr> <td>100</td> <td>810(367)</td> <td>730(331)</td> <td>680(308)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	*1020(463)	920(417)	840(381)	80	950(431)	865(392)	790(358)	90	880(399)	* 800(363)	740(336)	100	810(367)	730(331)	680(308)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	*1020(463)	920(417)	840(381)																							
80	950(431)	865(392)	790(358)																							
90	880(399)	* 800(363)	740(336)																							
100	810(367)	730(331)	680(308)																							
lbs./day (kg/day)																										
Reference without *marks																										
SHAPE OF ICE	Flake																									
ICE QUALITY	Approx. 70 % Ice (90° F/ 70° F Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F	70° F/ 50° F																								
ELECTRIC W (kWH/100 lbs.)	1250 (3.8)	1200 (2.8)																								
POTABLE WATER	96 (12.0)	122 (12.0)																								
gal./24HR (gal./100 lbs.)																										
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel (Rear)																									
WEIGHT	Net 177 lbs. (80 kg) , Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	N/A																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860 W, Model REK3-0125-PFV																									
CONDENSER	Air-cooled, Fin and Tube type																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	R502 , 1 lb. 14 oz. (850 g)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATING CONDITIONS	<table border="1"> <tbody> <tr> <td>VOLTAGE RANGE</td> <td colspan="2">187 - 253 V</td> </tr> <tr> <td>AMBIENT TEMP.</td> <td colspan="2">45 - 100° F</td> </tr> <tr> <td>WATER SUPPLY TEMP.</td> <td colspan="2">45 - 90° F</td> </tr> <tr> <td>WATER SUPPLY PRESS.</td> <td colspan="2">10 - 113 PSIG</td> </tr> </tbody> </table>			VOLTAGE RANGE	187 - 253 V		AMBIENT TEMP.	45 - 100° F		WATER SUPPLY TEMP.	45 - 90° F		WATER SUPPLY PRESS.	10 - 113 PSIG												
VOLTAGE RANGE	187 - 253 V																									
AMBIENT TEMP.	45 - 100° F																									
WATER SUPPLY TEMP.	45 - 90° F																									
WATER SUPPLY PRESS.	10 - 113 PSIG																									

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MWB

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.3 RLA	34 LRA																							
GEAR MOTOR	120 V	0.9 RLA	1/8HP																							
OTHER	120 V	0.03A																								
MINIMUM CIRCUIT AMPACITY	15 A																									
MAXIMUM FUSE SIZE	15 A																									
APPROXIMATE ICE PRODUCTION PER 24 HR. lbs./day (kg/day) Reference without *marks	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>*1010(458)</td> <td>890(404)</td> <td>750(340)</td> </tr> <tr> <td>80</td> <td>1005(456)</td> <td>880(399)</td> <td>745(338)</td> </tr> <tr> <td>90</td> <td>995(451)</td> <td>* 865(392)</td> <td>740(336)</td> </tr> <tr> <td>100</td> <td>980(460)</td> <td>845(383)</td> <td>730(331)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	*1010(458)	890(404)	750(340)	80	1005(456)	880(399)	745(338)	90	995(451)	* 865(392)	740(336)	100	980(460)	845(383)	730(331)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	*1010(458)	890(404)	750(340)																							
80	1005(456)	880(399)	745(338)																							
90	995(451)	* 865(392)	740(336)																							
100	980(460)	845(383)	730(331)																							
SHAPE OF ICE	Flake																									
ICE QUALITY	Approx. 70 % Ice (90° F/ 70° F, Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F, 70° F/ 50° F																									
ELECTRIC W (kWH/100 lbs.)	1060 (2.9)	1060 (2.5)																								
POTABLE WATER	104 (12.0)	121 (12.0)																								
WATER-COOLED CONDENSER gal./24HR (gal./100 lbs.)	811 (94)	524 (52)																								
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel(Rear)																									
WEIGHT	Net 177 lbs. (80 kg), Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT	Cond. Inlet 1/2" FPT																								
- DRAIN	Outlet 3/4" FPT	Cond. Outlet 1/2" FPT																								
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	Automatic Water Regulator																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Water-cooled, Tube in Tube type																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	R502, 1 lb. (450 g)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATING CONDITIONS	<table> <tr> <td>VOLTAGE RANGE</td> <td>187 - 253 V</td> </tr> <tr> <td>AMBIENT TEMP.</td> <td>45 - 100° F</td> </tr> <tr> <td>WATER SUPPLY TEMP.</td> <td>45 - 90° F</td> </tr> <tr> <td>WATER SUPPLY PRESS.</td> <td>10 - 113 PSIG</td> </tr> </table>			VOLTAGE RANGE	187 - 253 V	AMBIENT TEMP.	45 - 100° F	WATER SUPPLY TEMP.	45 - 90° F	WATER SUPPLY PRESS.	10 - 113 PSIG															
VOLTAGE RANGE	187 - 253 V																									
AMBIENT TEMP.	45 - 100° F																									
WATER SUPPLY TEMP.	45 - 90° F																									
WATER SUPPLY PRESS.	10 - 113 PSIG																									

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MRB

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.5 RLA	34 RLA																							
GEAR MOTOR	120 V	0.9 RLA	1/8HP																							
FAN MOTOR	120 V	0.5 FLA	8 W																							
FAN MOTOR REMOTE	120 V	3A MAX																								
OTHER	120 V	0.03A																								
MINIMUM CIRCUIT AMPACITY	15 A																									
MAXIMUM FUSE SIZE	15 A																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>*1020(463)</td> <td>920(417)</td> <td>840(381)</td> </tr> <tr> <td>80</td> <td>950(431)</td> <td>865(392)</td> <td>790(358)</td> </tr> <tr> <td>90</td> <td>880(399)</td> <td>* 800(363)</td> <td>740(336)</td> </tr> <tr> <td>100</td> <td>810(367)</td> <td>730(331)</td> <td>680(308)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	*1020(463)	920(417)	840(381)	80	950(431)	865(392)	790(358)	90	880(399)	* 800(363)	740(336)	100	810(367)	730(331)	680(308)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	*1020(463)	920(417)	840(381)																							
80	950(431)	865(392)	790(358)																							
90	880(399)	* 800(363)	740(336)																							
100	810(367)	730(331)	680(308)																							
lbs./day (kg/day)	Reference without *marks																									
SHAPE OF ICE	Flake																									
ICE QUALITY	Approx. 70% Ice (90° F/ 70° F, Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F, 70° F/ 50° F																									
ELECTRIC W (kWH/100 lbs.)	1300 (3.9)	1250 (2.9)																								
POTABLE WATER	96 (12.0)	122(12.0)																								
gal./24HR (gal./100 lbs.)																										
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel (Rear)																									
WEIGHT	Net 177 lbs. (80 kg), Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT																									
- REFRIGERATION	Discharge Line 1-1/16-12 UNF Fitting (#10 AEROQUIP)																									
CIRCUIT	Liquid Line 5/8-18 UNF Fitting (#6 AEROQUIP)																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	N/A																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Air-cooled Remote Condenser Unit URC-6B Recommended																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	Condensing Pressure regulator on URC-6B																									
DESIGN PRESSURE	R502, 5 lbs. 5 oz. (2400 g)																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATING CONDITIONS	<table border="1"> <tbody> <tr> <td>VOLTAGE RANGE</td> <td colspan="2">187 - 253 V</td> </tr> <tr> <td>AMBIENT TEMP.</td> <td colspan="2">45 - 100° F</td> </tr> <tr> <td>WATER SUPPLY TEMP.</td> <td colspan="2">45 - 90° F</td> </tr> <tr> <td>WATER SUPPLY PRESS.</td> <td colspan="2">10 - 113 PSIG</td> </tr> </tbody> </table>			VOLTAGE RANGE	187 - 253 V		AMBIENT TEMP.	45 - 100° F		WATER SUPPLY TEMP.	45 - 90° F		WATER SUPPLY PRESS.	10 - 113 PSIG												
VOLTAGE RANGE	187 - 253 V																									
AMBIENT TEMP.	45 - 100° F																									
WATER SUPPLY TEMP.	45 - 90° F																									
WATER SUPPLY PRESS.	10 - 113 PSIG																									

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MAE

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.5 RLA	34 LRA																							
GEAR MOTOR	120 V	1.55 FLA	1/8HP																							
FAN MOTOR	120 V	1 FLA	30 W																							
OTHER	120 V	0.03 A																								
MINIMUM CIRCUIT AMPACITY	15 A																									
MAXIMUM FUSE SIZE	15 A																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>*1000(453)</td> <td>910(412)</td> <td>840(380)</td> </tr> <tr> <td>80</td> <td>920(417)</td> <td>845(383)</td> <td>790(358)</td> </tr> <tr> <td>90</td> <td>850(385)</td> <td>* 780(353)</td> <td>720(326)</td> </tr> <tr> <td>100</td> <td>765(346)</td> <td>710(322)</td> <td>680(308)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	*1000(453)	910(412)	840(380)	80	920(417)	845(383)	790(358)	90	850(385)	* 780(353)	720(326)	100	765(346)	710(322)	680(308)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	*1000(453)	910(412)	840(380)																							
80	920(417)	845(383)	790(358)																							
90	850(385)	* 780(353)	720(326)																							
100	765(346)	710(322)	680(308)																							
lbs./day (kg/day)																										
Reference without *marks																										
SHAPE OF ICE	Flake																									
ICE QUALITY	Approx. 70 % Ice (90° F/ 70° F Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F	70° F/ 50° F																								
ELECTRIC W (kWH/100 lbs.)	1150 (3.6)	1060 (2.6)																								
POTABLE WATER gal./24HR (gal./100 lbs.)	93 (12.0)	120 (12.0)																								
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel (Rear)																									
WEIGHT	Net 177 lbs. (80 kg) , Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	N/A																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Air-cooled, Fin and Tube type																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	R22 , 1 lb. 8 oz. (690 g)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATING CONDITIONS	<table> <tr> <td>VOLTAGE RANGE</td> <td>187 - 253 V</td> </tr> <tr> <td>AMBIENT TEMP.</td> <td>45 - 100° F</td> </tr> <tr> <td>WATER SUPPLY TEMP.</td> <td>45 - 90° F</td> </tr> <tr> <td>WATER SUPPLY PRESS.</td> <td>10 - 113 PSIG</td> </tr> </table>			VOLTAGE RANGE	187 - 253 V	AMBIENT TEMP.	45 - 100° F	WATER SUPPLY TEMP.	45 - 90° F	WATER SUPPLY PRESS.	10 - 113 PSIG															
VOLTAGE RANGE	187 - 253 V																									
AMBIENT TEMP.	45 - 100° F																									
WATER SUPPLY TEMP.	45 - 90° F																									
WATER SUPPLY PRESS.	10 - 113 PSIG																									

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MWE

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.3 RLA	34 LRA																							
GEAR MOTOR	120 V	1.55 FLA	1/8HP																							
FAN MOTOR	120 V	0.5 FLA	8 W																							
OTHER	120 V	0.03 A																								
MINIMUM CIRCUIT AMPACITY	15 A																									
MAXIMUM FUSE SIZE	15 A																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>* 930(421)</td> <td>830(376)</td> <td>750(340)</td> </tr> <tr> <td>80</td> <td>910(412)</td> <td>820(371)</td> <td>730(331)</td> </tr> <tr> <td>90</td> <td>890(403)</td> <td>* 810(367)</td> <td>720(326)</td> </tr> <tr> <td>100</td> <td>870(394)</td> <td>800(362)</td> <td>710(322)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	* 930(421)	830(376)	750(340)	80	910(412)	820(371)	730(331)	90	890(403)	* 810(367)	720(326)	100	870(394)	800(362)	710(322)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	* 930(421)	830(376)	750(340)																							
80	910(412)	820(371)	730(331)																							
90	890(403)	* 810(367)	720(326)																							
100	870(394)	800(362)	710(322)																							
lbs./day (kg/day)	Reference without *marks																									
SHAPE OF ICE	Flake																									
ICE QUALITY	Approx. 70 % Ice (90° F/ 70° F, Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F, 70° F/ 50° F																									
ELECTRIC W (kWH/100 lbs.)	1050 (3.1)	1050 (2.7)																								
POTABLE WATER	97 (12.0)	111 (12.0)																								
WATER-COOLED CONDENSER	608 (75)	382 (41)																								
gal./24HR (gal./100 lbs.)																										
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel(Rear)																									
WEIGHT	Net 177 lbs. (80 kg), Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT Cond. Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT Cond. Outlet 1/2" FPT																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	Automatic Water Regulator																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Water-cooled, Tube in Tube type																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	R22 , 14 oz. (385 g)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATING CONDITIONS	<table> <tr> <td>VOLTAGE RANGE</td> <td>187 - 253 V</td> </tr> <tr> <td>AMBIENT TEMP.</td> <td>45 - 100° F</td> </tr> <tr> <td>WATER SUPPLY TEMP.</td> <td>45 - 90° F</td> </tr> <tr> <td>WATER SUPPLY PRESS.</td> <td>10 - 113 PSIG</td> </tr> </table>			VOLTAGE RANGE	187 - 253 V	AMBIENT TEMP.	45 - 100° F	WATER SUPPLY TEMP.	45 - 90° F	WATER SUPPLY PRESS.	10 - 113 PSIG															
VOLTAGE RANGE	187 - 253 V																									
AMBIENT TEMP.	45 - 100° F																									
WATER SUPPLY TEMP.	45 - 90° F																									
WATER SUPPLY PRESS.	10 - 113 PSIG																									

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MRE

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.5 RLA	34 RLA																							
GEAR MOTOR	120 V	1.55 FLA	1/8HP																							
FAN MOTOR	120 V	0.5 FLA	8 W																							
FAN MOTOR REMOTE	120 V	3A	MAX																							
OTHER	120 V	0.03 A																								
MINIMUM CIRCUIT AMPACITY	15 A																									
MAXIMUM FUSE SIZE	15 A																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>* 920(418)</td> <td>840(380)</td> <td>760(345)</td> </tr> <tr> <td>80</td> <td>860(390)</td> <td>810(367)</td> <td>720(327)</td> </tr> <tr> <td>90</td> <td>820(372)</td> <td>* 750(340)</td> <td>700(317)</td> </tr> <tr> <td>100</td> <td>760(345)</td> <td>690(313)</td> <td>630(286)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	* 920(418)	840(380)	760(345)	80	860(390)	810(367)	720(327)	90	820(372)	* 750(340)	700(317)	100	760(345)	690(313)	630(286)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	* 920(418)	840(380)	760(345)																							
80	860(390)	810(367)	720(327)																							
90	820(372)	* 750(340)	700(317)																							
100	760(345)	690(313)	630(286)																							
lbs./day (kg/day)																										
Reference without *marks																										
SHAPE OF ICE	Flake																									
ICE QUALITY	Approx. 70% Ice (90° F/ 70° F, Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F, 70° F/ 50° F																									
ELECTRIC W (kWH/100 lbs.)	1250 (4.0)	1210 (3.2)																								
POTABLE WATER	90 (12.0)	110 (12.0)																								
gal./24HR (gal./100 lbs.)																										
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel (Rear)																									
WEIGHT	Net 177 lbs. (80 kg), Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT																									
- REFRIGERATION	Discharge Line 1-1/16-12 UNF Fitting (#10 AEROQUIP)																									
CIRCUIT	Liquid Line 5/8-18 UNF Fitting (#6 AEROQUIP)																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	N/A																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Air-cooled Remote Condenser Unit URC-6E Recommended																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	Condensing Pressure regulator on URC-6E																									
DESIGN PRESSURE	R22 , 4 lb. 3 oz. (1900 g)																									
P. C. BOARD CIRCUIT PROTECTION	(Icemaker 2 lbs. 2 oz. Cond. unit 2 lbs. 2 oz.)																									
COMPRESSOR PROTECTION	High 400 PSIG, Low 230 PSIG																									
GEAR MOTOR PROTECTION	High Voltage Cut-out Relay																									
REFRIGERANT CIRCUIT PROTECTION	Internal Protector																									
LOW WATER PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
ACCESSORIES - SUPPLIED	Auto reset High Pressure Control Switch																									
- REQUIRED	Float Switch and Timer																									
OPERATING CONDITIONS	Spare Fuse																									
VOLTAGE RANGE	Ice Storage Bin																									
AMBIENT TEMP.	187 - 253 V																									
WATER SUPPLY TEMP.	45 - 100° F																									
WATER SUPPLY PRESS.	45 - 90° F																									
	10 - 113 PSIG																									

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MAE-C

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.5 RLA	34 LRA																							
GEAR MOTOR	120 V	1.55 FLA	1/8 HP																							
FAN MOTOR	120 V	1 FLA	30 W																							
OTHER	120 V	0.03 A																								
MAXIMUM FUSE SIZE	15 AMPS																									
MAX. HACR BREAKER (USA ONLY)	15 AMPS																									
MAX. CIRC. BREAKER (CANADA ONLY)	15 AMPS																									
MINIMUM CIRCUIT AMPACITY	15 AMPS																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>* 905(410)</td> <td>815(370)</td> <td>740(336)</td> </tr> <tr> <td>80</td> <td>815(370)</td> <td>755(342)</td> <td>675(306)</td> </tr> <tr> <td>90</td> <td>775(351)</td> <td>* 695(315)</td> <td>640(290)</td> </tr> <tr> <td>100</td> <td>705(319)</td> <td>640(290)</td> <td>595(270)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	* 905(410)	815(370)	740(336)	80	815(370)	755(342)	675(306)	90	775(351)	* 695(315)	640(290)	100	705(319)	640(290)	595(270)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	* 905(410)	815(370)	740(336)																							
80	815(370)	755(342)	675(306)																							
90	775(351)	* 695(315)	640(290)																							
100	705(319)	640(290)	595(270)																							
lbs./day (kg/day)	Reference without *marks																									
SHAPE OF ICE	Cubelet																									
ICE QUALITY	Approx. 80 % Ice (90° F/ 70° F Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F	70° F/ 50° F																								
ELECTRIC W (kWH/100 lbs.)	1075 (3.7)	1025 (2.7)																								
POTABLE WATER	83 (12.0)	108 (12.0)																								
gal./24HR (gal./100 lbs.)																										
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel (Rear)																									
WEIGHT	Net 177 lbs. (80 kg) , Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	N/A																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Air-cooled, Fin and Tube type																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	R22, 1 lb. 8 oz. (690 g)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATION CONDITIONS	VOLTAGE RANGE	187 - 264 V	104-132V																							
	AMBIENT TEMP.	45 - 100° F																								
	WATER SUPPLY TEMP.	45 - 90° F																								
	WATER SUPPLY PRESS.	7 - 113 PSIG																								

* We reserve the right to make changes in specifications and design without prior notice.

F-1000MWE-C

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.3 RLA	34 LRA																							
GEAR MOTOR	120 V	1.55 FLA	1/8 HP																							
FAN MOTOR	120V	0.5 FLA	8 W																							
OTHER	120 V	0.03 A																								
MAXIMUM FUSE SIZE	15 AMPS																									
MAX. HACR BREAKER (USA ONLY)	15 AMPS																									
MAX. CIRC. BREAKER (CANADA ONLY)	15 AMPS																									
MINIMUM CIRCUIT AMPACITY	15 AMPS																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>870(394)</td> <td>785(356)</td> <td>690(313)</td> </tr> <tr> <td>80</td> <td>835(379)</td> <td>760(345)</td> <td>680(308)</td> </tr> <tr> <td>90</td> <td>835(379)</td> <td>760(345)</td> <td>670(304)</td> </tr> <tr> <td>100</td> <td>795(361)</td> <td>720(327)</td> <td>645(293)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	870(394)	785(356)	690(313)	80	835(379)	760(345)	680(308)	90	835(379)	760(345)	670(304)	100	795(361)	720(327)	645(293)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	870(394)	785(356)	690(313)																							
80	835(379)	760(345)	680(308)																							
90	835(379)	760(345)	670(304)																							
100	795(361)	720(327)	645(293)																							
lbs./day (kg/day)																										
Reference without *marks																										
SHAPE OF ICE	Cubelet																									
ICE QUALITY	Approx. 80 % Ice (90° F/ 70° F, Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F/ 70° F, 70° F/ 50° F																									
ELECTRIC W (kWH/100 lbs.)	1050 (3.3)	1050 (2.9)																								
POTABLE WATER	91 (12.0)	104 (12.0)																								
WATER-COOLED CONDENSER	604 (79)	394 (45)																								
gal./24HR (gal./100 lbs.)																										
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel(Rear)																									
WEIGHT	Net 177 lbs. (80 kg), Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT	Cond. Inlet 1/2" FPT																								
- DRAIN	Outlet 3/4" FPT	Cond. Outlet 1/2" FPT																								
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	Automatic Water Regulator																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Water-cooled, Tube in Tube type																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
REFRIGERANT CHARGE	R22 , 14 oz. (385 g)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATION CONDITIONS	VOLTAGE RANGE	187 - 264 V	104 - 132V																							
	AMBIENT TEMP.	45 - 100° F																								
	WATER SUPPLY TEMP.	45 - 90° F																								
	WATER SUPPLY PRESS.	7 - 113 PSIG																								

* We reserve the right to make changes in specifications and design without prior notice.


F-1000MRE-C

AC SUPPLY VOLTAGE	208-230/60/1 (3 wire with neutral for 115 V)																									
COMPRESSOR	240 V	4.5 RLA	34 LRA																							
GEAR MOTOR	120 V	1.55 FLA	1/8 HP																							
FAN MOTOR	120 V	0.5 FLA	8 W																							
FAN MOTOR REMOTE	120 V	3A MAX																								
OTHER	120 V	0.03 A																								
MAXIMUM FUSE SIZE	15 AMPS																									
MAX. HACR BREAKER (USA ONLY)	15 AMPS																									
MAX. CIRC. BREAKER (CANADA ONLY)	15 AMPS																									
MAXIMUM CIRCUIT AMPACITY	15 AMPS																									
APPROXIMATE ICE PRODUCTION PER 24 HR.	<table border="1"> <thead> <tr> <th rowspan="2">Ambient Temp. (° F)</th> <th colspan="3">Water Temp. (° F)</th> </tr> <tr> <th>50</th> <th>70</th> <th>90</th> </tr> </thead> <tbody> <tr> <td>70</td> <td>915(415)</td> <td>830(376)</td> <td>775(352)</td> </tr> <tr> <td>80</td> <td>885(401)</td> <td>805(365)</td> <td>735(333)</td> </tr> <tr> <td>90</td> <td>860(390)</td> <td>770(349)</td> <td>700(318)</td> </tr> <tr> <td>100</td> <td>755(342)</td> <td>700(317)</td> <td>640(290)</td> </tr> </tbody> </table>			Ambient Temp. (° F)	Water Temp. (° F)			50	70	90	70	915(415)	830(376)	775(352)	80	885(401)	805(365)	735(333)	90	860(390)	770(349)	700(318)	100	755(342)	700(317)	640(290)
Ambient Temp. (° F)	Water Temp. (° F)																									
	50	70	90																							
70	915(415)	830(376)	775(352)																							
80	885(401)	805(365)	735(333)																							
90	860(390)	770(349)	700(318)																							
100	755(342)	700(317)	640(290)																							
lbs./day (kg/day)	Reference without *marks																									
SHAPE OF ICE	Cubelet																									
ICE QUALITY	Approx. 80 % Ice (90° F / 70° F, Conductivity 200 μ s/cm)																									
APPROXIMATE STORAGE CAPACITY	N/A																									
ELECTRIC & WATER CONSUMPTION	90° F / 70° F, 70° F / 50° F																									
ELECTRIC W (kWH/100 lbs.)	1250 (3.9)	1210 (3.2)																								
POTABLE WATER gal./24HR (gal./100 lbs.)	92 (12.0)	110 (12.0)																								
EXTERIOR DIMENSIONS (WxDxH)	22" x 27-3/8" x 29-1/2" (560 x 695 x 749 mm)																									
EXTERIOR FINISH	Stainless Steel, Galvanized Steel (Rear)																									
WEIGHT	Net 177 lbs. (80 kg), Shipping 220 lbs. (100 kg)																									
CONNECTIONS - ELECTRIC	Permanent Connection																									
- WATER SUPPLY	Inlet 1/2" FPT																									
- DRAIN	Outlet 3/4" FPT																									
- REFRIGERATION CIRCUIT	Discharge Line 1-1/16-12 UNF Fitting (#10 AEROQUIP)																									
	Liquid Line 5/8-18 UNF Fitting (#6 AEROQUIP)																									
ICE MAKING SYSTEM	Auger type																									
HARVESTING SYSTEM	Direct driven Auger (100 W Gear Motor)																									
ICE MAKING WATER CONTROL	Float Switch																									
COOLING WATER CONTROL	N/A																									
BIN CONTROL SYSTEM	Mechanical Bin Control (Proximity Sw.)																									
COMPRESSOR	Hermetic 860W, Model REK3-0125-PFV																									
CONDENSER	Air-cooled Remote Condenser Unit URC-6E Recommended																									
EVAPORATOR	Copper Tube on Cylinder																									
REFRIGERANT CONTROL	Thermostatic Expansion Valve																									
	Condensing Pressure regulator on URC-6E																									
REFRIGERANT CHARGE	R22, 4 lbs. 3 oz. (1900 g)																									
	(Ice maker 2 lbs. 2 oz. Cond. unit 2 lbs. 2 oz.)																									
DESIGN PRESSURE	High 400 PSIG, Low 230 PSIG																									
P. C. BOARD CIRCUIT PROTECTION	High Voltage Cut-out Relay																									
COMPRESSOR PROTECTION	Internal Protector																									
GEAR MOTOR PROTECTION	Manual reset Circuit Breaker and Thermal Protector																									
REFRIGERANT CIRCUIT PROTECTION	Auto reset High Pressure Control Switch																									
LOW WATER PROTECTION	Float Switch and Timer																									
ACCESSORIES - SUPPLIED	Spare Fuse																									
- REQUIRED	Ice Storage Bin																									
OPERATION CONDITIONS	<table border="1"> <tbody> <tr> <td>VOLTAGE RANGE</td> <td>187 - 264 V</td> <td>104 - 132 V</td> </tr> <tr> <td>AMBIENT TEMP.</td> <td>45 - 100° F</td> <td></td> </tr> <tr> <td>WATER SUPPLY TEMP.</td> <td>45 - 90° F</td> <td></td> </tr> <tr> <td>WATER SUPPLY PRESS.</td> <td>7 - 113 PSIG</td> <td></td> </tr> </tbody> </table>			VOLTAGE RANGE	187 - 264 V	104 - 132 V	AMBIENT TEMP.	45 - 100° F		WATER SUPPLY TEMP.	45 - 90° F		WATER SUPPLY PRESS.	7 - 113 PSIG												
VOLTAGE RANGE	187 - 264 V	104 - 132 V																								
AMBIENT TEMP.	45 - 100° F																									
WATER SUPPLY TEMP.	45 - 90° F																									
WATER SUPPLY PRESS.	7 - 113 PSIG																									

We reserve the right to make changes in specifications and design without prior notice.

2. CONDENSER UNIT

URC-6B, URC-6E

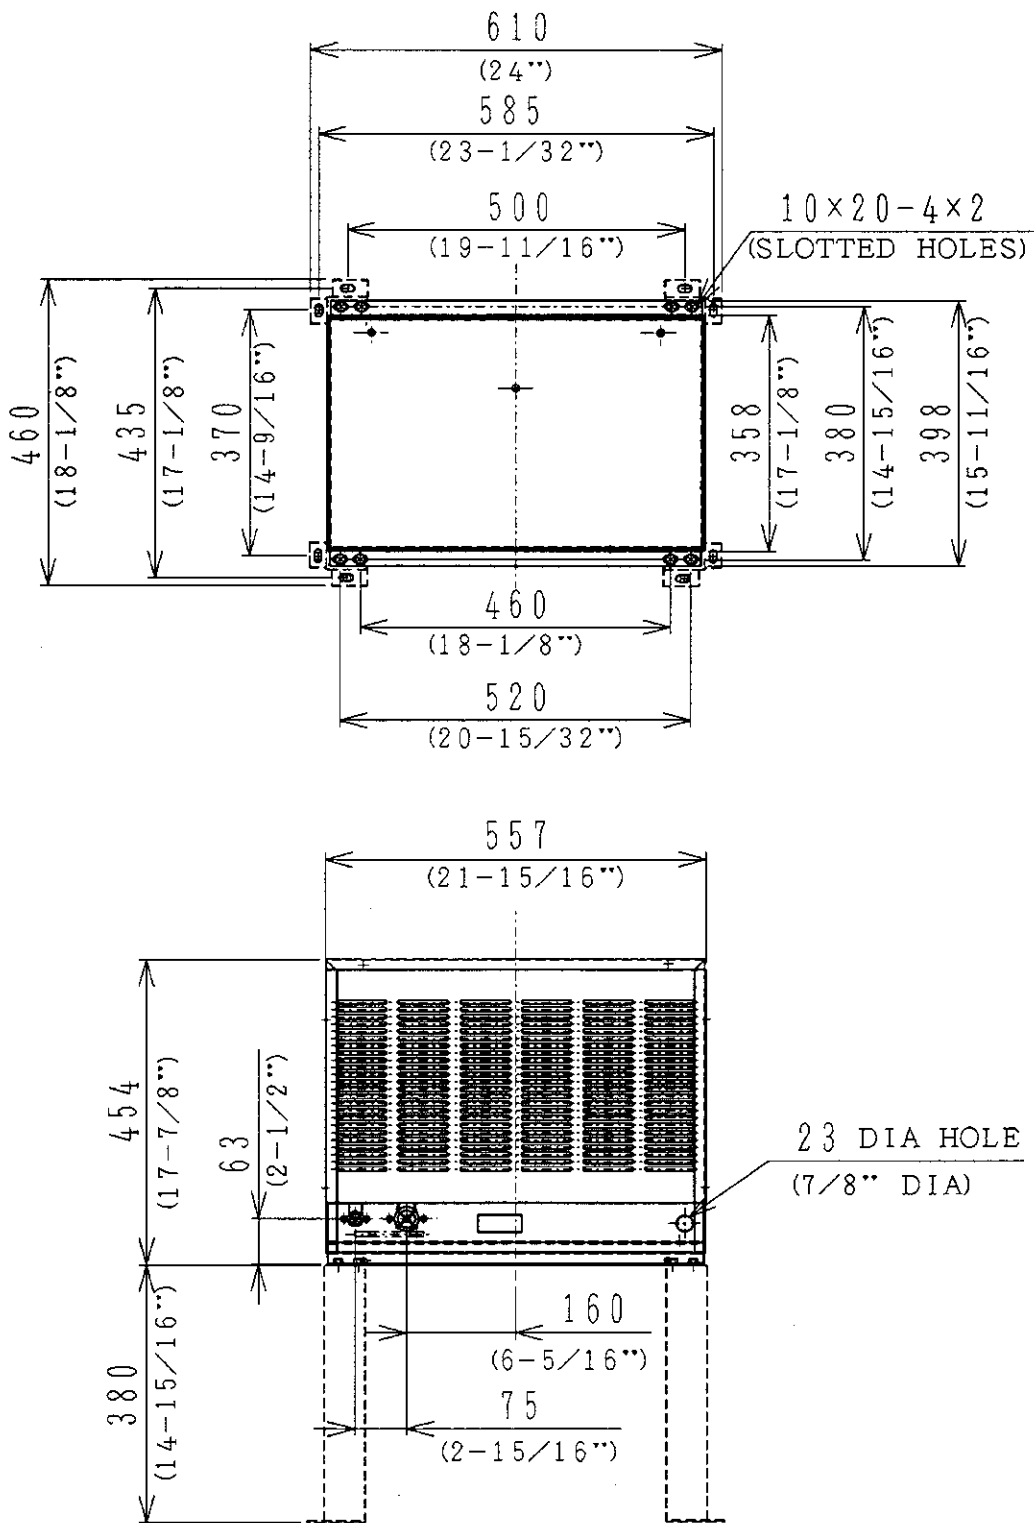


SPECIFICATIONS

MODEL: URC-6B, URC-6E	
EXTERIOR	Galvanized Steel
DIMENSIONS (W x D x H)	21-15/16" x 15-11/16" x 17-7/8" (557 x 398 x 454 mm)
REFRIGERANT CHARGE	
URC-6B	R502 14 oz. (400 g)
URC-6E	R22 2 lbs. 2 oz. (950 g)
WEIGHT	Net 61 lbs. (28 kg) Shipping 68 lbs. (31 kg)
CONNECTIONS	
REFRIGERANT	One Shot Couplings (Aeroquip)
ELECTRICAL	Permanent Connection
CONDENSER	Air-cooled
HEAD PRESSURE CONTROL	Condensing Pressure Regulator
AMBIENT CONDITION	Min. -20°F - Max. +122°F (-29°C to +50°C) Outdoor use


II. GENERAL INFORMATION

1. CONSTRUCTION


F-1000MAB, F-1000MAE(-C)

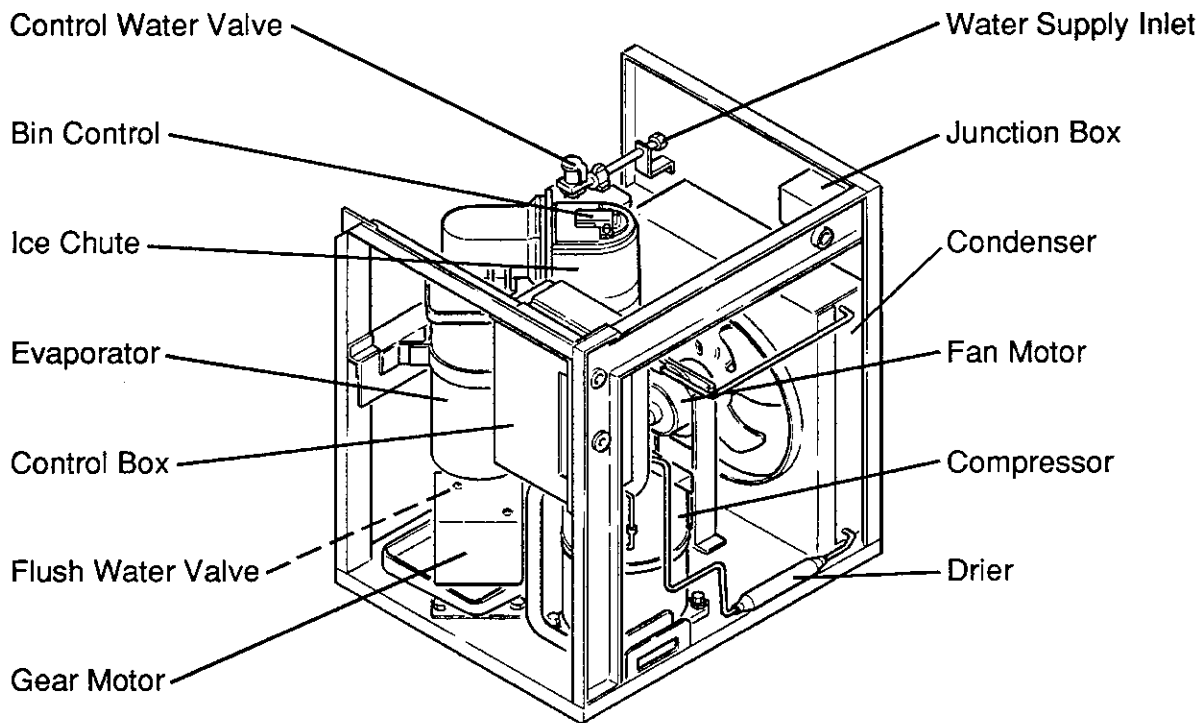


F-1000MWB, F-1000MWE(-C)

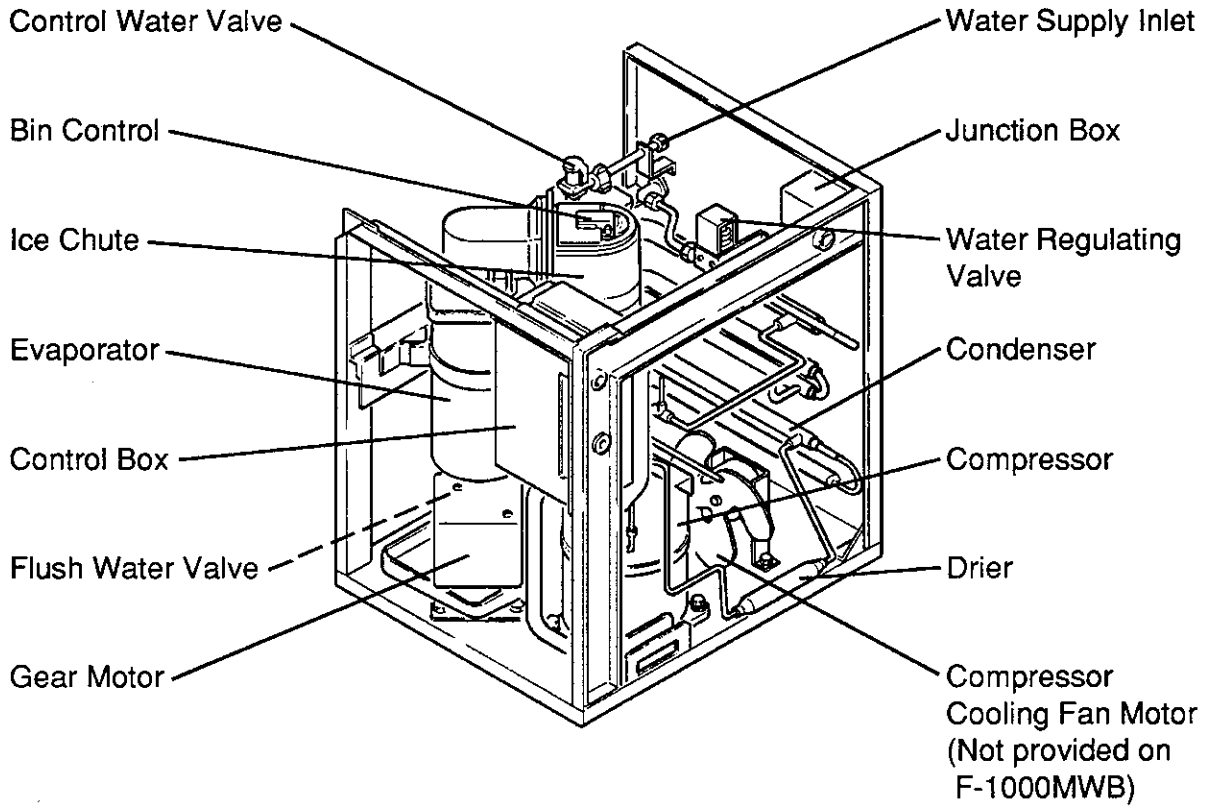

F-1000MRB, F-1000MRE(-C)

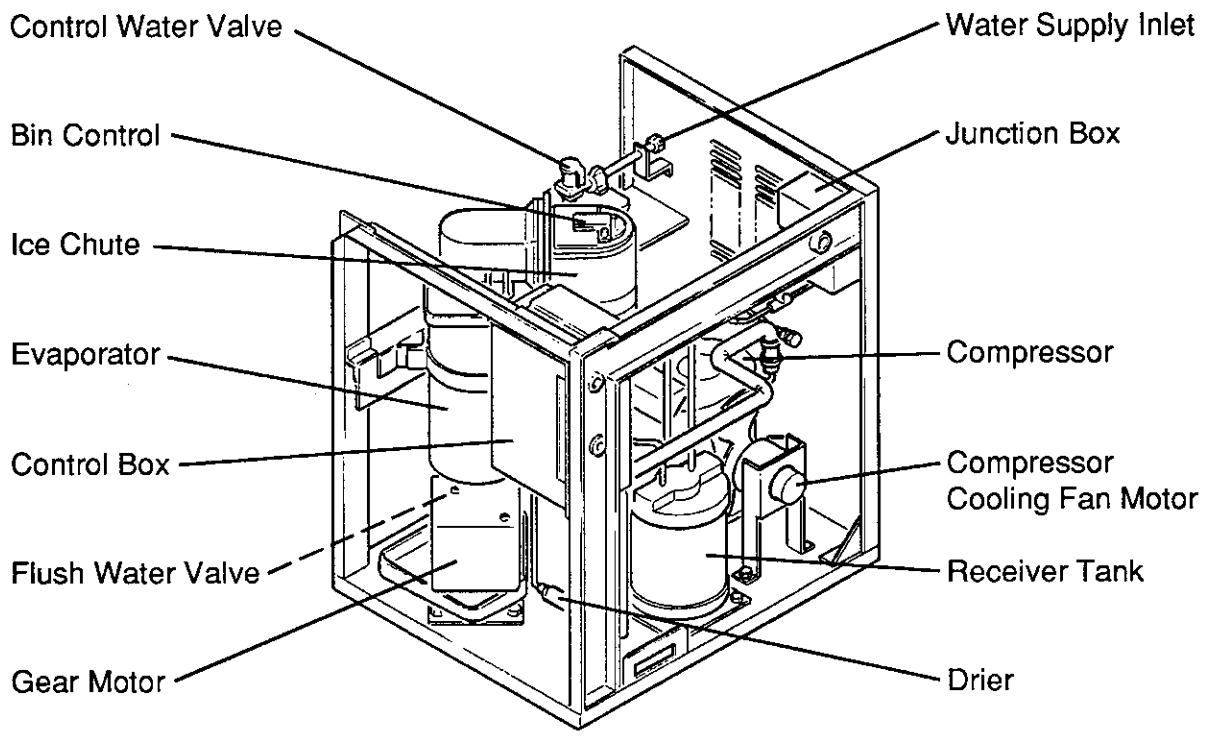

2. CONTROL BOX LAYOUT

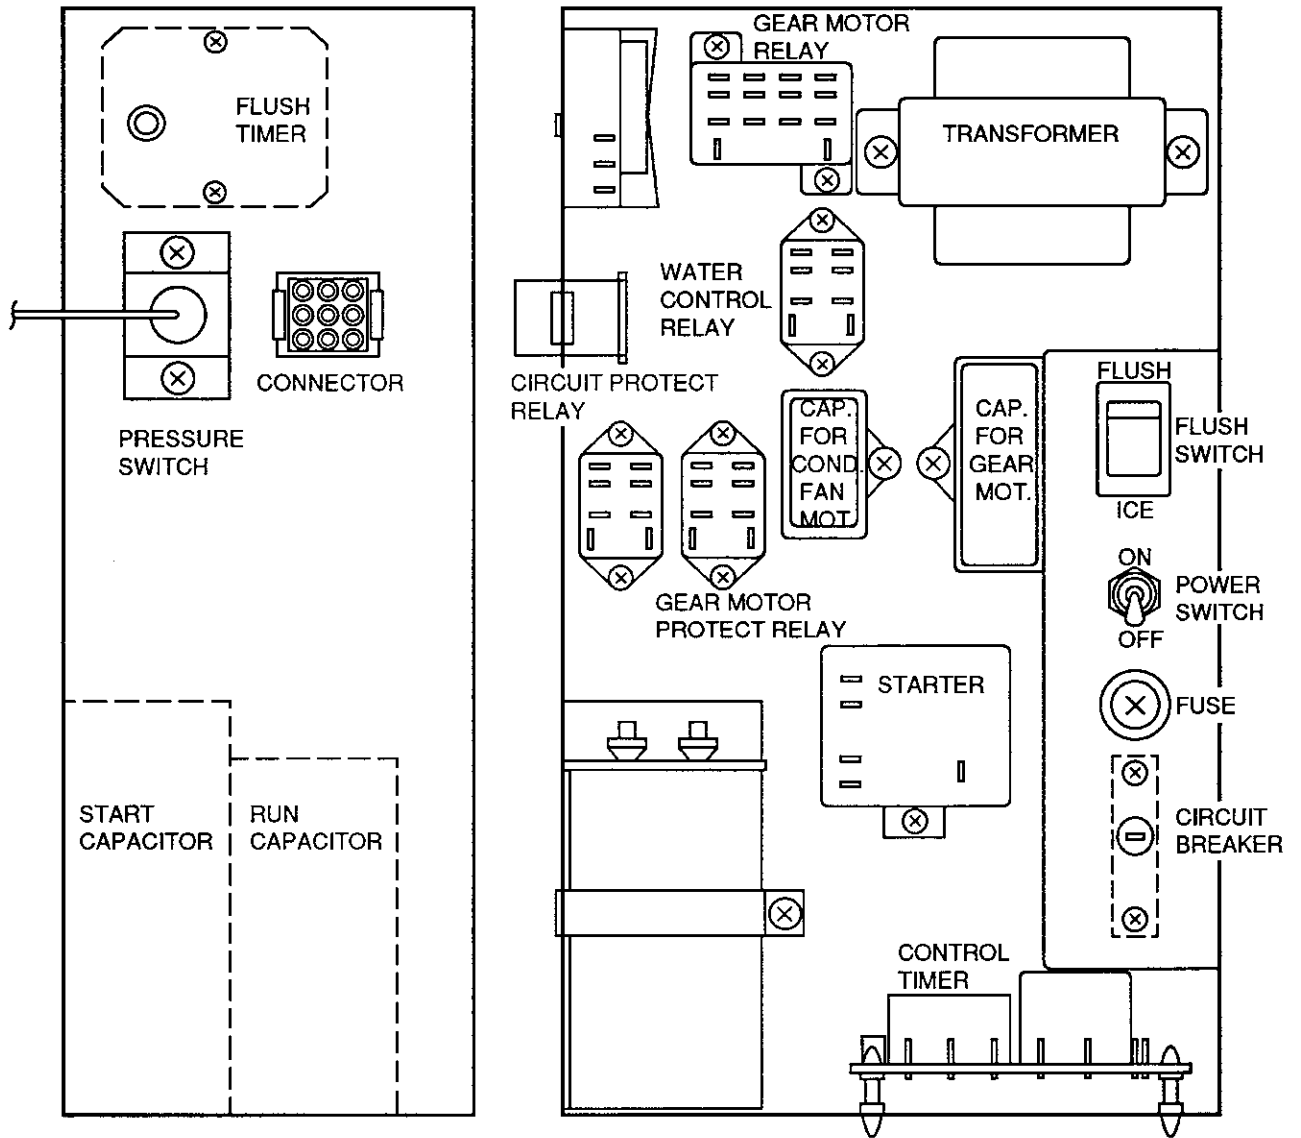


Note: The above component names are identical with the Wiring Label, but not with the Parts List.


III. TECHNICAL INFORMATION

1. WATER CIRCUIT AND REFRIGERANT CIRCUIT


F-1000MAB, F-1000MAE(-C)

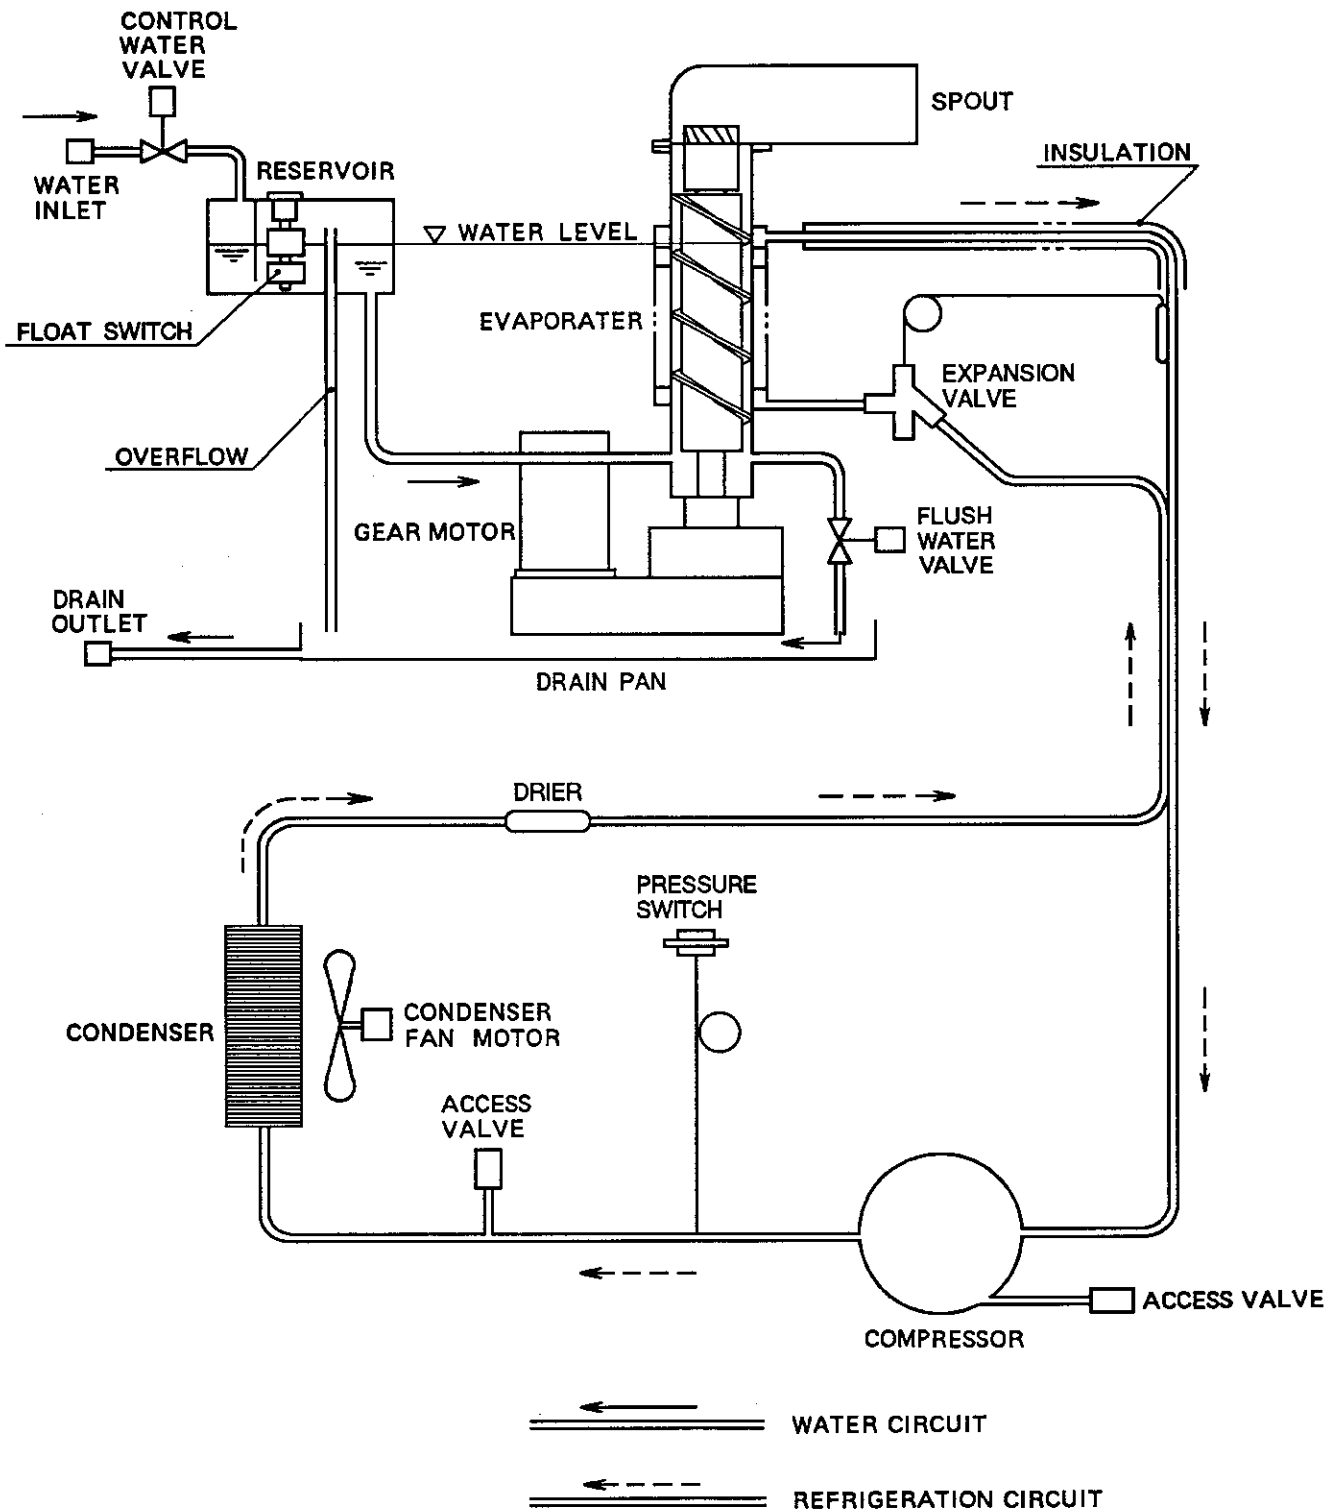

F-1000MWB, F-1000MWE(-C)

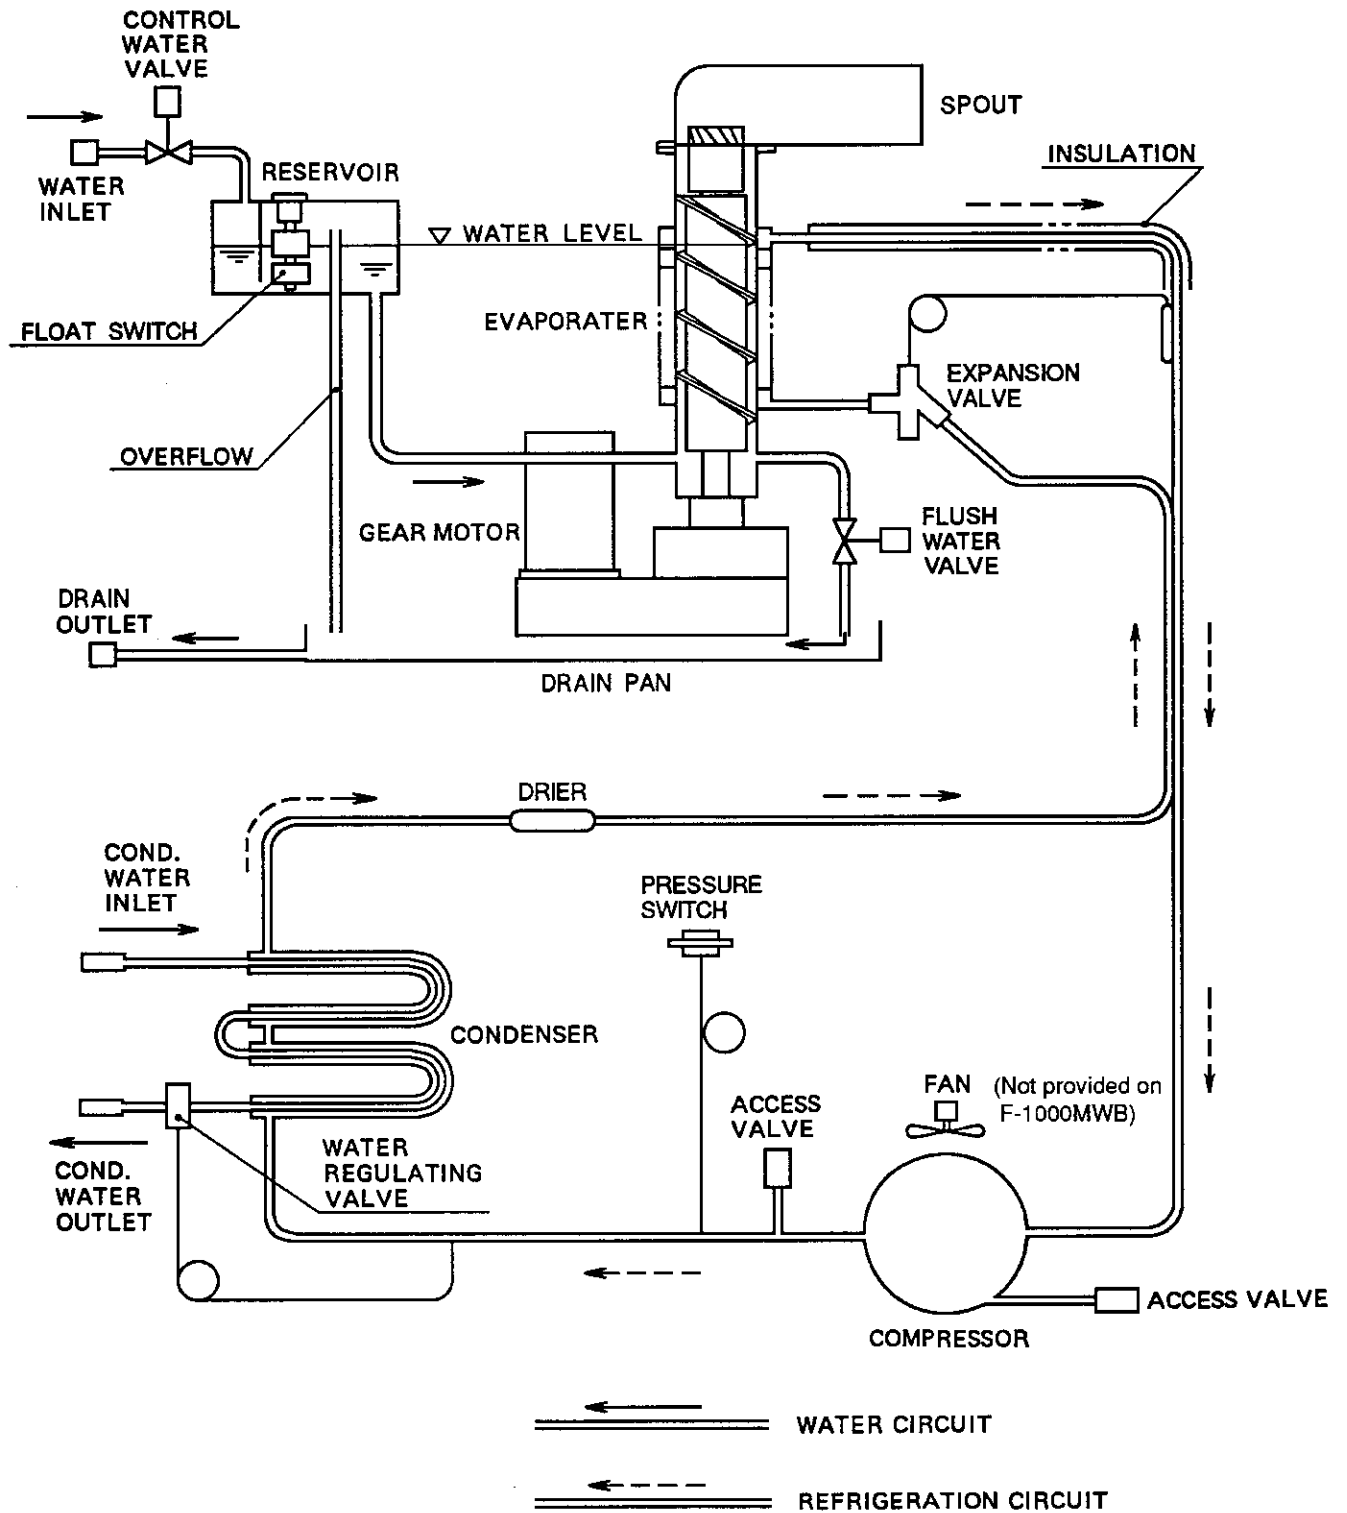


F-1000MRB, F-1000MRE(-C)

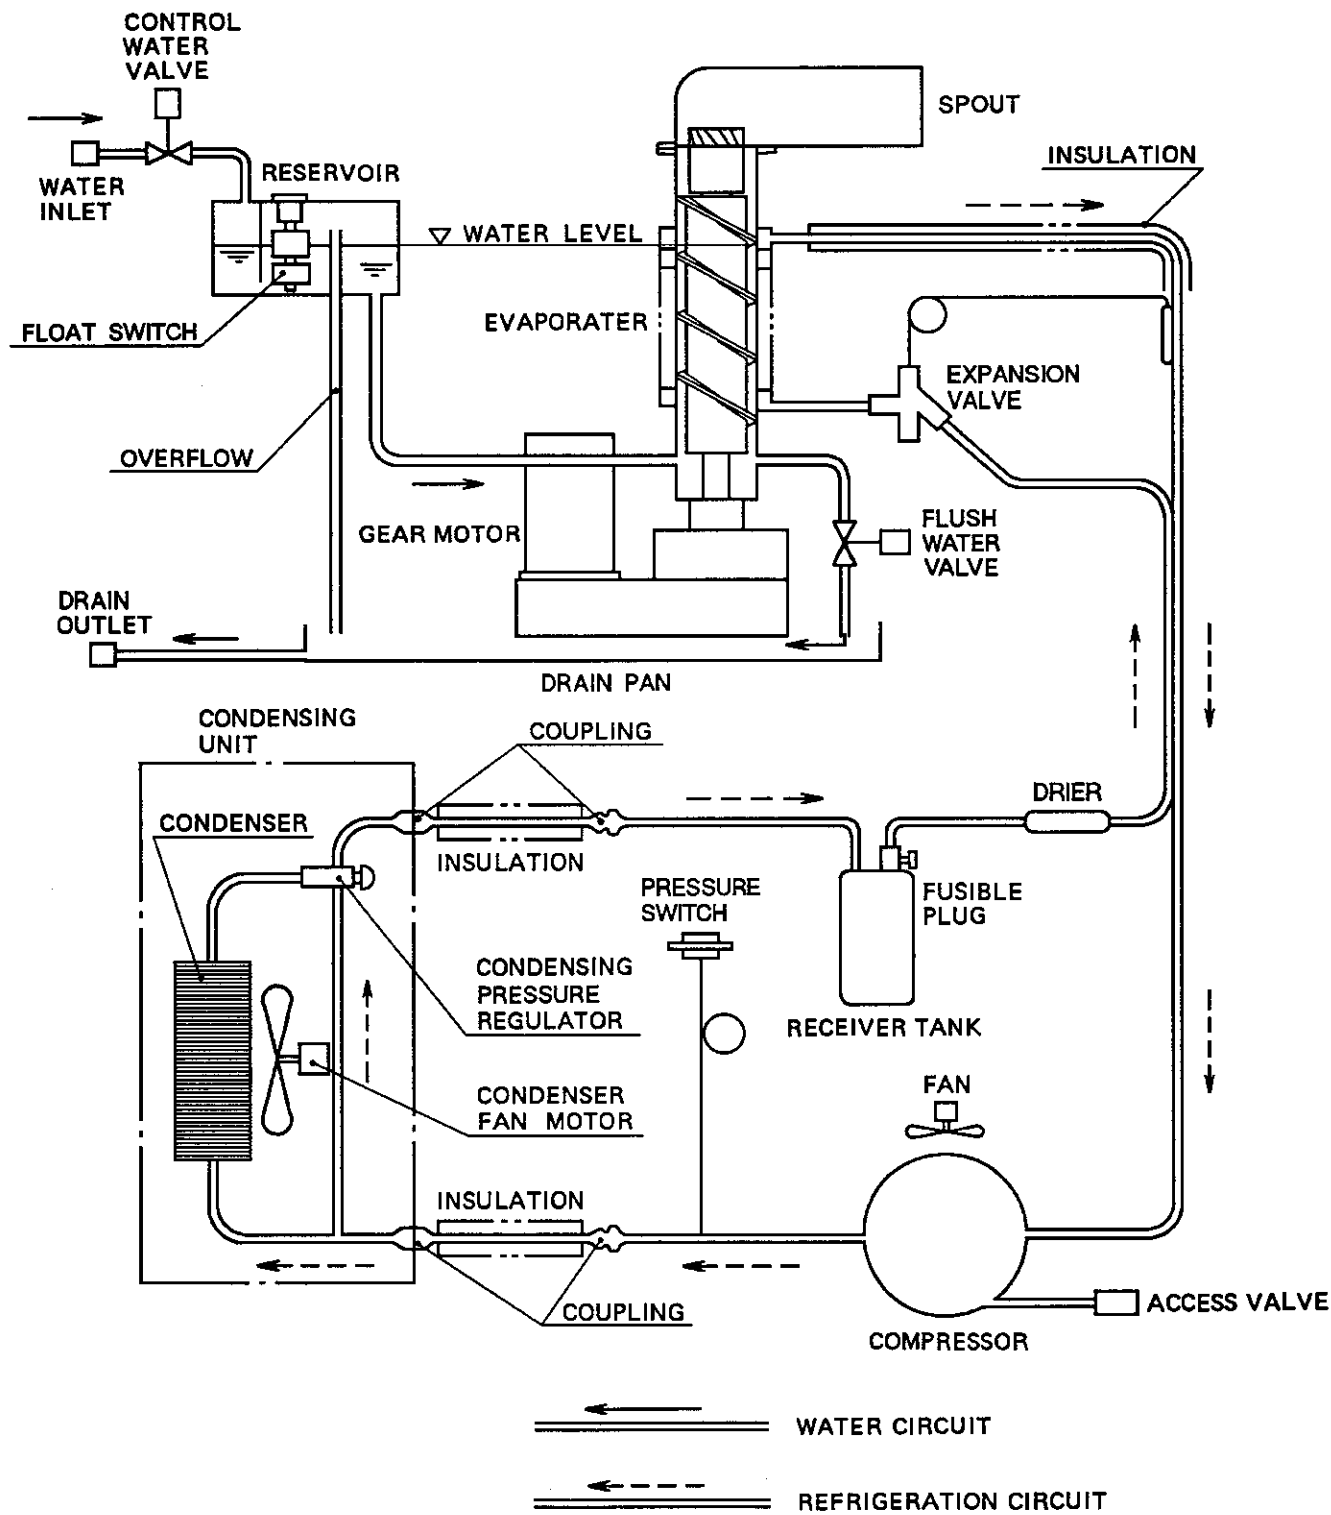


2. WIRING DIAGRAM


F-1000MAB, F-1000MWB

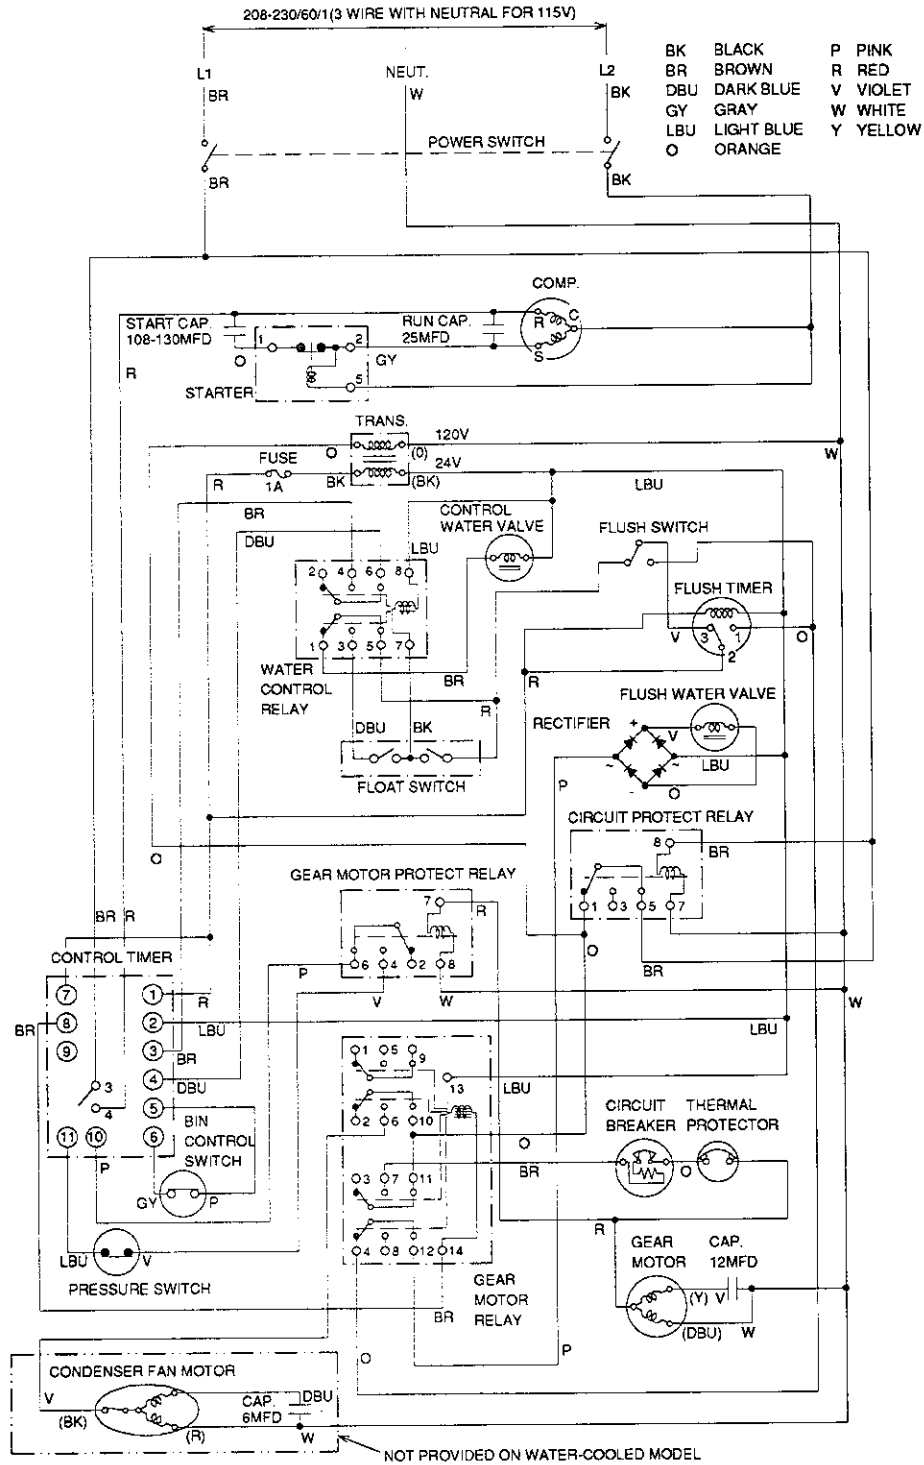

- BK BLACK
- BR BROWN
- DBU DARK BLUE
- GY GRAY
- LBU LIGHT BLUE
- O ORANGE
- P PINK
- R RED
- V VIOLET
- W WHITE
- Y YELLOW

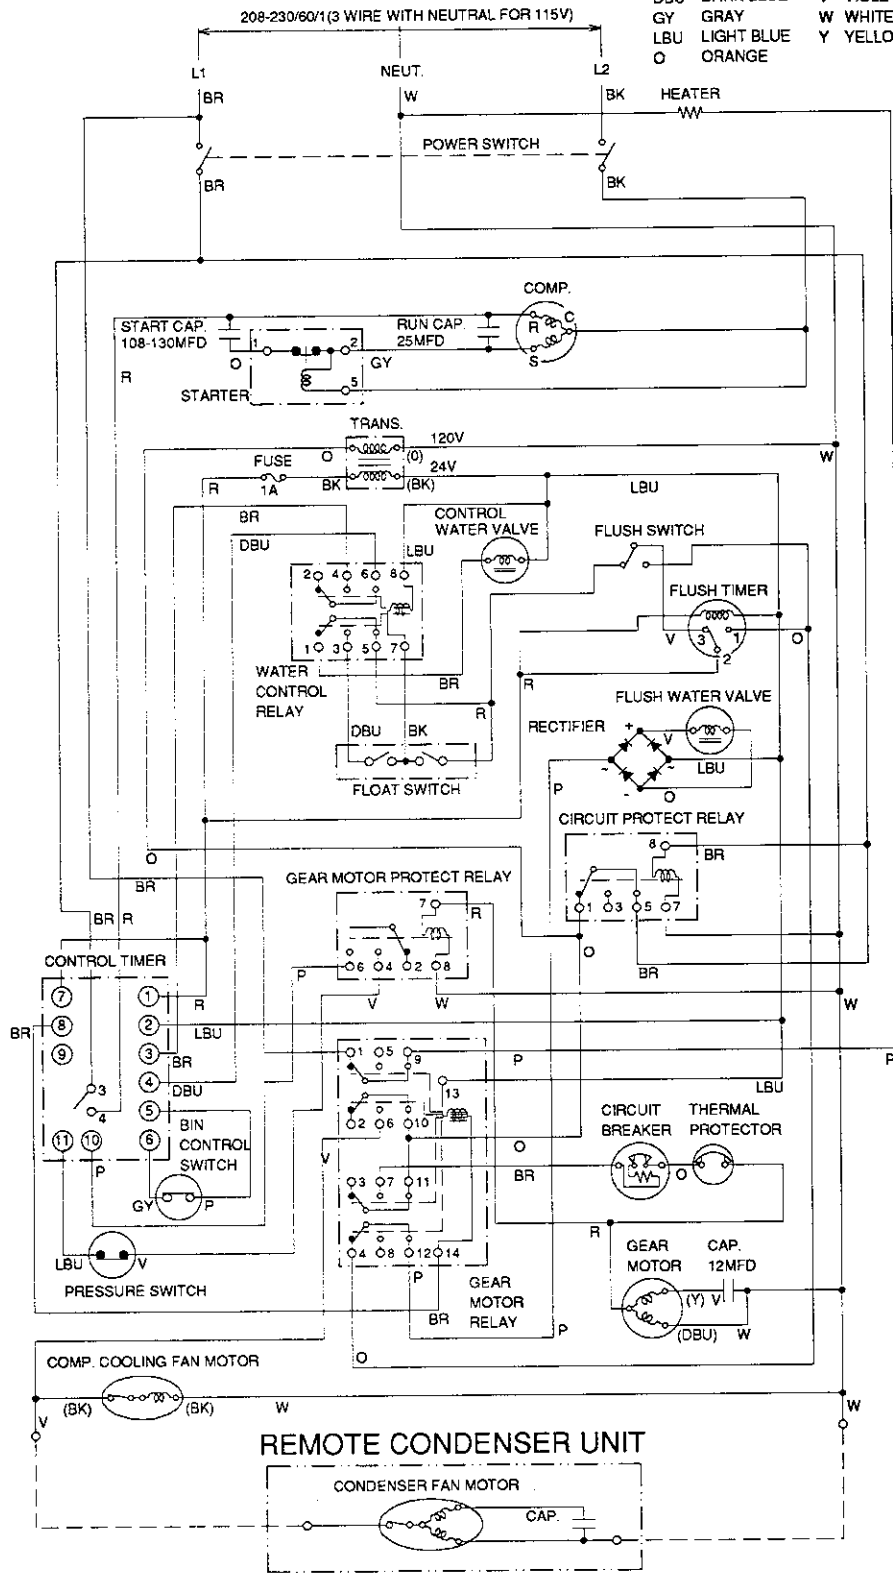


F-1000MAE(-C)

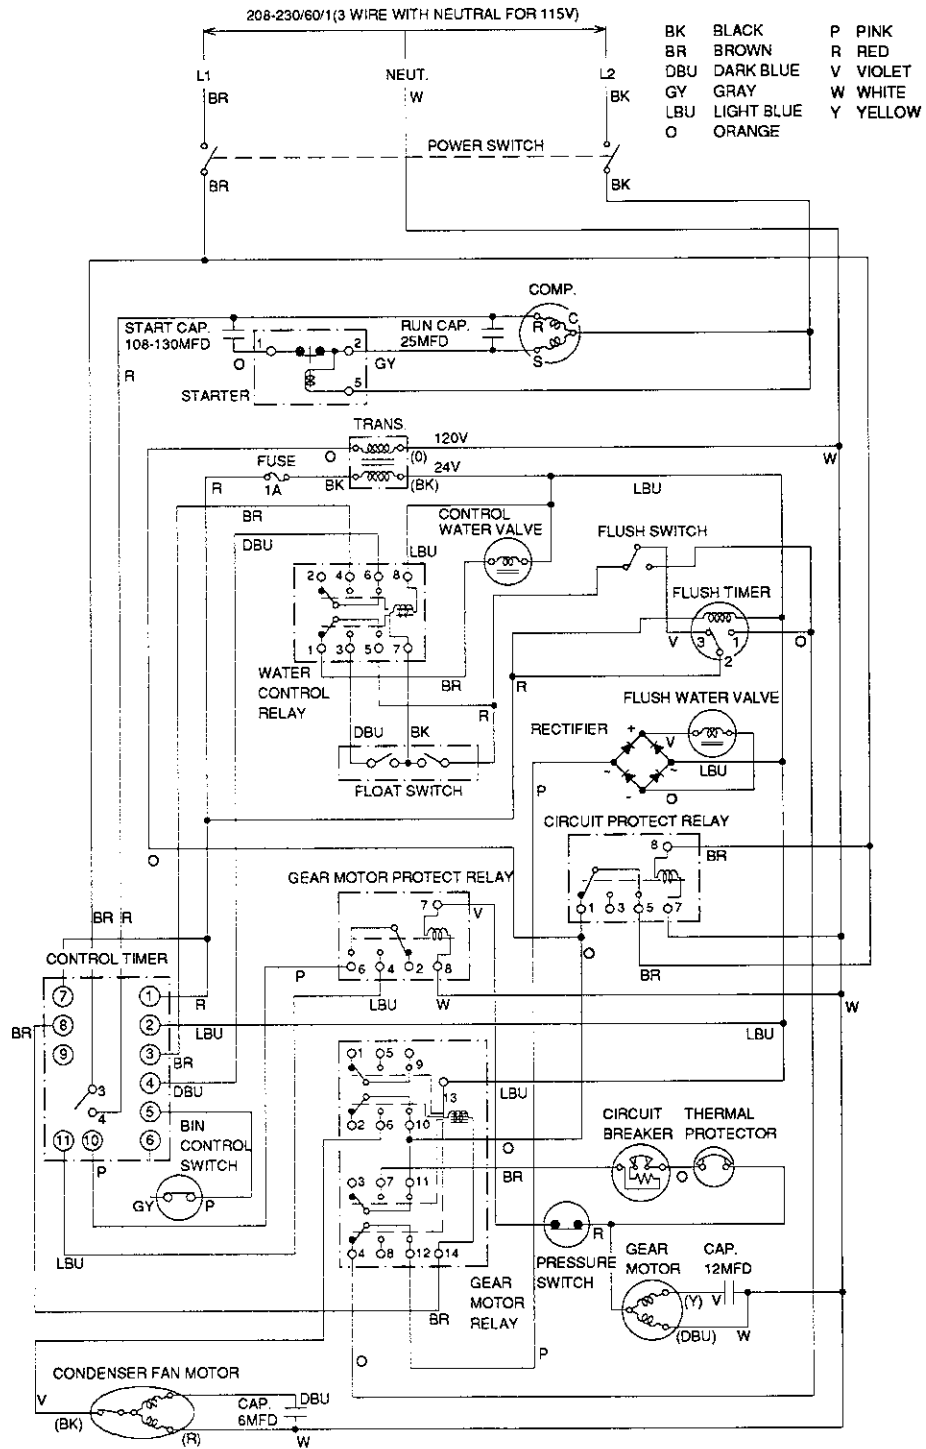


F-1000MWE(-C), F-1000MRE(-C)

- BK BLACK
- BR BROWN
- DBU DARK BLUE
- GY GRAY
- LBU LIGHT BLUE
- O ORANGE
- P PINK
- R RED
- V VIOLET
- W WHITE
- Y YELLOW

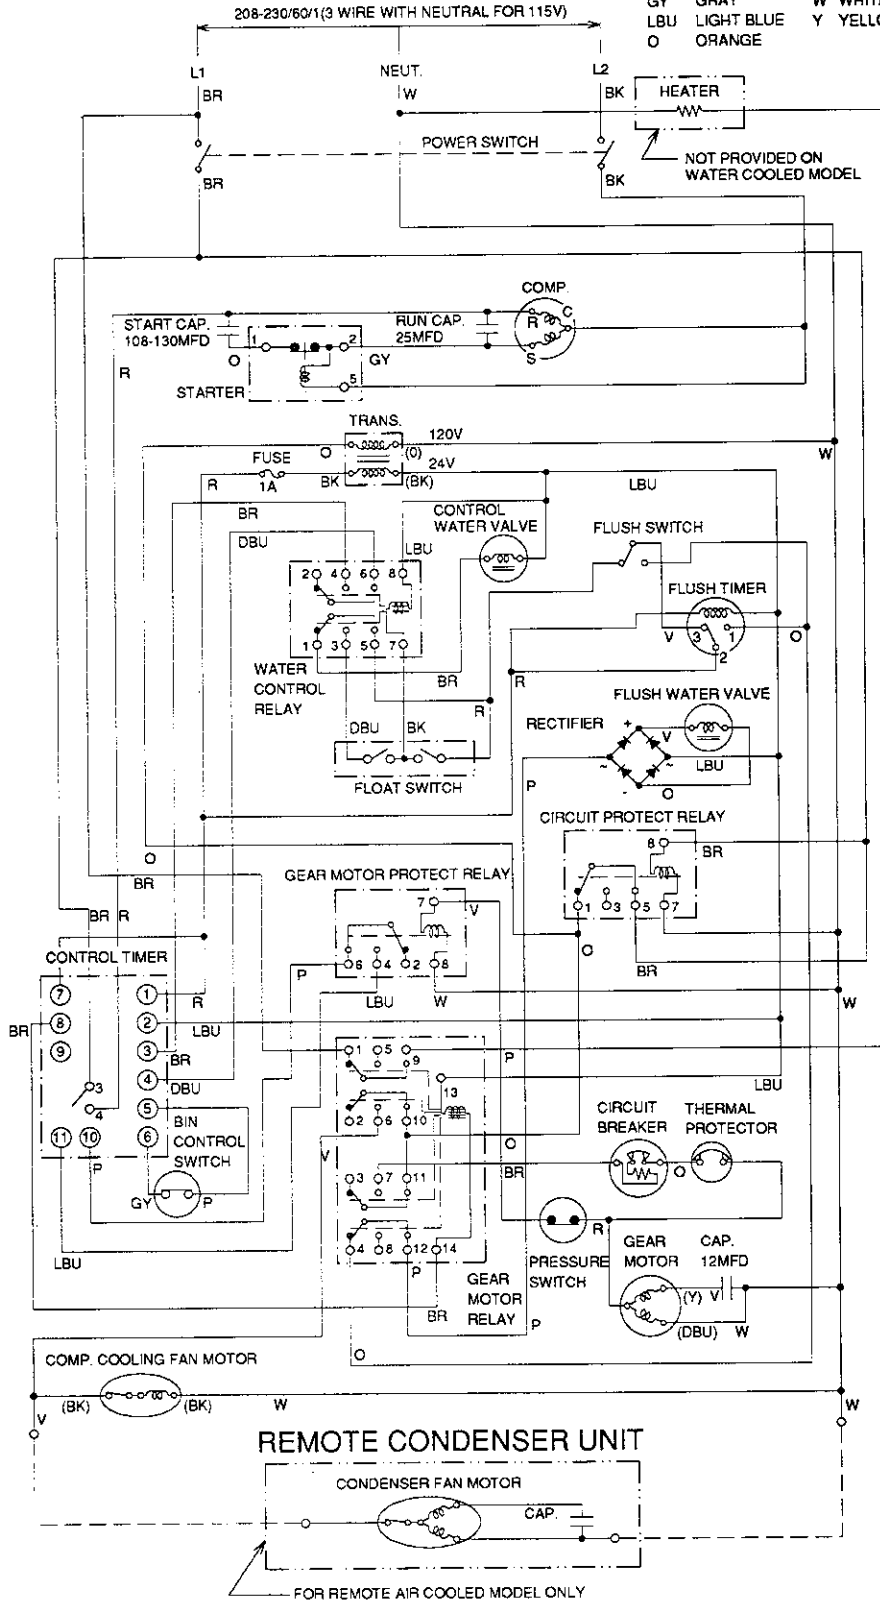


3. SEQUENCE OF ELECTRICAL CIRCUIT

[a] When Power Switch is moved to "ON" position and Flush Switch to "ICE" position, water starts to be supplied to Reservoir.

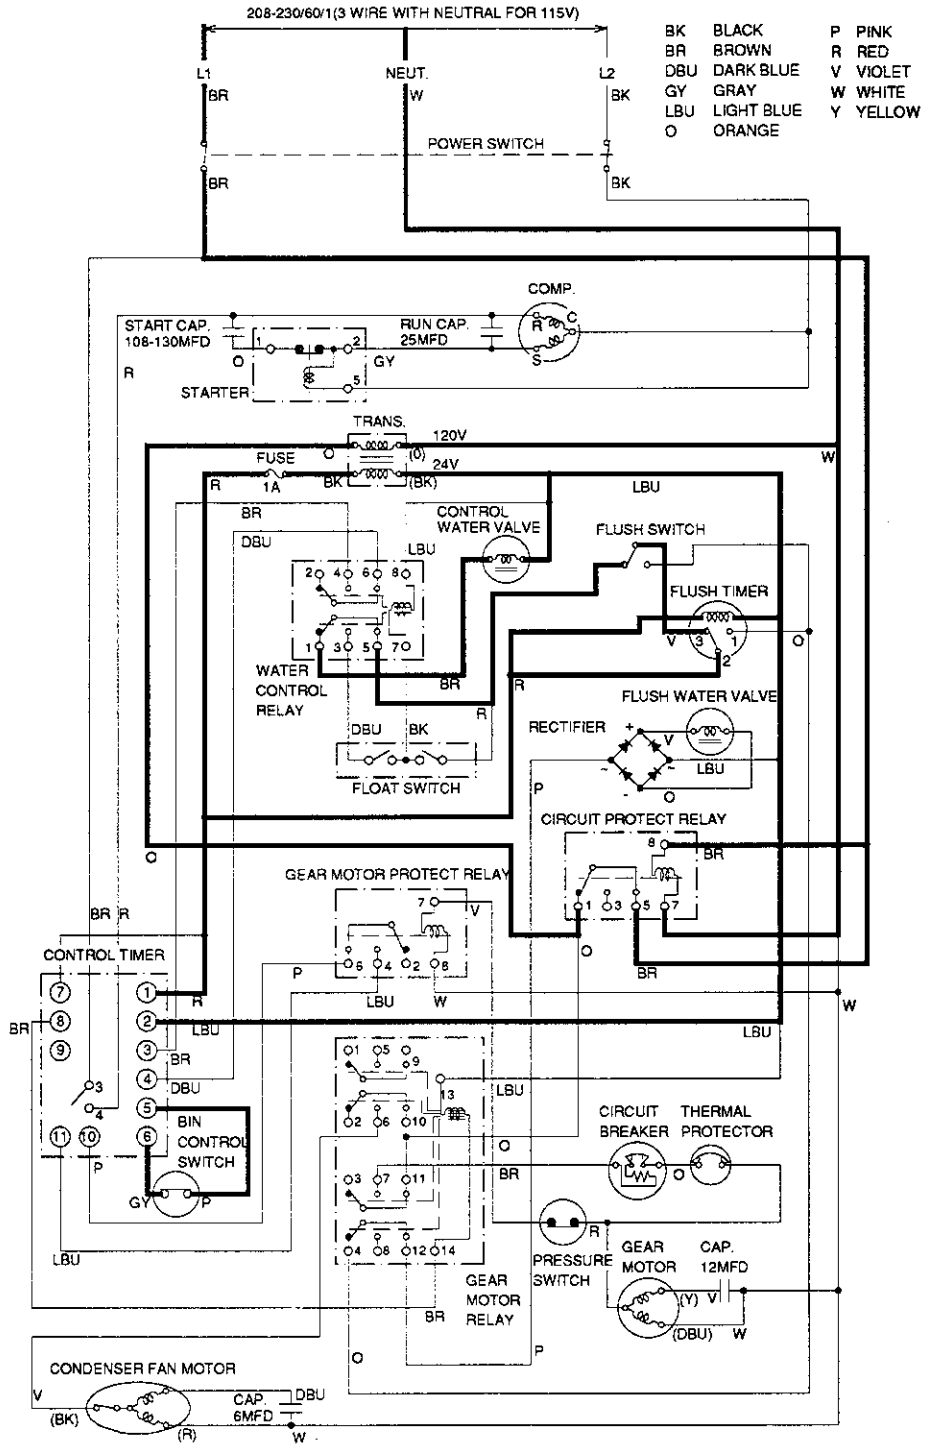


(F-1000MAE)

[b] When Reservoir has been filled up, Gear Motor starts immediately.

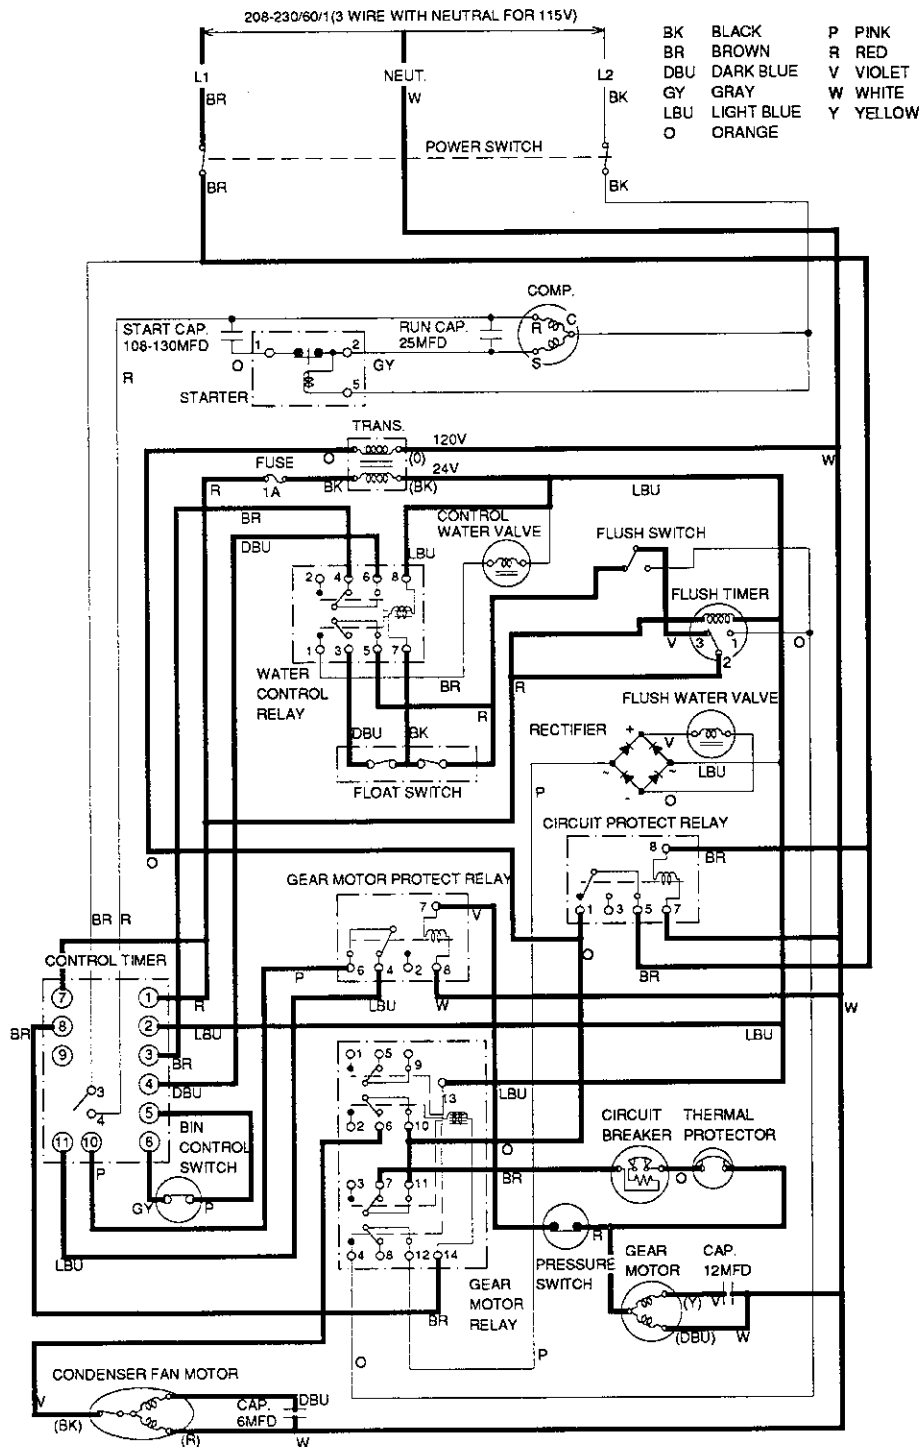


(F-1000MAE)

[c] Compressor starts about 60 sec. after Gear Motor starts.

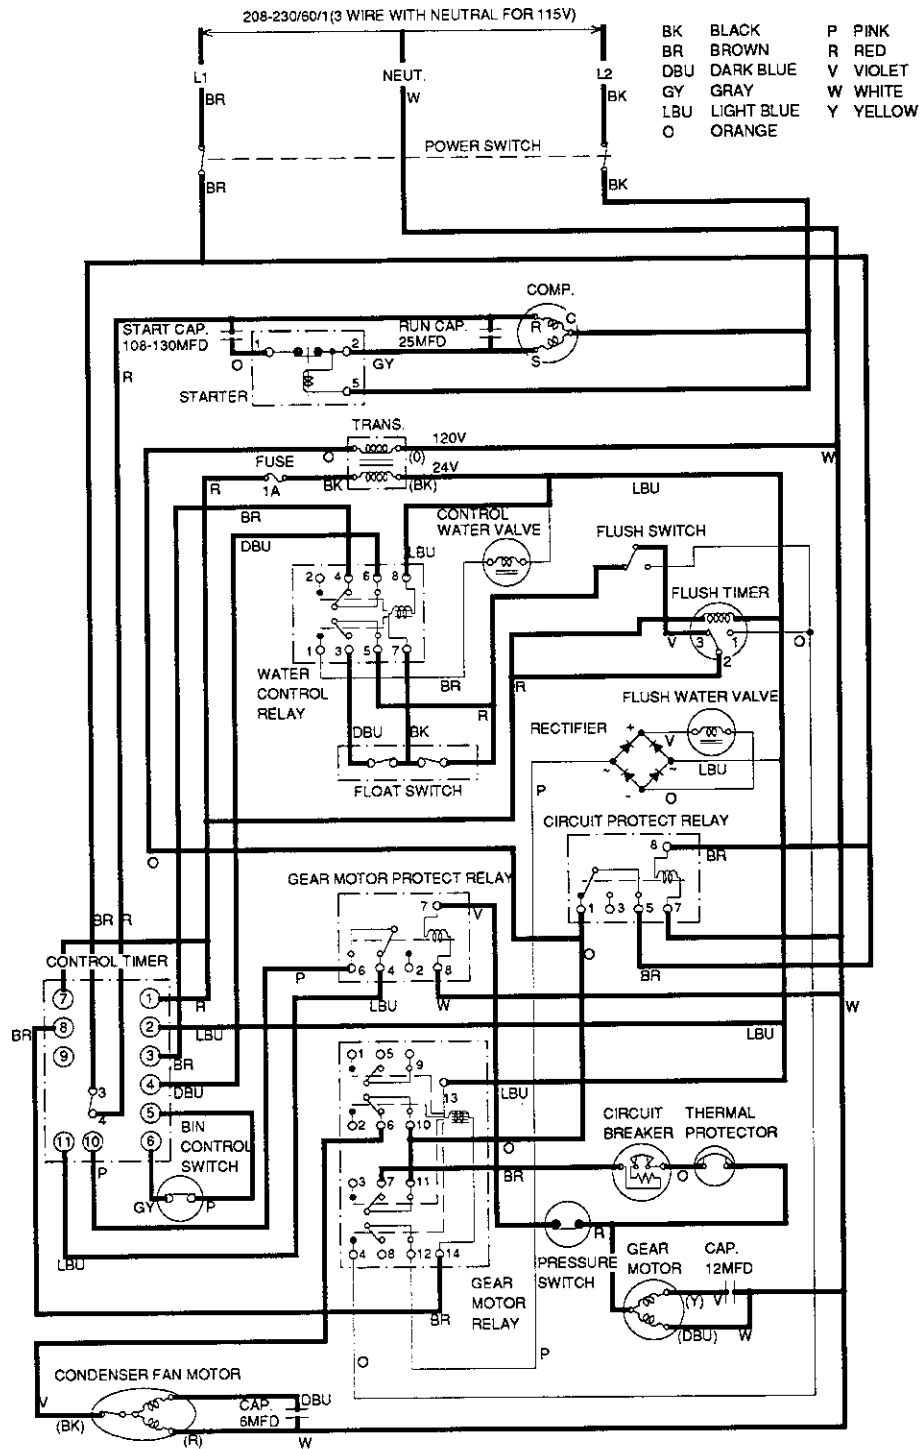


(F-1000MAE)

[d] Bin Control operates, and about 6 sec. later Compressor and Gear Motor stop simultaneously.

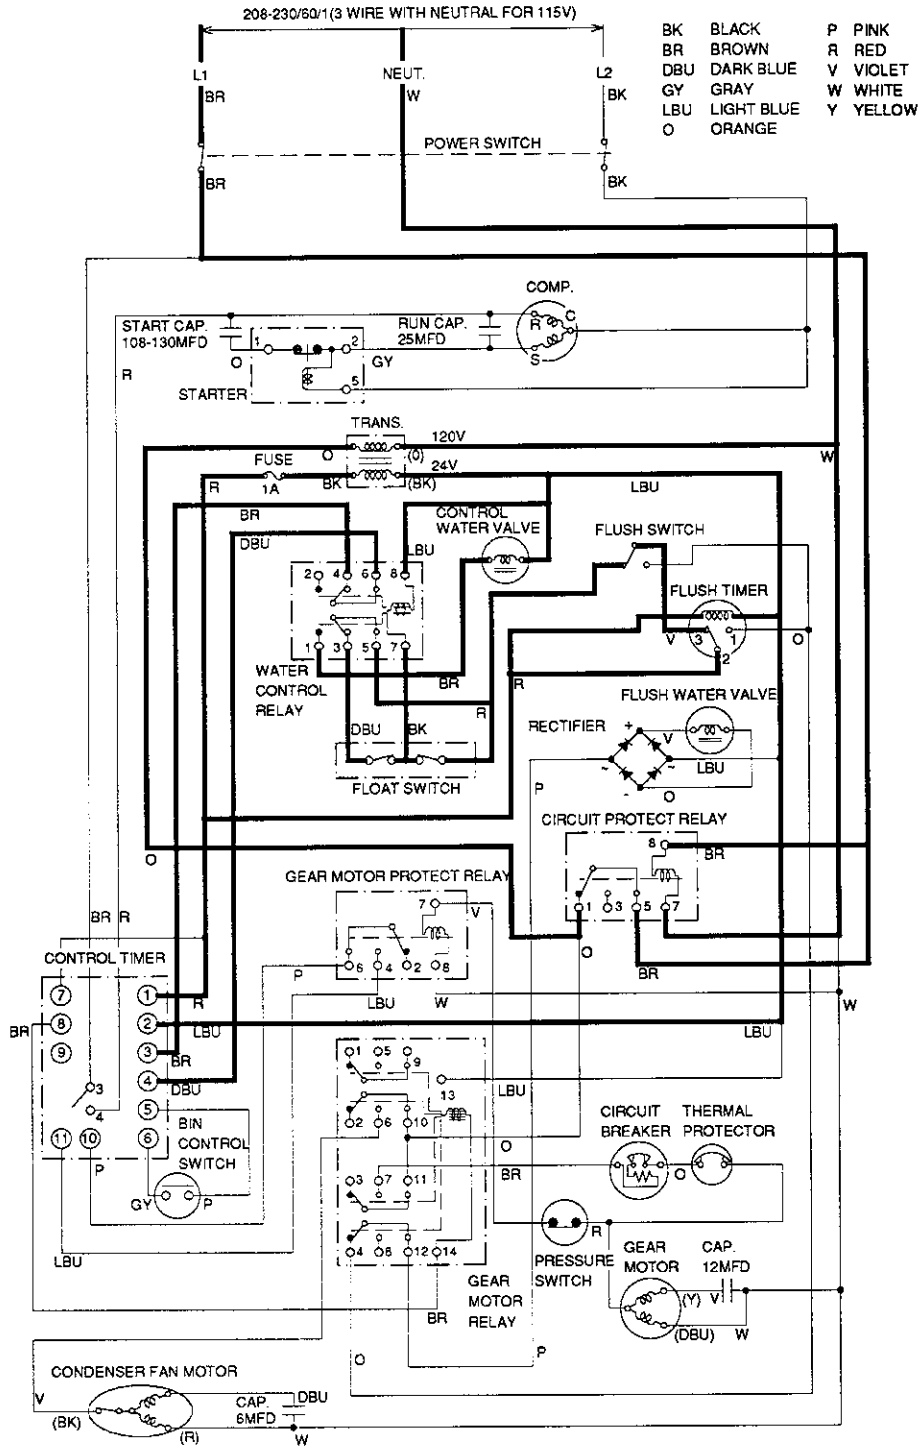

(F-1000MAE)


[e] Low Water (Except Water-cooled Model)

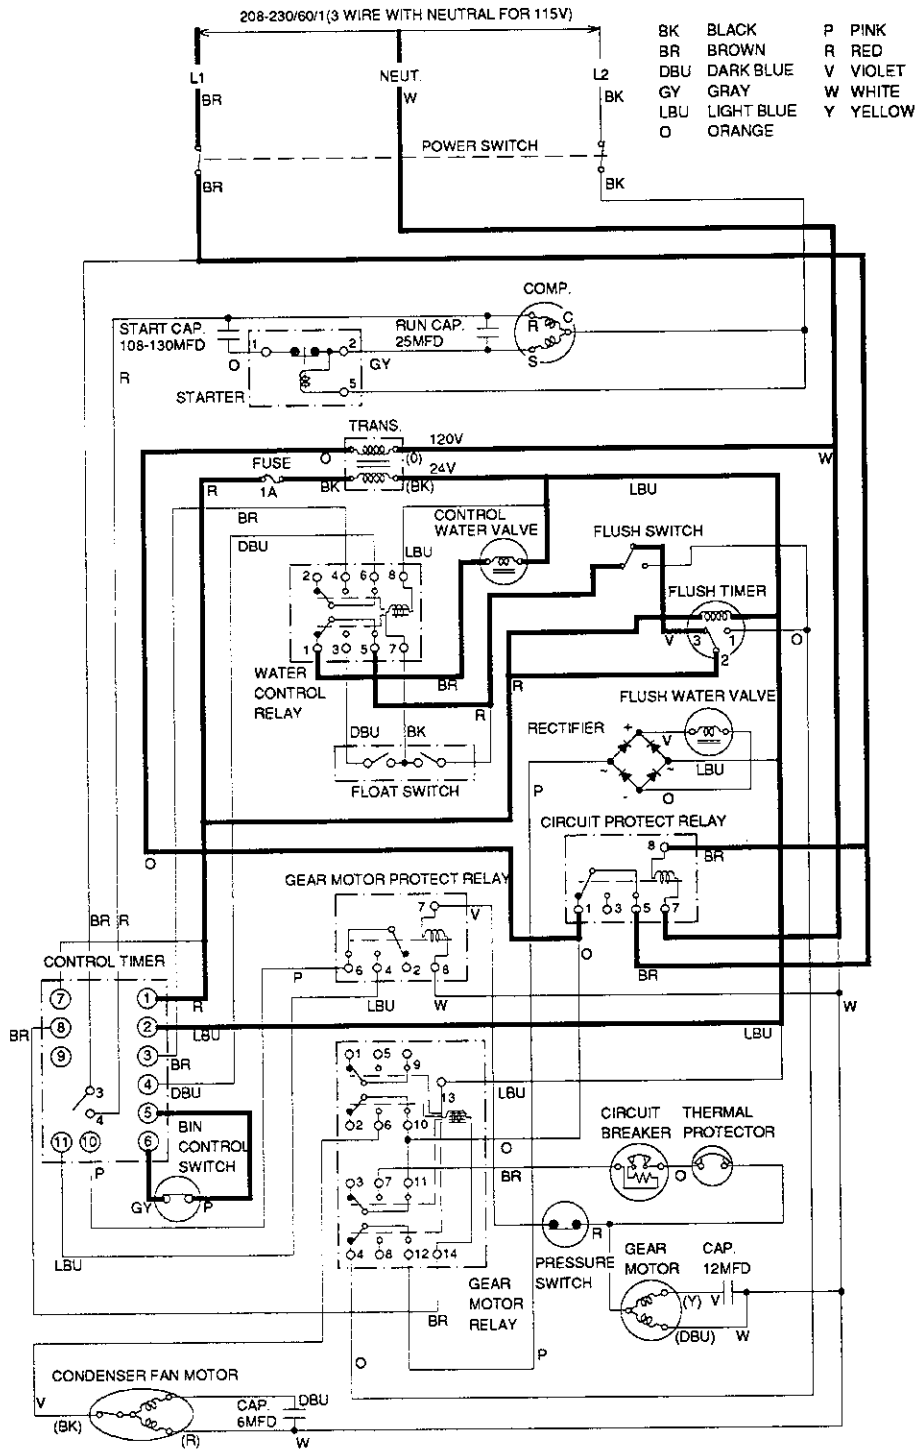

(F-1000MAE)


[f] Low Water (Water-cooled Model)
Compressor operates intermittently.

- | | | | |
|-----|------------|---|--------|
| BK | BLACK | P | PINK |
| BR | BROWN | R | RED |
| DBU | DARK BLUE | V | VIOLET |
| GY | GRAY | W | WHITE |
| LBU | LIGHT BLUE | Y | YELLOW |
| O | ORANGE | | |

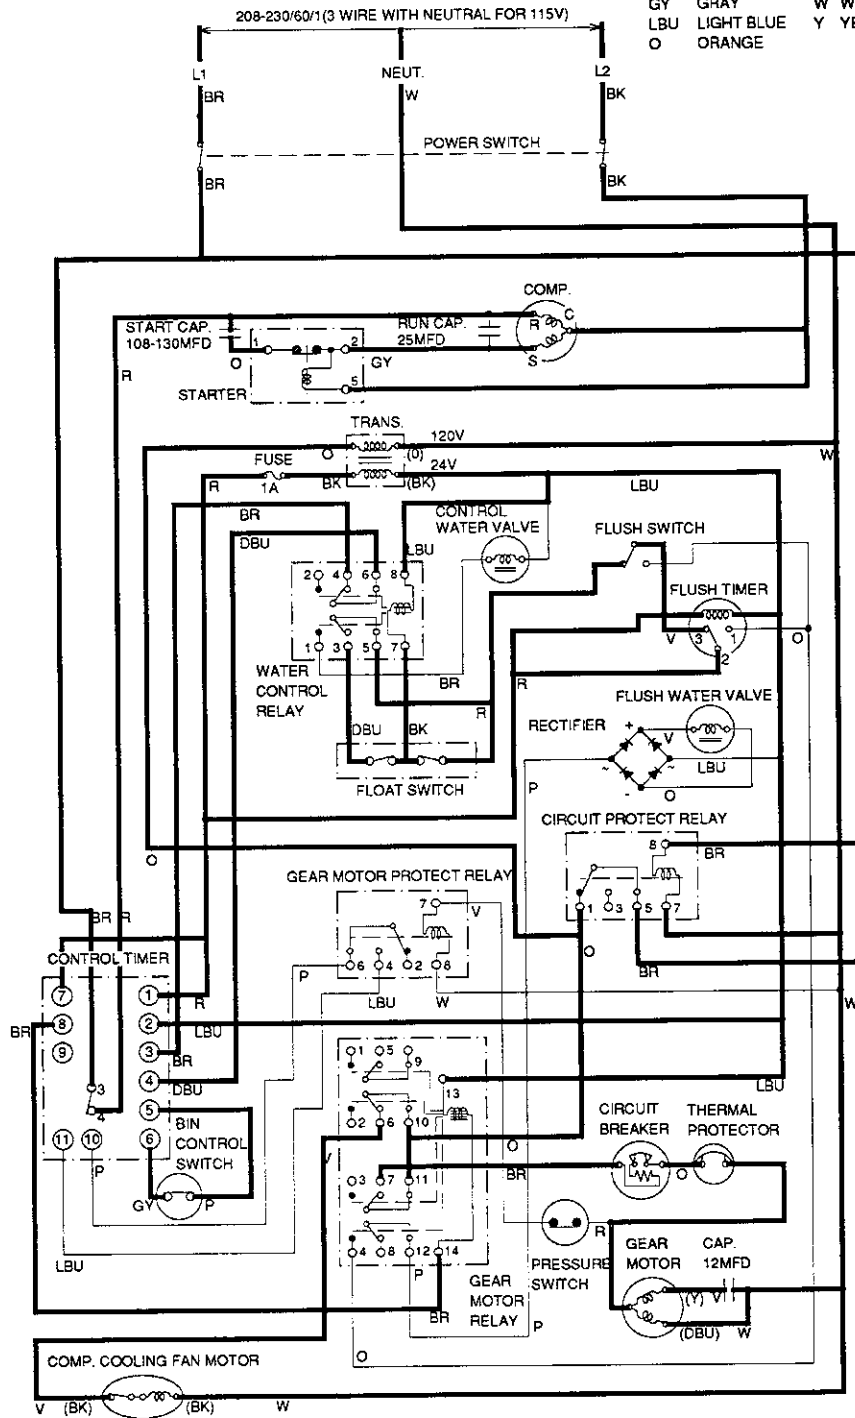


(F-1000MWE)

[g] When Flush Timer operates (for 15 min. every 12 hours) or Flush Switch is moved to "FLUSH" position, Flush Water Valve opens and flushes Reservoir and Evaporator.

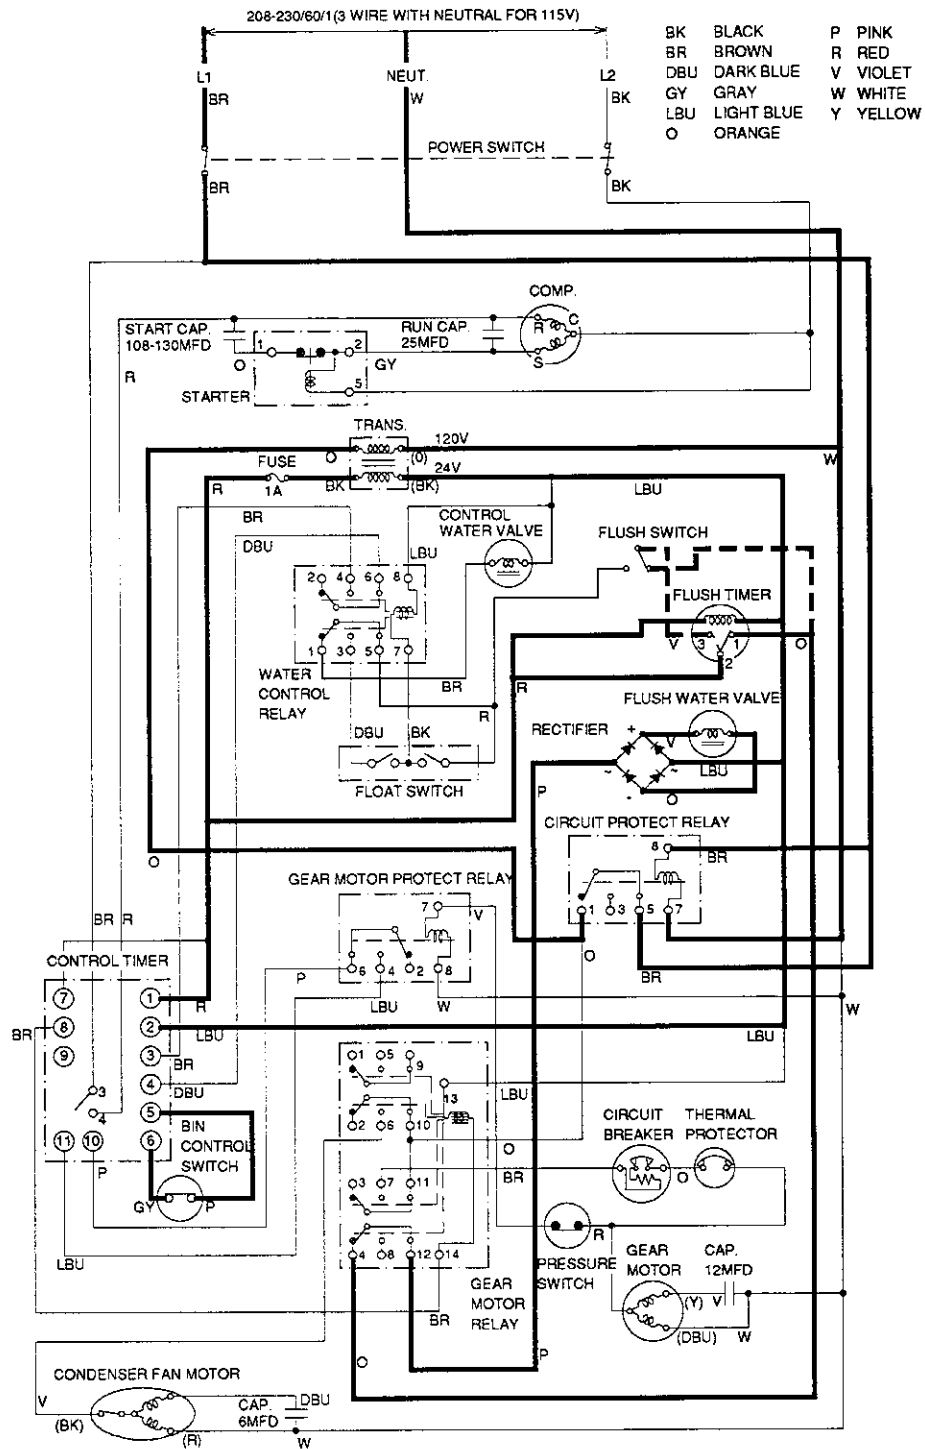


(F-1000MAE)


[h] When 208 - 230V are supplied to Circuit Protect Relay, it operates and protects the circuit from miswiring. If the power supply is properly connected, the contact of Circuit Protect Relay does not move even when the coil is energized.

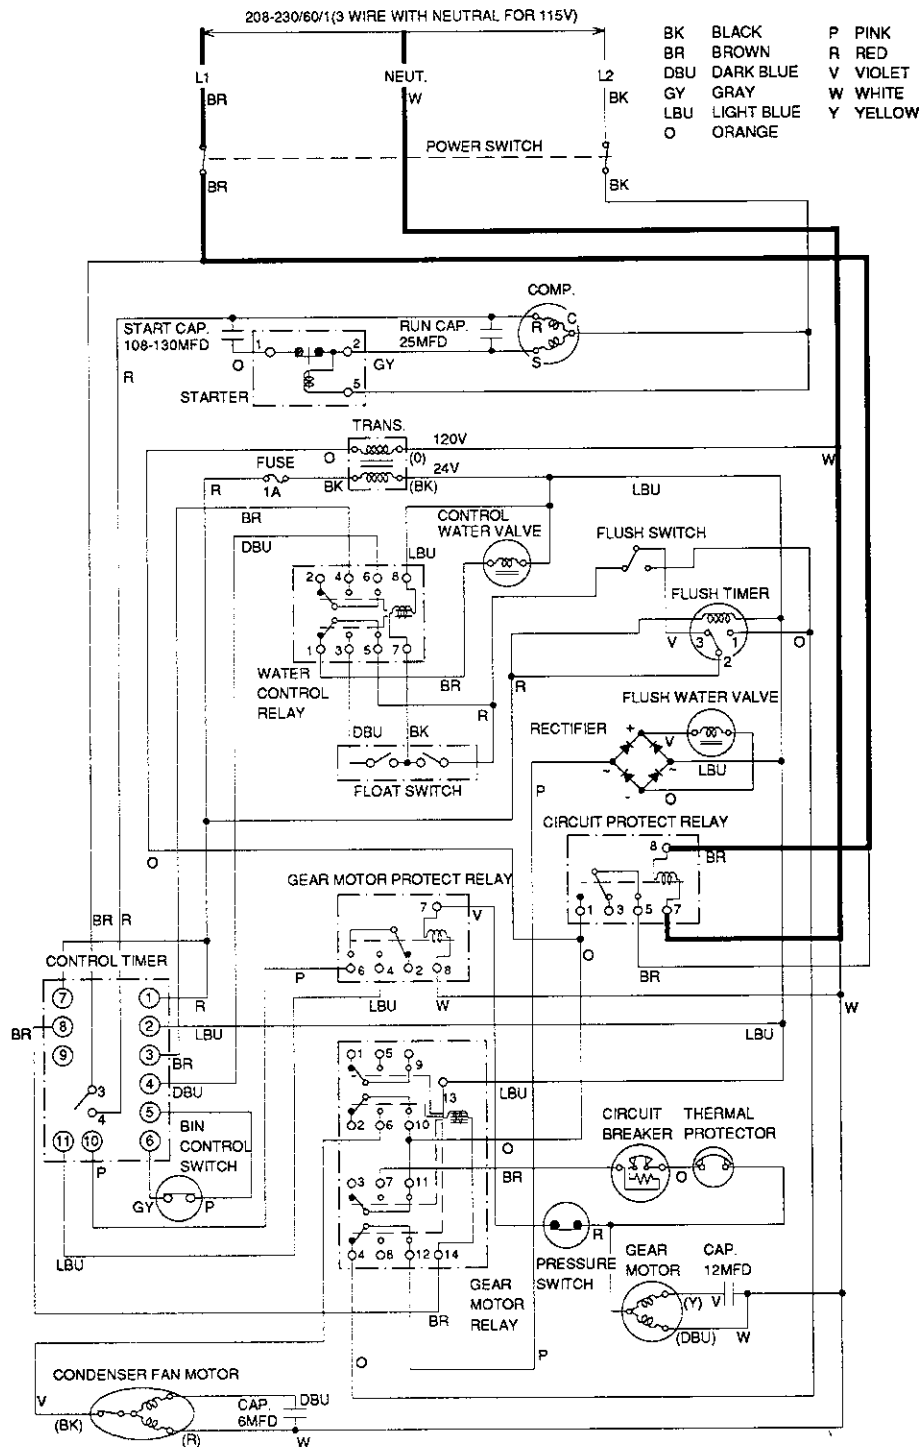


(F-1000MAE)

4. TIMING CHART

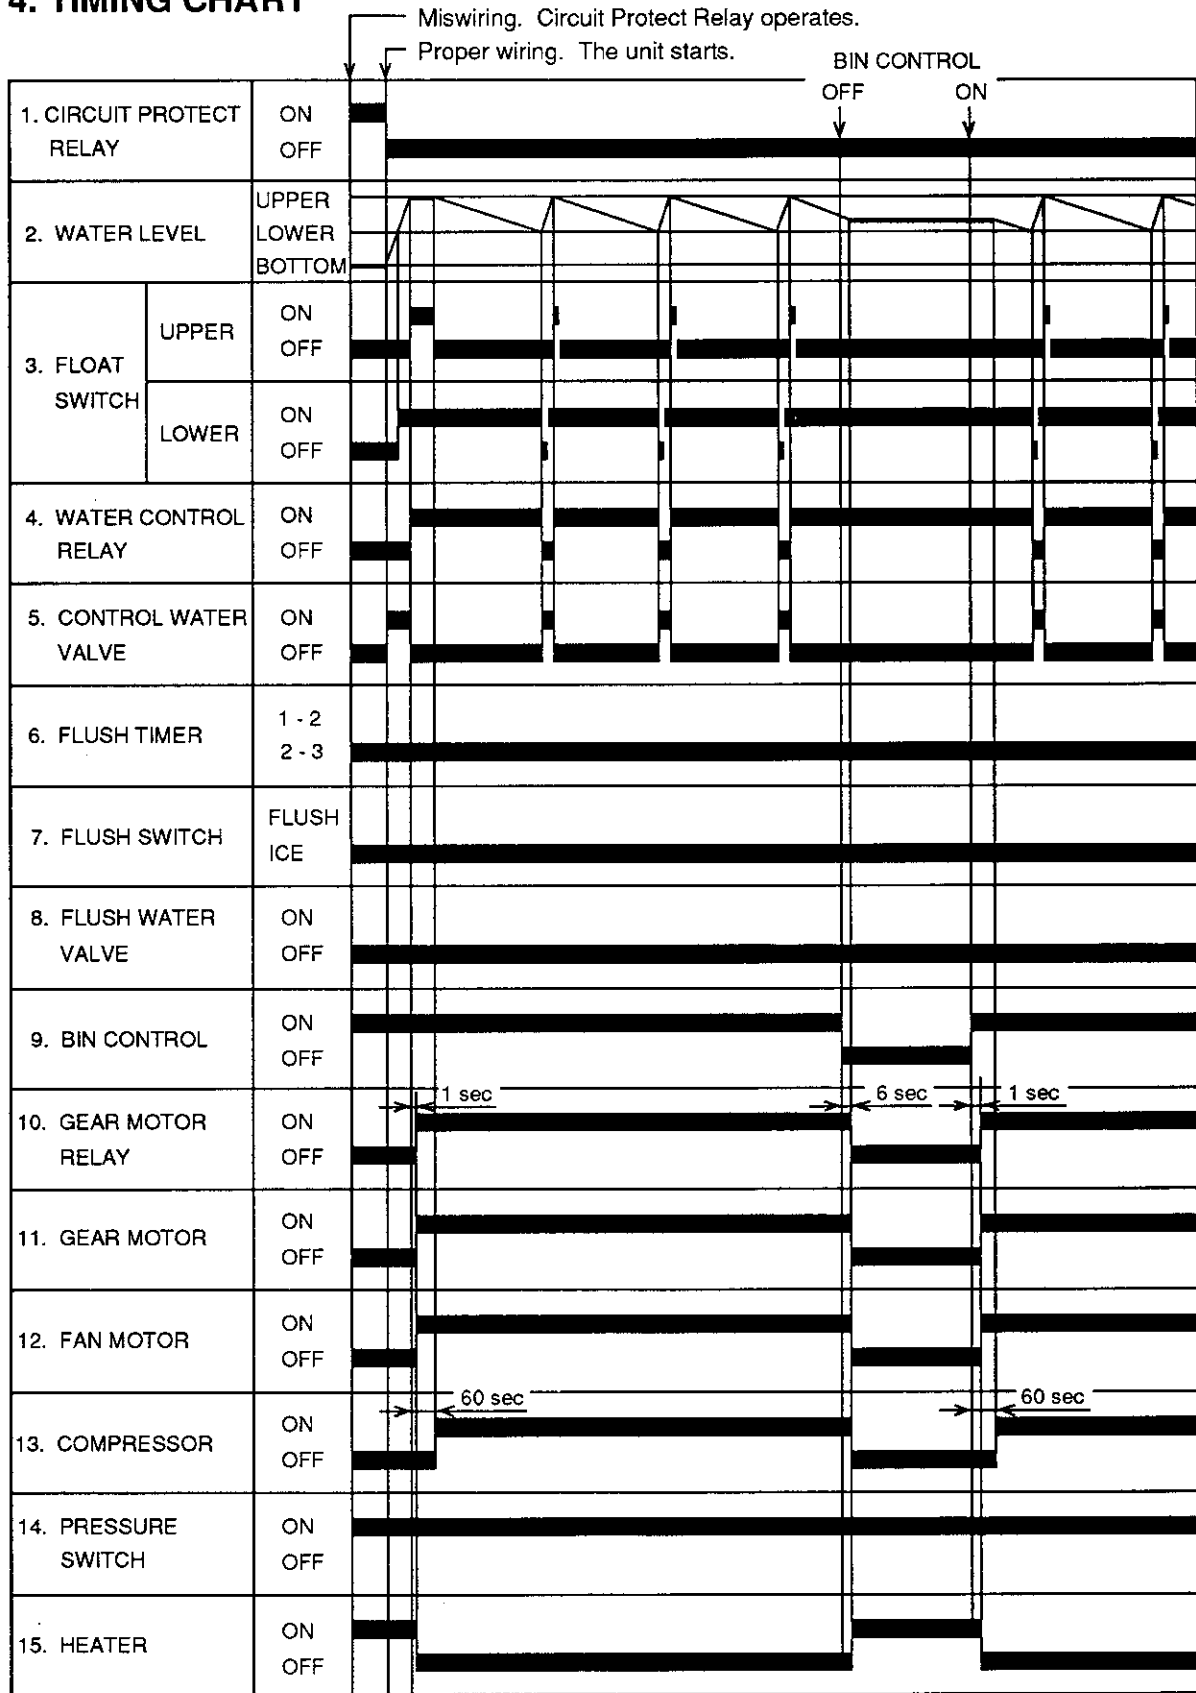

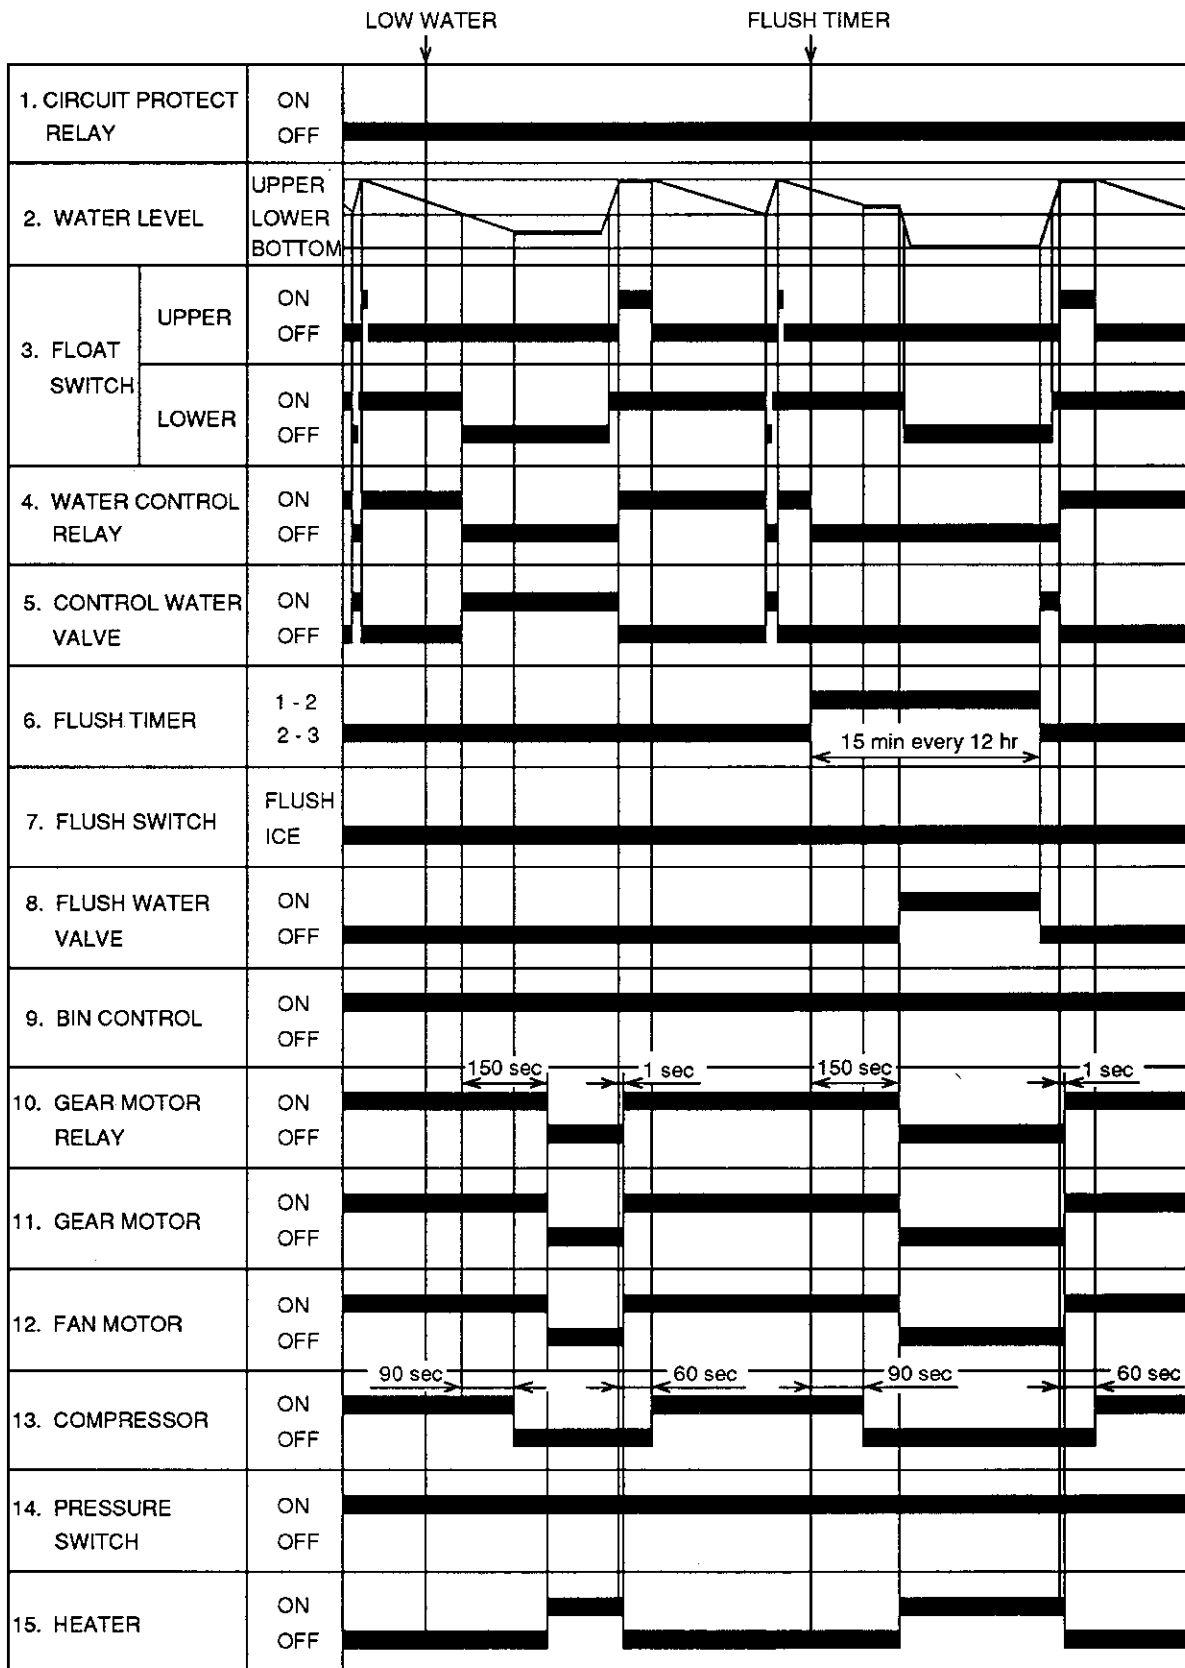

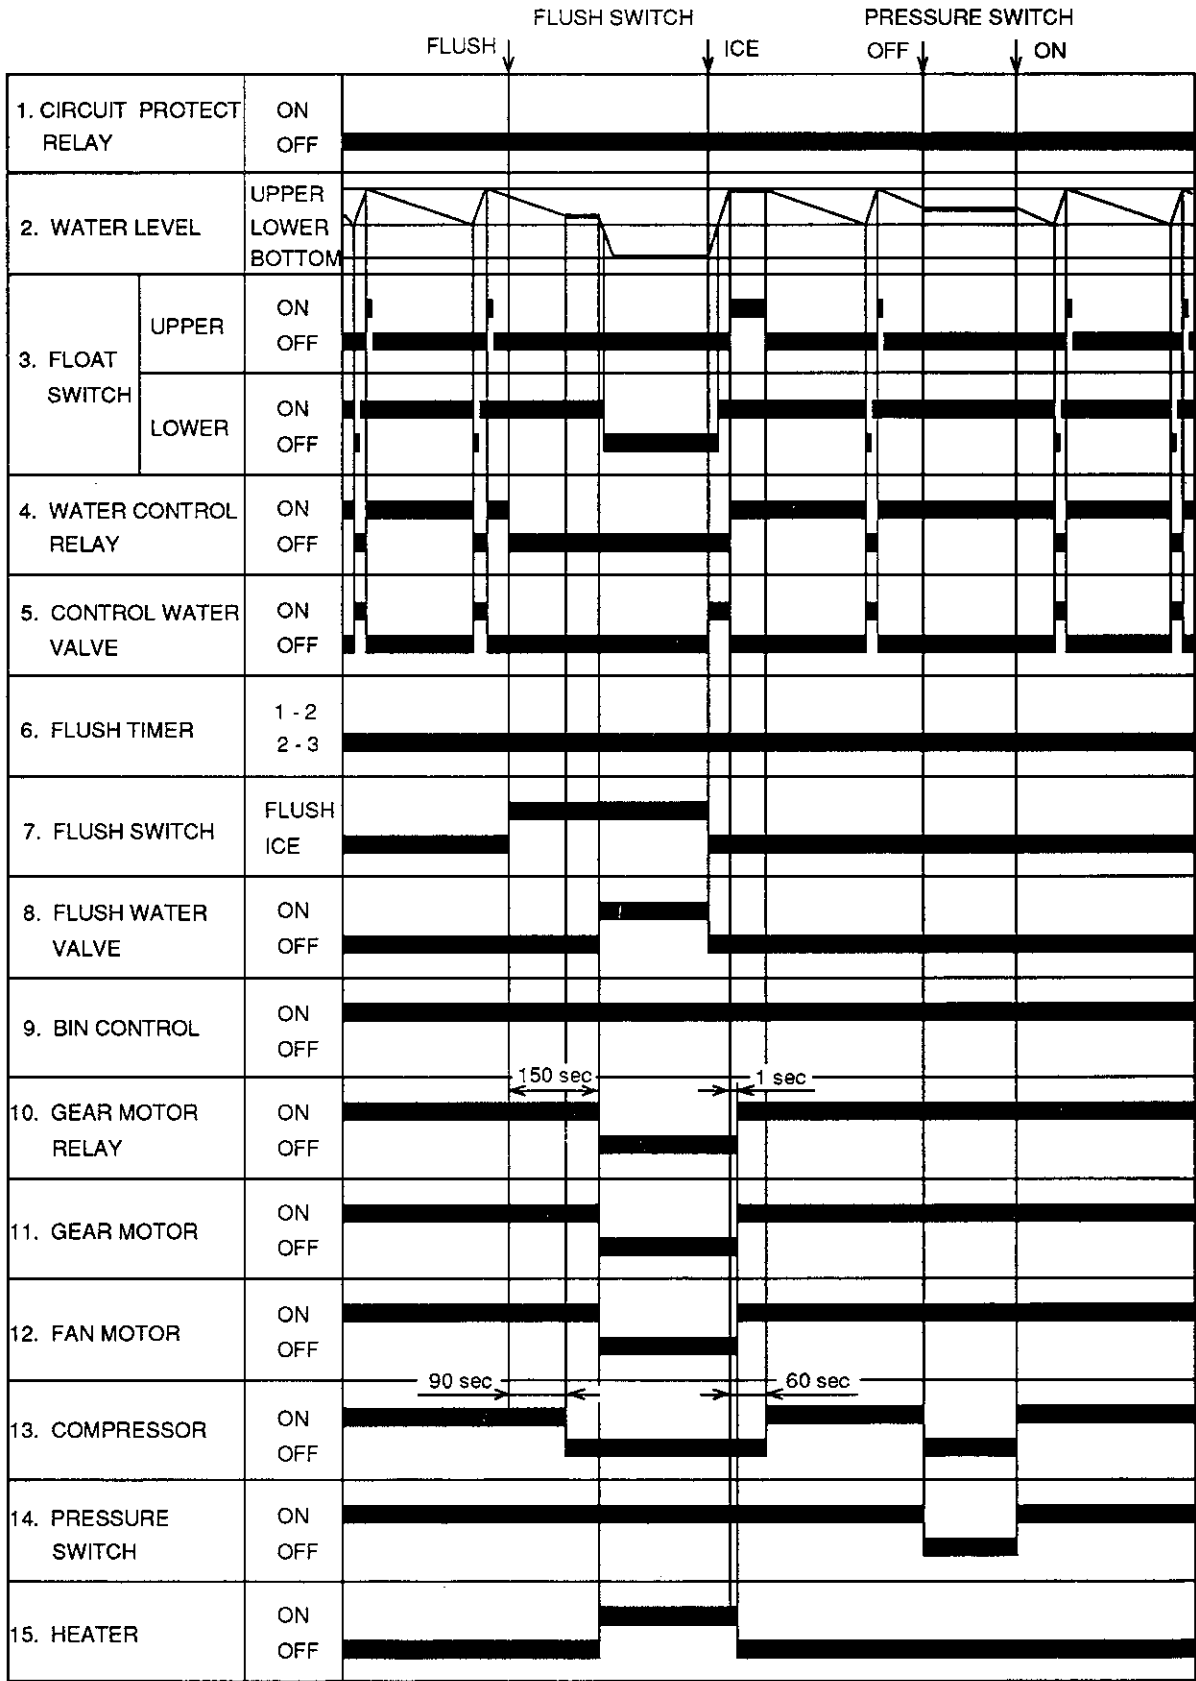

5. PERFORMANCE DATA

F-1000MAB

APPROXIMATE ICE PRODUCTION PER 24 HR. lbs./day (kg/day)	Ambient Temp. (° F)	Water Temp. (° F)		
		50	70	90
	70	*1020 (463)	920 (417)	840 (381)
	80	950 (431)	865 (392)	790 (358)
	90	880 (399)	* 800 (363)	740 (336)
	100	810 (367)	730 (331)	680 (308)
APPROXIMATE ELECTRIC CONSUMPTION watts (115/230V)	70	*1200	1200	1200
	80	1220	1220	1220
	90	1250	*1250	1250
	100	1280	1280	1280
APPROXIMATE WATER CONSUMPTION PER 24 HR. gal./day (ℓ/day)	70	122 (463)	110 (417)	101 (381)
	80	114 (431)	104 (392)	95 (358)
	90	105 (399)	96 (363)	89 (336)
	100	97 (367)	87 (331)	81 (308)
EVAPORATOR OUTLET TEMP. ° F (° C)	70	21 (-5)	21 (-5)	21 (-5)
	80	21 (-5)	21 (-5)	21 (-5)
	90	25 (-4)	21 (-5)	21 (-5)
	100	27 (-3)	27 (-3)	27 (-3)
HEAD PRESSURE PSIG (kg/cm ² G)	70	195 (13.7)	200 (14.0)	200 (14.0)
	80	223 (15.6)	223 (15.6)	223 (15.6)
	90	250 (17.5)	250 (17.5)	250 (17.5)
	100	285 (20.0)	285 (20.0)	285 (20.0)
SUCTION PRESSURE PSIG (kg/cm ² G)	70	29 (2.0)	30 (2.1)	30 (2.1)
	80	33 (2.3)	32 (2.2)	32 (2.2)
	90	34 (2.4)	34 (2.4)	36 (2.5)
	100	37 (2.6)	37 (2.6)	37 (2.6)
TOTAL HEAT OF REJECTION	8480 BTU/h (AT 90 ° F/ WT 70 ° F)			

Note: The data without *marks should be used for reference.

F-1000MWB

APPROXIMATE ICE PRODUCTION PER 24 HR. lbs./day (kg/day)	Ambient Temp. (°F)	Water Temp. (°F)		
		50	70	90
	70	*1010(458)	890(404)	750(340)
	80	1005(456)	880(399)	745(338)
	90	995(451)	*865(392)	740(336)
	100	980(445)	845(383)	730(331)
APPROXIMATE ELECTRIC CONSUMPTION watts (230V)	70	*1060	1060	1100
	80	1060	1060	1100
	90	1060	*1060	1100
	100	1100	1100	1100
APPROXIMATE WATER CONSUMPTION PER 24 HR. gal./day (m ³ /day)	70	645(2.44)	900(3.41)	1790(6.78)
	80	655(2.48)	910(3.44)	1835(6.95)
	90	655(2.48)	915(3.46)	1950(7.38)
	100	685(2.59)	945(3.58)	2100(7.95)
EVAPORATOR OUTLET TEMP. °F (°C)	70	21(-6)	21(-6)	21(-5)
	80	21(-6)	21(-6)	21(-5)
	90	21(-6)	21(-6)	21(-5)
	100	21(-6)	21(-5)	21(-5)
HEAD PRESSURE PSIG (kg/cm ² G)	70	215(15.1)	215(15.1)	225(15.8)
	80	215(15.1)	215(15.1)	225(15.8)
	90	215(15.1)	215(15.1)	225(15.8)
	100	215(15.1)	220(15.4)	230(16.1)
SUCTION PRESSURE PSIG (kg/cm ² G)	70	30(2.1)	30(2.1)	32(2.2)
	80	30(2.1)	30(2.1)	32(2.2)
	90	30(2.1)	30(2.1)	34(2.4)
	100	32(2.2)	33(2.3)	34(2.4)
WATER FLOW FOR CONDENSER	84 gal/h (AT 100 °F/ WT 90 °F)			
PRESSURE DROP OF COOLING WATER LINE	Less than 7 PSIG			
HEAT OF REJECTION FROM CONDENSER	6700 BTU/h (AT 90 °F/ WT 70 °F)			
HEAT OR REJECTION FROM COMPRESSOR	1260 BTU/h (AT 90 °F/ WT 70 °F)			

Note: The data without *marks should be used for reference.

F-1000MRB

APPROXIMATE ICE PRODUCTION PER 24 HR.	Ambient	Water Temp. (° F)		
	Temp. (° F)	50	70	90
lbs./day (kg/day)	70	*1020(463)	920(417)	840(381)
	80	950(431)	865(392)	790(358)
	90	880(399)	* 800(363)	740(336)
	100	810(367)	730(331)	680(308)
APPROXIMATE ELBCTRIC CONSUMPTION	70	* 1250	1250	1250
	80	1270	1270	1270
	90	1300	* 1300	1300
	100	1300	1300	1300
APPROXIMATE WATER CONSUMPTION PER 24 HR.	70	122(463)	110(417)	101(381)
	80	114(431)	104(392)	95(358)
	90	105(399)	96(363)	89(336)
	100	97(367)	87(331)	81(308)
EVAPORATOR OUTLET TEMP.	70	21(-6)	21(-6)	21(-6)
	80	21(-6)	21(-6)	21(-6)
	90	21(-6)	21(-6)	21(-6)
	100	21(-5)	21(-5)	21(-5)
HEAD PRESSURE	70	190(13.3)	190(13.3)	190(13.3)
	80	207(14.5)	207(14.5)	207(14.5)
	90	233(16.3)	233(16.3)	233(16.3)
	100	265(18.6)	265(18.6)	265(18.6)
SUCTION PRESSURE	70	36(2.5)	36(2.5)	36(2.5)
	80	36(2.5)	36(2.5)	36(2.5)
	90	37(2.6)	37(2.6)	37(2.6)
	100	39(2.7)	39(2.7)	39(2.7)
HEAT OF REJECTION FROM CONDENSER	8800 BTU/h (AT 90° F/WT 70° F)			
HEAT OR REJECTION FROM COMPRESSOR	1260 BTU/h (AT 90° F/WT 70° F)			
CONDENSER VOLUME	74.5 cu in			

Note: The data without *marks should be used for reference.

F-1000MAE

APPROXIMATE ICE PRODUCTION PER 24 HR. lbs./day (kg/day)	Ambient Temp. (° F)	Water Temp. (° F)		
		50	70	90
	70	*1000(453)	910(412)	840(380)
	80	920(417)	845(383)	790(358)
	90	850(385)	* 780(353)	720(326)
	100	765(346)	710(322)	680(308)
APPROXIMATE ELECTRIC CONSUMPTION watts (115/230V)	70	* 1060	1060	1060
	80	1120	1120	1150
	90	1150	* 1150	1200
	100	1200	1220	1250
APPROXIMATE WATER CONSUMPTION PER 24 HR. gal./day (ℓ/day)	70	120(453)	109(412)	101(380)
	80	110(417)	101(383)	95(358)
	90	102(385)	93(353)	86(326)
	100	92(346)	85(322)	81(308)
EVAPORATOR OUTLET TEMP. ° F (° C)	70	14(-10)	14(-10)	14(-10)
	80	16 (-9)	16 (-9)	16 (-9)
	90	16 (-9)	16 (-9)	16 (-9)
	100	16 (-9)	16 (-9)	16 (-9)
HEAD PRESSURE PSIG (kg/cm ² G)	70	171(12.0)	171(12.0)	171(12.0)
	80	199(14.0)	199(14.0)	199(14.0)
	90	220(15.5)	220(15.5)	220(15.5)
	100	256(18.0)	256(18.0)	256(18.0)
SUCTION PRESSURE PSIG (kg/cm ² G)	70	24(1.7)	24(1.7)	24(1.7)
	80	28(2.0)	28(2.0)	28(2.0)
	90	31(2.2)	31(2.2)	31(2.2)
	100	36(2.5)	36(2.5)	36(2.5)
TOTAL HEAT OF REJECTION	8200 BTU/h (AT 90° F/ WT 70° F)			

Note: The data without *marks should be used for reference.

F-1000MWE

APPROXIMATE ICE PRODUCTION PER 24 HR.	Ambient Temp. (° F)	Water Temp. (° F)		
		50	70	90
lbs./day (kg/day)	70	* 930(421)	830(376)	750(340)
	80	910(412)	820(371)	730(331)
	90	890(403)	* 810(367)	720(326)
	100	870(394)	800(362)	710(322)
APPROXIMATE ELECTRIC CONSUMPTION	70	* 1050	1050	1050
	80	1050	1050	1050
	90	1050	* 1050	1050
	100	1050	1050	1050
APPROXIMATE WATER CONSUMPTION PER 24 HR.	70	495(1.87)	625(2.37)	1085(4.11)
	80	515(1.95)	675(2.56)	1145(4.34)
	90	530(2.00)	705(2.67)	1185(4.49)
	100	550(2.08)	725(2.74)	1240(4.69)
EVAPORATOR OUTLET TEMP.	70	18(-8)	18(-8)	18(-8)
	80	18(-8)	18(-8)	18(-8)
	90	18(-8)	18(-8)	18(-8)
	100	18(-8)	18(-8)	18(-8)
HEAD PRESSURE	70	215(15.1)	215(15.1)	215(15.1)
	80	215(15.1)	215(15.1)	215(15.1)
	90	215(15.1)	215(15.1)	215(15.1)
	100	215(15.1)	215(15.1)	215(15.1)
SUCTION PRESSURE	70	30(2.1)	30(2.1)	32(2.2)
	80	30(2.1)	30(2.1)	32(2.2)
	90	30(2.1)	30(2.1)	32(2.2)
	100	30(2.1)	30(2.1)	32(2.2)
WATER FLOW FOR CONDENSER	48 gal/h (AT 100° F/ WT 90° F)			
PRESSURE DROP OF COOLING WATER LINE	Less than 7 PSIG			
HEAT OF REJECTION FROM CONDENSER	6800 BTU/h (AT 90° F/ WT 70° F)			
HEAT OR REJECTION FROM COMPRESSOR	1270 BTU/h (AT 90° F/ WT 70° F)			

Note: The data without *marks should be used for reference.

F-1000MRE

APPROXIMATE ICE PRODUCTION PER 24 HR.	Ambient	Water Temp. (° F)		
	Temp. (° F)	50	70	90
lbs./day (kg/day)	70	* 920(418)	840(380)	760(345)
	80	860(394)	810(367)	720(327)
	90	820(372)	* 750(340)	700(317)
	100	760(345)	690(313)	630(286)
APPROXIMATE ELECTRIC CONSUMPTION	70	* 1210	1210	1220
	80	1220	1220	1220
	90	1240	* 1250	1250
	100	1250	1250	1250
APPROXIMATE WATER CONSUMPTION PER 24 HR.	70	110(418)	101(380)	91(345)
	80	104(394)	97(367)	86(327)
	90	98(372)	90(340)	83(317)
	100	91(345)	83(313)	75(286)
EVAPORATOR OUTLET TEMP.	70	18(-8)	18(-8)	18(-8)
	80	18(-8)	18(-8)	18(-8)
	90	18(-8)	20(-7)	20(-7)
	100	20(-7)	20(-7)	20(-7)
HEAD PRESSURE	70	193(13.6)	193(13.6)	193(13.6)
	80	196(13.8)	196(13.8)	196(13.8)
	90	202(14.2)	202(14.2)	202(14.2)
	100	238(16.8)	238(16.8)	238(16.8)
SUCTION PRESSURE	70	26(1.8)	26(1.8)	26(1.8)
	80	26(1.8)	26(1.8)	26(1.8)
	90	26(1.8)	26(1.8)	26(1.8)
	100	33(2.3)	33(2.3)	33(2.3)
HEAT OF REJECTION FROM CONDENSER	8300 BTU/h (AT 90° F/WT 70° F)			
HEAT OR REJECTION FROM COMPRESSOR	1270 BTU/h (AT 90° F/WT 70° F)			
CONDENSER VOLUME	74.5 cu in			

Note: The data without *marks should be used for reference.

F-1000MAE-C

APPROXIMATE ICE PRODUCTION PER 24 HR.	Ambient Temp. (° F)	Water Temp. (° F)		
		50	70	90
lbs./day (kg/day)	70	* 905(410)	815(370)	740(336)
	80	815(370)	755(342)	675(306)
	90	775(351)	* 695(315)	640(290)
	100	705(319)	640(290)	595(270)
APPROXIMATE ELECTRIC CONSUMPTION	70	* 1025	1025	1025
watts (115/230V)	80	1050	1050	1050
	90	1075	* 1075	1075
	100	1125	1125	1125
APPROXIMATE WATER CONSUMPTION PER 24 HR.	70	108(410)	98(370)	89(336)
gal./day (ℓ/day)	80	98(370)	90(342)	81(306)
	90	93(351)	83(315)	77(290)
	100	84(319)	77(290)	71(270)
EVAPORATOR OUTLET TEMP.	70	12(-11)	12(-11)	12(-11)
° F (° C)	80	14(-10)	14(-10)	14(-10)
	90	16 (-9)	16 (-9)	16 (-9)
	100	16 (-9)	16 (-9)	16 (-9)
HEAD PRESSURE	70	159(11.1)	160(11.2)	163(11.4)
PSIG (kg/cm ² G)	80	189(13.2)	191(13.4)	191(13.4)
	90	207(14.5)	212(14.9)	212(14.9)
	100	256(17.9)	256(17.9)	257(18.0)
SUCTION PRESSURE	70	26(1.8)	26(1.8)	26(1.8)
PSIG (kg/cm ² G)	80	29(2.0)	29(2.0)	29(2.0)
	90	29(2.0)	29(2.0)	29(2.0)
	100	31(2.2)	31(2.2)	31(2.2)
TOTAL HEAT OF REJECTION	8200 BTU/h (AT 90° F/ WT 70° F)			

Note: The data without *marks should be used for reference.

F-1000MWE-C

APPROXIMATE ICE PRODUCTION PER 24 HR.	Ambient Temp. (° F)	Water Temp. (° F)		
		50	70	90
lbs./day (kg/day)	70	870(394)	785(356)	690(313)
	80	835(379)	760(345)	680(308)
	90	835(379)	760(345)	670(304)
	100	795(361)	720(327)	645(293)
APPROXIMATE ELECTRIC CONSUMPTION	70	* 1050	1050	1050
	80	1050	1050	1050
	90	1050	* 1050	1050
	100	1050	1050	1050
APPROXIMATE WATER CONSUMPTION PER 24 HR.	70	499(1.89)	624(2.36)	1033(3.91)
	80	513(1.94)	668(2.53)	1136(4.30)
	90	526(1.99)	695(2.63)	1284(4.86)
	100	547(2.07)	729(2.76)	1313(4.97)
EVAPORATOR OUTLET TEMP.	70	18(-8)	18(-8)	19(-7)
	80	19(-7)	19(-7)	21(-6)
	90	19(-7)	19(-7)	21(-6)
	100	19(-7)	19(-7)	21(-6)
HEAD PRESSURE	70	214(15.0)	215(15.1)	221(15.5)
	80	214(15.0)	215(15.1)	220(15.4)
	90	214(15.0)	215(15.1)	221(15.5)
	100	214(15.0)	215(15.1)	224(15.7)
SUCTION PRESSURE	70	32(2.2)	33(2.3)	34(2.4)
	80	32(2.2)	33(2.3)	34(2.4)
	90	32(2.2)	33(2.3)	34(2.4)
	100	33(2.3)	33(2.3)	34(2.4)
WATER FLOW FOR CONDENSER		51 gal/h (AT 100° F/ WT 90° F)		
PRESSURE DROP OF COOLING WATER LINE		Less than 7 PSIG		
HEAT OF REJECTION FROM CONDENSER		6800 BTU/h (AT 90° F/ WT 70° F)		
HEAT OR REJECTION FROM COMPRESSOR		1270 BTU/h (AT 90° F/ WT 70° F)		

Note: The data without *marks should be used for reference.

F-1000MRE-C

APPROXIMATE ICE PRODUCTION PER 24 HR.	Ambient Temp. (° F)	Water Temp. (° F)		
		50	70	90
lbs./day (kg/day)	70	* 915(415)	830(376)	775(352)
	80	885(401)	805(365)	735(333)
	90	860(390)	* 770(349)	700(318)
	100	755(342)	700(317)	640(290)
APPROXIMATE ELECTRIC CONSUMPTION watts (115/230V)	70	* 1210	1210	1210
	80	1230	1230	1230
	90	1250	* 1250	1250
	100	1250	1250	1250
APPROXIMATE WATER CONSUMPTION PER 24 HR. gal./day (ℓ/day)	70	110(415)	99(376)	93(352)
	80	106(401)	96(365)	88(333)
	90	103(390)	92(349)	84(318)
	100	90(342)	84(317)	77(290)
EVAPORATOR OUTLET TEMP. ° F (° C)	70	23(-5)	23(-5)	23(-5)
	80	23(-5)	23(-5)	23(-5)
	90	23(-5)	23(-5)	23(-5)
	100	24(-4)	24(-4)	24(-4)
HEAD PRESSURE PSIG (kg/cm ² G)	70	201(14.1)	201(14.1)	201(14.1)
	80	207(14.5)	207(14.5)	207(14.5)
	90	216(15.1)	216(15.1)	216(15.1)
	100	249(17.4)	249(17.4)	249(17.4)
SUCTION PRESSURE PSIG (kg/cm ² G)	70	31(2.2)	31(2.2)	31(2.2)
	80	33(2.3)	33(2.3)	33(2.3)
	90	33(2.3)	33(2.3)	33(2.3)
	100	33(2.3)	33(2.3)	33(2.3)
HEAT OF REJECTION FROM CONDENSER	8300 BTU/h (AT 90° F/WT 70° F)			
HEAT OR REJECTION FROM COMPRESSOR	1270 BTU/h (AT 90° F/WT 70° F)			
CONDENSER VOLUME	93 cu in			


Note: The data without *marks should be used for reference.

IV. ADJUSTMENT OF COMPONENTS

1. ADJUSTMENT OF WATER REGULATING VALVE - WATER-COOLED MODEL ONLY

The Water Regulating Valve or also called "WATER REGULATOR" is factory-adjusted. No adjustment is required under normal use. Adjust the Water Regulator, if necessary, using the following procedures.

- 1) Attach a pressure gauge to the high-side line of the system. Or prepare a thermometer to check the condenser drain temperature.
- 2) Rotate the Adjustment Screw by using a flat blade screwdriver, so that the pressure gauge shows 230 PSIG (R-502 models/-B type) or 215 PSIG (R-22 models/-E type), or the thermometer reads 100 - 104°F, in 5 minutes after the icemaking process starts. When the pressure exceeds 230 or 215 PSIG, or the condenser drain temperature exceeds 104°F, rotate the Adjustment Screw counterclockwise.
- 3) Check that the pressure or the condenser drain temperature holds a stable setting.

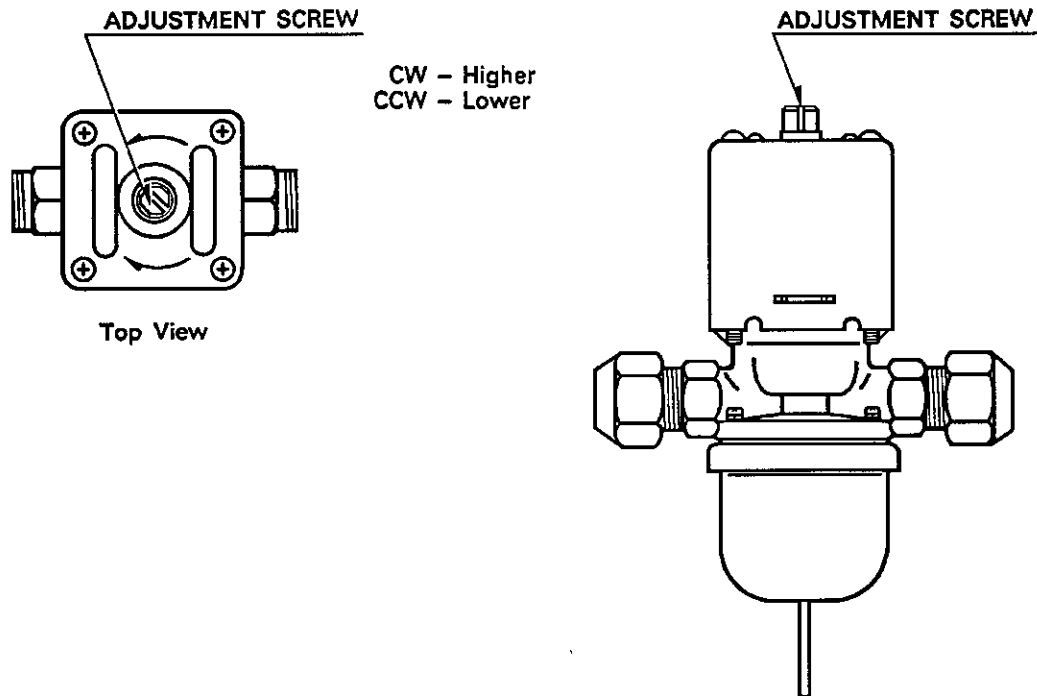

2. ADJUSTMENT OF EXPANSION VALVE - F-1000M#B SERIES ONLY


The F series icemaker unit is provided with a Thermal Expansion Valve. This valve controls the temperature at the bulb to be approx. 9 - 18 °F higher than the evaporation temperature in the Expansion Valve Outlet Pipe (Evaporator Inlet Pipe). The Expansion Valve is already adjusted to get the maximum ice production capacity. Readjust the valve only when the temperature at the bulb is too high (Compressor overheated) or too low (too much liquid refrigerant flowing back to Compressor).

Note: The Expansion Valve for F-1000M#E series is not adjustable.

- 1) Remove the Cap Nut on the end to give access to the adjusting screw.
 - (a) Turn the screw clockwise to decrease the refrigerant flow.
 - (b) Turn the screw counterclockwise to increase the refrigerant flow.

CAUTION

This is a sensitive device. Check conditions after each 1/4 to 1/2 turn.

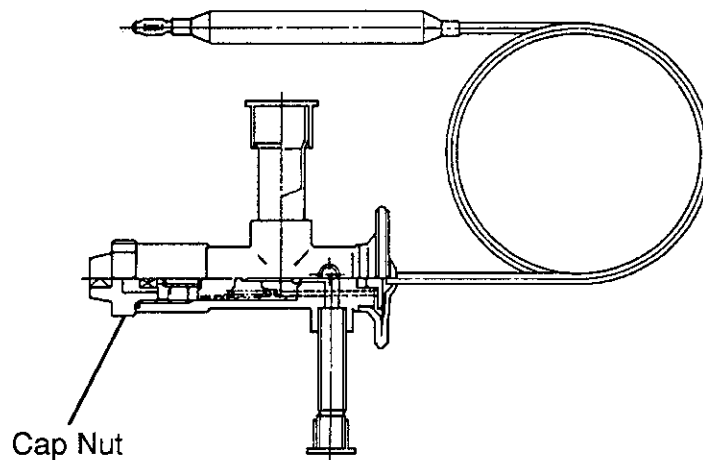

3. ADJUSTMENT OF FLAKE SIZE

To adjust the flake size, change the direction of the Cutter Head on the top of the Auger, according to the following procedures:

- 1) Remove the Bolt and the Cutter Head.
- 2) The Cutter Head is marked with "L", "M" and "S", which respectively stand for large (coarse flakes), medium and small (fine flakes) size. The unit is shipped from the factory in the medium flake position.
- 3) Place the Cutter Head so that the Pin on the top of the Auger fits into the selected hole.
- 4) Secure the Cutter Head by the Bolt.



V. SERVICE DIAGNOSIS

1. NO ICE PRODUCTION

PROBLEM	POSSIBLE CAUSE	REMEDY	
[1] The icemaker will not start.	a) Power Supply	1. OFF position.	1. Move to ON position.
		2. Loose connections.	2. Tighten.
		3. Bad contacts.	3. Check for continuity and replace.
		4. Blown fuse.	4. Replace.
	b) Power Switch (Control Box)	1. OFF position.	1. Move to ON position.
		2. Bad contacts.	2. Check for continuity and replace.
	c) Fuse (Control Box)	1. Blown out.	1. Check for short circuit and replace.
	d) Circuit Protect Relay	1. Miswiring.	1. Check power supply voltage and wire properly.
	e) Flush Timer	1. Flushing out.	1. Wait for 15 minutes.
		2. Bad contacts.	2. Check for continuity and replace.
	f) Flush Switch	1. FLUSH position.	1. Move to ICE position.
2. Bad contacts.		2. Check for continuity and replace.	
g) Transformer	1. Coil winding opened.	1. Replace.	
h) Control Water Valve	1. Coil winding opened.	1. Replace.	
i) Shut-off Valve	1. Closed.	1. Open.	
	2. Water failure.	2. Wait till water is supplied.	
j) Plug and Receptacle (Control Box)	1. Disconnected.	1. Connect.	
	2. Terminal out of Plug or Receptacle.	2. Insert Terminal back in position.	
[2] Water does not stop, and the icemaker will not start.	a) Water Control Relay	1. Contacts fused.	1. Replace.
		2. Coil winding opened.	2. Replace.
	b) Float Switch	1. Bad contacts.	1. Check for continuity and replace.
		2. Float does not move freely.	2. Clean or replace.
c) Flush Water Valve	1. Valve seat clogged and water leaking.	1. Clean or replace.	
d) Hoses	1. Disconnected.	1. Connect.	
[3] Water has been supplied, but the icemaker will not start.	a) Water Control Relay	1. Bad contacts.	1. Check for continuity and replace.
	b) Bin Control	1. Bad contacts.	1. Check for continuity and replace.
		2. Activator does not move freely.	2. Clean Axle and its corresponding holes or replace Bin Control.
	c) Gear Motor Protector (Circuit Breaker)	1. Tripped.	1. Find out the cause, get rid of it, and press Reset Button on Circuit Breaker.
d) Gear Motor Relay	1. Coil winding opened.	1. Replace.	
	2. Bad contacts.	2. Check for continuity and replace.	

PROBLEM	POSSIBLE CAUSE		REMEDY
	e) Control Timer (Printed Circuit Board)	1. Broken.	1. Replace.
	f) Gear Motor Protect Relay	1. Coil winding opened.	1. Replace.
		2. Bad contacts.	2. Check for continuity and replace.
[4] Gear Motor starts, but Compressor will not start or operates intermittently.	a) Pressure Switch	1. Dirty Air Filter or Condenser.	1. Clean.
		2. Ambient or condenser water temperature too warm.	2. Get cooler.
		3. Condenser water pressure too low or off. [Water-cooled model only]	3. Check and get recommended pressure.
		4. Water Regulating Valve set too high. [Water-cooled model only]	4. Adjust it lower.
		5. Fan not rotating.	5. See "3. [1] a) Fan Motor."
		6. Refrigerant overcharged.	6. Recharge.
		7. Refrigerant line or components plugged.	7. Clean and replace drier.
		8. Bad contacts.	8. Check for continuity and replace.
		9. Loose connections.	9. Tighten.
	b) X2 Relay on Control Timer	1. Bad contacts.	1. Check for continuity and replace Timer.
		2. Coil winding opened.	2. Replace Timer.
	c) Starter	1. Bad contacts.	1. Check for continuity and replace.
		2. Coil winding opened.	2. Replace.
		3. Loose connections.	3. Tighten.
	d) Start Capacitor or Run Capacitor	1. Defective.	1. Replace.
	e) Compressor	1. Loose connections.	1. Tighten.
		2. Motor winding opened or grounded.	2. Replace.
3. Motor Protector tripped.		3. Find out the cause of overheat or overcurrent.	
f) Power Supply	1. Circuit Ampacity too low.	1. Install a larger-sized conductor.	
[5] Gear Motor and Compressor start, but no ice is produced.	a) Refrigerant Line	1. Gas leaks.	1. Check for leaks with a leak detector. Reweld leak, replace drier and charge with refrigerant. The amount of refrigerant is marked on Nameplate or Label.
		2. Refrigerant line clogged.	2. Replace the clogged component.

2. LOW ICE PRODUCTION

PROBLEM	POSSIBLE CAUSE	REMEDY	
[1] Low ice production	a) Refrigerant Line	1. Gas leaks.	1. See "1. [5] a) Refrigerant Line."
		2. Refrigerant line clogged.	2. Replace the clogged component.
		3. Overcharged.	3. Recharge.
	b) High-side Pressure Too High	1. Dirty Air Filter or Condenser.	1. Clean.
		2. Ambient or condenser water temperature too warm.	2. Get cooler.
		3. Condenser water pressure too low or off. [Water-cooled model only]	3. Check and get recommended pressure.
		4. Fan rotating too slow.	4. See "3. [1] a) Fan Motor."
		5. Water Regulating Valve clogged. [Water-cooled model only]	5. Clean.
	c) Expansion Valve (not adjustable) [Except F-1000M#B]	1. Low-side pressure too low.	1. Replace.
		2. Low-side pressure too high.	2. See if Expansion Valve Bulb is mounted properly, and replace the valve if necessary.

3. OTHERS

PROBLEM	POSSIBLE CAUSE		REMEDY
[1] Abnormal noise	a) Fan Motor	1. Bearings worn out.	1. Replace.
		2. Fan blade deformed.	2. Replace fan blade.
		3. Fan blade does not move freely.	3. Replace.
	b) Compressor	1. Bearings worn out, or cylinder valve broken.	1. Replace.
		2. Mounting pad out of position.	2. Reinstall.
	c) Refrigerant Lines	1. Rub or touch lines or other surfaces.	1. Replace.
d) Gear Motor (Ice Making)	1. Bearing or Gear worn out/damaged.	1. Replace.	
e) Evaporator	1. Too much pressure loss.	1. Replace.	
	2. Scale on inside wall of Freezing Cylinder.	2. Remove Auger. Use "LIME-A-WAY" solution to clean periodically. If the water is found hard by testing, install a softener.	
[2] Overflow from Reservoir (Water does not stop.)	a) Water Supply	1. Water pressure too high.	1. Install a Pressure Reducing Valve.
	b) Control Water Valve	1. Diaphragm does not close.	1. Clean or replace.
	c) Float Switch	1. Bad contacts.	1. Check for continuity and replace.
[3] Gear Motor Protector operates frequently.	a) Power Supply Voltage	1. Too high or too low.	1. Connect the unit to a power supply of proper voltage.
	b) Evaporator Assy	1. Bearings or Auger worn out.	1. Replace Bearing or Auger.
	c) Bin Control	1. Bad contacts.	1. Check for continuity and replace.
		2. Activator does not move freely.	2. Clean Axle and its corresponding holes or replace Bin Control.

VI. REMOVAL AND REPLACEMENT OF COMPONENTS

1. SERVICE FOR REFRIGERANT LINES

[a] REFRIGERANT RECOVERY

The refrigerant must be recovered if required by an applicable law. The icemaker unit is provided with a Refrigerant Access Valve on the low-side line. Install an Access Valve on the high-side line, if it has none. Recover the refrigerant from these two Access Valves, and store it in an approved container. Do not discharge the refrigerant into the atmosphere.

[b] EVACUATION AND RECHARGE

- 1) Attach Charging Hoses, a Service Manifold and a Vacuum Pump to the system.
- 2) Turn on the Vacuum Pump.
- 3) Allow the Vacuum Pump to pull down to a 29.9" Hg vacuum. Evacuating period depends on pump capacity.
- 4) Close the Low-side Valve on the Service Manifold.
- 5) Disconnect the Vacuum Pump, and attach a Refrigerant Service Cylinder to the low-side line. Remember to loosen the connection, and purge the air from the Hose. For the air-cooled and water-cooled models, see the Nameplate for the required refrigerant charge and type. For the remote air-cooled models, see the label on the Control Box. Hoshizaki recommends only virgin refrigerant or reclaimed refrigerant which meets ARI Standard No. 700-88 be used.
- 6) Open the Low-side Valve. Do not invert the Service Cylinder. A liquid charge will damage the Compressor.
- 7) Turn on the icemaker when charging speed gets slow. Turn off the icemaker when the Low-side Gauge shows approximately 0 PSIG. Do not run the icemaker at negative pressures. Close the Low-side Valve when the Service Cylinder gets empty.
- 8) Repeat the above steps 4) through 7), if necessary, until the required amount of refrigerant has entered the system.
- 9) Close the Refrigerant Access Valve, and disconnect the Hoses and Service Manifold.
- 10) Cap the Access Valve to prevent a possible leak.

2. BRAZING

DANGER

1. Refrigerant R-502 or R-22 itself is not flammable, explosive or poisonous. However, when exposed to an open flame, the refrigerant creates phosgene gas, hazardous in large amounts.
2. If required by an applicable law, always recover the refrigerant and store it in an approved container. Do not discharge the refrigerant into the atmosphere.
3. Do not use silver alloy or copper alloy containing arsenic.
4. In its liquid state, the refrigerant can cause frostbite because of the low temperature.

3. REMOVAL AND REPLACEMENT OF COMPRESSOR

IMPORTANT

Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

- 1) Turn off the power supply, and remove the panels.
- 2) Remove the Terminal Cover on the Compressor, and disconnect the Compressor Wiring.
- 3) Recover the refrigerant and store it in an approved container, if required by an applicable law.
- 4) Remove the Discharge, Suction and Access Pipes from the Compressor using brazing equipment.

WARNING

When repairing a refrigerant system, be careful not to let the burner flame contact any electrical wires or insulation.

- 5) Remove the Bolts and Rubber Grommets.
- 6) Slide and remove the Compressor. Unpack the new Compressor package. Install the new Compressor.
- 7) Attach the Rubber Grommets of the prior Compressor.
- 8) Sandpaper the Discharge, Suction and Access Pipes.
- 9) Place the Compressor in position, and secure it using the Bolts.
- 10) Remove plugs from the Discharge, Suction and Access Pipes.
- 11) Braze the Access, Suction and Discharge lines (Do not change this order), while purging with nitrogen gas flowing at the pressure of 3 - 4 PSIG.
- 12) Install the new Drier.
- 13) Check for leaks using nitrogen gas (140 PSIG) and soap bubbles.
- 14) Evacuate the system, and charge it with refrigerant. For the air-cooled and water-cooled models, see the Nameplate for the required refrigerant charge and type. For the remote air-cooled models, see the label on the Control Box.
- 15) Connect the Terminals to the Compressor, and replace the Terminal Cover in its correct position.
- 16) Replace the panels in their correct position, and turn on the power supply.

4. REMOVAL AND REPLACEMENT OF DRIER

IMPORTANT

Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

- 1) Turn off the power supply, and remove the panels.
- 2) Recover the refrigerant and store it in an approved container, if required by an applicable law.
- 3) Remove the Drier using brazing equipment.
- 4) Install the new Drier with the arrow on the Drier in the direction of the refrigerant flow. Use nitrogen gas at the pressure of 3 - 4 PSIG when brazing the tubings.
- 5) Check for leaks using nitrogen gas (140 PSIG) and soap bubbles.
- 6) Evacuate the system, and charge it with refrigerant. For the air-cooled and water-cooled models, see the Nameplate for the required refrigerant charge and type. For the remote air-cooled models, see the label on the Control Box.
- 7) Replace the panels in their correct position, and turn on the power supply.

5. REMOVAL AND REPLACEMENT OF EXPANSION VALVE

IMPORTANT

Sometimes moisture in the refrigerant circuit exceeds the Drier capacity and freezes up at the Expansion Valve. Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

- 1) Turn off the power supply, and remove the panels.
- 2) Recover the refrigerant and store it in an approved container, if required by an applicable law.
- 3) Remove the Expansion Valve Bulb at the Evaporator outlet.
- 4) Remove the Expansion Valve Cover, and remove the Expansion Valve using brazing equipment.
- 5) Braze the new Expansion Valve with nitrogen gas flowing at the pressure of 3 - 4 PSIG.

WARNING

Always protect the valve body by using a damp cloth to prevent the valve from overheating. Do not braze with the valve body exceeding 250°F.

- 6) Install the new Drier.
- 7) Check for leaks using nitrogen gas (140 PSIG) and soap bubbles.
- 8) Evacuate the system. Charge it with refrigerant. For the air-cooled and water-cooled models, see the Nameplate for the required refrigerant charge and type. For the remote air-cooled models, see the label on the Control Box.
- 9) Attach the Bulb to the suction line. Be sure to secure the Bulb using a band and to insulate it.
- 10) Place the new set of Expansion Valve Covers in position.
- 11) Replace the panels in their correct position, and turn on the power supply.

6. REMOVAL AND REPLACEMENT OF WATER REGULATING VALVE - WATER-COOLED MODEL ONLY

IMPORTANT

Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

- 1) Turn off the power supply, remove the panels and close the Water Supply Line Shut-off Valve.
- 2) Recover the refrigerant and store it in an approved container.
- 3) Disconnect the Capillary Tube using brazing equipment.
- 4) Disconnect the Flare-connections of the valve.
- 5) Remove the screws and the valve from the Bracket.
- 6) Install the new valve, and braze the Capillary Tube.
- 7) Install the new Drier.
- 8) Check for leaks using nitrogen gas (140 PSIG) and soap bubbles.
- 9) Connect the Flare-connections.
- 10) Evacuate the system, and charge it with refrigerant. See the Nameplate for the required refrigerant charge and type.
- 11) Open the Water Supply Line Shut-off Valve, and turn on the power supply.
- 12) Check for water leaks.
- 13) See "IV. 1. ADJUSTMENT OF WATER REGULATING VALVE." If necessary, adjust the valve.
- 14) Replace the panels in their correct position.

7. REMOVAL AND REPLACEMENT OF CONDENSING PRESSURE REGULATOR (C.P.R.) - REMOTE AIR-COOLED MODEL ONLY

IMPORTANT


Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

- 1) Turn off the power supply.
- 2) Remove the panels from the remote condenser unit.
- 3) Recover the refrigerant and store it in an approved container.
- 4) Remove the C.P.R. using brazing equipment.
- 5) Braze the new C.P.R. with nitrogen gas flowing at the pressure of 3 - 4 PSIG.

WARNING

Always protect the C.P.R. body by using a damp cloth to prevent the C.P.R. from overheating. Do not braze with the C.P.R. body exceeding 250°F.

- 6) Install the new Drier in the icemaker.
- 7) Check for leaks using nitrogen gas (140 PSIG) and soap bubbles.
- 8) Evacuate the system and charge it with refrigerant. See the label on the Control Box in the icemaker.
- 9) Replace the panels in their correct position.
- 10) Turn on the power supply.

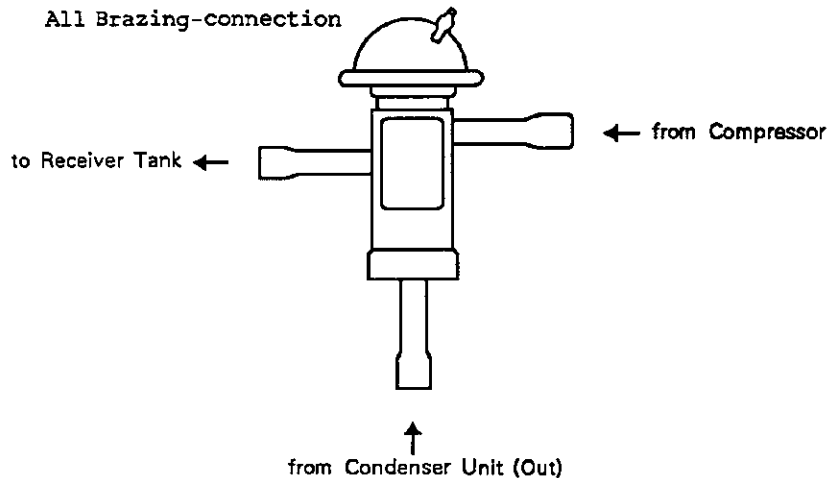

8. REMOVAL AND REPLACEMENT OF EVAPORATOR ASSEMBLY

- 1) Turn off the power supply.
- 2) Remove the panels.
- 3) Move the Flush Switch to the "FLUSH" position.
- 4) Turn on the power supply and drain out all water from the water line.
- 5) Turn off the power supply.
- 6) Remove the Band connecting the Spout with the Chute Assembly.
- 7) Remove the three Thumbscrews and take off the Spout from the Evaporator.

CUTTER

- 8) Remove the Bolt and lift off the Cutter.
- 9) Remove the Rubber O-ring and the Nylon Ring at the top of the Evaporator.

EXTRUDING HEAD

- 10) Remove the three Socket Head Cap Screws and lift off the Extruding Head.
- 11) Replace the Bearing inside the Extruding Head, if it exceeds the wear tolerance of 0.02" or is scratched.

Note: Replacing the Bearing requires a bearing press adaptor. If it is not available, replace the whole Extruding Head.

AUGER

- 12) Lift off the Auger. If the area in contact with the Bearing is worn out or the Blade scratched, replace the Auger.

EVAPORATOR

Note: Skip the following steps 13) through 15) when the Evaporator does not need replacement.

- 13) Recover the refrigerant and store it in an approved container, if required by an applicable law.

IMPORTANT

Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

- 14) Remove the Bulb of the Expansion Valve.
- 15) Disconnect the brazing-connections of the Expansion Valve and the Copper Tube - Low Side from the Evaporator, using brazing equipment.
- 16) Remove the two Truss Head Machine Screws and the Strap securing the Evaporator.
- 17) Disconnect the three Hoses from the Evaporator.
- 18) Remove the four Socket Head Cap Screws securing the Evaporator with the Bearing-Lower.
- 19) Lift off the Evaporator.

BEARING-LOWER AND MECHANICAL SEAL

- 20) The Mechanical Seal consists of two parts. One moves along with the Auger, and the other is fixed on the Bearing-Lower. If the contact surfaces of these two parts are worn or scratched, the Mechanical Seal may cause water leaks and should be replaced.
- 21) Remove the O-ring on the Bearing-Lower.
- 22) Remove the four Bolts and the Bearing-Lower from the Gear Motor. Replace the Bearing inside the Bearing-Lower, if it exceeds the wear tolerance of 0.02" or is scratched.

Note: Replacing the Bearing requires a bearing press adaptor. If it is not available, replace the whole Bearing-Lower.

GEAR MOTOR


- 23) Remove the Coupling-Spline on the Gear Motor Shaft.
- 24) Remove the Barrier on the top of the Gear Motor.

- 25) Remove the Terminal Cover of the Gear Motor and cut the Connectors.
- 26) Remove the three Socket Head Cap Screws securing the Gear Motor.
- 27) Assemble the removed parts in the reverse order of the above procedure.

WARNING

Be careful not to scratch the surface of the O-ring, or it may cause water leaks. Handle the Mechanical Seal with care not to scratch nor to contaminate its contact surface.

- 28) When replacing the Evaporator;
 - (a) Braze the new Evaporator with nitrogen gas flowing at the pressure of 3 - 4 PSIG.
 - (b) Replace the Drier.
 - (c) Check for leaks using nitrogen gas (140 PSIG) and soap bubbles.
 - (d) Evacuate the system. Charge it with refrigerant. For the air-cooled and water-cooled models, see the Nameplate for required refrigerant charge and type. For the remote air-cooled models, see the label on the Control Box.
- 29) Move the Flush Switch to the "ICE" position.
- 30) Replace the panels in their correct position.
- 31) Turn on the power supply.

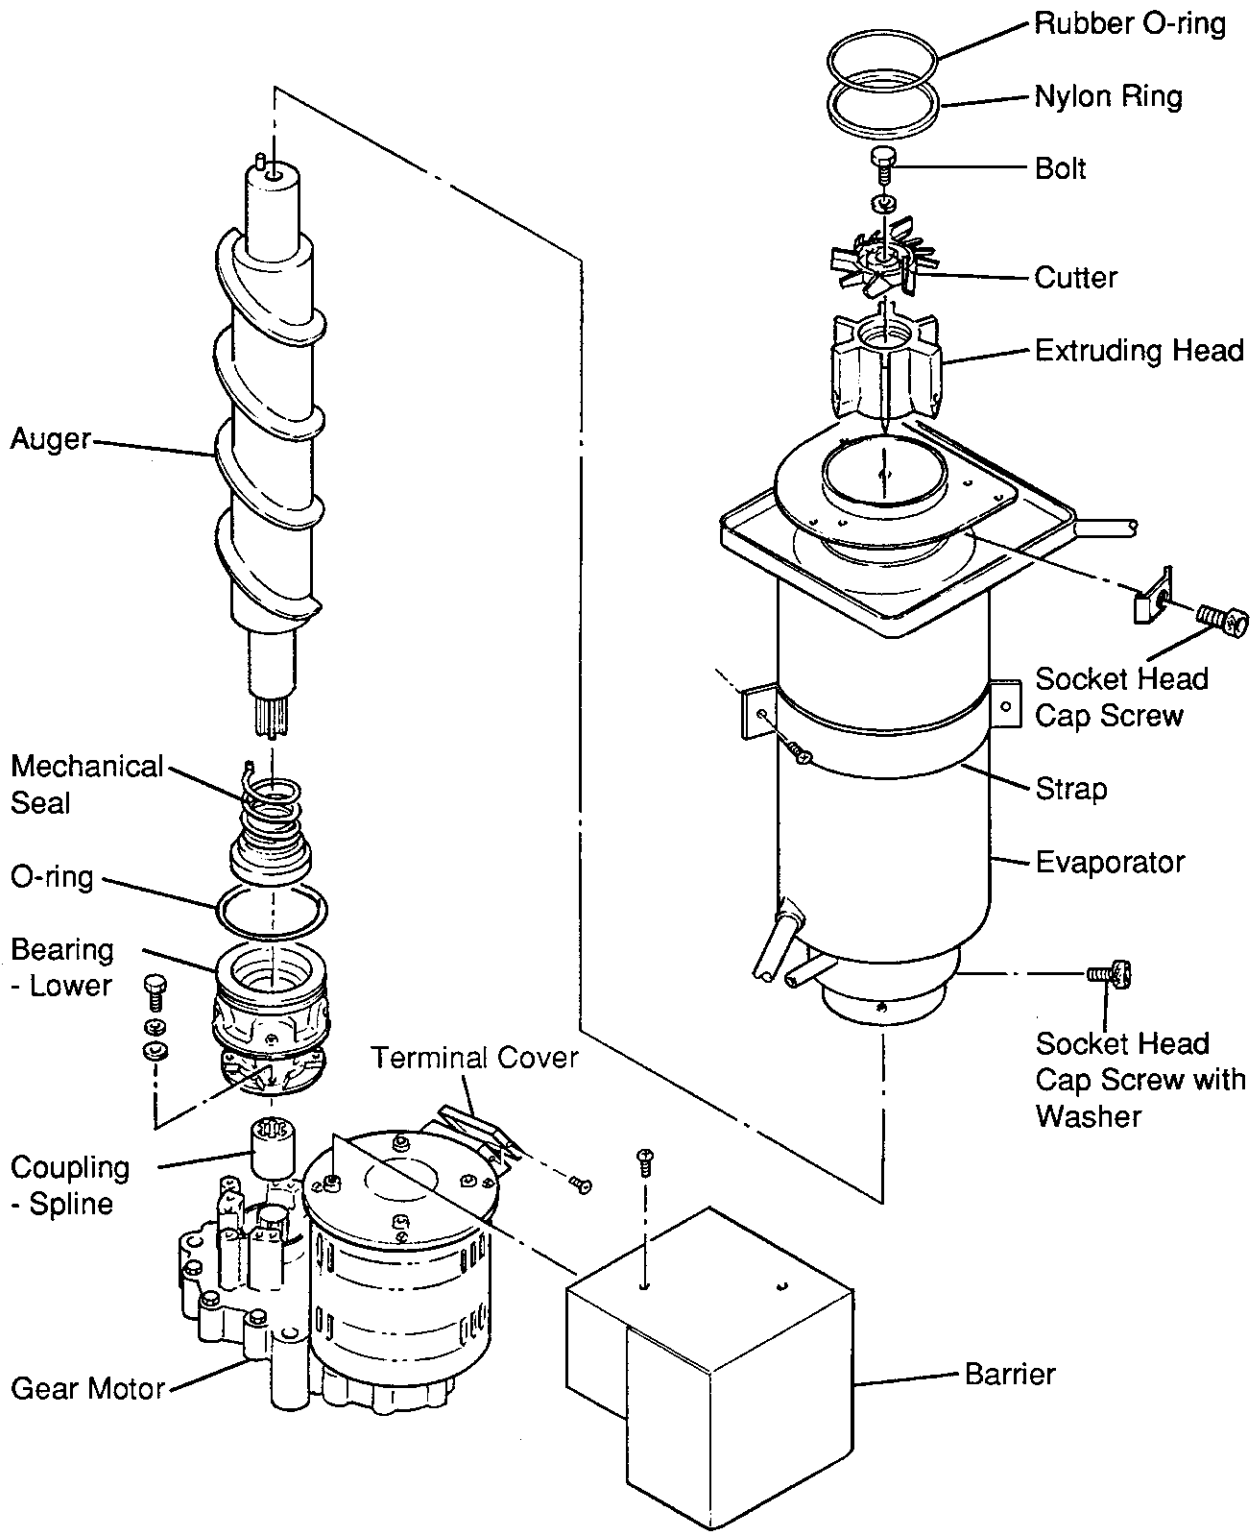

9. REMOVAL AND REPLACEMENT OF FAN MOTOR

- 1) Turn off the power supply and remove the panels.
- 2) Remove the wire connectors from the Fan Motor leads.
- 3) Remove the Fan Motor Bracket and Fan Motor.
- 4) Install the new Fan Motor.
- 5) Replace the Fan Motor Bracket and the wire connectors.
- 6) Replace the panels in their correct position, and turn on the power supply.

10. REMOVAL AND REPLACEMENT OF CONTROL WATER VALVE

- 1) Turn off the power supply, remove the panels and close the Water Supply Line Shut-off Valve.
- 2) Disconnect the Terminals from the Control Water Valve.
- 3) For F-1000M#B series, remove the Cover-Reservoir Inlet from the Control Water Valve.
- 4) Loosen the Fitting Nut on the Control Water Valve Inlets, and remove the Control Water Valve. Do not lose the Packings inside the Fitting Nut.
- 5) Except F-1000M#B series, remove the Water Supply Hose from the Control Water Valve.
- 6) Install the new Control Water Valve.
- 7) Assemble the removed parts in the reverse order of the above procedure.
- 8) Open the Water Supply Line Shut-off Valve.
- 9) Check for water leaks.
- 10) Replace the panels in their correct position, and turn on the power supply.

11. REMOVAL AND REPLACEMENT OF FLUSH WATER VALVE

1) Turn off the power supply, remove the panels and close the Water Supply Line Shut-off Valve.

2) Remove the Clamp and disconnect the Hose from the Flush Water Valve.

Note: Water may still remain inside the Evaporator. Be sure to drain the water into the Drain Pan.

3) Disconnect the Terminals from the Flush Water Valve.

4) Remove the Flush Water Valve from the Bracket.

5) Remove the Drain Pipe from the Flush Water Valve.

6) Connect the Drain Pipe to the new Flush Water Valve, and place the valve in position.

7) Connect the Hose to the Flush Water Valve and secure it with the Clamp.

8) Pour water into the Reservoir, and check for water leaks on the Flush Water Valve.

9) Open the Water Supply Line Shut-off Valve, and turn on the power supply.

10) Move the Flush Switch to the "ICE" position.

11) Check for water leaks.

12) Move the Flush Switch to the "FLUSH" position, and make sure water is flushing.

13) Move the Flush Switch to the "ICE" position.

14) Replace the panels in their correct position.

VII. MAINTENANCE AND CLEANING INSTRUCTIONS


1. PREPARING THE ICEMAKER FOR LONG STORAGE

WARNING

When shutting off the icemaker for an extended time, drain out all water from the water line and remove the ice from the Storage Bin. The Storage Bin should be cleaned and dried. Drain the icemaker to prevent damage to the water supply line at sub-freezing temperatures, using air or carbon dioxide. Shut off the icemaker until the proper ambient temperature is resumed.

[Air-cooled and Remote Air-cooled Models]

- 1) Run the icemaker with the Water Supply Line Shut-off Valve closed.
- 2) Open the Drain Valve and blow out the water inlet line by using air pressure.
- 3) Turn off the power supply.
- 4) Remove the Front Panel.
- 5) Move the Flush Switch on the Control Box to the "FLUSH" position.
- 6) Turn on the power supply, and then drain out all water from the water line.
- 7) Turn off the power supply.
- 8) Turn off the Power Switch on the Control Box.
- 9) Replace the Front Panel in its correct position.
- 10) Close the Drain Valve.
- 11) Remove all ice from the Storage Bin, and clean the bin.

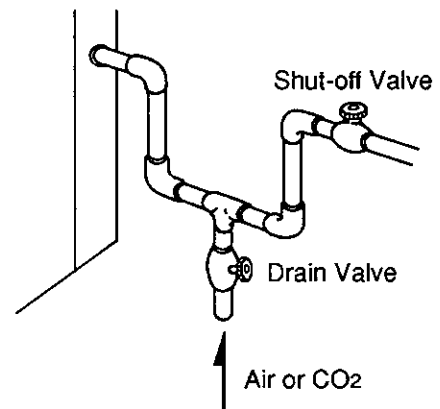

[Water-cooled Models]

- 1) Turn off the power supply and wait for 3 minutes.
- 2) Turn on the power supply and wait for 20 seconds.

- 3) Close the Water Supply Line Shut-off Valve.
- 4) Open the Drain Valve and quickly blow the water supply line from the Drain Valve to drain water in the Condenser.
- 5) Follow the above steps 3) through 11) in [Air-cooled and Remote Air-cooled Models].

2. CLEANING INSTRUCTIONS

WARNING

1. HOSHIZAKI recommends cleaning this unit at least once a year. More frequent cleaning, however, may be required in some existing water conditions.
2. To prevent injury to individuals and damage to the icemaker, do not use ammonia type cleaners.
3. Always wear liquid-proof gloves for safe handling of the cleaning and sanitizing solution. This will prevent irritation in case the solution contacts with skin.

<STEP 1>

Dilute the solution with water as follows.

Cleaning solution: 4.8 fl. oz. of recommended cleaner ("LIME-A-WAY," Economics Laboratory, Inc.) with 0.8 gal. of water. This is a minimum amount. Make more solution, if necessary.

Sanitizing solution: 2.5 fl. oz. of 5.25 % sodium hypochlorite solution with 5 gal. of water.

IMPORTANT

For safety and maximum effectiveness, use the solution immediately after dilution.

<STEP 2>

Use the cleaning solution to remove lime deposits in the water system.

- 1) Turn off the power supply.
- 2) Close the Water Supply Line Shut-off Valve.
- 3) Remove all ice from the Storage Bin.
- 4) Remove the Front Panel and the Top Panel.
- 5) Move the Flush Switch to the "FLUSH" position.

- 6) Turn on the power supply and drain out all water from the water line.
- 7) Turn off the power supply.
- 8) Remove the Control Water Valve by releasing the Fitting Nut. Do not lose the Packing.
- 9) Remove the Cover of the Reservoir.
- 10) Fill the Reservoir with the cleaning solution.
- 11) Replace the Cover of the Reservoir and the Control Water Valve in their correct position.

Note: This unit is designed to start operating when the Reservoir is filled with water.

- 12) Move the Flush Switch to the "ICE" position.
- 13) Replace the Top Panel and the Front Panel in their correct position.
- 14) Allow the icemaker to set for about 10 minutes before the operation. Then, turn on the power supply, and make ice using the solution until the icemaker stops icemaking.
- 15) Remove the Front Panel.
- 16) Move the Flush Switch to the "FLUSH" position to drain the cleaning solution.
- 17) Move the Flush Switch to the "ICE" position.
- 18) Replace the Front Panel in its correct position.
- 19) Open the Water Supply Line Shut-off Valve, and supply water to the Reservoir.
- 20) Turn off the power supply when the Gear Motor starts.
- 21) Drain out all water from the water line. See 4) through 7).

<STEP 3>

Use 3/4 gal. of the sanitizing solution to sanitize the icemaker.

- 1) Close the Water Supply Line Shut-off Valve.
- 2) Remove the Control Water Valve by releasing the Fitting Nut.
- 3) Remove the Cover of the Reservoir.
- 4) Fill the Reservoir with the sanitizing solution.

- 5) Replace the Cover of the Reservoir and the Control Water Valve in their correct position.
- 6) Move the Flush Switch to the "ICE" position.
- 7) Replace the Top Panel and the Front Panel in their correct position.
- 8) Allow the icemaker to set for about 10 minutes before the operation. Then, turn on the power supply, and make ice using the solution until the icemaker stops icemaking.
- 9) Remove the Front Panel.
- 10) Move the Flush Switch to the "FLUSH" position to drain the sanitizing solution.
- 11) Move the Flush Switch to the "ICE" position.
- 12) Replace the Front Panel in its correct position.
- 13) Open the Water Supply Line Shut-off Valve, and supply water to the Reservoir.
- 14) Turn off the power supply when the Gear Motor starts.
- 15) Drain out all water from the water line. See 4) through 7) in STEP 2.
- 16) Move the Flush Switch to the "ICE" position.

<STEP 4>

Use the sanitizing solution to sanitize removed parts.

- 1) Remove the Thumbscrew securing the Bin Control Switch on the Chute Assembly.
- 2) Remove the Band connecting the Spout with the Chute Assembly, and take out the Chute Assembly from the icemaker.
- 3) Remove the Gasket at the bottom of the Ice Chute and another at the Spout.
- 4) Remove the three Ties and the Insulation of the Chute.
- 5) Remove the six Wing Nuts and two Baffles.

IMPORTANT

When installing the Baffles, make sure that the bent surface (the one without the studs) faces the Activator so that the bent surface can guide the ice to the center of the Activator.

- 6) Remove the two Thumbscrews, Plate, and Gasket at the top of the Ice Chute, and then remove the Bin Control Assembly by sliding it slightly toward the Spout and lifting it off.
- 7) Disassemble the Bin Control Assembly by removing the two Snap Pins, Shaft and Activator.
- 8) Remove the three Thumbscrews and the Spout.
- 9) Remove the Rubber O-ring and Nylon Ring at the top of the Cylinder.
- 10) Soak or wipe the removed parts.
- 11) Rinse these parts thoroughly.

IMPORTANT

If the solution is left on these parts, they will rust.

- 12) Replace the removed parts and the panels.
- 13) Turn on the power supply and run the icemaker.
- 14) Turn off the power supply after 30 minutes.
- 15) Pour warm water into the Storage Bin to melt all ice, and then clean the Bin Liner with the solution.
- 16) Flush out any solution from the Storage Bin.
- 17) Turn on the power supply and start the automatic icemaking process.

IMPORTANT

1. After cleaning, do not use ice made from the sanitizing solution. Be careful not to leave any solution in the Storage Bin.
2. Follow carefully any instructions provided with the bottles of cleaning or sanitizing solution.
3. Never run the icemaker when the Reservoir is empty.

3. MAINTENANCE

IMPORTANT

1. This icemaker must be maintained individually, referring to the instruction manual and labels provided with the icemaker.
2. To have the optimum performance of this icemaker, the following consumable parts need periodical inspection, maintenance and replacement:

Extruding Head
Housing
Gear Motor
Auger
Mechanical Seal

These parts should be inspected at least once a year or every 10,000 hours of operation. Their service life, however, depends on water quality and environment. More frequent inspection and maintenance are recommended.

Consult with your local distributor about inspection and maintenance service. To obtain the name and phone number of your local distributor, call Hoshizaki Care at 1-800-233-1940.

1) Stainless Steel Exterior

To prevent corrosion, wipe the exterior occasionally with a clean and soft cloth. Use a damp cloth containing a neutral cleaner to wipe off oil or dirt build up.

2) Storage Bin and Scoop

- * Wash your hands before removing ice. Use the plastic scoop provided (Bin accessory).
- * The Storage Bin is for ice use only. Do not store anything else in the bin.
- * Keep the scoop clean. Clean using a neutral cleaner and rinse thoroughly.
- * Clean the bin liner using a neutral cleaner. Rinse thoroughly after cleaning.

3) Air Filter (Air-cooled model only)

A plastic mesh air filter removes dirt or dust from the air, and keeps the Condenser from getting clogged. As the filter gets clogged, the icemaker's performance will be reduced. Check the filter at least twice a month. When clogged, use warm water and a neutral cleaner to wash the filter.

4) Condenser (Except water-cooled model)

Check the Condenser once a year, and clean if required by using a brush or vacuum cleaner. More frequent cleaning may be required depending on the location of the icemaker.

HOSHIZAKI
HOSHIZAKI AMERICA, INC.

618 HIGHWAY 74 SOUTH, PEACHTREE CITY,
GEORGIA 30269 U.S.A.
PHONE: 770-487-2331