

# **Manitowoc<sup>®</sup>** **ICE MACHINES**



Thank you for selecting a Manitowoc Ice Machine, the dependability leader in ice making equipment and related products. With proper care and maintenance, your new Manitowoc Ice Machine will provide you with many years of reliable and economic performance.

This product qualifies for the following listings:



We reserve the right to make product improvements at any time. Specifications and design are subject to change without notice.

Part No. 80-0815-3  
12-89

# Important

Your Use and Care Guide covers the following model numbers:

Proper care and maintenance are essential for maximum ice production and trouble-free operation of your Manitowoc Ice Machine.

You should read and understand this Use and Care Guide as it contains valuable care and maintenance information.

If you encounter problems not covered by this guide, please contact your local Manitowoc dealer or distributor for service information.

## H200 SERIES

HR-0200A  
HR-0201W  
HD-0202A  
HD-0203W  
HY-0204A  
HY-0205W

## E400 SERIES

ER-0400A  
ER-0401W  
ED-0402A  
ED-0403W  
EY-0404A  
EY-0405W

## E400 SERIES WITH REMOTE CONDENSER

ER-0490N  
ED-0492N  
EY-0494N

## Table of Contents

<b>SECTION 1 – GENERAL INFORMATION</b>		
Model/Serial Numbers Location .....	3	
Owner Warranty Registration Card .....	4	
About Your Warranty .....	4	
<b>SECTION 2 – ABOUT YOUR ICE MACHINE</b>		
Component Location and Identification .....	5	
Sequence of Operation .....	6	
Freeze Mode .....	6	
Harvest Mode .....	6	
Automatic Stop and Start .....	6	
Operational Checks .....	7	
Water Level Check .....	7	
Water Curtain Check .....	7	
Bin Switch Check .....	8	
Ice Bridge Thickness Check .....	8	
<b>SECTION 3 – MAINTENANCE</b>		
Maintenance Guidelines .....	9	
General Ice Machine Inspection .....	10	
Exterior Cleaning .....	10	
Cleaning the Condenser .....	10	
Air-Cooled Condenser .....	10	
Water-Cooled Condenser .....	11	
Interior Cleaning .....	11	
Removal of Parts for Cleaning .....	11	
Remove Water Pump .....	11	
Remove Float Valve .....	12	
Remove Distribution Tube .....	12	
Disassemble Distribution Tube .....	12	
Remove Ice Bridge Thickness Probe .....	13	
Remove Water Trough .....	13	
Cleaning Procedures .....	13	
Clean the Evaporator Surface .....	14	
Sanitizing .....	14	
Checking and Cleaning the		
Water Dump Valve .....	15	
Operation Check .....	15	
Remove Water Dump Valve .....	15	
Disassemble Water Dump Valve .....	15	
Cleaning Water Dump Valve .....	16	
Water Filtration .....	16	
Replacement Procedure .....	16	
Removal from Service/Winterization .....	17	
<b>SECTION 4 – BEFORE CALLING FOR SERVICE</b>		
Checklist .....	18, 19	

### MANITOWOC ICE, INC.


2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 U.S.A.  
Telephone 920-682-0161  
FAX 920-683-7879

# SECTION 1 GENERAL INFORMATION

## Model/Serial Numbers Location

Record the model and serial numbers of your ice machine and bin or dispenser in the space provided below for your convenience. These numbers are required when requesting information from your local Manitowoc distributor, service representative, or Manitowoc Ice, Inc.

The model and serial numbers are listed on the OWNER WARRANTY REGISTRATION CARD, and on the MODEL/SERIAL NUMBERS DECAL affixed to the inside of the ice machine and on the back panel of the bin, Figure 1.

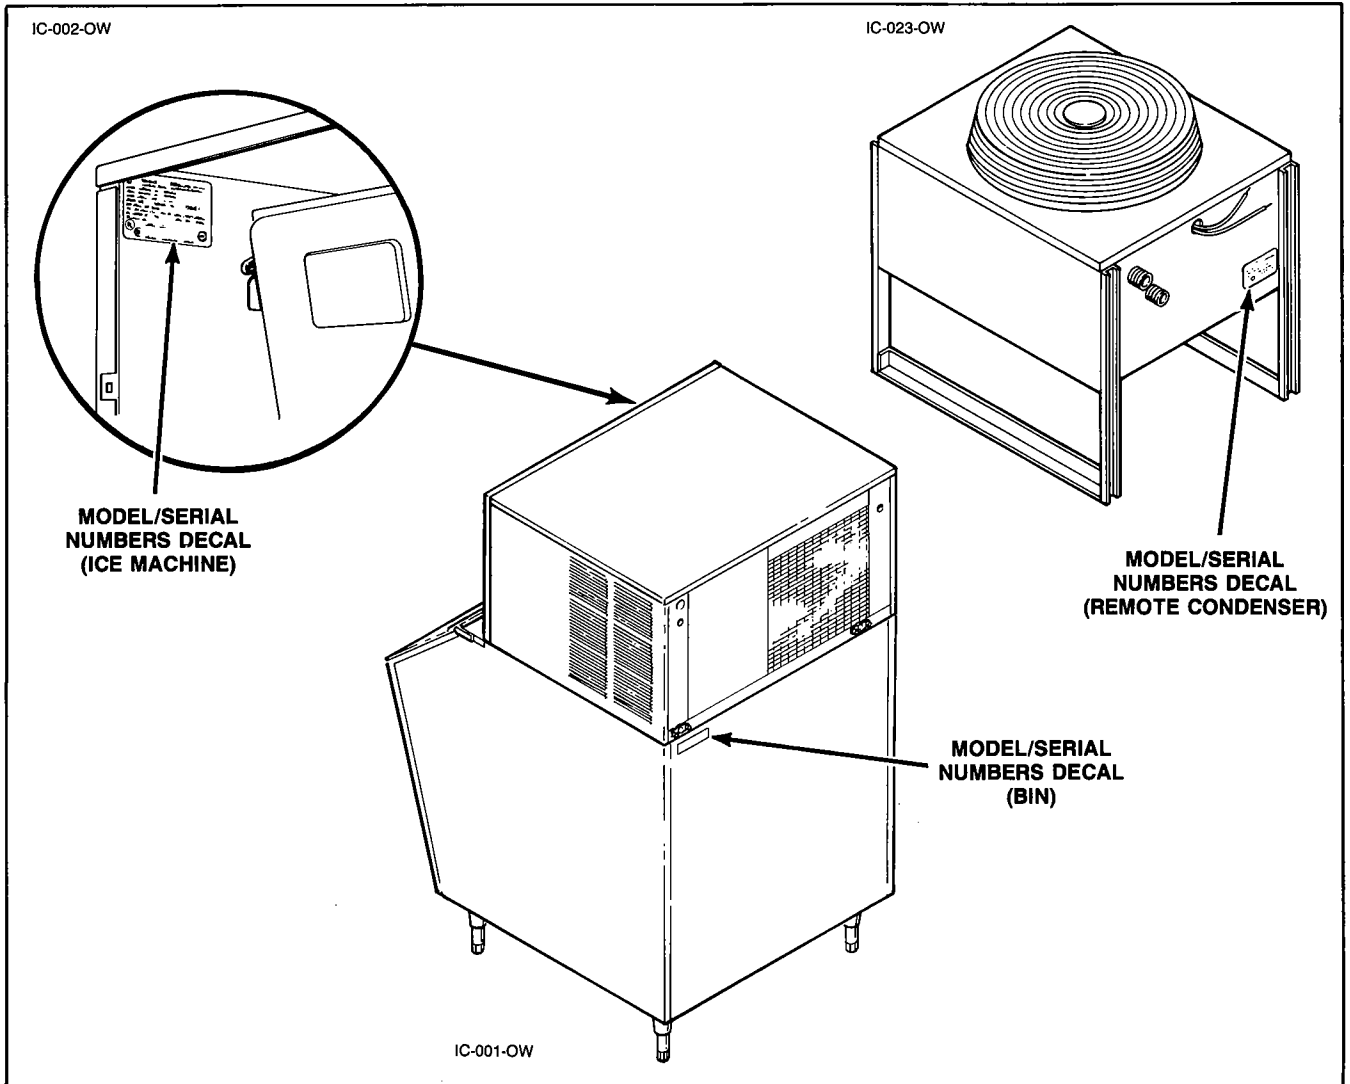

**FIGURE 1 MODEL/SERIAL NUMBER LOCATION**

	ICE MACHINE	BIN OR DISPENSER	REMOTE CONDENSER
MODEL NUMBER:	_____	_____	_____
SERIAL NUMBER:	_____	_____	_____

## OWNER WARRANTY REGISTRATION CARD

The packet containing this guide also includes warranty information. Warranty coverage begins the day your new ice machine is installed.

### IMPORTANT

To validate the installation date, fill in the OWNER WARRANTY REGISTRATION CARD and mail it as soon as possible.

If your card is not returned, Manitowoc will use the date of sale to the Manitowoc Distributor as the first day of warranty coverage for your new ice machine.

### About Your Warranty

For your convenience, the warranty statement is duplicated on the back cover of this guide.

For a detailed explanation of your warranty, we have compiled a list of the most commonly asked questions regarding warranty coverage.

Contact your local Manitowoc representative or our Wisconsin headquarters for further warranty information.

## WARRANTY COVERAGE

**(Effective for Ice Machines Installed after January 1, 1991)**

### Parts

1. Your ice machine is warranted against defects in materials and workmanship under normal use and service for three (3) years from the date of the original installation. It is important to send in your warranty registration card so Manitowoc can begin your warranty on the installation date.
2. An additional two (2) years (five years total) warranty is provided on evaporator and compressor from the date of original installation.

### Labor

Labor allowance to repair or replace defective components is for three (3) years from the date of original installation.

## Exclusions from Warranty Coverage

The following items are not included in the warranty coverage of your ice machine.

1. Normal maintenance, adjustments and cleaning as outlined in this manual.
2. Repairs due to unauthorized modifications to the ice machine or the use of nonapproved parts without written approval from Manitowoc Ice, Inc.
3. Damage from improper installation as outlined in the Installation Instructions, improper electrical supply, water supply or drainage; flood, storms, or other acts of God.
4. Premium labor rates due to holidays, overtime, etc. Travel time, flat rate service call charges, mileage and miscellaneous tools and material charges not listed on the payment schedule are excluded as well as additional labor charges resulting from inaccessibility of the ice machine.
5. Parts or assemblies subjected to misuse, abuse, neglect or accidents.
6. When the ice machine has been installed, cleaned and/or maintained inconsistent with the technical instructions provided in this Owner/Operator Use and Care Guide and the Installation Manual.

## Authorized Warranty Service

To comply with the provisions of the warranty a refrigeration service company qualified and authorized by your Manitowoc distributor or a Contracted Service Representative must perform the warranty repair.

### NOTE


If the dealer you purchased the ice machine from IS **NOT** authorized to perform warranty service, contact your Manitowoc distributor or our Wisconsin headquarters for the name of the nearest authorized service representative.

## Service Calls

Service for your ice machine should be applied if, after the procedures listed in this guide have been implemented, the condition of your ice machine has not improved.

# SECTION 2 ABOUT YOUR ICE MACHINE

## Component Location and Identification

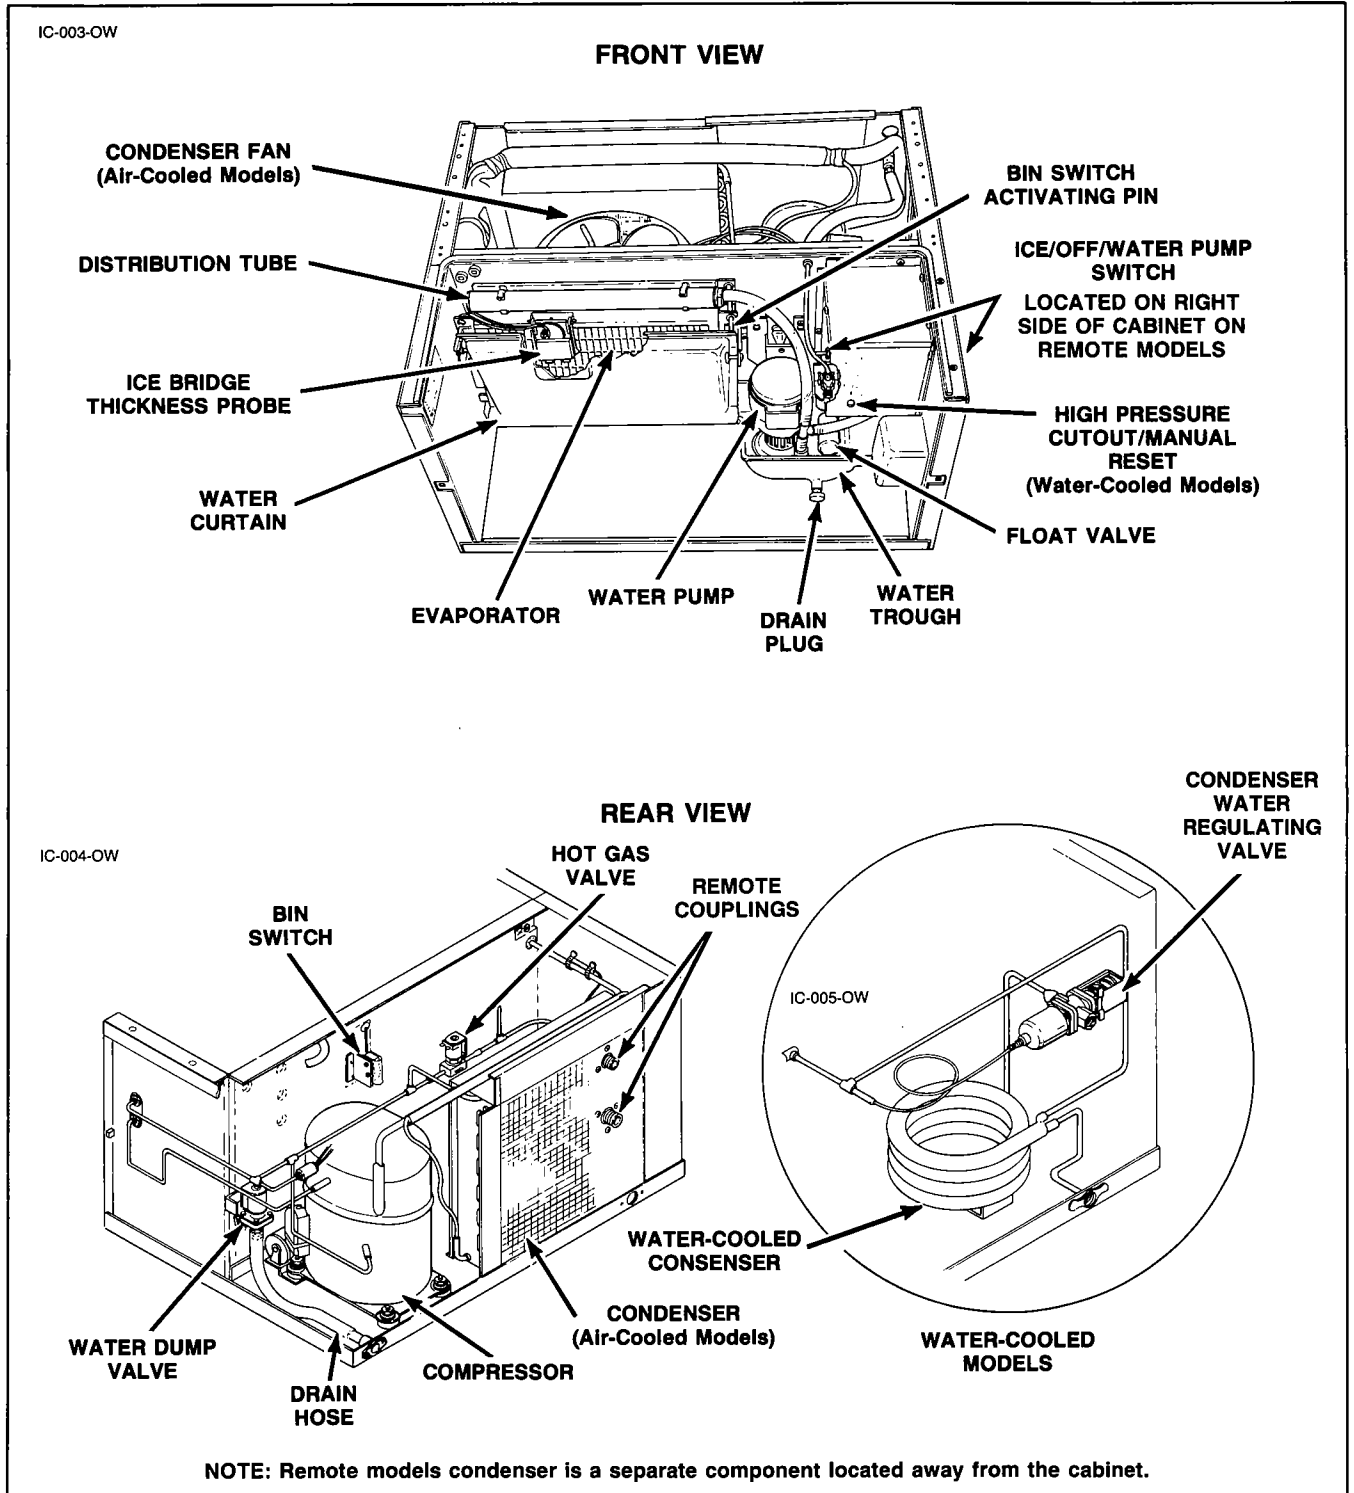

**FIGURE 2 COMPONENT LOCATION**

# Sequence of Operation

## FREEZE MODE (FIGURE 3)

When the ICE/OFF/WATER PUMP switch is set at ICE, the compressor and condenser fan (air-cooled models) start. On remote models, the compressor and condenser fan start after a momentary delay. The water pump will start after approximately 30 seconds. This allows the evaporator to "prechill." Water is pumped from the water trough up through the distribution tube. This directs an even flow of water down across the front of the evaporator. Water flows into each individual cube mold, gradually building ice. The water flows back to the water trough and is recirculated. The float valve maintains the proper water level in the trough as ice is formed.

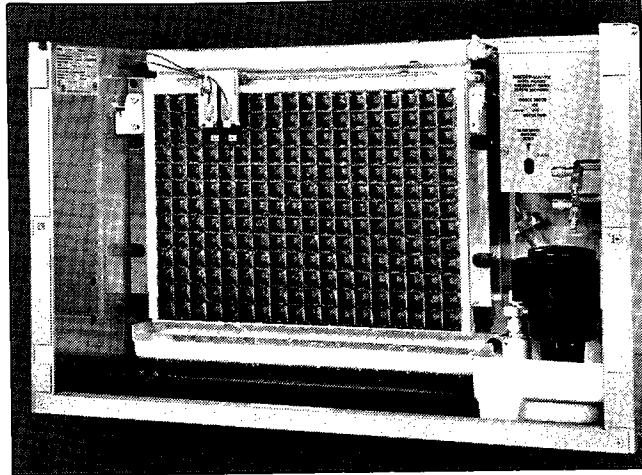


FIGURE 3 FREEZE MODE

## HARVEST MODE (FIGURE 4)

As ice builds in the evaporator to the proper thickness, water flowing over the ice comes in contact with the ice bridge thickness probe. This initiates the HARVEST mode. The condenser fan will cycle off. (The condenser fan continues to run on remote models.) The hot gas solenoid valve opens diverting hot gas into the evaporator. The water dump valve opens at the same time, allowing the water pump to flush mineral deposits from the water trough out the drain. As the hot gas warms the evaporator, the ice cubes slide, as a unit, off the evaporator into the ice storage bin or dispenser. The falling ice swings the bottom of the water curtain out, activating a bin switch. The bin switch de-energizes the hot gas valve and water dump valve, returning the ice machine to the freeze mode.

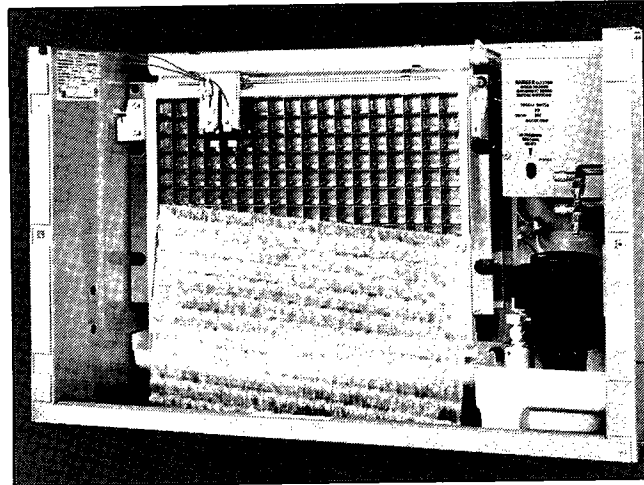


FIGURE 4 HARVEST MODE

## AUTOMATIC STOP AND START (FIGURE 5)

When the ice storage bin becomes full, the last harvesting ice cubes do not completely clear the water curtain, holding it open. The bin switch shuts the ice machine off until sufficient ice is removed from the bin allowing ice to clear the water curtain. On remote models, the ice machine will run momentarily before shutting off. The return of the water curtain activates the bin switch, putting the machine back into the freeze mode.

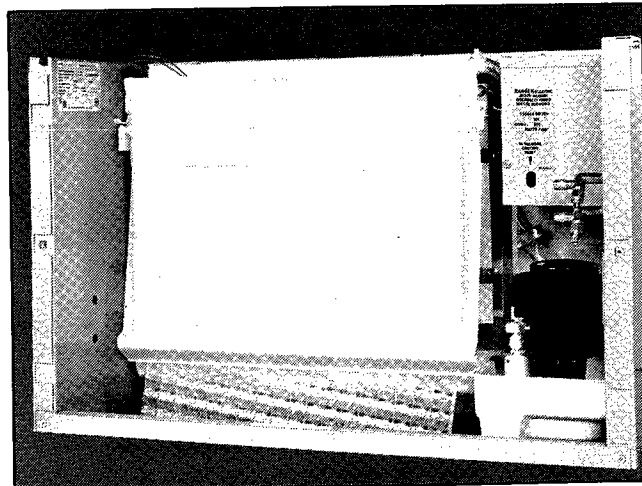


FIGURE 5 AUTOMATIC START/STOP


## Operational Checks

**IMPORTANT:** Utilize the Operational Checks when starting the ice machine after initial installation, prolonged "out of service" periods, and after cleaning and sanitizing to ensure proper operation.

Your Manitowoc ice machine is factory operated and adjusted before shipment. Normally no adjustments are necessary for new installations. Adjustments and maintenance as outlined in this guide are not covered by warranty. To check and adjust (if necessary), proceed as follows:

## Water Level Check (Figure 6)

1. Set ICE/OFF/WATER PUMP switch at OFF.

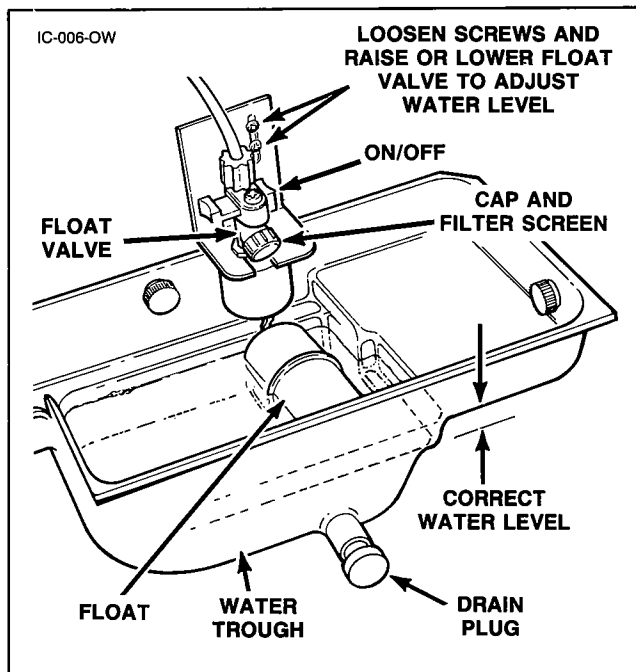

**FIGURE 6 WATER LEVEL CHECK**


2. Remove drain plug from trough and allow water to drain.
3. Reinstall drain plug on trough and allow trough to refill to proper level.

The float valve is factory set for proper water level. If adjustment is necessary, adjust as follows:

- a. Loosen two screws on float valve bracket.
- b. Raise or lower float valve assembly, then tighten screws.
- c. If further adjustment is necessary, carefully bend float arm to achieve correct level.

## Water Curtain Check (Figure 7)

1. Pull bottom of water curtain away from evaporator, then release. Curtain should fall back to evaporator.

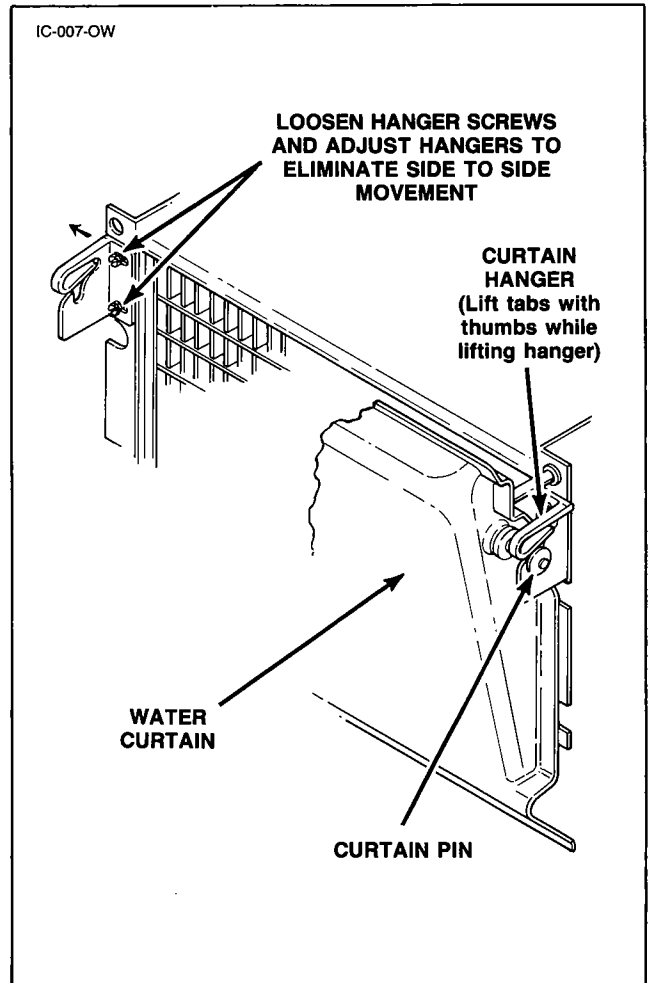

**FIGURE 7 WATER CURTAIN CHECK**

2. Move curtain from side to side. There should be little or no movement.

The water curtain is factory set and should require no adjustment. If adjustment is necessary, adjust as follows:

- a. Remove water curtain.
- b. Loosen curtain hanger screws (two per hanger) and slide hangers out to prevent side to side movement.
- c. Retighten curtain hanger screws.
- d. Reinstall water curtain.

**NOTE:** Water curtain pin heads must be positioned under curtain hanger tabs. Curtain must be centered on evaporator when reinstalled.

## Bin Switch Check (Figure 8)

1. Pull water curtain away from evaporator until ice machine shuts off.

On remote models, the ice machine will continue to run momentarily before shutting off.

2. Slowly return curtain to evaporator. Ice machine should restart as bottom edge of water curtain passes just inside edge of water trough.

The bin switch is factory set and should not require adjustment. If bin switch adjustment is necessary, adjust as follows:

- a. Set ICE/OFF/WATER PUMP switch at OFF.

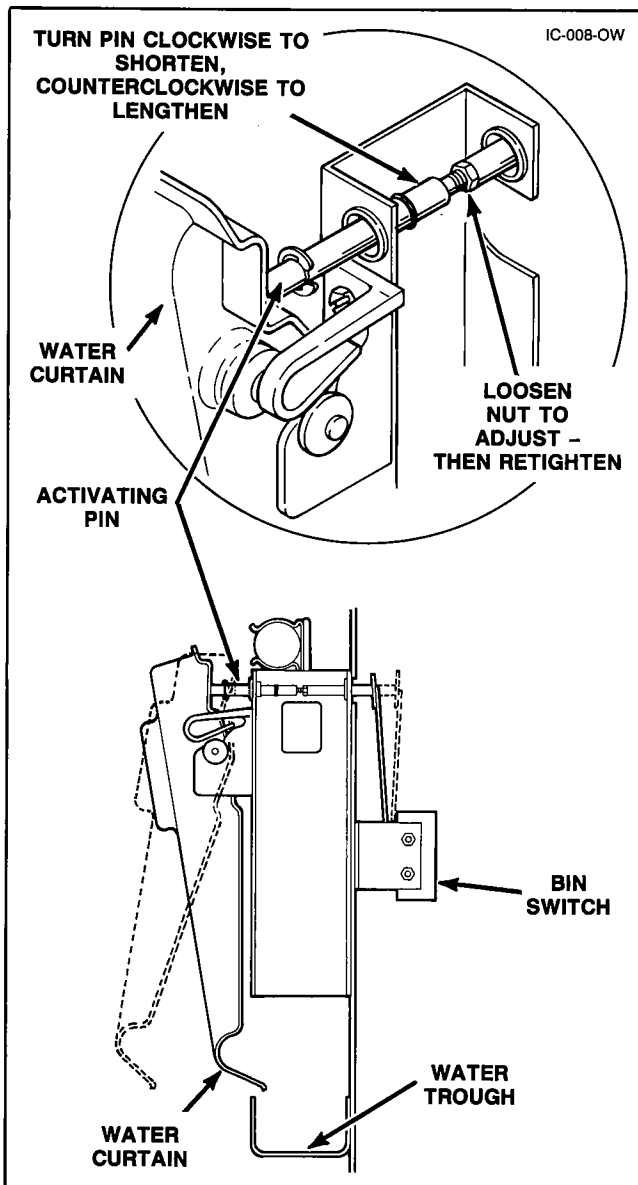


FIGURE 8 BIN SWITCH CHECK

- b. Slowly pull bottom of water curtain away from evaporator until bin switch clicks, then slowly return curtain toward evaporator.
- c. If bin switch clicks before water curtain reaches water trough, lengthen the bin switch activating pin.
- d. If bin switch clicks too far into evaporator, shorten the bin switch activating pin.
- e. Set ICE/OFF/WATER PUMP switch at ICE after adjustment is complete.

## Ice Bridge Thickness Check (Figure 9)

Be sure the water curtain is in place to prevent water from splashing out of water trough.

Inspect bridge connecting the cubes. The bridge should be approximately 1/8" thick.

The ice bridge thickness probe is factory set to maintain 1/8 inch ice bridge thickness. If adjustment is necessary, adjust as follows:

1. Turn adjustment screw on ice bridge thickness probe clockwise to increase bridge thickness, counterclockwise to decrease bridge thickness.

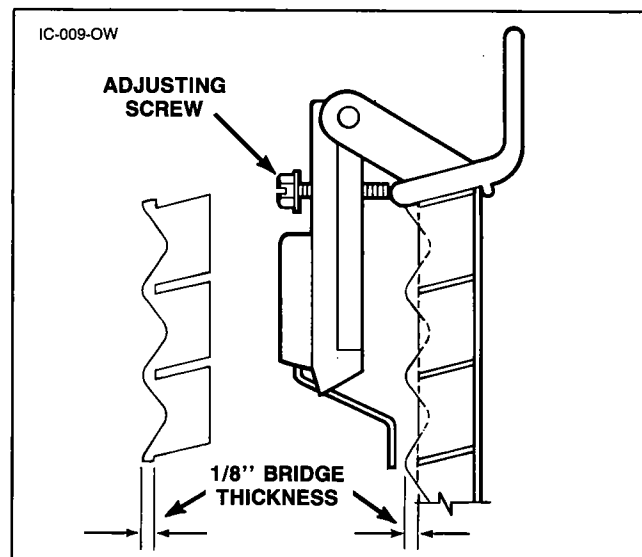


FIGURE 9 ICE BRIDGE THICKNESS CHECK

**NOTE:** Do not turn the adjusting screw more than 1/4 turn at a time. Check the bridge two harvest cycles after initial adjustment before adjusting again (if necessary).


2. Ensure ice bridge thickness probe wires and bracket do not restrict movement of the probe.



2. Disconnect hose from pump outlet.
3. Loosen two screws holding pump mounting bracket to rear bulkhead.
4. Lift pump and bracket assembly off screws.

## REMOVE FLOAT VALVE (FIGURE 12)

1. Turn valve splash shield clockwise a full turn or two, then pull the valve forward off the mounting bracket.
2. Disconnect the water inlet tube from the float valve at the compression fitting.
3. Remove filter screen cap.

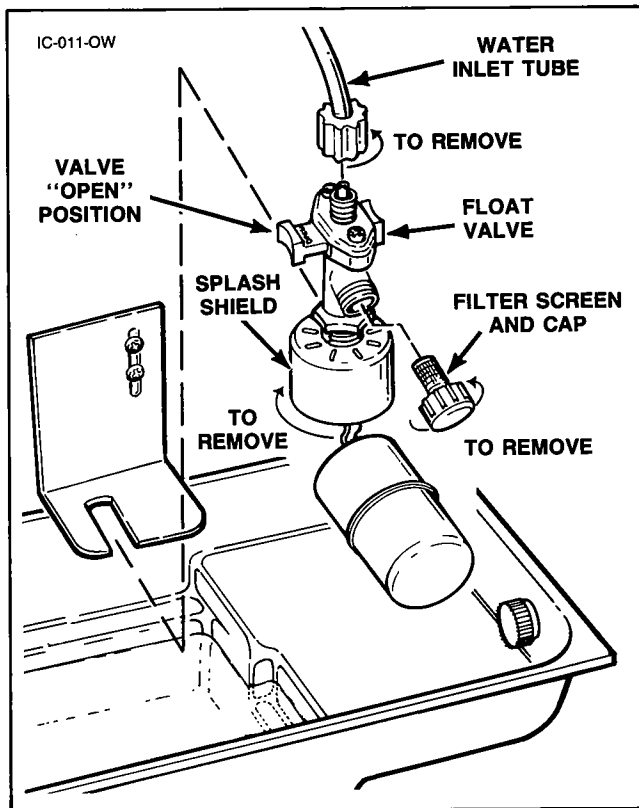


**FIGURE 12 FLOAT VALVE REMOVAL**

## REMOVE DISTRIBUTION TUBE (FIGURE 13)

1. Remove distribution tube from the two spring clips holding it in place.
2. Disconnect the hose from the distribution tube and from the "T."

**NOTE:** To reinstall distribution tube, align locating pin on top extrusion with hole in distribution tube.

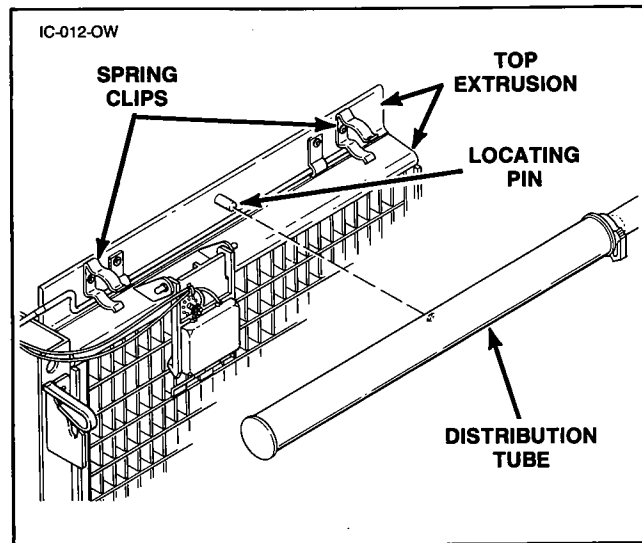


**FIGURE 13 DISTRIBUTION TUBE REMOVAL**

## DISASSEMBLE DISTRIBUTION TUBE (FIGURE 14)

**NOTE:** Disassembly of the distribution tube is not usually necessary as normal cleaning of the ice machine will clean the tube. The distribution tube should only be disassembled if, after normal cleaning procedures, there is inadequate water flow from the distribution tube. (Ensure that any other water problems are eliminated beforehand.)

1. Heat rubber end plugs on distribution tube in warm water to soften them.
2. Remove end plugs and inner distribution tube.
3. Reheat rubber plugs in warm water after cleaning is complete and reassemble distribution tube.

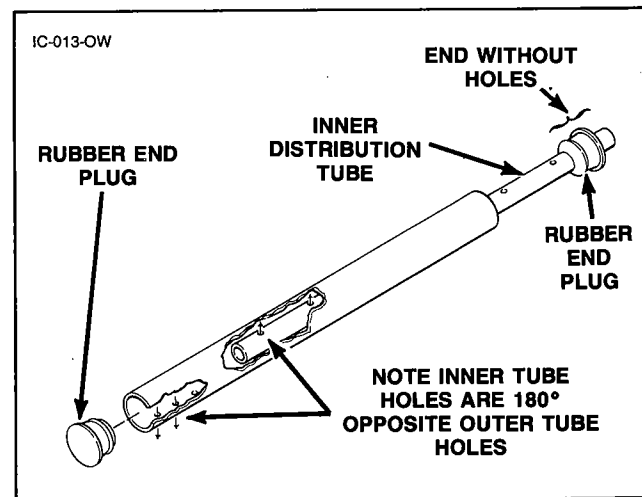


**FIGURE 14 DISTRIBUTION TUBE DISASSEMBLY**

**NOTE:** Position the holes in the inner and outer tubes 180° opposite each other when reassembling. The end of the inner distribution tube without holes must extend from the outer tube when reassembled to allow for attachment of the water line from the pump.

### REMOVE ICE BRIDGE THICKNESS PROBE (FIGURE 15)

1. Disconnect wire leads.
2. Compress side of probe at top near hinge pin and disengage it from the bracket.

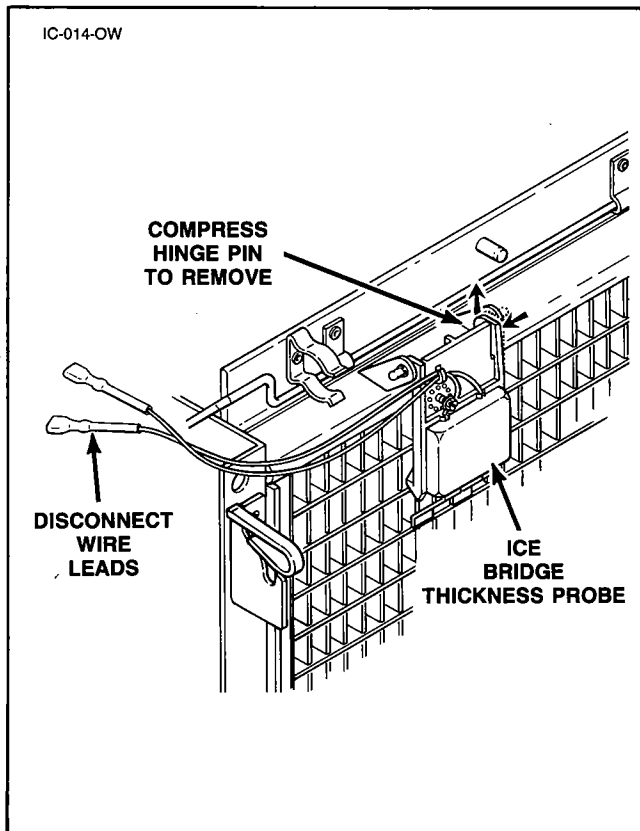


**FIGURE 15 ICE BRIDGE THICKNESS PROBE REMOVAL**

### REMOVE WATER TROUGH (FIGURE 16)

1. Remove thumb screws. Support trough while removing thumb screws.
2. Lower right side of trough into bin while disengaging left side of trough from holding pegs and remove trough from ice machine.

**NOTE:** Stacked ice machines: Remove trough from top ice machine by lifting up on front right side of trough, then pull out to disengage trough from pegs on left side of cabinet.

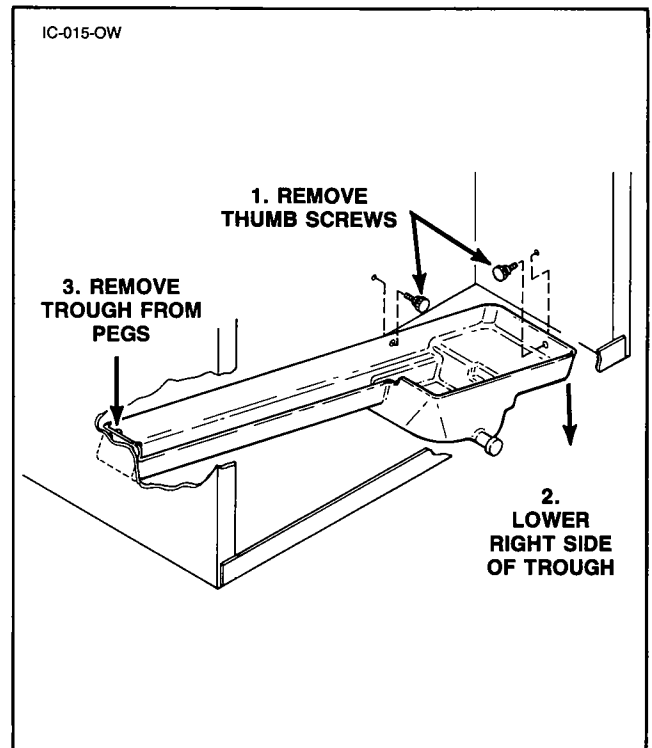

**FIGURE 16 WATER TROUGH REMOVAL**

### CLEANING PROCEDURES

Ice Machine Cleaner is for removal of lime scale or other mineral deposits. It is not used for removal of algae or slime. Refer to Sanitizing for removal of algae and slime.

#### **CAUTION**

**USE ONLY MANITOWOC ICE MACHINE CLEANER, PART NO. 94-0546-3 IN RECOMMENDED CONCENTRATION AS THIS IS COMPATIBLE WITH MATERIALS USED IN THE MANUFACTURE OF MANITOWOC ICE MACHINES.**

1. Soak parts in a solution of no more than 16 ounces of cleaner to one gallon of warm water. Use a brush (**DO NOT USE A WIRE BRUSH**) or a sponge to clean the parts, taking care not to damage them.

#### **CAUTION**

**DO NOT IMMERSE THE WATER PUMP MOTOR IN THE CLEANING SOLUTION. ALSO, USE CARE WHEN CLEANING THE ICE BRIDGE THICKNESS PROBE SO AS NOT TO MOVE THE ADJUSTING SCREW.**

2. Use the cleaning solution and a brush or sponge to remove scale build-up from the top, sides and bottom extrusions, the inside of the ice machine panels, and the entire inside of the ice bin.

A dirty top extrusion, Figure 13, could result in uneven water flow over the evaporator. Ensure all scale and dirt are removed.

3. Thoroughly rinse with clean water all parts and surfaces washed with the cleaning solution.

**NOTE:** Incomplete rinsing of the ice bridge thickness probe could leave residue which could cause the ice machine to go into premature harvest. For best results, brush or wipe off while rinsing and then wipe dry.

4. Reinstall all parts removed for cleaning except front panel and top chute (if stacked).

## CLEAN THE EVAPORATOR SURFACE

**NOTE:** Failure to clean other parts prior to evaporator may result in poor cleaning of the evaporator surface.

1. Turn on water to ice machine at water service valve and ensure float valve is open, Figure 12.
2. Allow trough to fill to proper operating level, Figure 6.
3. Set ICE/OFF/WATER PUMP switch at WATER PUMP.
4. Add two ounces of cleaner to water trough and allow solution to circulate a maximum of 10 minutes.

**NOTE:** Use a soft brush on excessively dirty evaporator to help remove deposits. Ensure connecting holes in back corners of cube molds are open.

5. Set ICE/OFF/WATER PUMP switch at OFF.
6. Shut off water at float valve. See Figure 12.
7. Drain water trough by removing drain plug.
8. Thoroughly rinse trough with clean water, then reinstall drain plug.
9. Turn on water at float valve.
10. Set ICE/OFF/WATER PUMP switch at WATER

PUMP and allow water trough to fill to proper operating level.

11. Sanitize ice machine after cleaning.
12. Perform Operational Checks, Pages 7 and 8.

## Sanitizing

Sanitizer is used for removal of algae or slime, AND AFTER USE OF MANITOWOC ICE MACHINE CLEANER. It is not used for removal of lime scale or other mineral deposits.

1. Loosen two screws holding front panel in place and remove front panel.
2. Set ICE/OFF/WATER PUMP switch at OFF after ice falls from evaporator at completion of Harvest cycle or set switch at OFF and allow ice to melt off evaporator.

### CAUTION

**NEVER USE ANY TYPE OF OBJECT TO FORCE ICE FROM EVAPORATOR AS DAMAGE MAY RESULT.**

3. Stacked ice machines: Remove ice chute as described under Removal of Parts for Cleaning, Step 4, Page 11.
4. Remove water curtain, Figure 7.
5. Remove all ice from bin.
6. Set ICE/OFF/WATER PUMP switch at WATER PUMP.
7. Add one ounce of sanitizer to water trough and allow solution to circulate a minimum of one minute.
8. Drain solution from trough by removing drain plug, Figure 6.
9. Thoroughly rinse trough with clean water, then reinstall drain plug.
10. Wash all surfaces requiring sanitizing (ice machine and bin) with a solution of one ounce of sanitizer to up to four gallons of water.
11. Thoroughly rinse all sanitized surfaces with clean water.

12. Set ICE/OFF/WATER PUMP switch at ICE.
13. Perform Operational Checks, Pages 7 and 8. Discard first batch of ice.

## Checking and Cleaning the Water Dump Valve

**NOTE:** This covers the Alco water dump valve only.

Although cleaning the dump valve is considered maintenance, we recommend you use qualified maintenance personnel or service company to perform the following procedures.

### OPERATION CHECK

1. Remove top and right side panel.
2. Set ICE/OFF/WATER PUMP switch at ICE.
3. Check clear plastic outlet drain hose of dump valve, Figure 17, for leakage while the ice machine is in the freeze mode. Dump valve should be open throughout the harvest mode. (If the water flow through the dump valve is restricted during the harvest mode, water will continue to run up to the distribution tube.)
4. If the dump valve is leaking or is restricted, remove, disassemble and clean.

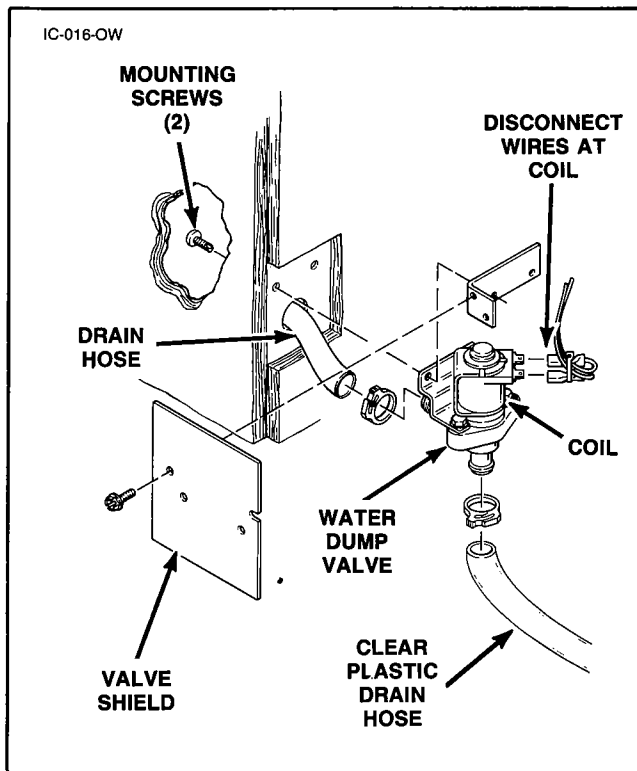


FIGURE 17 WATER DUMP VALVE REMOVAL

## REMOVE WATER DUMP VALVE (FIGURE 17)

### ⚠ WARNING

**DISCONNECT ELECTRIC POWER TO THE ICE MACHINE AT THE ELECTRIC SERVICE SWITCH BOX.**

1. Drain water trough by removing drain plug.
2. Remove water dump valve shield from water dump valve mounting bracket.
3. Disconnect wires from dump valve coil.
4. Remove two screws securing dump valve and mounting bracket.
5. Remove tubing from dump valve by twisting off hose clamps.

## DISASSEMBLE WATER DUMP VALVE (FIGURE 18)

1. Pry off coil retainer on top of dump valve coil with flat tip screwdriver.

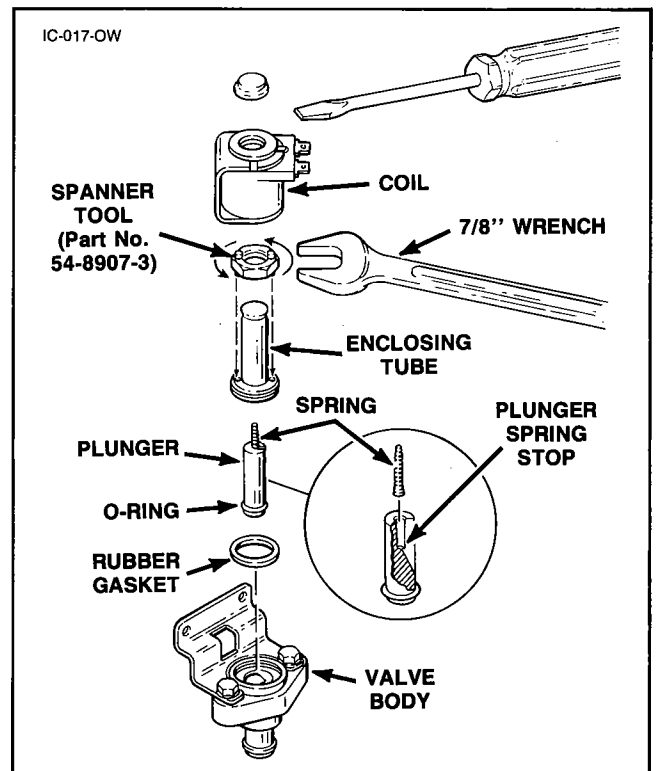


FIGURE 18 WATER DUMP VALVE DISASSEMBLY

2. Lift coil assembly off valve body. Note position of coil assembly on valve before removing. When reassembling valve, ensure coil is in same position.
3. Place spanner tool (Manitowoc Part No. 54-8907-3, available through your local Manitowoc Distributor) over enclosing tube and insert pins on spanner tool into holes on bottom of tube.
4. Turn spanner tool counterclockwise with 7/8" wrench and remove enclosing tube, plunger, and rubber gasket from valve body.

It is not necessary to remove spring from plunger when cleaning. If spring is removed, insert *flared* end of spring into slotted opening in top of plunger until spring comes in contact with plunger spring stop. Use care not to stretch or damage spring in plunger when cleaning.

## CLEANING WATER DUMP VALVE

Replace excessively dirty or worn water dump valve components. Order Water Dump Valve Rebuild Kit, Part No. 24-0487-3. Contact your Manitowoc Dealer.

1. Soak components in cleaning solution (refer to Cleaning Procedures, Page 13). Remove heavy scale deposits with a stiff-bristle brush. Use a small bottle brush to clean inside the enclosure tube. Wipe off rubber gasket with soft cloth.

### CAUTION

**DO NOT SOAK COIL ASSEMBLY.**

2. Thoroughly rinse components with clean water.
3. Reassemble water dump valve and reinstall in ice machine.

## Water Filtration

Manitowoc recommends the use of water filtration on the water supply to the ice machine. Filtration reduces mineral build-up on the ice making surfaces of the ice machine which can slow the ice making process, reduce ice production, increase energy consumption and increase cleaning frequency. Filtration also improves ice quality. If the

local water supply has high turbidity (dirty water), a prefilter is also recommended.


Consult your local dealer or distributor for information on Manitowoc's full line of Tri-eliminators filtration systems.

To ensure maximum filtration efficiency, replace the primary filter cartridge every six months. The filter gauge will indicate if replacement is necessary prior to six months usage (below 20 psig).

Tri-Liminators systems which include a pre-filter should not require primary filter replacement prior to six months usage. If replacement is indicated, first replace the pre-filter.

## REPLACEMENT PROCEDURE (FIGURE 19)

1. Turn off water supply using the inlet shut-off valve
2. Depress pressure release button to relieve pressure.
3. Unscrew housing from cap (see illustration).
4. Remove used cartridge from housing and discard.

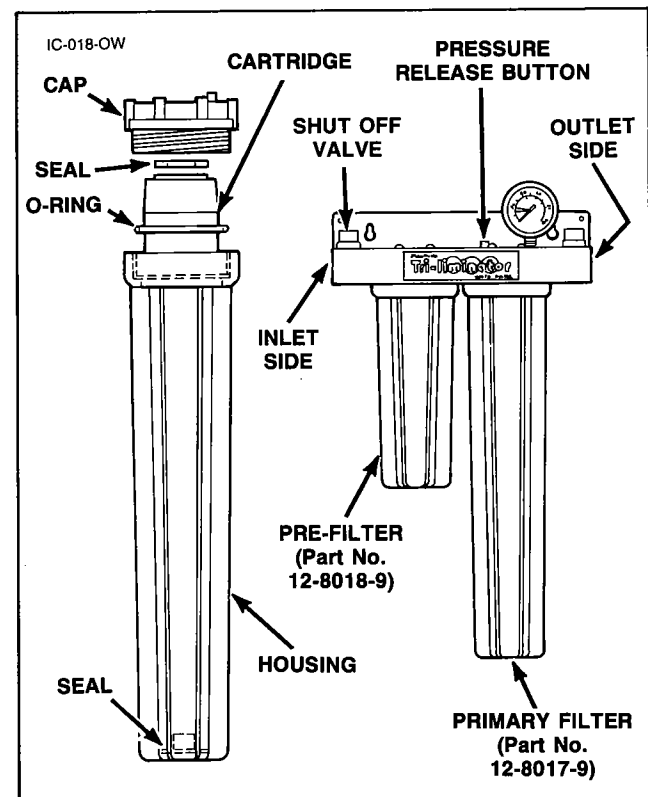

**FIGURE 19 WATER FILTRATION**

- Remove O-ring from groove in the housing and wipe groove and O-ring clean. Relubricate O-ring with a coating of clean petroleum jelly (Vaseline). Place O-ring back in groove and with two fingers wipe or press it down into the groove.

**NOTE:** This step is important to insure proper filter seal. Make sure the O-ring is seated level in the groove.

- Insert a new cartridge into the housing making sure that it slips down over the housing standpipe.
- Screw the housing onto the cap and **hand tighten. Do not over-tighten or use spanner wrench.**
- Repeat Steps 3 through 7 for each filter housing.
- Turn on the water supply to allow housing (and filter) to slowly fill with water.
- Depress the pressure release button to release trapped air from housing. Check for leaks.

## Removal From Service/Winterization


You must take special precautions if the ice machine is to be removed from service for extended periods or exposed to ambient temperatures of 32°F. or below.

### **CAUTION**

**IF WATER IS ALLOWED TO REMAIN IN THE MACHINE IN FREEZING AMBIENT TEMPERATURES, IT COULD FREEZE RESULTING IN SEVERE DAMAGE TO SOME COMPONENTS. A FAILURE OF THIS NATURE IS NOT COVERED BY WARRANTY.**

- Disconnect electric power at electric service switch box.
- Turn off water going to the ice machine.
- Remove drain plug from water trough.
- Disconnect drain line and incoming ice making water line at rear of ice machine.

- Water-cooled ice machines: disconnect incoming water line and drain line from water-cooled condenser at rear of ice machine.
- Blow compressed air into incoming water openings and drain openings until water stops coming out of float valve and water trough.
- Water-cooled ice machines: pry open water regulating valve by inserting large standard screwdriver between bottom spring coils of valve. Pry spring upward to open valve, Figure 20. Hold valve open and blow compressed air through condenser until no water remains.
- Ensure no water is trapped in the water lines, drain lines and distribution tube.
- If ice machine is outside, cover machine to prevent exposure to elements.

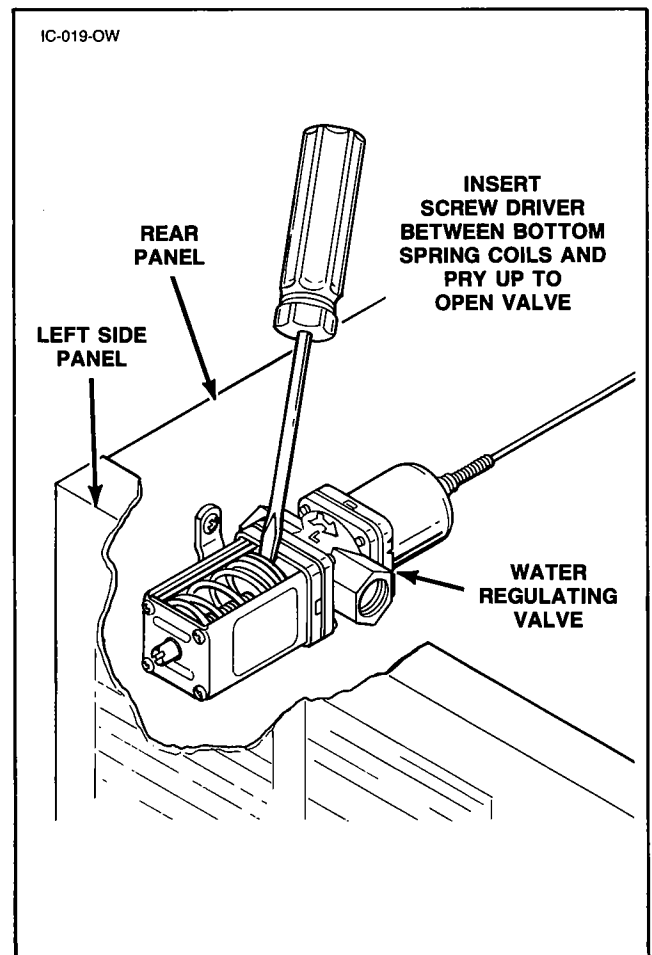

**FIGURE 20 MANUALLY OPEN WATER REGULATING VALVE**

## SECTION 3 MAINTENANCE

Follow a general maintenance schedule to ensure reliable, trouble-free operation as well as maximum ice production.

Although you, the owner, are responsible and may perform your own maintenance, call your local qualified Manitowoc Service Representative to perform the maintenance if at any time you are unsure or unaware of the procedures and safety precautions that must be followed.

We recommend you follow these guidelines on a semi-annual basis\*, depending on ambient air and water conditions and usage. Some components require less frequent maintenance (on an annual basis\*\*).

Record your maintenance dates in the spaces provided for future reference.

### Maintenance Guidelines

<b>*SEMI-ANNUAL MAINTENANCE</b>	<b>Page Reference</b>	<b>Dates of Maintenance</b>
1. General ice machine inspection.	10	
2. Exterior cleaning.	10	
3. Cleaning the condenser.	10	
4. Interior cleaning: Removal of parts Cleaning procedures	11 13	
5. Sanitizing.	14	
6. Manitowoc Tri-Liminator water filter system (if used).	16	
7. Operational checks: Water level Water curtain Bin switch Ice bridge thickness	7 7 8 8	
<b>**ANNUAL MAINTENANCE</b>	<b>Page Reference</b>	<b>Dates of Maintenance</b>
9. Water dump valve cleaning.	15	
10. Water-cooled condenser/regulating valve cleaning.	11	

# General Ice Machine Inspection

You can eliminate potential service calls by performing routine maintenance. Check all water fittings and lines for leaks and ensure refrigeration tubing is not rubbing or vibrating against other tubing, panels, components, etc. **Remember, good preventive maintenance leads to minimal problems and maximum ice production.**

Do not stack anything (boxes, etc.) on or around the ice machine. Ensure remote condenser is well ventilated (if applicable). Do not cover the ice machine while it is operating. It is absolutely necessary to maintain adequate air flow through and around the ice machine to ensure long component life and maximum ice production.

## Exterior Cleaning

1. Clean the area around the ice machine as frequently as necessary to maintain cleanliness and efficient operation.
2. Sponge dust and dirt off the outside of the ice machine with clean, warm water and wipe dry with a soft clean cloth.

### ⚠ CAUTION

**IF THE PANELS ARE STAINLESS STEEL, CLEAN LIGHT STAINS WITH SOAP, DETERGENT, OR A COMMERCIAL CLEANER. DO NOT USE CLEANSERS CONTAINING BLEACHING AGENTS AS MOST OF THESE CONTAIN CHLORINE WHICH WILL STAIN. USE STAINLESS STEEL WOOL TO REMOVE HEAVY STAINS. NEVER USE PLAIN STEEL WOOL AS IT WILL CAUSE RUSTING. AFTER CLEANING, RINSE THOROUGHLY.**

## Cleaning the Condenser

### ⚠ WARNING

**DISCONNECT ELECTRIC POWER TO ICE MACHINE AT THE ELECTRIC SERVICE SWITCH BOX, BEFORE CLEANING CONDENSER!**

## AIR-COOLED CONDENSER (Self-Contained and Remote Models)

A dirty condenser restricts airflow resulting in excessively high operating temperatures which in turn reduces ice production and shortens component parts life. Clean the condenser *at least* every six months.

### ⚠ CAUTION

**CONDENSER FINS ARE SHARP ENOUGH TO CUT YOUR FINGERS. USE CARE WHEN CLEANING THEM.**

### ⚠ CAUTION

**COVER CONDENSER FAN MOTOR TO PREVENT WATER DAMAGE IF CLEANING CONDENSER AND FAN WITH WATER. REMOVE COVER WHEN CLEANING IS COMPLETED.**

1. Remove top and left side panels (self-contained models only).

**NOTE:** On remote condensers, remove top cover.


2. Clean outside of condenser (bottom side of remote condenser) with soft brush or vacuum with brush attachment. Brush or wash condenser from top to bottom – not from side to side. Take care not to bend the fins. Shine flashlight through condenser to check for dirt between the fins.

If further cleaning is required, use one or both of the following procedures:

- a. Blow through condenser from the inside out using compressed air. Take care not to bend fan blades. Shine flashlight through condenser to ensure all dirt is removed.
- b. Clean with a commercial condenser coil cleaner according to the directions and cautions supplied with the cleaner. Thoroughly rinse condenser with clean water.



3. Straighten any bent condenser fins with a fin comb, Figure 10.

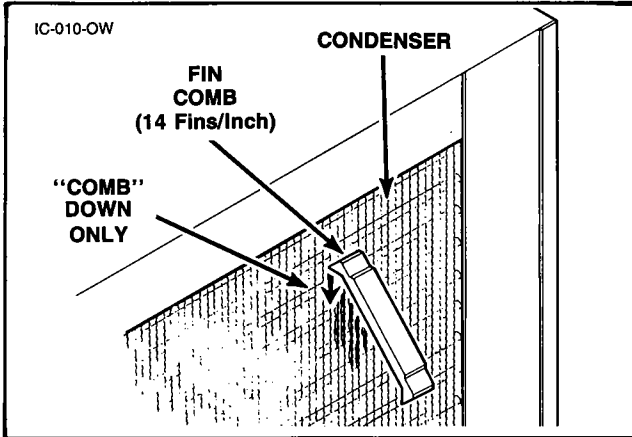

**FIGURE 10 STRAIGHTEN BENT CONDENSER FINS**

4. Carefully wipe off fan blades and fan motor with a soft cloth, taking care not to bend fan blades. Wash excessively dirty fan blades with warm soapy water, then rinse thoroughly.

### WATER-COOLED CONDENSER (and Water Regulating Valve)

**IMPORTANT:** Water-cooled condensers and water regulating valves should be cleaned by qualified maintenance personnel.

The water-cooled condenser and water regulating valve may require cleaning due to scale build-up.

Symptoms of restrictions in the condenser water circuit may include low ice production, and high operating temperatures and pressures.

### Interior Cleaning

For efficient operation, clean and sanitize ice machine every six months. **IMPORTANT:** Do not use hot water. If ice machine requires cleaning and sanitizing more frequently, consult a qualified service company to test the water quality and recommend appropriate water treatment.

Before cleaning check water dump valve for proper operation (see Checking and Cleaning Water Dump Valve, Page 15). Deposits may accumulate in the valve causing leakage or restriction of water flow.

### REMOVAL OF PARTS FOR CLEANING

1. Loosen two screws holding front panel in place and remove front panel.
2. Set ICE/OFF/WATER PUMP switch at OFF after ice falls from evaporator at completion of Harvest cycle, or set switch at off and allow ice to melt off evaporator.


#### **CAUTION**

**NEVER USE ANY TYPE OF OBJECT TO FORCE ICE FROM EVAPORATOR AS DAMAGE MAY RESULT.**

3. Turn off water to the ice machine at water service valve.
4. Stacked ice machines:
  - a. Remove top panel.
  - b. Lift ice chute up and out of ice machine.
5. Remove all ice from bin.
6. Remove water curtain.
7. Remove drain plug from water trough and allow water to drain into bin.

### REMOVE WATER PUMP (FIGURE 11)

1. Disconnect water pump power cord.

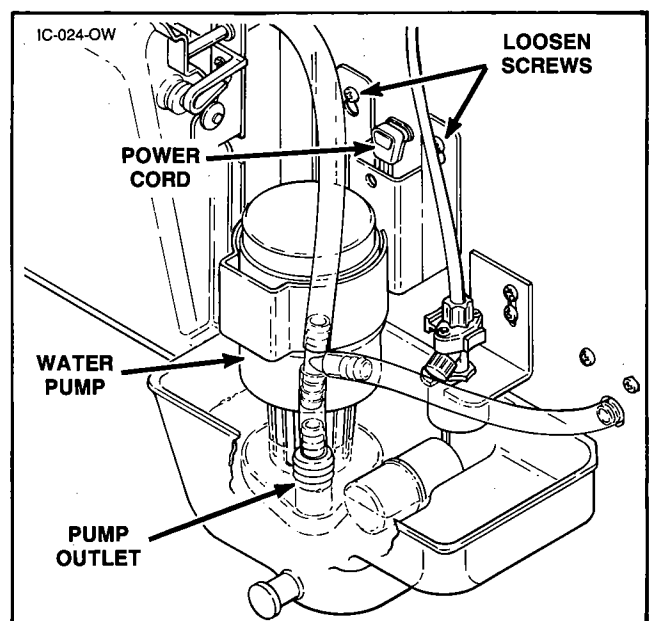

**FIGURE 11 WATER PUMP REMOVAL**

## SECTION 4 BEFORE CALLING FOR SERVICE

If a problem arises during the operation of your ice machine, follow the checklist below before calling for service.

### CHECKLIST

Problem	Possible Cause	To Correct
Ice machine does not operate.	<p>No electrical power to ice machine.</p> <p>Tripped high pressure cutout (water-cooled ice machines).</p> <p>ICE/OFF/WATER PUMP switch set improperly.</p> <p>Water curtain stuck open.</p> <p>Bin switch activating pin out of adjustment.</p>	<p>Replace fuse, reset circuit breaker, turn on main switch.</p> <p>Reset high pressure cutout, Figure 2, Page 5.</p> <p>Set switch at ICE.</p> <p>Water curtain must swing freely, Figure 7, Page 7.</p> <p>Adjust bin switch activating pin, Figure 8, Page 8.</p>
Ice machine does not release ice or is slow to harvest.	<p>Ice machine dirty.</p> <p>Ice machine not level.</p> <p>Air-Cooled Models: low ambient.</p> <p>Water regulating valve leaking during harvest mode (water-cooled ice machines).</p>	<p>Clean and sanitize ice machine, Pages 11 and 14.</p> <p>Level ice machine.</p> <p>Minimum ambient is 35°F.</p> <p>See Cleaning Water-Cooled Condensers, Page 11.</p>
Ice machine does not cycle into harvest mode.	<p>Ice bridge thickness probe dirty.</p> <p>Ice bridge thickness probe wires disconnected.</p> <p>Ice bridge thickness probe out of adjustment.</p> <p>Uneven ice fill (thin at top of evaporator).</p>	<p>Clean and sanitize ice machine, Pages 11 and 14.</p> <p>Connect wires.</p> <p>Adjust ice bridge thickness probe, Figure 9, Page 8.</p> <p>See Shallow or Incomplete Cubes.</p>
Poor quality ice. (Ice "soft" or not clear.)	<p>Quality of incoming water.</p> <p>Ice machine dirty.</p> <p>Water dump valve not working.</p> <p>Water softener working improperly (if installed).</p>	<p>Contact qualified service company to test quality of water and make appropriate filter recommendations.</p> <p>Clean and sanitize ice machine, Pages 11 and 14.</p> <p>See Checking and Cleaning the Water Dump Valve, Page 15.</p> <p>Repair water softener.</p>

Problem	Possible Cause	To Correct
<p>Shallow or incomplete cubes, incomplete ice fill pattern on evaporator.</p>	<p>Ice bridge thickness probe out of adjustment.</p> <p>Water trough level too high or too low.</p> <p>Water float valve filter screen dirty.</p> <p>Ice machine dirty.</p> <p>Water filtration.</p> <p>Hot incoming water piped into ice machine.</p> <p>Incorrect incoming water pressure.</p> <p>Leaky water dump valve.</p> <p>Ice machine not level.</p>	<p>Adjust ice bridge thickness probe, Figure 9, Page 8.</p> <p>Adjust float valve, Figure 6, Page 7.</p> <p>Clean filter screen, Figure 12, Page 12.</p> <p>Clean and sanitize ice machine, Pages 11 and 14.</p> <p>Replace filter, Figure 19, Page 16.</p> <p>Connect ice machine to cold water supply. See Installation Instructions.</p> <p>Water pressure must be 20-80 psi.</p> <p>See Checking and Cleaning the Water Dump Valve, Page 15.</p> <p>Level ice machine.</p>
<p>Low ice capacity.</p>	<p>Water float valve filter screen dirty.</p> <p>Float valve shut-off closed.</p> <p>Incoming water supply shut off.</p> <p>Float valve stuck open.</p> <p>Dirty condenser.</p> <p>High ambient temperature.</p> <p>Inadequate clearance around ice machine causing air flow restriction.</p> <p>Objects stacked on or around ice machine blocking air flow to condenser (Air-Cooled Models).</p> <p>Air baffle not installed (Air-Cooled Models).</p>	<p>Clean filter screen, Figure 12, Page 12.</p> <p>Open shut-off valve, Figure 12, Page 12.</p> <p>Open water service valve.</p> <p>Clean and adjust, Figure 6, Page 7.</p> <p>Clean condenser (air-cooled, Page 10, water-cooled, Page 11).</p> <p>Maximum ambient is 110°F.</p> <p>Provide adequate clearance.</p> <p>Remove objects.</p> <p>Install air baffle per instructions on air baffle.</p>

# *Ice Machine Warranty*

Manitowoc Ice, Inc., hereinafter referred to as the COMPANY, warrants new Ice Machines manufactured by the COMPANY to be free from defects in material and workmanship under normal use and service for a period of thirty-six (36) months from the date of original installation, and twenty-four (24) additional months on the evaporators and compressors. The obligation of the COMPANY under this warranty is limited to the repair or replacement of parts or assemblies that in the COMPANY'S opinion are defective, F.O.B. the factory.

In addition to the component warranty explained above, the COMPANY will pay straight time labor to repair or replace a defective component when failure occurs within thirty-six (36) months from the date of original installation and only when such service is performed by a COMPANY Contracted Service Representative or a refrigeration service agency as qualified and authorized by the COMPANY'S local Distributor.

Time and hourly rate schedules, as published from time to time by the COMPANY, apply to all service procedures. Additional expense including, but not limited to, overtime premium, travel time, material cost, accessing or removal of the ice machine, is the responsibility of the owner along with all maintenance, adjustments, cleaning and ice purchases.

The foregoing warranty shall not apply to (1) any part or assembly that has been altered, modified, or changed; (2) any part or assembly that has been subject to misuse, abuse, neglect, or accidents; or (3) any ice machine that has been installed and/or maintained inconsistent with the technical instructions provided by the COMPANY.

The sixty (60) month compressor warranty, including the thirty-six (36) month labor replacement warranty, shall not apply when the Ice Machine's refrigeration system is modified with a condenser, heat reclaim device, or parts and assemblies other than those manufactured by the COMPANY, unless the COMPANY approves these modifications for specific locations in writing.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OR GUARANTEES OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE EXCEPT AS PROVIDED IN THIS WARRANTY WITH RESPECT TO DEFECTS IN MATERIAL AND WORKMANSHIP.** The liability of the COMPANY arising out of the sale, use or operation of the COMPANY'S parts and equipment, whether in warranty, contract, negligence or strict liability, including claims for special, indirect or consequential damages, shall not in any event exceed the cost of furnishing a replacement for a defective part or assembly as hereinabove provided. Upon the expiration of the warranty period, as hereinabove provided, any such liability shall terminate. The foregoing warranty shall constitute the sole and exclusive liability of the COMPANY.

To secure prompt and continuing warranty service, the warranty registration card must be completed and sent to the COMPANY within five (5) days from the installation date.

Complete the following and retain for your record:

Distributor/ Dealer \_\_\_\_\_

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_

Installation Date \_\_\_\_\_

## **MANITOWOC ICE, INC.**

2110 So. 26th St., P.O. Box 1720, Manitowoc, WI 54221-1720

Telephone: 920-682-0161 • Fax: 920-683-7879

Form 80-0373-3 (6/98)

Effective January 1, 1991, in the United States, Canada, and international markets served by Manitowoc.