


US  
CAN  
GB



Technical Service and Exploded Parts  
For Electric Fryers  
Covering Models  
MEII, ME2 Full and Split

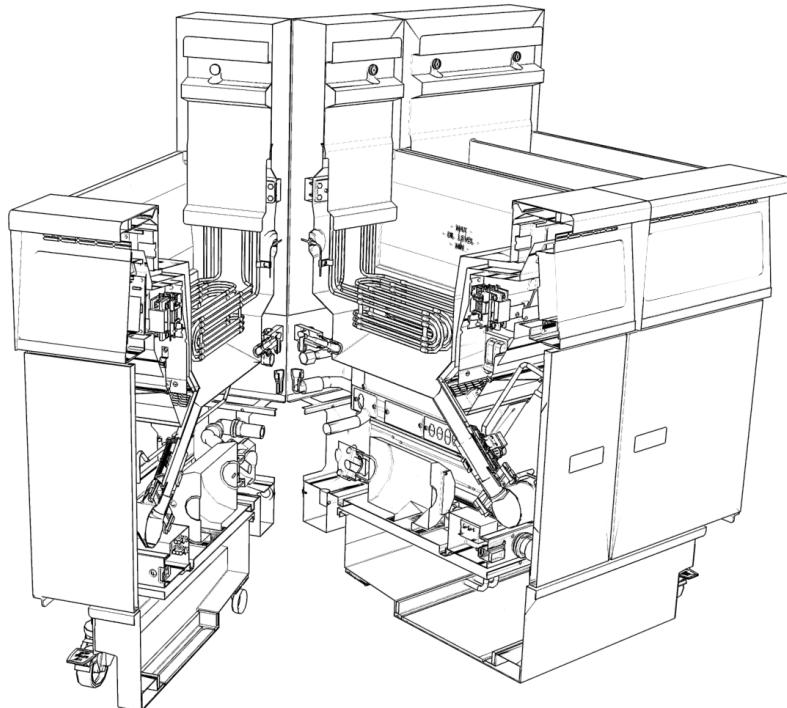

**WARNING! FIRE HAZARD**

THE OIL LEVEL SHOULD NOT FALL BELOW THE MINIMUM INDICATED LEVEL AT ANY TIME.  
THE USE OF OLD OIL CAN BE DANGEROUS AS IT WILL HAVE A REDUCED FLASH-POINT  
AND BE MORE PRONE TO SURGE BOILING.

**WARNING**

INSTALLATION AND ALL CONNECTIONS MUST BE MADE ACCORDING TO NATIONAL AND  
LOCAL REGULATIONS AND CODES IN FORCE.

**WARNING**

A COUNTRY APPROVED ALL POLE CIRCUIT BREAKER WITH A MINIMUM OPEN CONTACT  
GAP OF 3mm MUST BE USED FOR PROPER INSTALLATION.

**WARNING**

THE FRYER IS NOT JET STREAM APPROVED. DO NOT CLEAN THE APPLIANCE WITH A  
WATER JET.

**NOTICE**

INSTALLATION SHOULD ONLY BE DONE BY A COMPETENT SERVICE TECHNICIAN. THE  
MODEL & SERIAL NUMBER, AND ELECTRICAL REQUIREMENTS STAMPED INTO THE DATA  
PLATE, LOCATED ON THE INSIDE PANEL OF THE DOOR.

**NOTICE**

THIS APPLIANCE IS INTENDED FOR PROFESSIONAL USE ONLY, AND AS SUCH, SHOULD  
BE OPERATED BY FULLY TRAINED PERSONNEL.

**NOTICE**

IT IS RECOMMENDED THAT THIS MACHINE BE INSPECTED BY A QUALIFIED TECHNICIAN  
ON A YEARLY BASIS.

**WARNING**

THE POWER SUPPLY MUST BE DISCONNECTED SERVICING OR CLEANING THE UNIT.

**WARNING**

SHORTENING, WHEN IT IS AT OPERATING TEMPERATURES, IS VERY HOT AND  
DANGEROUS! USE EXTREME CAUTION WHEN HANDLING! USE PROPER PROTECTIVE  
GEAR SUCH AS INSULATED GLOVES, APRONS, FACE SHIELD, AND SLEEVES WHEN  
HANDLING HOT SHORTENING. DO NOT ATTEMPT TO MOVE MACHINE THAT HAS HOT OIL IN  
IT. ALLOW TO COOL TO ROOM TEMPERATURE OR DRAIN THE OIL INTO A SUITABLE  
CONTAINER BEFORE MOVING THE FRYER.

## Table of Contents

How Does It Work? .....	4
Component Troubleshooting.....	4
Temperature Probe Resistance Chart .....	4
Basic Trouble Shooting .....	6
Relay Board Component Explanation .....	8
Ladder Diagram .....	11
Schematics .....	12-21
Basic Parts List.....	23
Exploded Drawings .....	24-33
Element and Tank Components .....	24
Pump Box and Drain Manifold.....	26
Main Entrance Box .....	28
Pump Assembly and Filter Pan .....	30
Wire Harness' .....	32

## **Chapter 1: HOW DOES IT WORK?**

The McDonalds Electric II fryer components function in specific order of operation. Knowing and understanding the sequence of fryer and components operation will enable you to diagnose equipment failure more accurately.

### **Heating System**

Power to the machine is turned ON:

- If Fuse F1 on the Relay board is good, the A.C. light will illuminate. The computer is supplied with 24VAC and, if the drain valve handle is closed, the proximity switch will supply 24 VAC to the DVI (drain valve interlock) Input at the computer.
- The computer is turned ON:
- The side on relay will be energized, closing the circuit and the S.O. light on the Relay Board will illuminate. If the hi limit is NOT tripped the safety (side on) contactor will energize.
- Computer calls for heat:
- The 24 VDC "heat demand" relay will energize supplying the heat demand contactor with 24 VAC and the H.D. light on the Relay Board will illuminate. This will also supply the computer with a heat feedback signal.

### **Hi Limit System:**

- If the hi limit trips, it causes the side on and heat demand contactors to lose 24VAC supply and the heat feed back loses 24VAC. The computer will display IGNITION FAILURE or HEAT FAIL. After the hi limit resets (unit cools to  $375^{\circ}\text{F} \pm 20^{\circ}\text{F}$ ) the computer will have to be turned off and back on for the unit to heat.

### **Hood Relay System:** U.S./Canada units only

- There is one Hood Relay (K6) per "battery" of fryers (located on rear bottom brace of left hand fryer), it is wired in parallel to every computer (both sides of a twin). When any side of any computer is turned on this relay energizes (turning on the hood) and will stay energized until all of the computers are turned off.

### **Filter System:**

- Opening the RED return valve handle will close the

proximity switch causing the "pump run" relay to be energized. The pump motor will begin to run. Closing the return valve handle will de-energize the relay and the pump motor will stop running.

- The pump system is equipped with a circuit breaker which will de-energize the system and the heat tape in the event of overcurrent. The circuit breaker switch must be in the ON position for the pump and heat tape to operate.
- The return piping system may be provided with optional heat tape to prevent solidification of solid shortening. The heat tape is low wattage and is on constantly to maintain liquid shortening in the line.

## **Chapter 2: COMPONENT TROUBLESHOOTING:**

### **Probe:**

TEMP °F/°C	RESISTANCE OHMΩ	TEMP °F/°C	RESISTANCE OHMΩ
60/16	139,055	330/166	1,192
80/27	84,644	335/168	1,123
100/38	53,146	340/171	1,058
120/49	34,328	345/174	998
140/60	22,755	350/177	942
160/71	15,446	355/179	890
180/82	10,716	360/182	841
200/93	7,586	365/185	795
210/99	6,427	370/188	752
220/104	5,470	375/191	712
240/116	4,013	380/193	675
260/127	2,991	385/196	640
280/138	2,262	390/199	607
300/149	1,734	395/202	576
320/160	1,347	400/204	547
325/163	1,267		

The resistance of the probe will change as the temperature changes. The resistance will decrease as the temperature rises. The lower the temperature the greater the resistance change will be per degree of temperature change, as the temperature approaches the working range of the probe, the resistance change will become more linear.

If the probe is suspect, check its resistance and the oil/air temperature at which it was taken. Compare these

values on the chart below.

If the probe returns an open circuit or 0 Ohms reading it should be replaced. If the resistance varies more than 30 Ohms when being checked between 325-375°F the probe will give a false temperature reading on the computer and should be calibrated (up to 10°F) or replaced. However, it will continue to operate at a slightly higher or lower temperature.

Allow the oil to cool and check the probe resistance at a lower temperature. As can be seen from the chart a greater variation can be tolerated at a lower temperature.

### **Heat Demand Contactor:**

The heat demand contactor has a 24VAC coil and will energize when the correct voltage is supplied to the coil. When energized, the contacts will close, allowing current to flow through the elements. The coil resistance is 192 ohms out of circuit.

### **Hi Limits:**

The hi - limit switch is a normally closed switch until the temperature at the hi-limit bulb reaches 425°F ± 20°F.

In order to test this switch it will be necessary to utilize the temperature control hi-limit feature. Refer to **PM Card FR015** for instructions on how to perform this test.

### **WARNING**

During this test monitor the fryer closely. This test will cause the oil to heat past the normal operating temperature and can cause damage to the machine and its operator if care is not taken.

If the switch does not trip between the prescribed limits it is defective and should be replaced. Once tripped, the switch cannot be reset until the oil has cooled to approximately 375°F ± 20°F. If the switch does not reset after oil has cooled it is defective.

Once the oil has cooled the hi-limit reset button must be pressed to reset the hi-limit relay on CE and export units only.

### **Drain Valve & Return Valve Switches:**

These switches are a magnetically operated proximity switches. When the Drain Valve handle is moved to the open position, the Actuator will move away from the switch causing the switch to open. When the Drain Valve is closed the switch will close.

Opening the RED return valve handle will close the proximity switch causing the "pump on" relay to be energized. The pump will begin to pump. Closing the return valve handle will de-energize the relay and the pump will stop pumping. These switches can also be checked with an Ohm meter. The normal gap between the Actuator and the Sensor switch on the valve handle is  $\frac{1}{8}$ " -  $\frac{1}{4}$ " (3 - 6mm).

### **Transformer:**

Transformers are multiple input voltage 24 volt output voltage and can be checked by reading the input and output voltages. A quick check for 24VAC can be done at the relay board behind the computer. The AC led will be lit if the F1 fuse is good and the board is receiving 24VAC

### **Elements:**

Each Element has three coils inside it, check all element coils out of circuit with an Ohm Meter, the resistance should correspond to the chart below, if the resistance varies more than 5 Ohm the element will need to be changed. Also check for continuity to ground on each end of the suspect element, there should be no continuity to ground.

208 volt elements	18.5 Ohms
220 volt elements	20.7 Ohms
240 volt elements	24.6 Ohms

### **Safety (Side On) Contactor:**

Check the coil with an Ohm Meter, the resistance should be approximately 3 - 6 Ohms out of circuit. If it does not have this resistance it should be changed.

## Fryer Trouble Shooting

PROBLEM	POSSIBLE CAUSE	ACTION
Computer will NOT turn ON Display does NOT light	A. No power to the machine B. F1 Fuse blown C. T1A Transformer	A. Check building circuit breaker, verify power cord is plugged in B. Check F1A Fuse. Replace if defective C. Check voltage in and out of T1A
Computer shows "IGNITION FAILURE" or "HEAT FAIL" and machine does NOT heat.	A. Hi limit tripped B. Heat demand relay C. Relay board	A. Once the oil temp has gone below $375^{\circ}\text{F} \pm 20^{\circ}$ , the Hi-limit should reset automatically, if not, replace Hi-limit B. Check & replace if defective C. Check & replace if defective
Machine is heating slowly	A. Side On contactor B. Heat Demand contactor C. Element D. Loss of power on one leg of 3 phase input power	A. Check & replace if defective B. Check & replace if defective C. Check & replace if defective D. Check input power. Repair or call a qualified electrician
Oil is hotter or colder than computer /controller displays	A. Temperature calibration B. Probe C. Probe wiring terminals	A. Adjust temperature offset up to $\pm 10^{\circ}\text{F}$ B. Check & replace if defective C. Clean or repair terminals
Computer displays "DRAINING" or "TURN OFF"	A. Blue drain valve not fully closed B. Sensor switch C. Incorrect switch gap/alignment	A. Check position of handle B. Switch may be loose or have loose wires, replace if defective C. Check gap/alignment, replace if defective
Computer heat demand lights are lit, machine does not heat. HD & SO lights on relay board are lit.	A. Side on contactor B. Heat demand contactor C. Unit not getting 3 phase power	A. Check & replace if defective B. Check & replace if defective C. Check circuit breaker, is 3 phase power cord plugged in all the way
Computer displays "PROBE FAILURE"	A. Shorted probe B. Open probe C. Probe wiring terminals	A. Check probe & replace if defective B. Check probe & replace if defective C. Clean or repair terminals

## Filter Trouble Shooting

PROBLEM	POSSIBLE CAUSE	ACTION
Red return handle is pulled out, but no pump sound can be heard	A. Red return handle not completely open B. Filter circuit breaker may be tripped or in the off position C. Filter motor thermal overload may be tripped D. Sensor switch may be loose or defective E. Power cord unplugged or loose	A. Pull on red return handle to make sure valve is completely open B. Reset the circuit breaker or press it to the on position C. Push the red reset button on the end of the motor D. Check that the switch is tight and that it has the correct gap. Replace if defective E. Check the power cord at the fryer entrance box and at the pump box and make sure that the power cords are plugged in and /or pushed in all the way
Drain valve is closed, computer has been reset, but computer still displays "DRAINING"	A. Blue drain valve not fully closed B. Sensor switch C. Incorrect switch gap/alignment	A. Check position of handle B. Switch may be loose or have loose wires, replace if defective C. Check gap/alignment, replace if defective
Oil is returning to the vat slowly or not at all	A. Dirty filter paper B. Strainer cap dirty C. Filter pan not pushed in completely D. O-rings not sealing on pick up tube	A. Change filter paper B. Remove strainer cap and clean it C. Push filter pan in D. Check & replace if defective
Air bubbles are in the oil being returned to the vat	A. Strainer cap not tight B. Strainer cap not in pick up tube C. Filter pan not pushed in completely D. O-rings not sealing on pick up tube	A. Tighten strainer cap B. Install strainer cap C. Push filter pan in D. Check & replace if defective
Drain valve is open, the oil is draining slowly or not at all	A. Drain valve is not fully open B. Drain line is plugged with debris	A. Apply a little more pressure to the drain valve handle to check that the drain valve is fully open B. Use the clean out rod to clear the drain valve opening. If this does not clear the blockage, close the drain valve, and call for service

## Relay Board Component Explanation

Fuse:

F1 - If fuse is blown, A.C. will not be lit.

Trouble Shooting Lights:

A.C. - When lit, F1 Fuse and T1 Transformer are good.

S.O. - When lit, A1 Computer is on and K10 Contactor should be energized.

H.D. - When lit, A1 Computer is on and calling for heat, K11 Contactor should be energized

Relays:

K1 - Heat Demand Relay, will be energized when A1 Computer calls for heat and when H.D. is lit.

K3 - Side On Relay, will be energized when A1 Computer is on and A.C. is lit.

Connectors:


J31 - Connects to A1 Computer


J32 - To Side On and Heat Demand Contactors and Heat Feed Back.

J33 - To 24VAC jumper harness.

J34 - To Drain Switch and optional Basketlifts


J35 - Input voltage from transformer

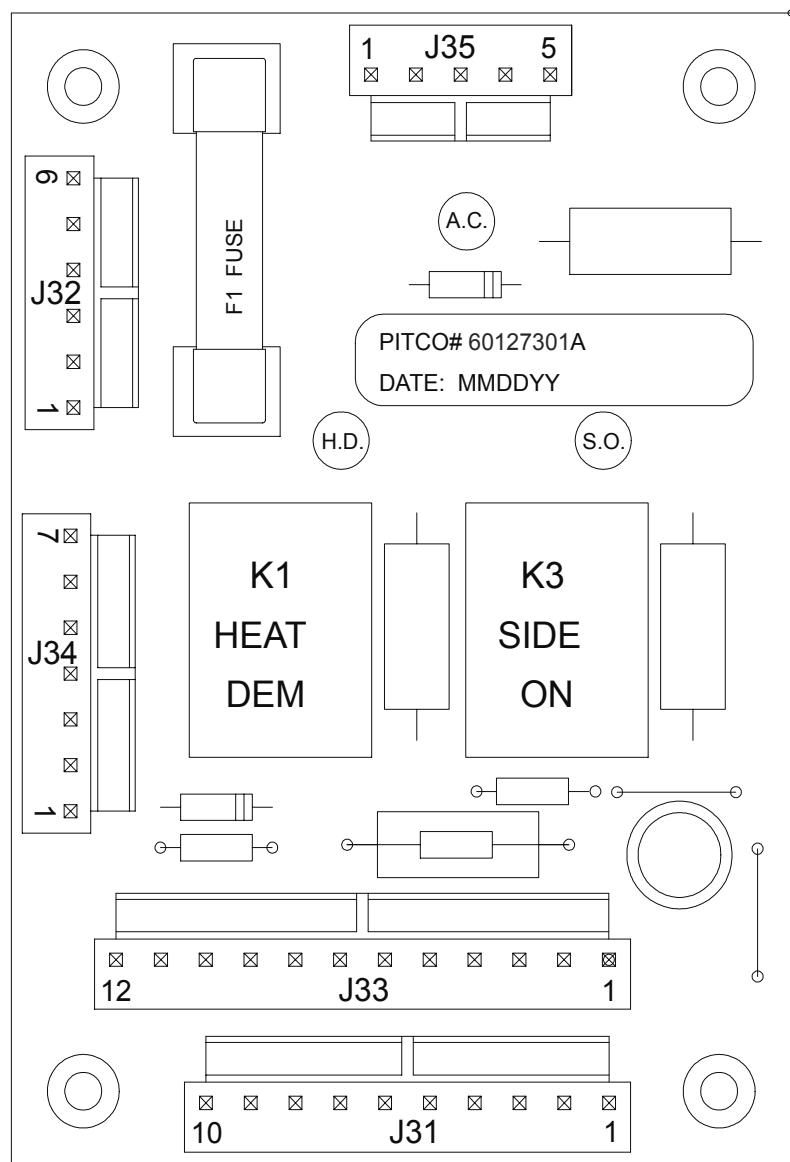

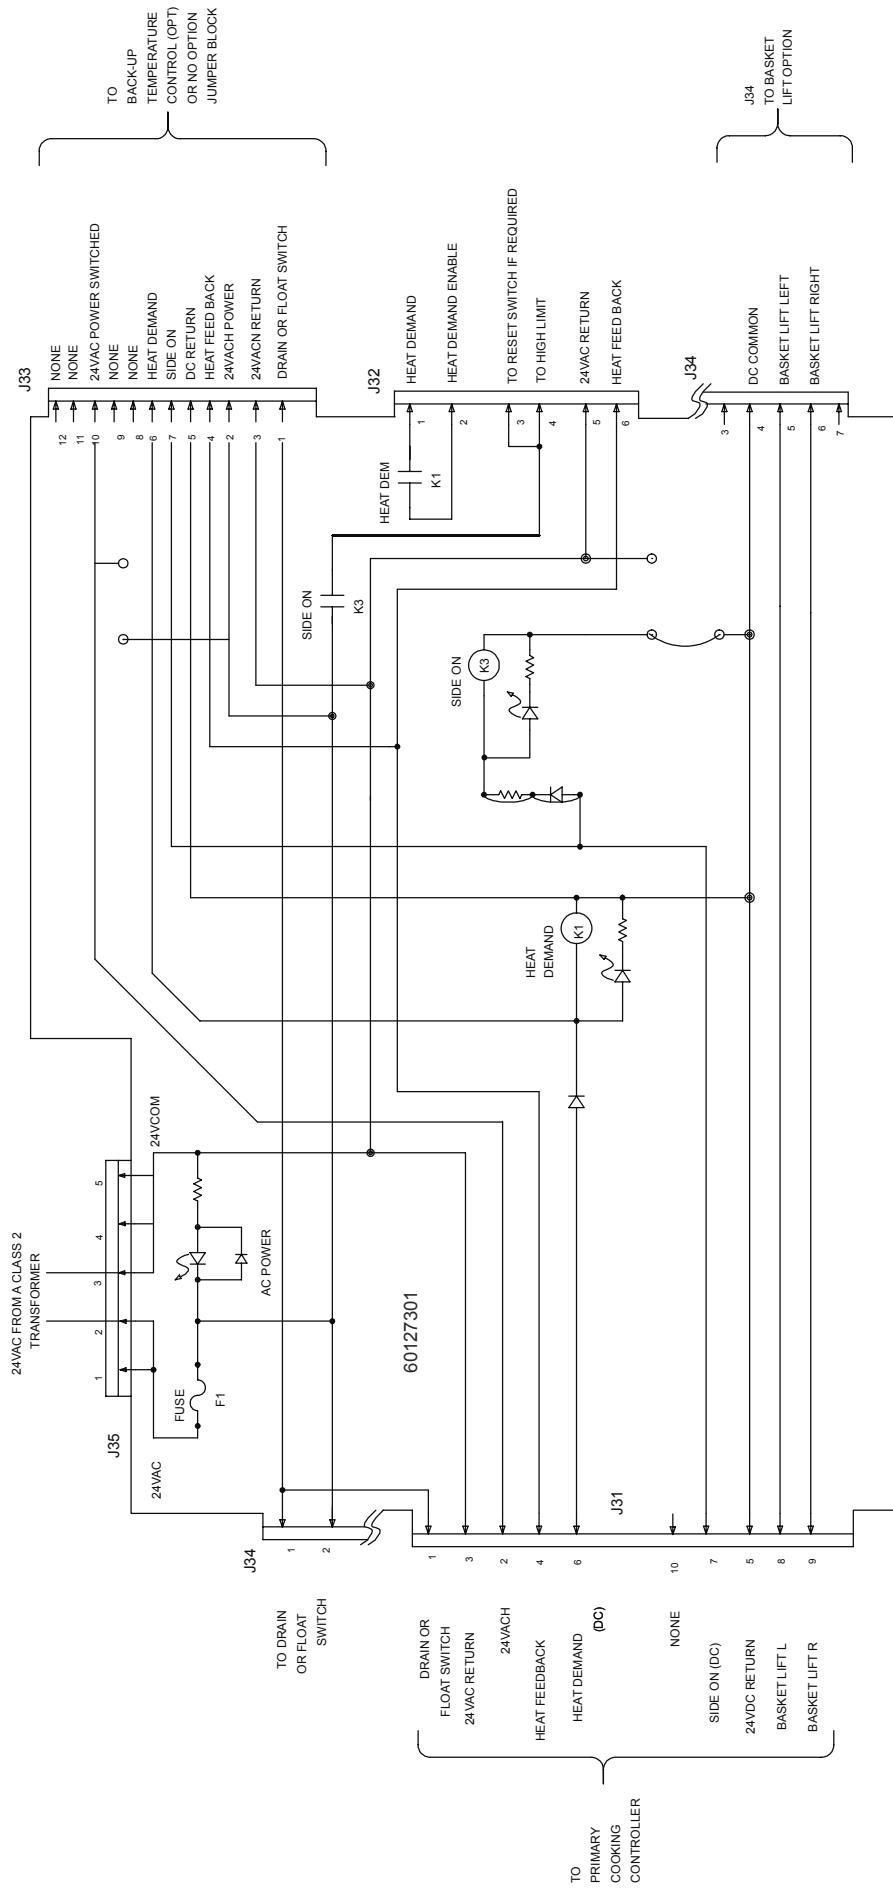

Relay Board


# **Schematics**

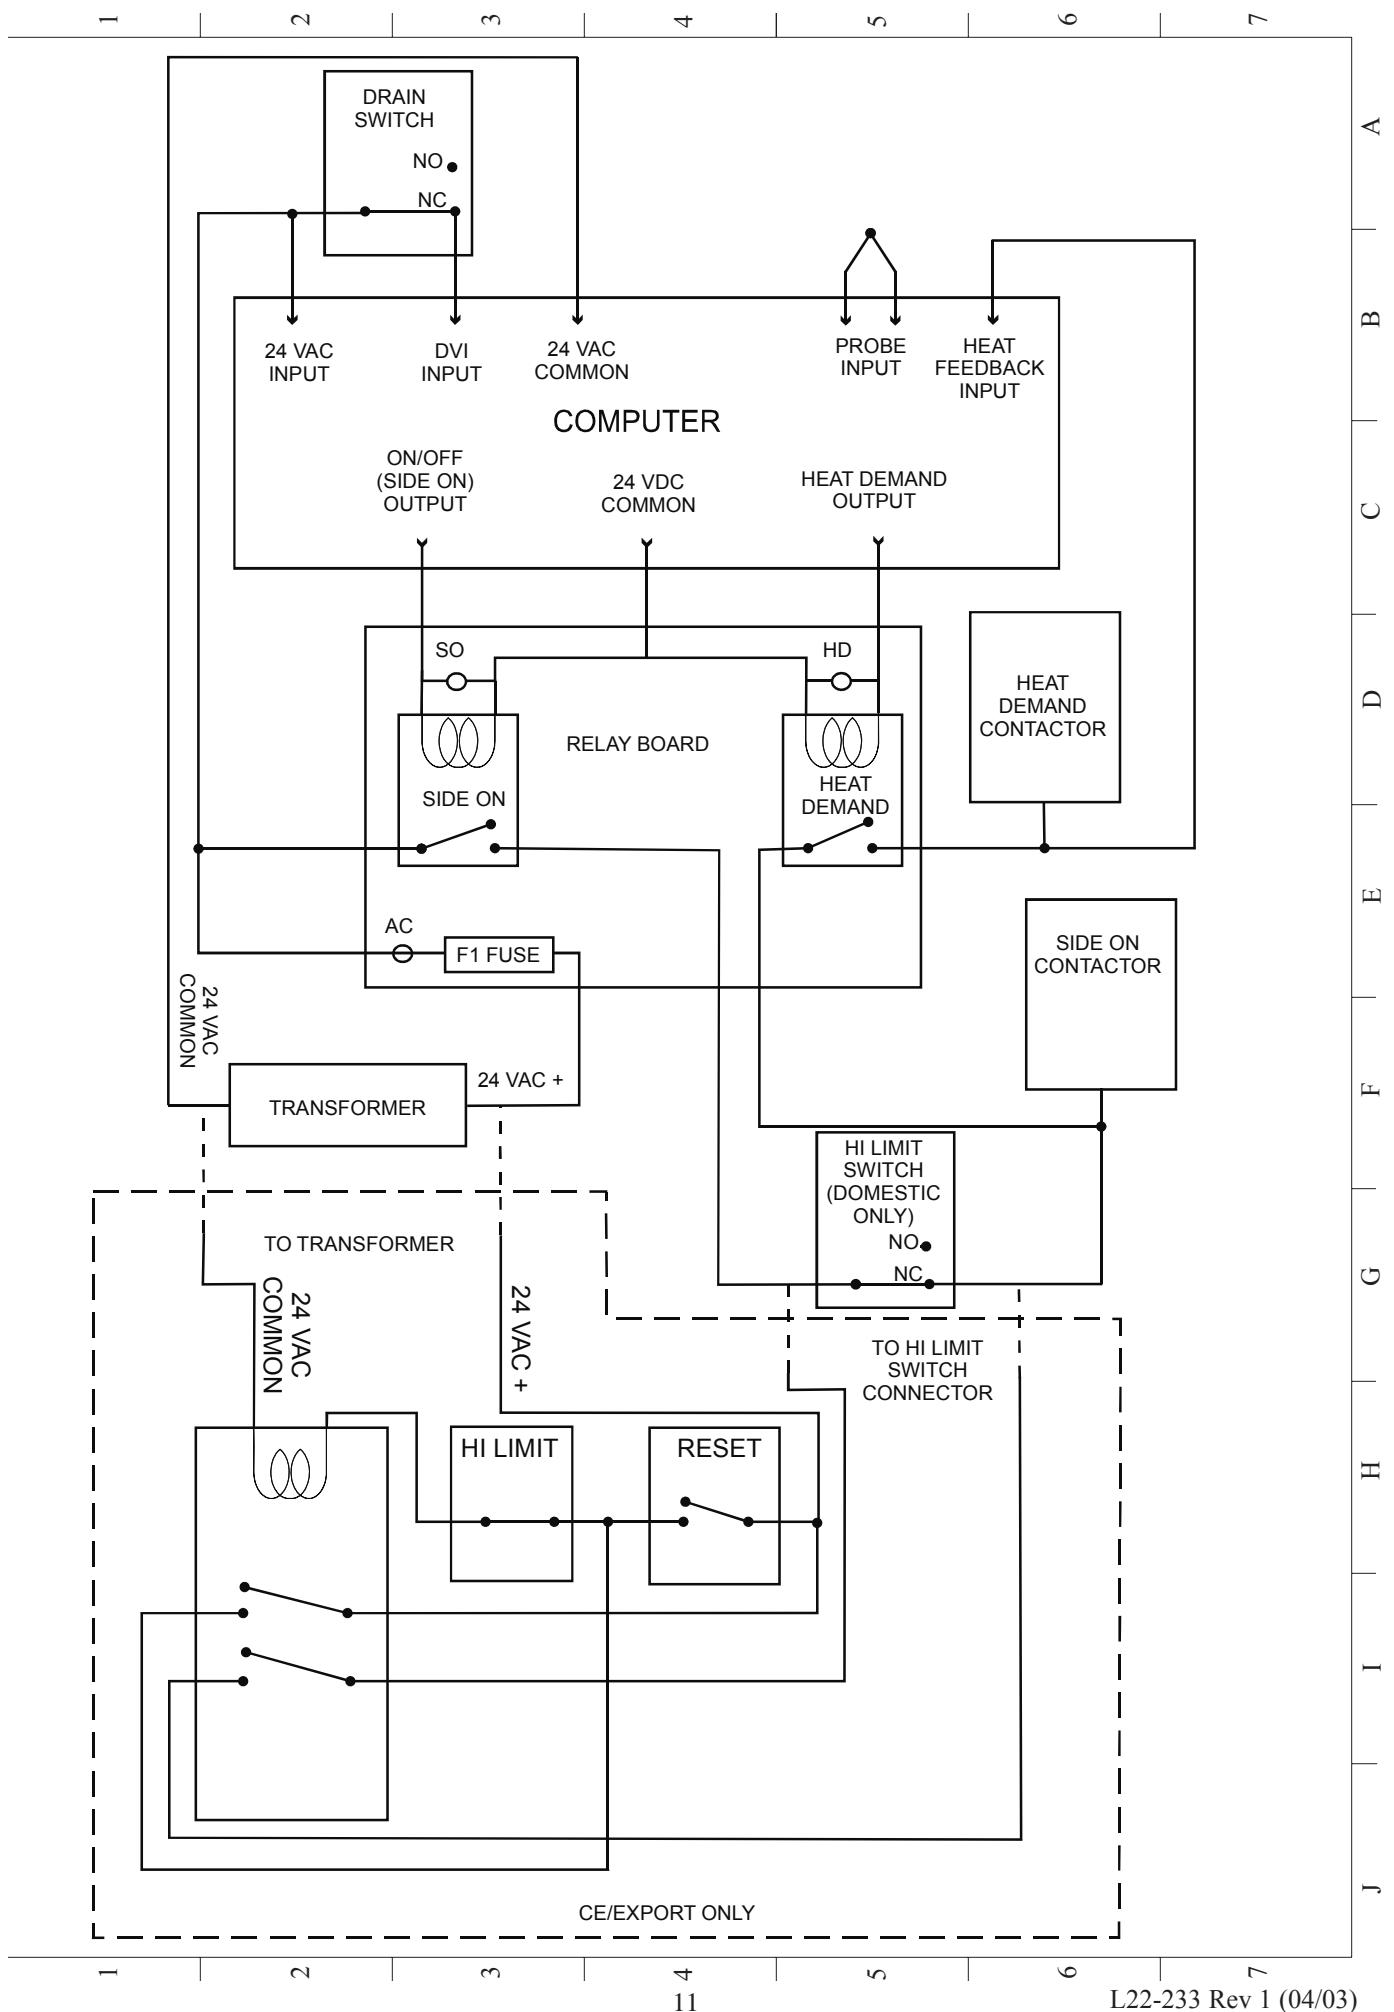

FRYER REPLACEMENT PARTS			
REF	DESCRIPTION	LOCATION	PART NO.
A1	COMPUTER COOKING CNTRL SINGLE/DUAL Mcds	SHEET 2, J6	60137701
A4	CNTRL RELAY BOARD 24V CLASS 2	SHEET 2, F4	60127301
	CNTRL PUMP BOX ASSY 115V/50-60HZ	SHEET 4, F4	B6673001
A5	CNTRL PUMP BOX ASSY 208V/50-60HZ	SHEET 6, F4	B6673005
	CNTRL PUMP BOX ASSY 230V/50-60HZ	SHEET 6, F4	B6673002
	CNTRL PUMP BOX ASSY 240V/50HZ	SHEET 6, F4	B6673003
A11	CORD BOX DOMESTIC WITH NEMA L21-20P PLUG MDG	SHEET 8, B4	B1824301
	CORD BOX EXPORT CE WIEC1302 PLUG MDG	SHEET 8, I4	B1824302
	CORD BOX EXPORT NO PLUG	SHEET 8, I4	B1824303
	CORD BOX DOMESTIC NO HOOD CNTRL 115V MDG	SHEET 8, E5	B1824304
T1A	XFMR. 120-208-240V/24V/AC 80VA CLASS 2	SHEET 2, H2	PP10429
F1	FUSE 1.5A 250V TIME DELAY CERAMIC	SHEET 2, G3	60132702
HL1	SWITCH, HIGH LIMIT SELF RESET	SHEET 2, DOM C5, CE C2	60141201
RT1	PROBE NTC THERMISTOR GAS	SHEET 2, G6	B6709605-C
LS1	SWITCH PROXIMITY MAGNETIC	SHEET 2, I4	B5305001
K4	SWITCH ACTUATOR MAGNETIC	SHEET 2, I4	PP10263
K6	RELAY 3PDT, 10A, 24VAC W/MTG TABS	SHEET 2, B3	60128001
K10	RELAY SPST-NO 30A/250VAC, 24VDC COIL	SHEET 8, B3	60137301
K11	CONTACTOR, 3P, 40A, 24VAC DEF PURPOSE	SHEET 2, A5	PP10560
	CONTACTOR, 3P, 50A, 24VAC IEC	SHEET 2, A4	60139201

TABLE 2: (A1) McDONALDS CONTROLLER CONNECTIONS


PIN#	I/O TYPE	LEFT SIDE	RIGHT SIDE
1		24VACH	NONE
2	AC POWER	24VAC COM (FRAME GND)	NONE
3		PROBE +	PROBE +
4		PROBE -	PROBE -
5	24VAC INPUT	DRAIN VALVE(DVI)	DRAIN VALVE(DVI)
6	24VAC INPUT	HEAT FEED BACK	HEAT FEED BACK
7	24VDC COM	DC RETURN	DC RETURN
8	24VDC OUT	HEAT DEMAND	HEAT DEMAND
9		NONE	NONE
10		NONE	NONE
11	24VDC OUT	SIDE ON	SIDE ON
12		NONE	NONE

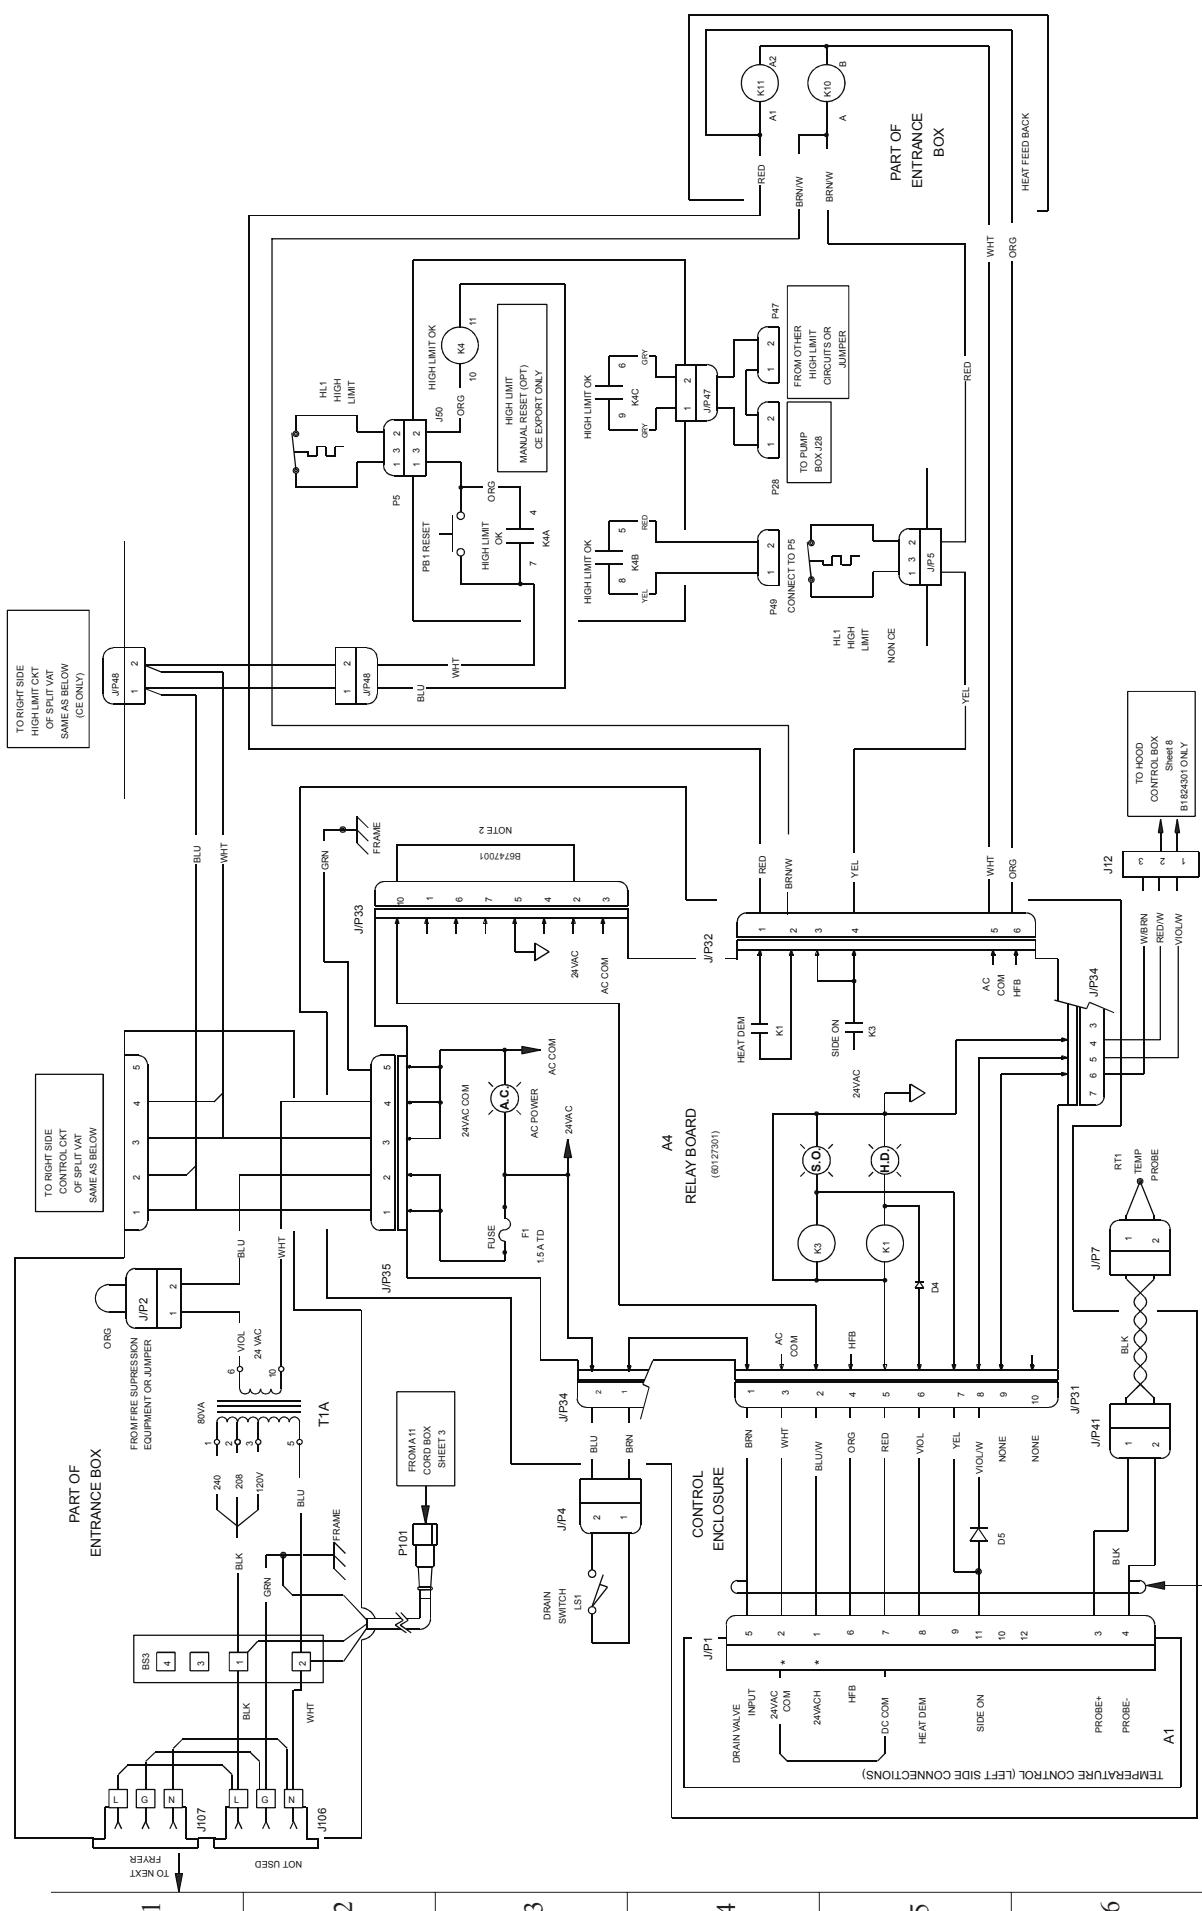

Schematic 700338 Sheet 2

Schematic 700338 Sheet A

FILTER PUMP REPLACEMENT PARTS				
ITEM	VOLTAGE	DESCRIPTION	LOCATION	PART NO.
M1	208V-50/60Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 4, B6	60130810
	120V-50/60Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 4, E7	60130806
	230V-50/60Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 6, E7	60130806
	240V/50Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 6, B6	60130807
CB1	120V-50/60Hz	CKT BRKR,10 AMP SINGLE POLE	SHEET 4, G4	60077901
	230V-50/60Hz	CKT BRKR, 5 AMP TWO POLE	SHEET 6, F4	60078502
	240V/50Hz	XFMR, 120/24VAC 5VA	SHEET 4, H3	60130301
	120V-50/60Hz	XFMR, 240/24 VAC 5VA	SHEET 6, G3	60130302
T3	230V-50/60Hz	XFMR, 240/24 VAC 5VA	SHEET 4, E3	PP11058
	240V-50Hz	RELAY, 24VAC, 30A SPST	SHEET 6, E3	60104701
K5	120V-50/60Hz	RELAY, 24VAC, 30A DPST	SHEET 6, H3	60132701
	230V-50/60Hz	FUSE 0.2A 250V TIME DELAY CERAMIC	SHEET 6, H3	PP10765
F2	ALL	FUSE HOLDER, IN LINE, 25 X 1.25	SHEET 6, H3	
	FH2			
SHORTENING HEATER OPTIONS REPLACEMENT PARTS				
ITEM	VOLTAGE	DESCRIPTION	LOCATION	PART NO.
HTR1	120-50/60Hz	HEATER TAPE 1/2X 72", 50W	SHEET 4, C4	60133503
	230-50/60Hz	HEATER TAPE 1/2X 72", 50W	SHEET 6, B4	60133504
HTR2,3	240/50Hz			
	120-50/60Hz	HEATER TAPE 1/2X 33", 25W	SHEET 4, E1, B1	60133501
	230-50/60Hz	HEATER TAPE 1/2X 33", 25W	SHEET 4, E1, B1	60133502

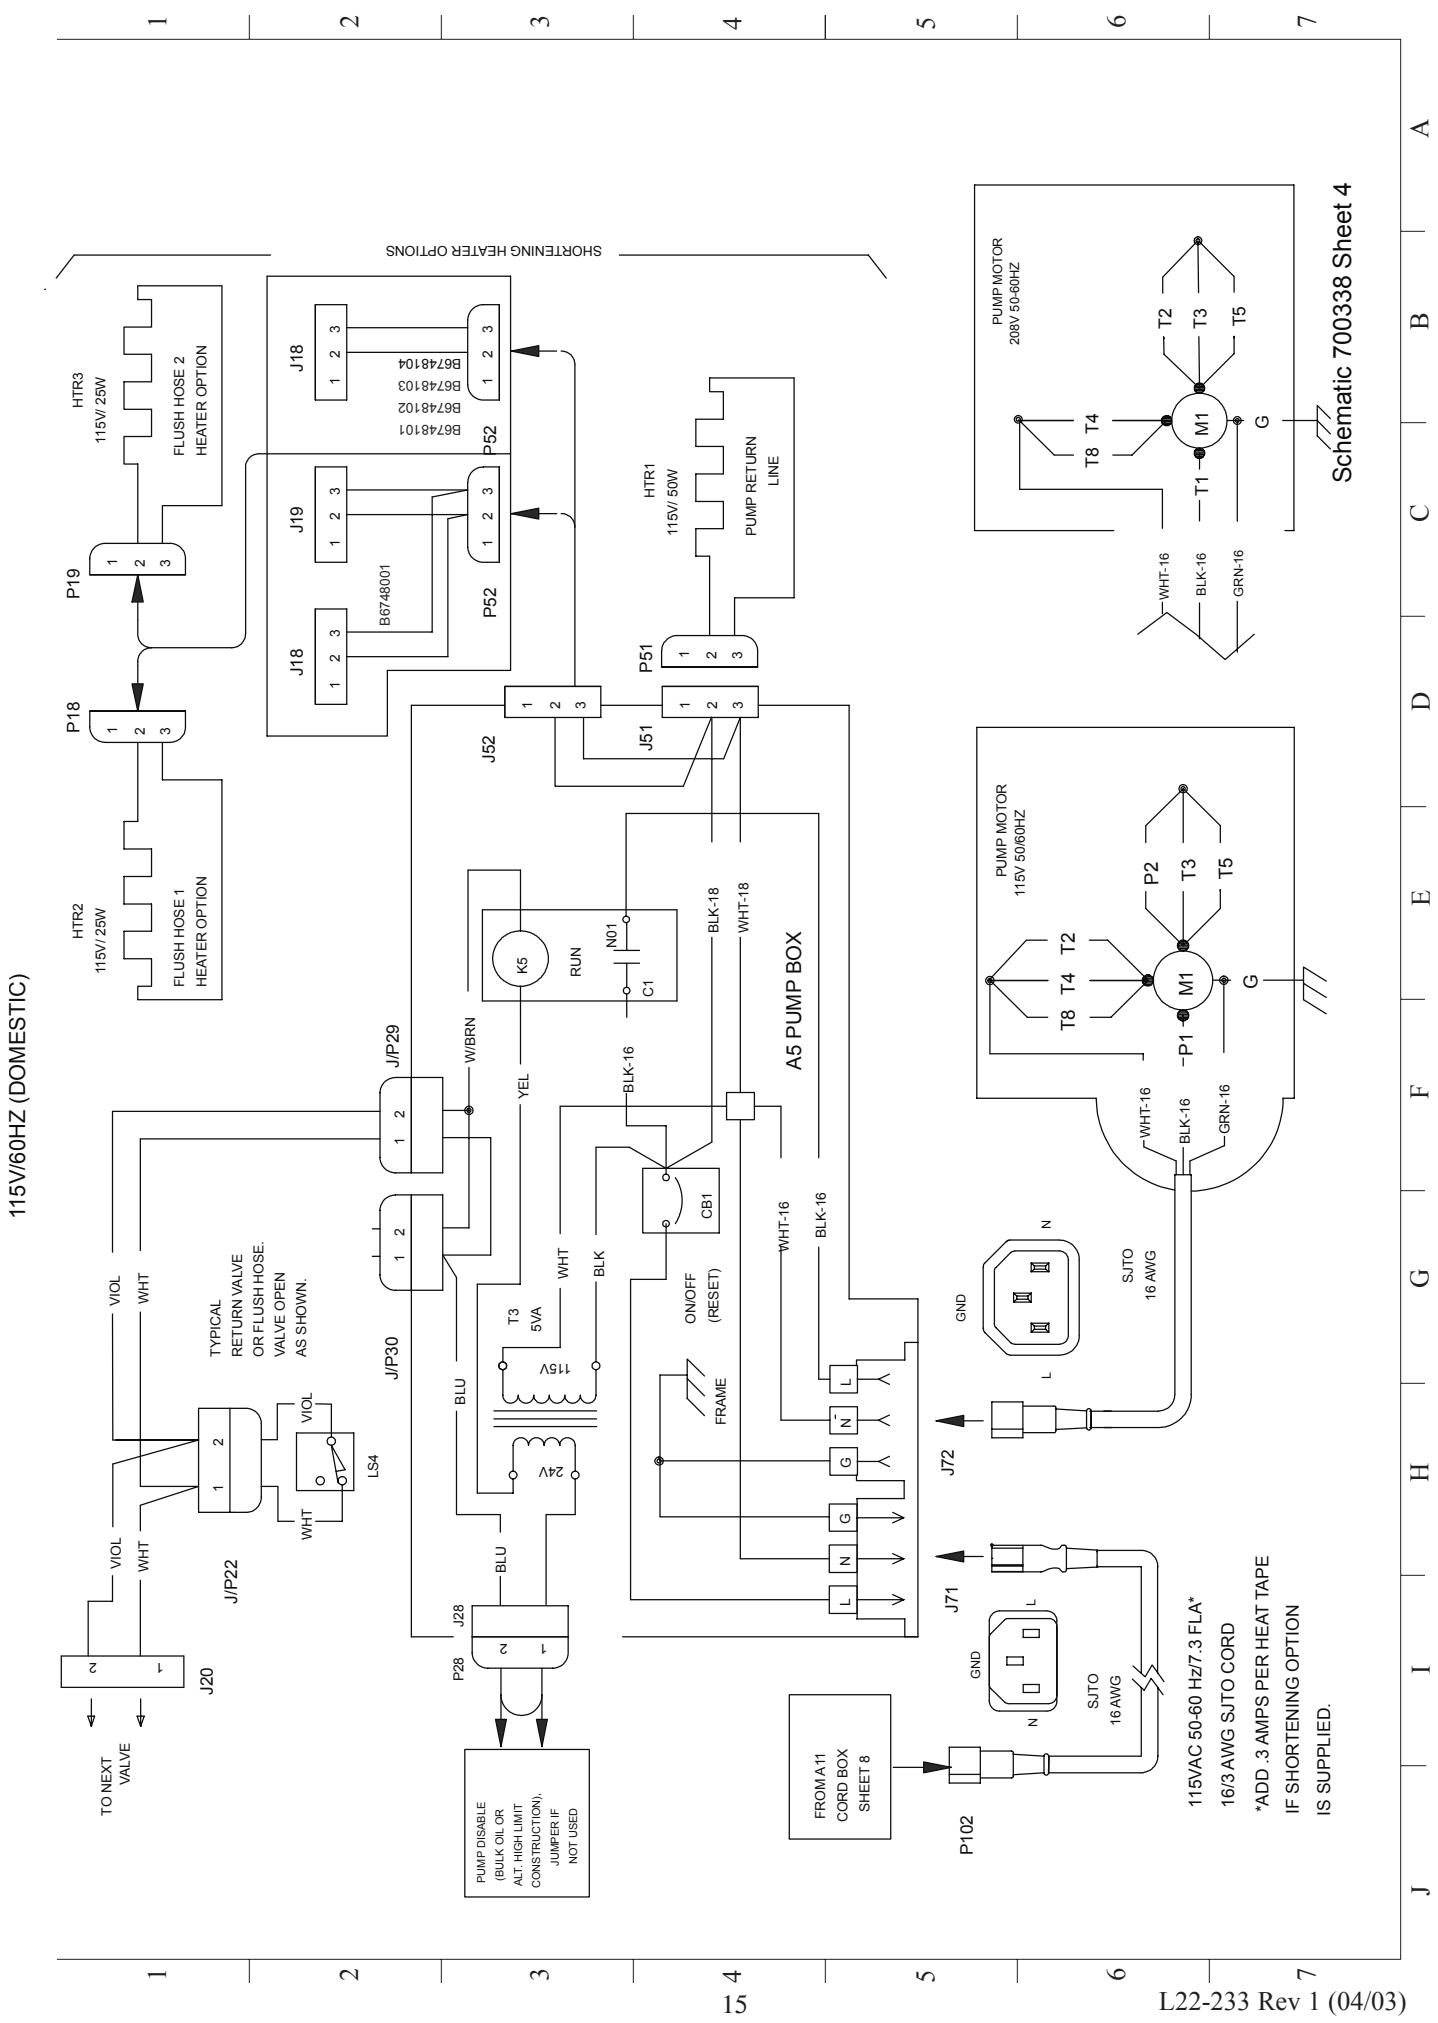

Schematic 700338 Sheet 4

FILTER PUMP REPLACEMENT PARTS					
ITEM	VOLTAGE	DESCRIPTION	LOCATION	PART NO.	
M1	208V-50/60Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 4, B6	60130810	
	120V-50/60Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 4, E7	60130806	
	230V-50/60Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 6, E7	60130806	
	240V/50Hz	MOTOR AND PUMP 1/3HP 5GPM	SHEET 6, B6	60130807	
CB1	120V-50/60Hz	CKT BRKR,10 AMP SINGLE POLE	SHEET 4, G4	60077901	
	230V-50/60Hz	CKT BRKR, 5 AMP TWO POLE	SHEET 4, F4	60078502	
	240V/50Hz	XFMR, 120/24VAC 5VA	SHEET 6, H3	60130301	
T3	120V-50/60Hz	XFMR, 240/24 VAC 5VA	SHEET 6, G3	60130302	
	230V-50/60Hz	XFMR, 240/24 VAC 5VA	SHEET 6, G3	60130302	
K5	120V-50/60Hz	RELAY, 24VAC, 30A SPST	SHEET 4, E3	PP11058	
	230V-50/60Hz	RELAY, 24VAC, 30A DPST	SHEET 6, E3	60104701	
	240V-50Hz	RELAY, 24VAC, 30A DPST	SHEET 6, E3	60104701	
F2	ALL	FUSE 0.2A 250V TIME DELAY CERAMIC	SHEET 6, H3	60132701	
	FH2	FUSE HOLDER, IN LINE, .25 X 1.25	SHEET 6, H3	PP10765	
SHORTENING HEATER OPTIONS REPLACEMENT PARTS					
ITEM	VOLTAGE	DESCRIPTION	LOCATION	PART NO.	
HTR1	120-50/60Hz	HEATER TAPE 1/2X 72", 50W	SHEET 4, C4	60133503	
	230-50/60Hz	HEATER TAPE 1/2X 72", 50W	SHEET 6, B4	60133504	
	240/50Hz	HEATER TAPE 1/2X 72", 50W	SHEET 6, B4	60133504	
HTR2,3	120-50/60Hz	HEATER TAPE 1/2X 33", 25W	SHEET 4, E1, B1	60133501	
	230-50/60Hz	HEATER TAPE 1/2X 33", 25W	SHEET 4, E1, B1	60133502	

208, 220-230V/50-60HZ OR 240V/50HZ (EXPORT AND CE)

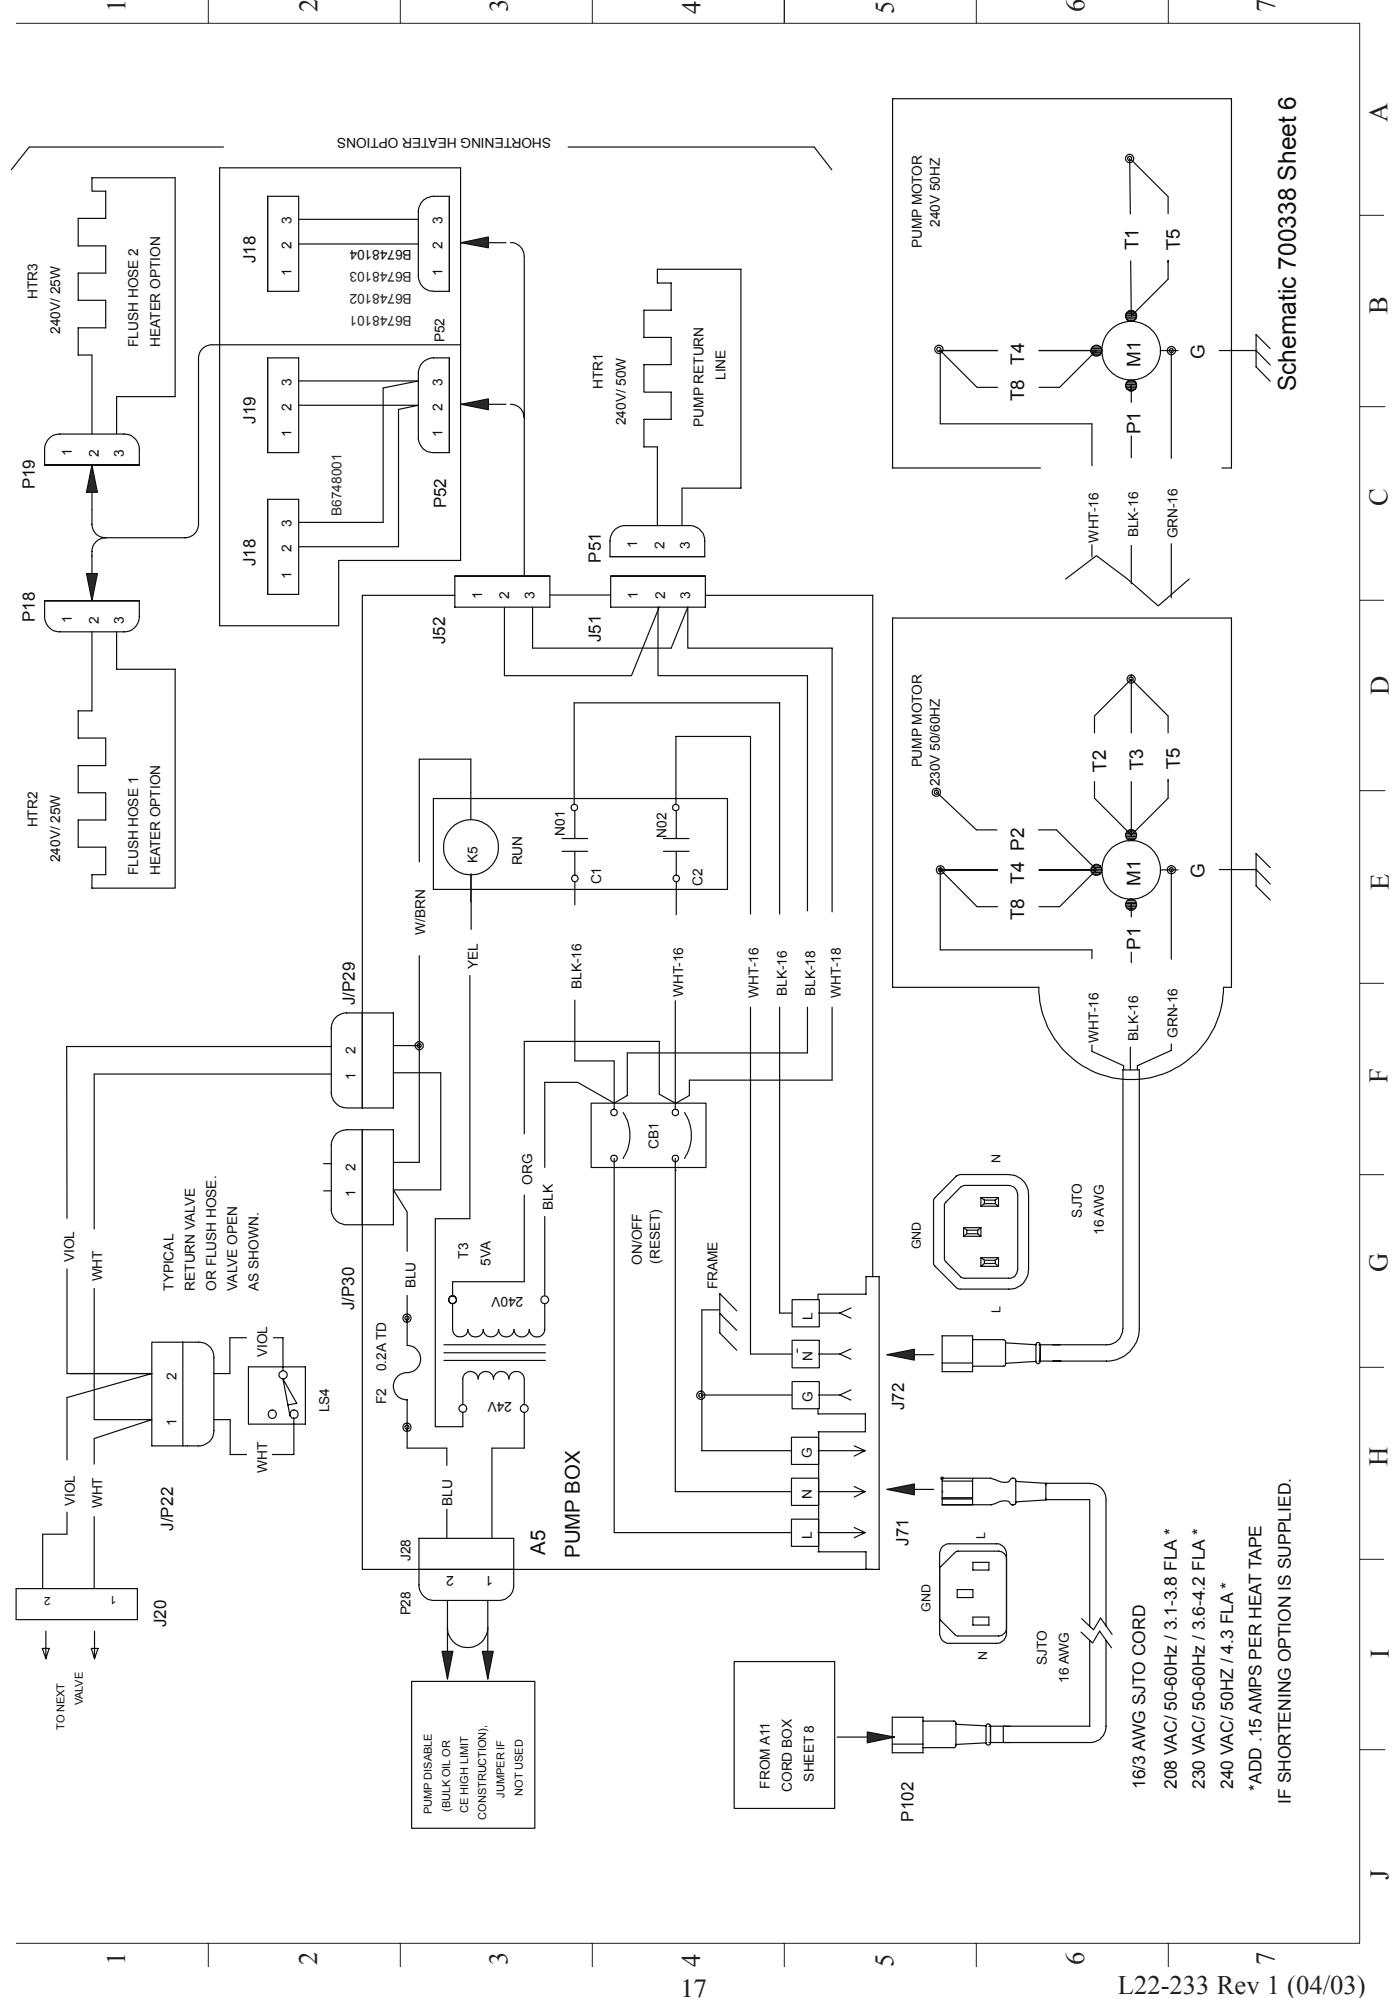


TABLE 1

PART NO.	DESCRIPTION	P/N REV	P/N ECN
700338	SCHEM. ELEC McDONALDS SV OR FV ALL MEII LBL, WIRING CNTRL/TYPICAL 24V MEII	SEE TITLE BLOCK	
700338-1	LBL, 3PH DELTA SINGLE TYPICAL MEII	A	10952
700338-2	LBL, 3PH DELTA DUAL TYPICAL MEII	A	10952
700338-3	LBL, 3PH DELTA DUAL TYPICAL MEII	A	10952
700338-4	LBL, 3PH WYE SINGLE TYPICAL MEII	A	10952
700338-5	LBL, 3PH WYE DUAL TYPICAL MEII	A	10952
LBL, WIRING FLTR PUMP 208/230V/240V MG2, MEII	USE 700334-2		
LBL, WIRING FLTR PUMP 115V/50-60HZ MG2, MEII	USE 700334-3		
LBL, CORD BOX DOM W/HOOD CNTRL 208V/MG2, MEII	USE 700334-4		
LBL, CORD BOX EXPORT 230V MG2, MEII	USE 700334-5		
LBL, CORD BOX NO HOOD CNTRL 115V MG2, MEII	USE 700334-6		

## FRYER REPLACEMENT PARTS

REF	DESCRIPTION	LOCATION	PART NO.
A1	COMPUTER COOKING CNTRL SINGLE/DUAL MDGS	SHEET 2, J6	60137701
A4	CNTRL RELAY BOARD 24V CLASS 2	SHEET 2, F4	60127301
	CNTRL PUMP BOX ASSY 115V/50-60HZ	SHEET 4, F4	B6673001
	CNTRL PUMP BOX ASSY 208V/50-60HZ	SHEET 6, F4	B6673005
A6	CNTRL PUMP BOX ASSY 230V/50-60HZ	SHEET 6, F4	B6673002
	CNTRL PUMP BOX ASSY 240V/50HZ	SHEET 6, F4	
	CORD BOX DOMESTIC WITH NEMA L21-20P PLUG MDG	SHEET 8, B4	B1824301
	CORD BOX EXPORT ICE/WIEC1302 PLUG MDG	SHEET 8, I4	B1824302
A11	CORD BOX EXPORT NO PLUG	SHEET 8, I4	B1824303
	CORD BOX DOMESTIC NO HOOD CNTRL 115V MDG	SHEET 8, E5	B1824304
T1A	XFMR, 120-208-240V/24VAC 80VA CLASS 2	SHEET 2, H2	PP10429
F1	FUSE 1.5A 250V TIME DELAY CERAMIC	SHEET 2, G3	60132702
HL1	SWITCH, HIGH LIMIT SELF RESET	SHEET 2, DOM C5, CE C2	60141201
RT1	PROBE, NTC THERMISTOR GAS	SHEET 2, G6	B6700005 C
	SWITCH PROXIMITY MAGNETIC	SHEET 2, I4	B5305001
LS1	SWITCH ACTUATOR MAGNETIC	SHEET 2, I4	PP10263
K4	RELAY, 3PDT, 10A, 24VAC W/MING TABS	SHEET 2, B3	60126001
K6	RELAY SPST-NO 30A/250VAC, 24VDC COIL	SHEET 8, B3	60137301
K10	CONTACTOR, 3P, 40A, 24VAC DEF PURPOSE	SHEET 2, A5	PP10560
K11	CONTACTOR, 3P, 50A, 24VAC IEC	SHEET 2, A4	60139201




**3 PHASE ELECTRICAL SERVICE REQUIREMENTS  
FOR MODEL MEII**

TABLE 3A: LINE CONNECTION OPTIONS FOR U.S. AND CANADA

LINE CONNECTION	FILTER PUMP	TRANSFORMER	SINGLE VAT			SPLIT VAT		
			P/N		LINE AMPS	HTR1-HTR6 P/N		HTR1-HTR6 P/N
VOLTAGE			CONNECT-(TAP)			TOTAL HEATER LESS OPTIONS	WIRE OPTION	HEAT KW
WIRES & GND	CONNECT			TAP VOLTS		18-6D WIRE SIZE	1B-6D WIRE SIZE	HEAT KW
LOAD TYPE	VOLTAGE/AMPS							1B-6D WIRE SIZE
208						L1-38.9 A L2-38.9 A L3-38.9 A	55006609	55006609
3 PHASE 3 WIRE & GND DELTA			PP-10429 NOTE 6 BLK-(2) WHT-(5) 115V 1PH 50/60Hz J102 (A11)			1 14.0 KW 10 AWG	3 8.5 KW 14 AWG	8.5 KW 14 AWG
240	B6730806 SEE NOTE 7 115V 5.6A 50/60Hz					L1-33.7 A L2-33.7 A L3-33.7 A	550066112 14.0 KW 10 AWG	550066112 8.5 KW 14 AWG
3 PHASE 3 WIRE & GND DELTA						L1-16.8 A L2-16.8 A L3-16.8 A	550066113 14.0 KW 10 AWG	550066113 8.5 KW 14 AWG
480	3 PHASE 3 WIRE & GND DELTA							

TABLE 3B: LINE CONNECTION OPTIONS FOR INTERNATIONAL SERVICES

LINE CONNECTION	FILTER PUMP	TRANSFORMER	SINGLE VAT			SPLIT VAT		
			P/N		LINE AMPS	HTR1-HTR6 P/N		HTR1-HTR6 P/N
VOLTAGE			CONNECT-(TAP)			TOTAL HEATER LESS OPTIONS	WIRE OPTION	HEAT KW
WIRES & GND	CONNECT			TAP VOLTS		1A-6D WIRE SIZE	1A-6D WIRE SIZE	HEAT KW
LOAD TYPE	VOLTAGE/AMPS							1A-6D WIRE SIZE
200	60130810 NOTE 7 208V 4A 50Hz					L1-37.4 A L2-37.4 A L3-37.4 A	50006609 12.9 KW 10 AWG	50006609 6.4 KW 14 AWG
3 PHASE 3 WIRE & GND DELTA			PP-10429 NOTE 6 BLK-(2) WHT-(5) 208V 1PH 50/60Hz J102 (A11)			L1-36.7 A L2-36.7 A L3-36.7 A	50006610 14.0 KW 10 AWG	50006610 6.4 KW 14 AWG
220	60130806 NOTE 7 230V 3.4A 50/60Hz							
3 PHASE 3 WIRE & GND DELTA								
346V/200	60130810 NOTE 7 208V 4A 50Hz					L1-21.6 A L2-21.6 A L3-21.6 A	50006609 12.9 KW 10 AWG	50006609 6.5 KW 14 AWG
3 PHASE 4 WIRE & GND WYE			PP-10429 NOTE 6 BLK-(1) WHT-(5) 240V 1PH 50/60Hz J102 (A11)			L1-21.3 A L2-21.3 A L3-21.3 A	50006610 14.0 KW 10 AWG	50006610 6.5 KW 14 AWG
380Y/220								
3 PHASE 4 WIRE & GND WYE								
400Y/230	230V 3.8A 50/60Hz					L1-20.2 A L2-20.2 A L3-20.2 A	50006611 14.0 KW 10 AWG	50006611 6.4 KW 14 AWG
3 PHASE 4 WIRE & GND WYE			PP-10429 NOTE 6 BLK-(1) WHT-(5) 240V 1PH 50/60Hz J102 (A11)			L1-19.5 A L2-19.5 A L3-19.5 A	50006612 14.0 KW 10 AWG	50006612 7.0 KW 14 AWG
440	60130806 NOTE 7 230V 3.8A 50/60Hz							
3 PHASE 3 WIRE & GND DELTA								

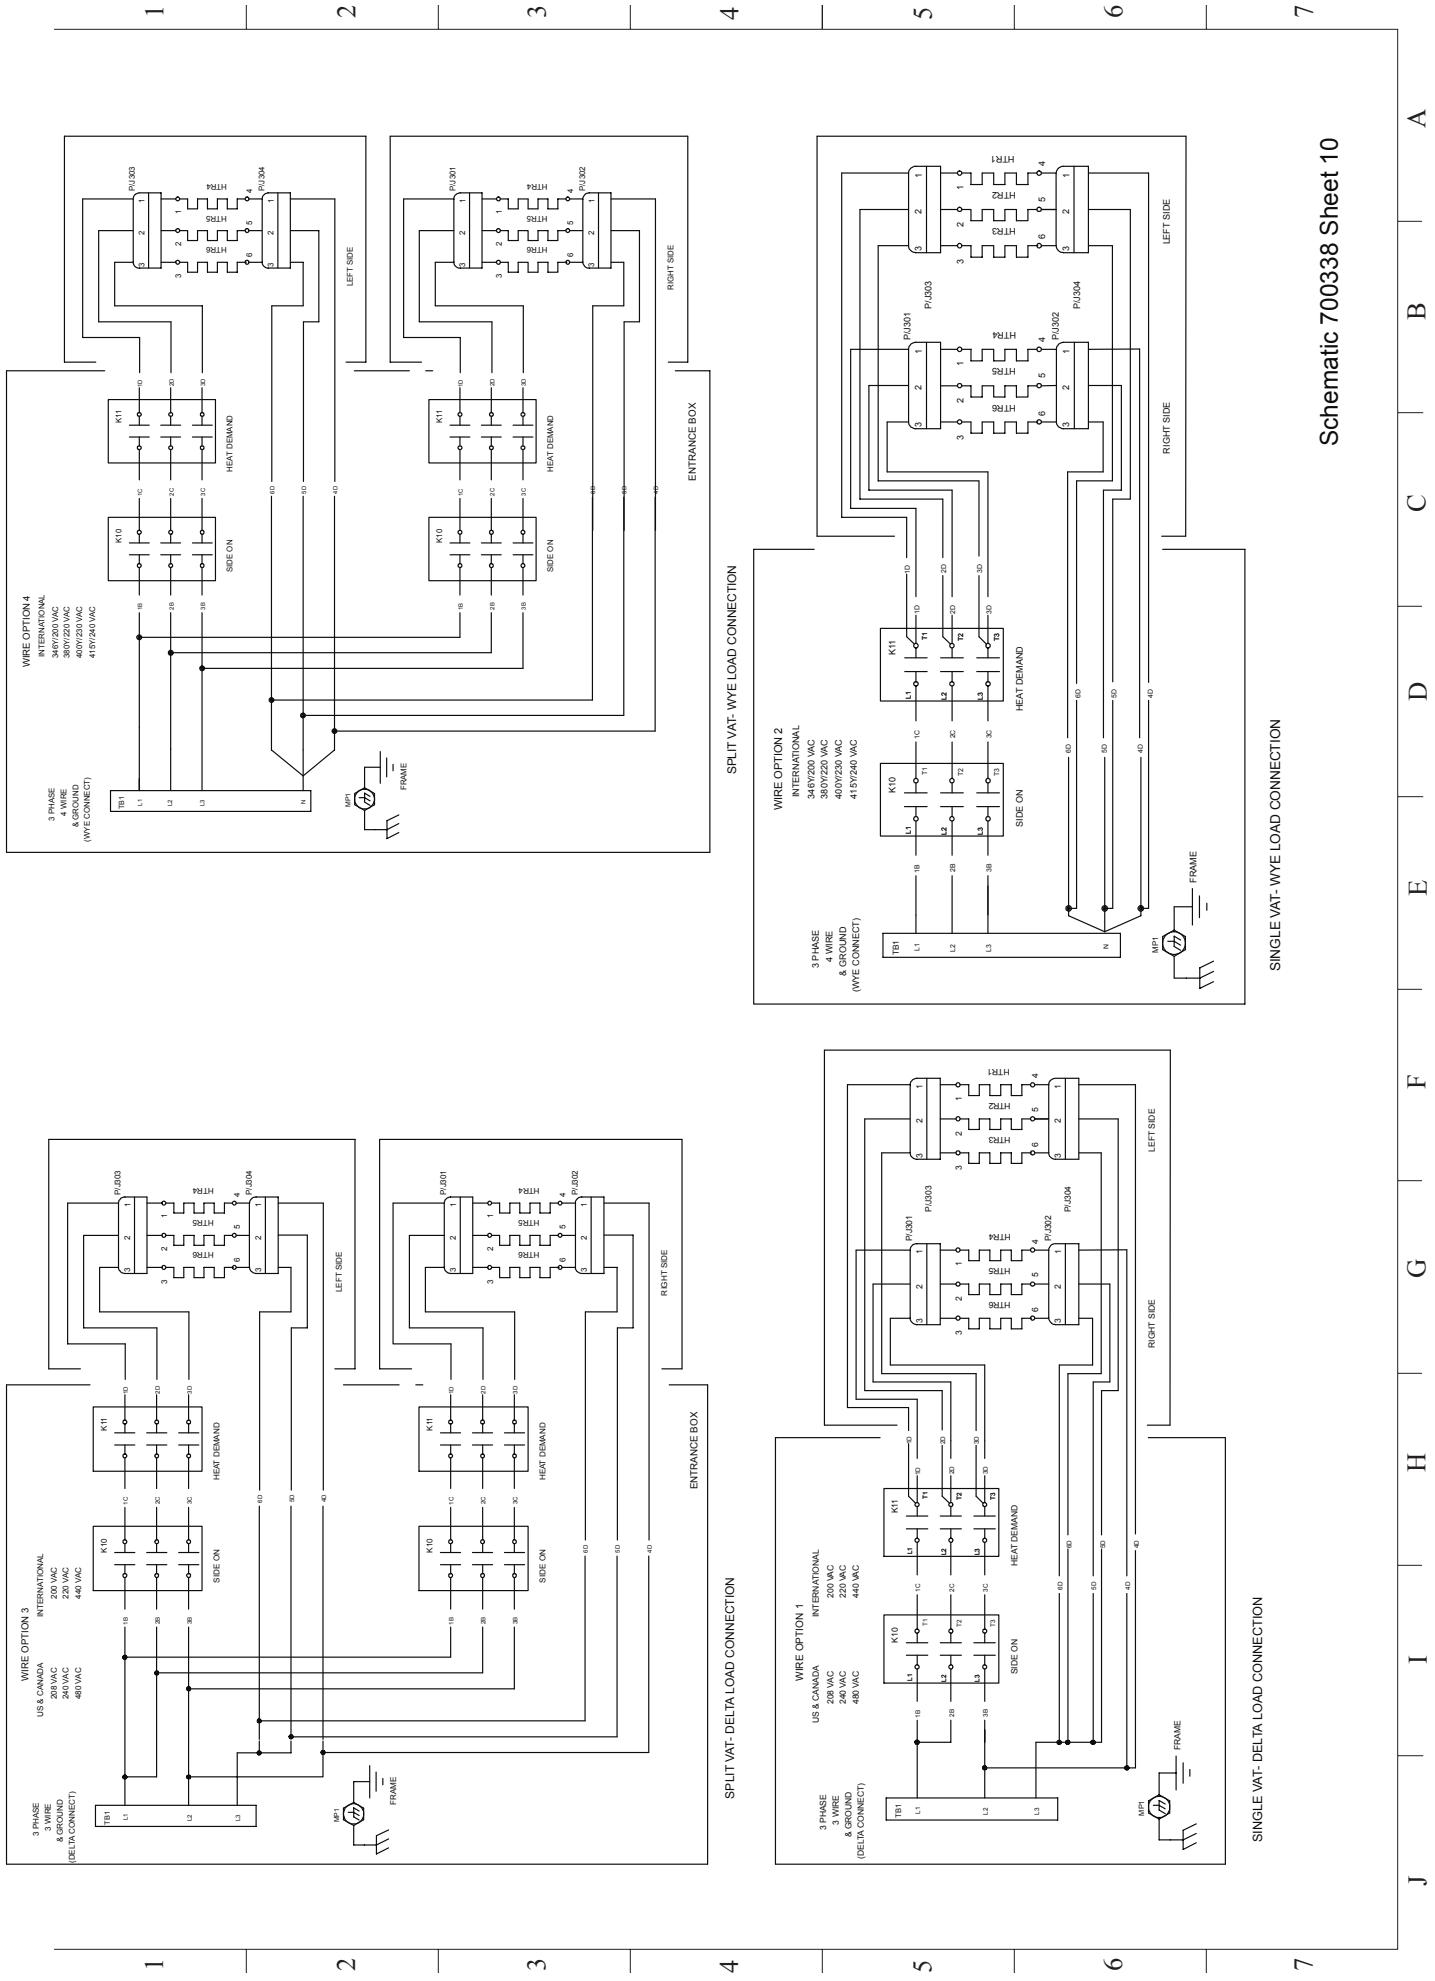

## **Exploded Drawings and Parts Lists**

# Parts Listing

## Fryer Electrical Components:

Part Number .....	Description
50006609 .....	208V Element
50006610 .....	220V Element
50006611 .....	230V Element
50006612 .....	240V Element
50006613 .....	480V Element
A3341901 .....	Tank/Element Gasket
60141201 .....	Hi Limit Switch
A3342802 .....	Upper Hi Limit Bracket
A3342902 .....	Lower Hi Limit Bracket
PP10429 .....	120/208/240V Transformer
PP10560 .....	Side On Contactor
60139201 .....	Heat Demand Contactor
P5045282 .....	4 Post Terminal Block
P5047301 .....	3 Post Terminal Block
B6700605-C .....	Temperature Probe
A3342502 .....	Front Probe Bracket
A3342504 .....	Rear Probe Bracket
60137301 .....	24VDC Hood Relay
60126001 .....	24VAC Hi Limit Relay (CE)
60137701 .....	Expanded Menu Computer
B3631304 .....	Front Panel Bezel
60132702 .....	1.5A Time Delay Fuse
60127301 .....	Relay Board
60132901 .....	Relay Board Insulation
B5305001 .....	DVI/Return Switch
PP10263 .....	DVI/ReturnActuator

## Filter Components:

Part Number .....	Description
60130806 .....	115/220V Pump & Motor
60130807 .....	240V Pump & Motor
60130810 .....	208V Pump & Motor
60130803 .....	115/220V Motor
60130804 .....	240V Motor
60130809 .....	208V Motor
PP10417 .....	5 GPM Pump
60077901 .....	10A Circuit Breaker (120V)
60078502 .....	5A Circuit Breaker(208-240V)
60130301 .....	120/24V Transformer
60130302 .....	230-240/24V Transformer
60130303 .....	208/24V Transformer
PP11058 .....	24VAC SPST Relay (120V)
60104701 .....	24VAC DPDT Relay (208-240V)
60132701 .....	0.2A Time Delay Fuse
60133503 .....	120V Heat Tape (Pump)

60133504 .....	230/240V Heat Tape (Pump)
60133501 .....	120V Heat Tape (Flush Hose)
60133502 .....	230/240V Heat Tape (Flush Hose)
PP11104 .....	1" Viton O-ring
60138701 .....	Full/LH Non Locking Drain Valve
60138702 .....	RH Non Locking Drain Valve
60138703 .....	Full/LH Locking Drain Valve
60138704 .....	RH Locking Drain Valve
60059302 .....	Drain Line Gasket
60127702 .....	Drain Line Clamp
B6665101 .....	Drain Elbow
B6665201 .....	Drain Tee Full
A7022407 .....	Drain Line Tube Full/Full
A7022409 .....	Drain Line Tube Split/Full
A7022411 .....	Drain Line Tube Split/Split
A7022101 .....	Drain Tee Ferrule
A7022201 .....	Drain Tee Flange
B6664701 .....	Drain Down Spout Full/Full
B6673301 .....	Drain Down Spout Split
B5305001 .....	DVI/Return Switch
PP10263 .....	DVI/ReturnActuator
B6671201 .....	Strainer Cap
B4004802 .....	Full/RH Return Handle
B4004801 .....	LH Twin Return Handle
60131801 .....	Return Valve
A7008302 .....	Paper Support
B6673801 .....	Filter Pan

## Miscellaneous

Part Number .....	Description
-------------------	-------------

A4500601 .....	Full Vat Tube Rack
B4512401 .....	Split Vat Tube Rack
A3342102 .....	Basket Hanger W/Capping
A3342104 .....	Basket Hanger W/O Capping
60138101 .....	Basket Hanger Stud
A4108302 .....	Splash Back
B5007601 .....	Dual Capping
B5007602 .....	Triple Capping
B5007603 .....	Quad Capping
B5007604 .....	Quint Capping
P6071409 .....	Nylon Cleaning Brush
A3301001 .....	Cleanout Rod
B2304602 .....	LH/RH Door
B3801901 .....	RH Hinge Kit
B3801902 .....	LH Hinge Kit
B3902101 .....	9" Caster Set (4)
A1908202 .....	Channel Strip
B2101503 .....	Full/Twin Tank Cover

**Table 1**  
**Element and Tank Components**

Item#	Part#	Part Description
1 .....	A3342102 .....	Basket Hanger w/Capping
	A3342104 .....	Basket Hanger w/o Capping
2 .....	A3341901 .....	Element Gasket
3 .....	50006609 .....	Element 208V
	50006610 .....	Element 220V
	50006611 .....	Element 230V
	50006612 .....	Element 240V
	50006613 .....	Element 480V
4 .....	60088003 .....	Bolt, Element 1/4" x 20 x 3/4" SS
5 .....	60141201 .....	Hi Limit Switch
6 .....	A3342902 .....	Lower Hi Limit Bracket
7 .....	PP11366 .....	Screw, 10-24 X 5/8 PHH SS TF
8 .....	A3342802 .....	Upper Hi Limit Bracket
9 .....	PP10665 .....	Screw, 10-24 X 3/8
10 .....	B6700605-C .....	Temperature Probe
11 .....	A3342504 .....	Rear Probe Bracket
12 .....	A4108302 .....	Splash Back
13 .....	A3342502 .....	Front Probe Bracket
14 .....	60138101 .....	Basket Hanger Stud
	60118201 .....	Bolt, Hex 1/4-20 X 3/4

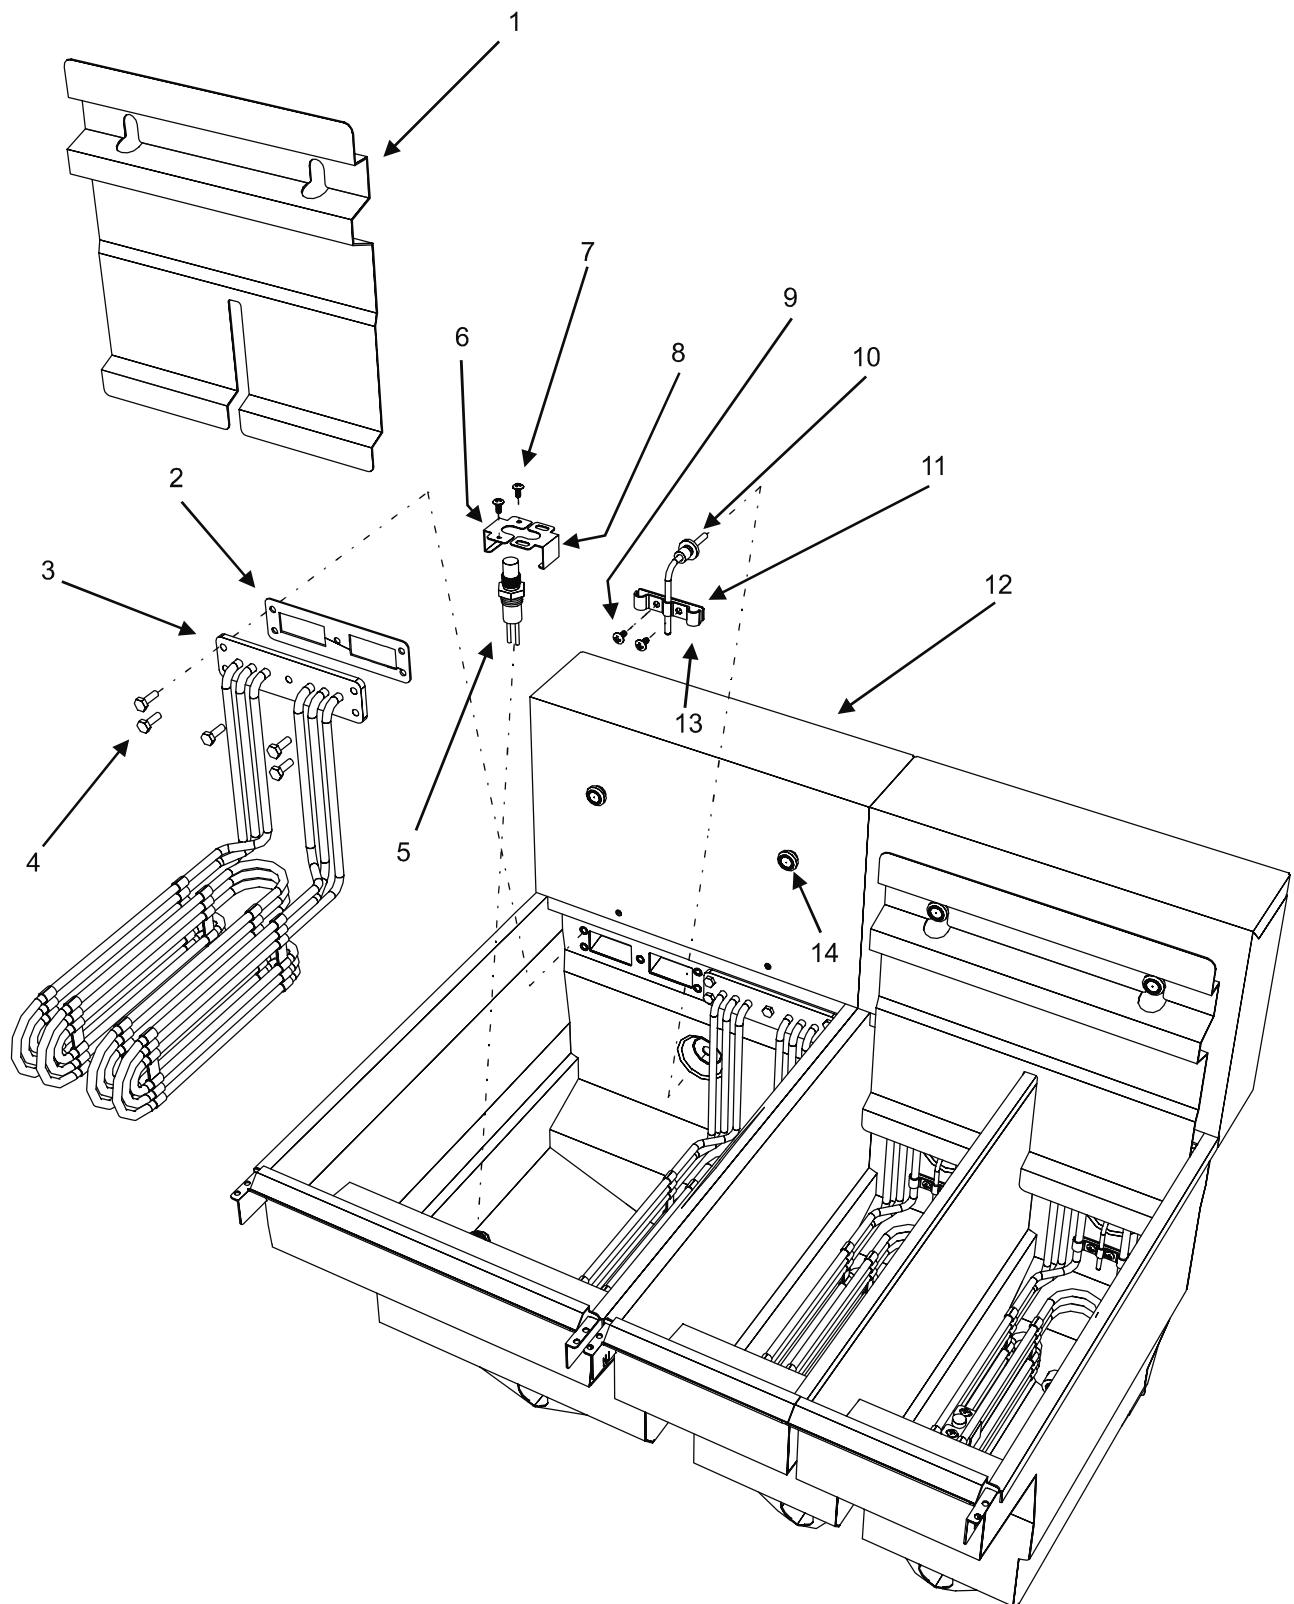


Figure 1

**Table 2**  
**Pump Box and Drain Manifold**

Item#	Part#	Part Description
1.....	60130301 .....	120/24V Transformer
	60130302 .....	230-240/24VAC Transformer
	60130303 .....	208VAC Transformer
2.....	60077901 .....	10A Circuit Breaker (120V)
	60078502 .....	5A Circuit Breaker (208V-240V)
3.....	PP11058 .....	24VAC SPST Relay (120V)
	60104701 .....	24VAC DPDT Relay (208-240V)
4.....	60130701 .....	Conn, Pwr In & Out IEC320
5.....	60138701 .....	Drain Valve, Full/Right Split, W/Non-locking Handle
	60138703 .....	Drain Valve, Full/Right Split, W/Locking Handle
6.....	A7021701 .....	Drain Valve Nipple
7.....	A7022201 .....	Drain Flange
8.....	A7022101 .....	Drain Ferrule
9.....	B6665101 .....	Drain Elbow
10.....	60088002 .....	Hex Bolt 3/8"x16x1-1/4"
11.....	P0082700 .....	Lock Washer 3/8"
12.....	60127701 .....	Drain Line Clamp
13.....	60059302 .....	Drain Line Gasket
14.....	B6664701 .....	Drain Down Spout Full/Full
	B6673301 .....	Drain Down Spout Split
15.....	60138702 .....	Drain Valve, Left Split, W/Non-locking Handle
	60138704 .....	Drain Valve, Left Split, W/Locking Handle
16.....	Contact Factory .....	Drain Line Tube
17.....	PP10263 .....	DVI Actuator
18.....	B5305001 .....	DVI Switch Assembly
19.....	PP10266 .....	Screw, 4-40 X .250 RDH ZN

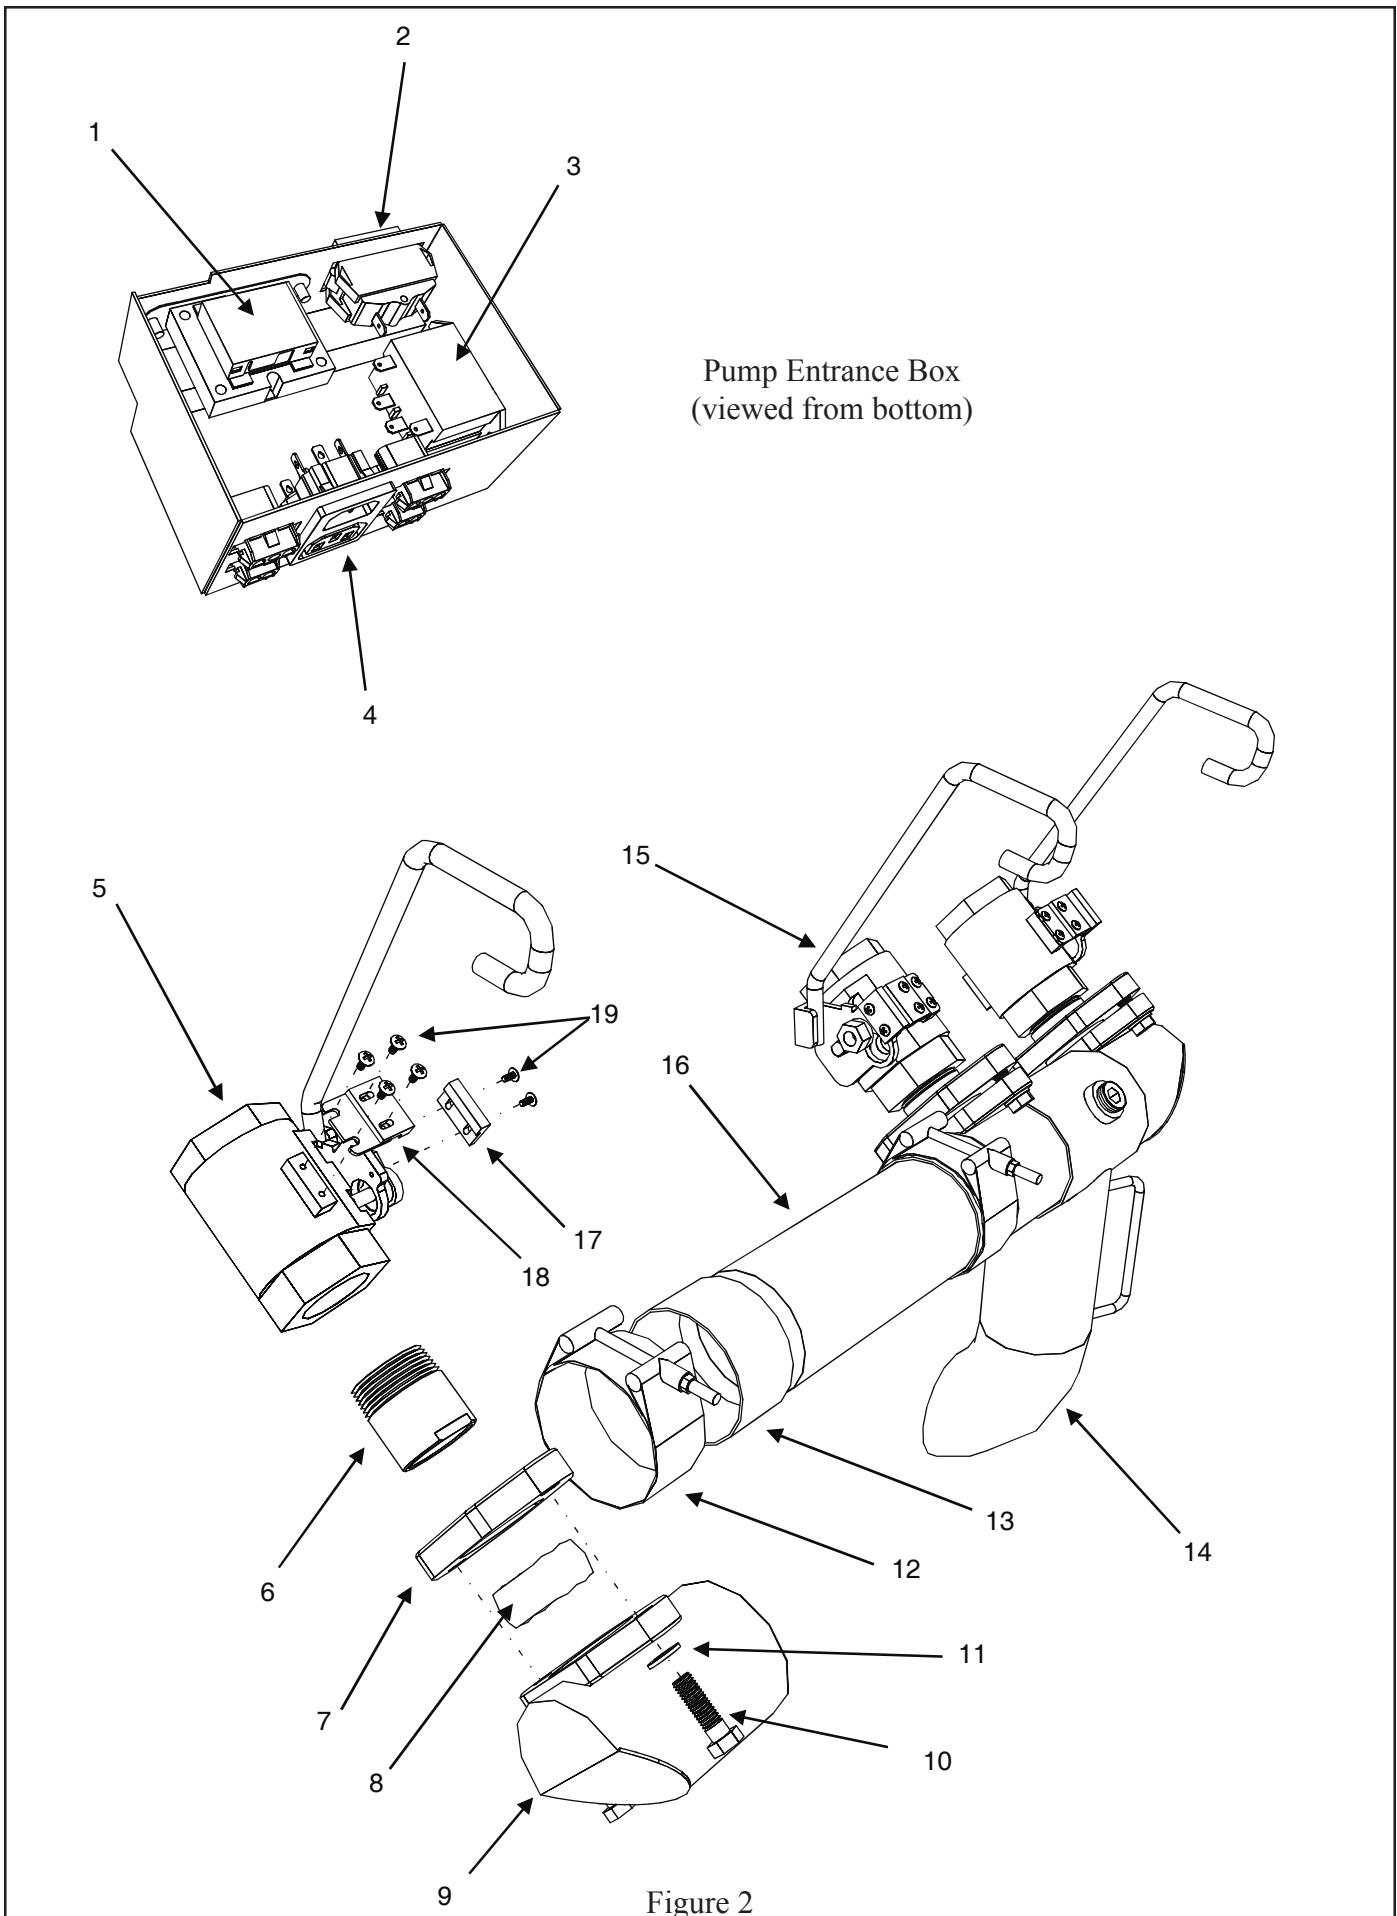


Figure 2

**Table 3**  
**Main Entrance Box**

Item#	Part#	Part Description
1 .....	60132702 .....	Relay Board Fuse, 1.5A Time Delay
2 .....	60127301 .....	Relay Board
	..... 60132901 .....	Relay Board Insulation
3 .....	P5047301 .....	3 Post Terminal Block
4 .....	60139201 .....	Heat Demand Contactor
5 .....	PP10560 .....	Side On Contactor
6 .....	PP10429 .....	Transformer 120/208/240VAC
7 .....	60140701 .....	Rcpt,10A-250V IE320F Screw In
8 .....	P5045282 .....	4 Post Terminal Block
9 .....	B5305001 .....	DVI Return Switch
	..... PP10263 .....	DVI Return Actuator (not shown)
 <u>Additional Parts Not Shown</u>		
60126001 .....		
24VDC Hood Relay		
60126001 .....		
24VAC Hi Limit Relay (Export and CE Only)		
60137701 .....		
Expanded Menu Computer		
B3631304 .....		
Front Panel Bezel		

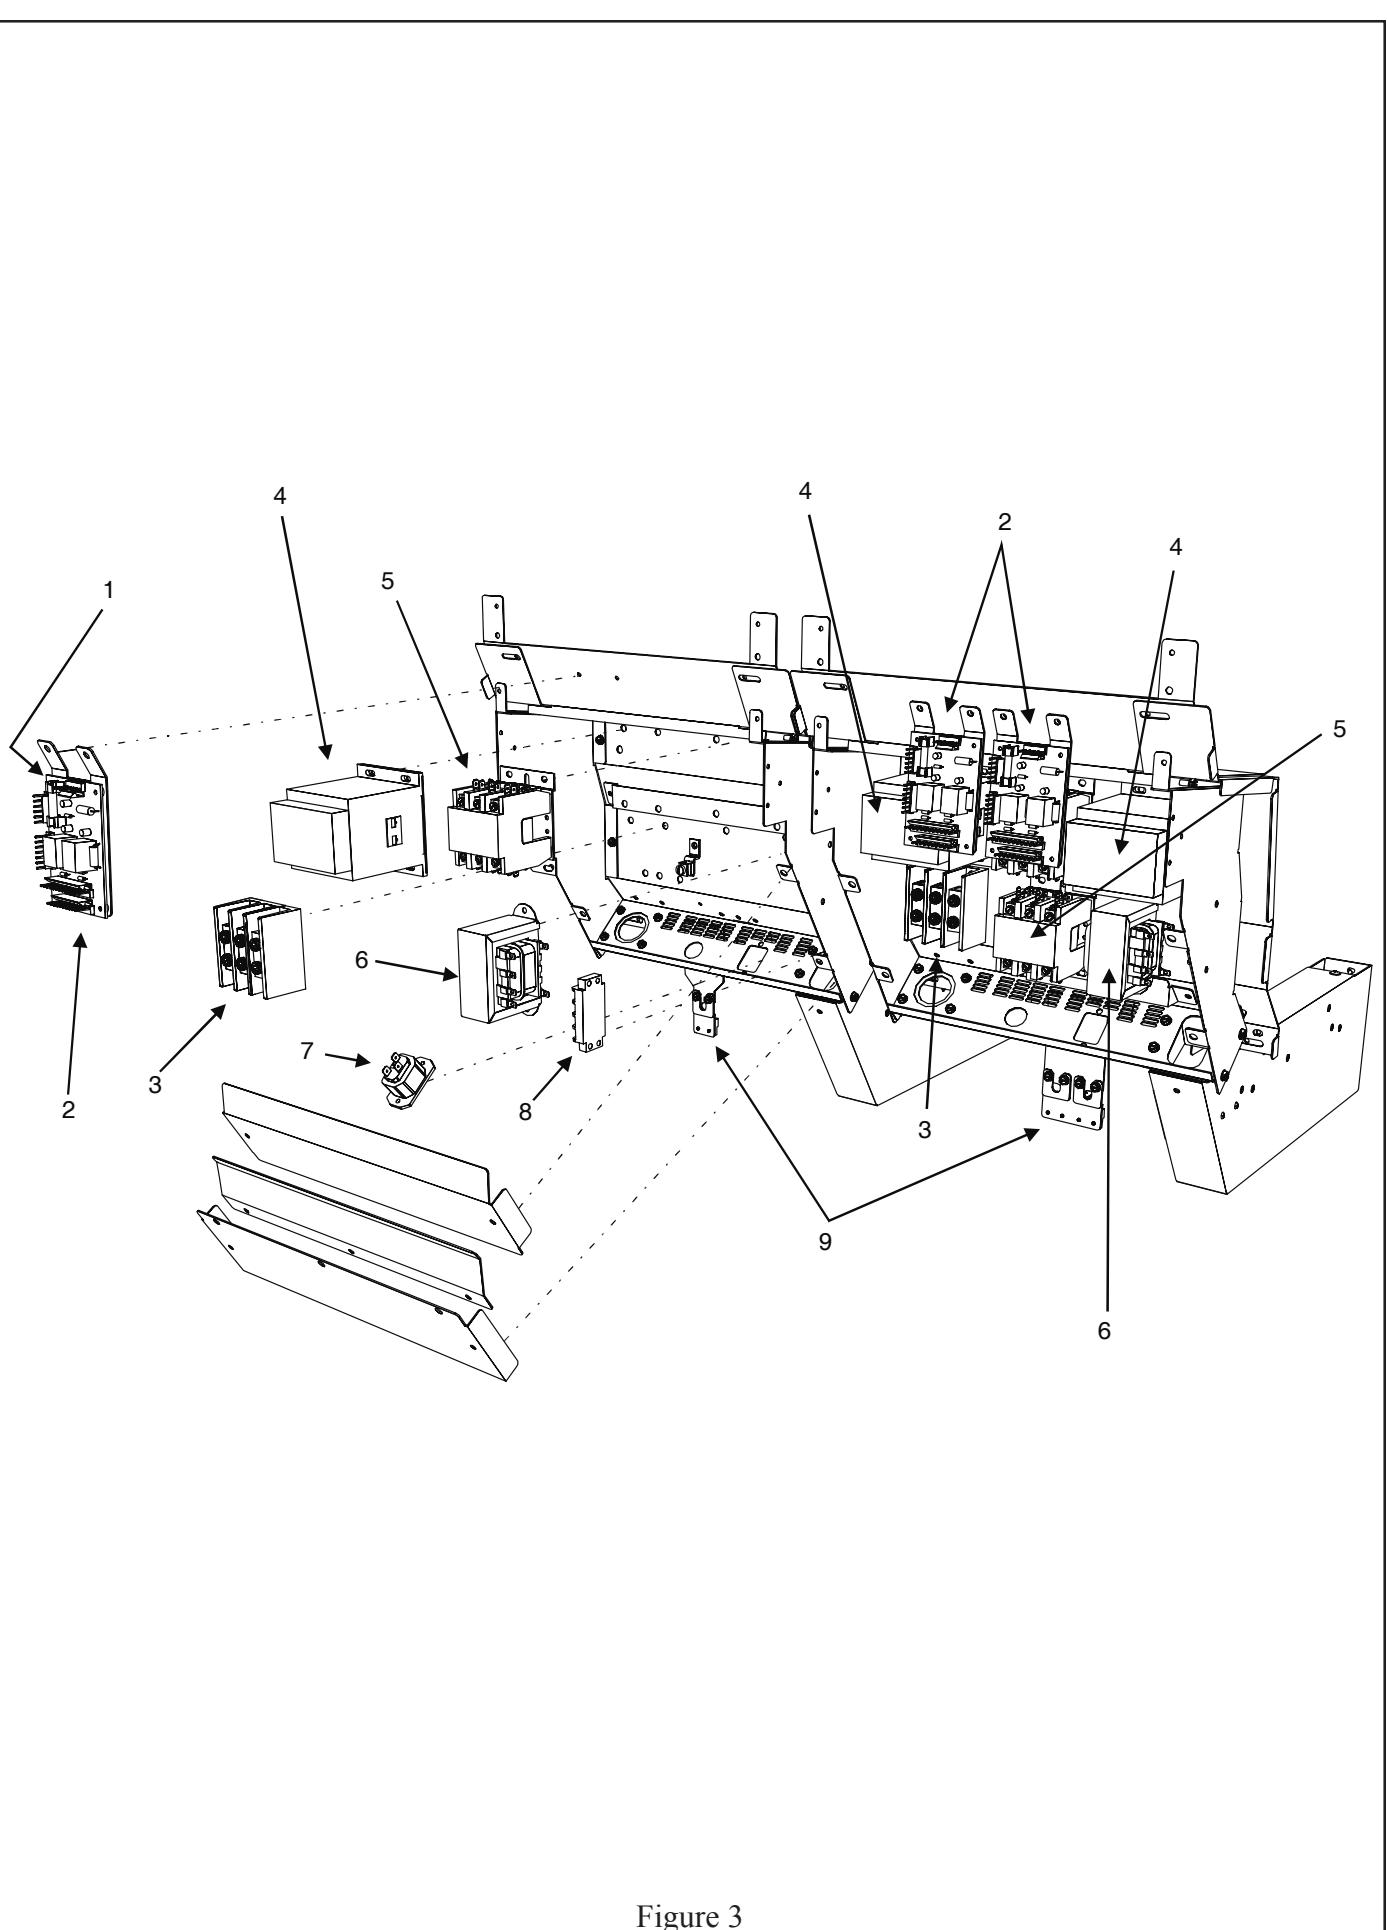


Figure 3

**Table 4**  
**Pump Assembly and Filter Pan**

Item#	Part#	Part Description
1 .....	B4004802 .....	Full/Right Split Return Handle
	B4004801 .....	Left Split Return Handle
2 .....	P0190200 .....	Cotter Pin 1/16" x 3/4"
3 .....	60131901 .....	Washer, Spring 5/8" with 5/16" Hole
4 .....	P0080750 .....	Washer, Flat 5/16"
5 .....	PP10266 .....	4-40 x 1/4" Screw
6 .....	B5305001 .....	DVI Return Switch
7 .....	PP10266 .....	4-40 x 1/4" Screw
8 .....	PP10263 .....	DVI Return Actuator
9 .....	PP10266 .....	4-40 x 1/4" Screw
	10 .....	60130806      115/220VAC Pump & Motor Assembly
	60130807 .....	240VAC Pump & Motor Assembly
	60130810 .....	208VAC Pump & Motor Assembly
	60130804 .....	115/220V Motor Only
	60130804 .....	240VAC Motor Only
	60130809 .....	208VAC Motor Only
	PP10417 .....	5 GPM Pump Only
11 .....	P6071516 .....	3/4" x 4" NPT Nipple
12 .....	PP11104 .....	1" x 1.18" viton O-ring (3 required)
13 .....	A7027602 .....	Pickup Tube Receiving Block
14 .....	P7036603 .....	3/4" NPT Coupling
15 .....	60132201 .....	Hose, Teflon Swivel FxMPT
16 .....	60128008 .....	Tbg, Flex Return Line 0.5" x 15.5"
	60128009 .....	Tbg, Flex Return Line 0.5" x 19"
	60128010 .....	Tbg, Flex Return Line 0.5" x 22"
	60128011 .....	Tbg, Flex Return Line 0.5" x 10"
17 .....	60131801 .....	Return Valve
18 .....	60130001 .....	End Cap
19 .....	60130101 .....	Tank Return Fitting
20 .....	B6671201 .....	Pickup Tube Strainer
21 .....	A7008302 .....	Paper Support
22 .....	B6673501 .....	Paper Hold Down
23 .....	60131401 .....	Rigid Caster
24 .....	B6673401 .....	Filter Pan Only (no casters)
<u>Additional Parts Not Shown</u>		
	PP11273 .....	Filter Paper
	60133503 .....	120V Heat Tape (pump)
	60133504 .....	230/240V Heat Tape (pump)
	60133501 .....	120V Heat Tape (flush hose)
	60133502 .....	230/240V Heat Tape (flush hose)

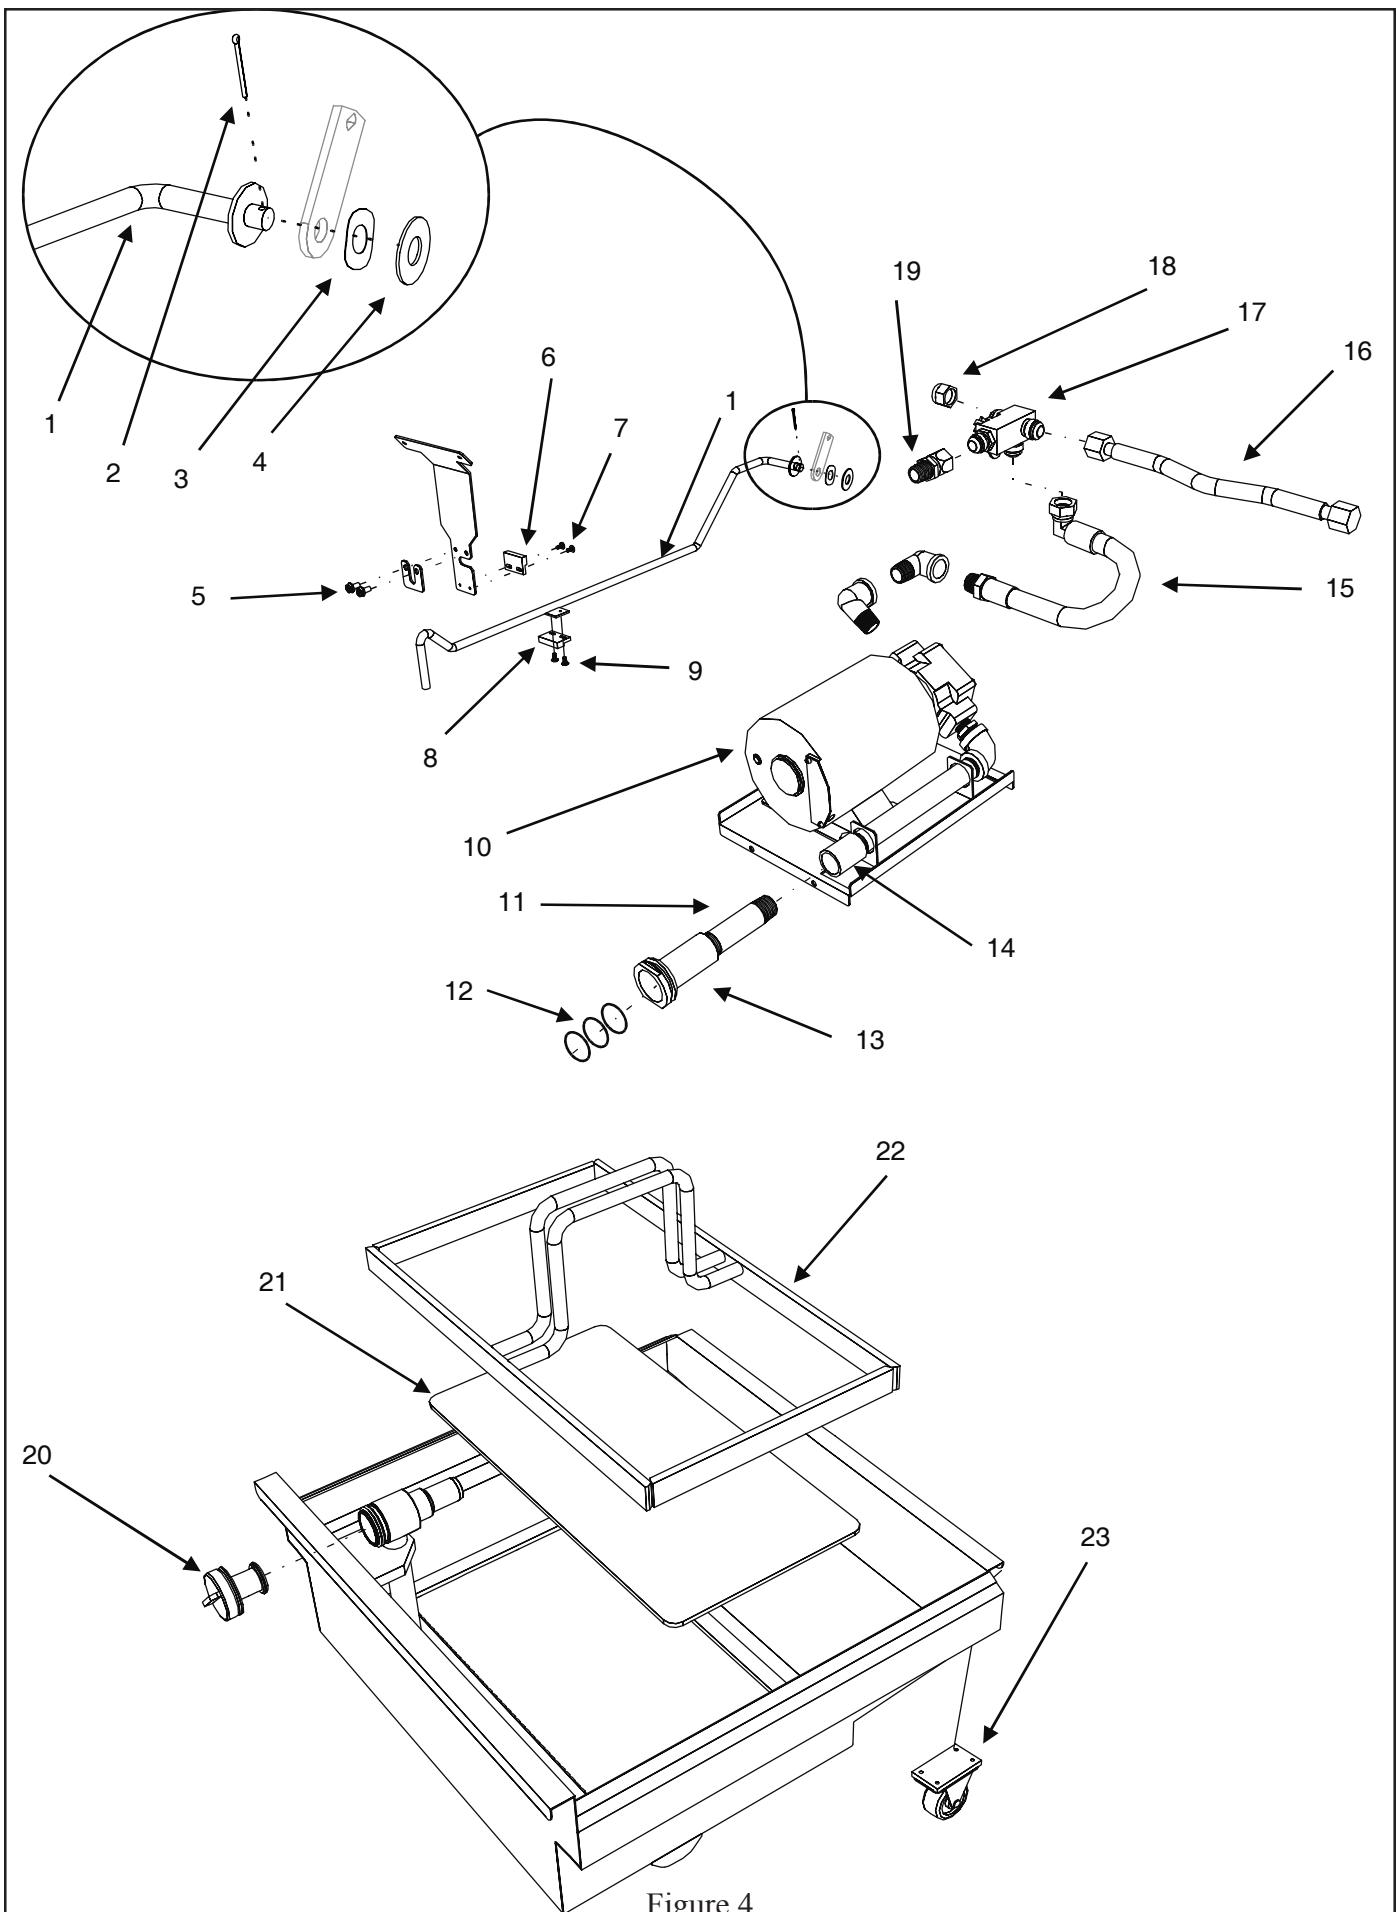
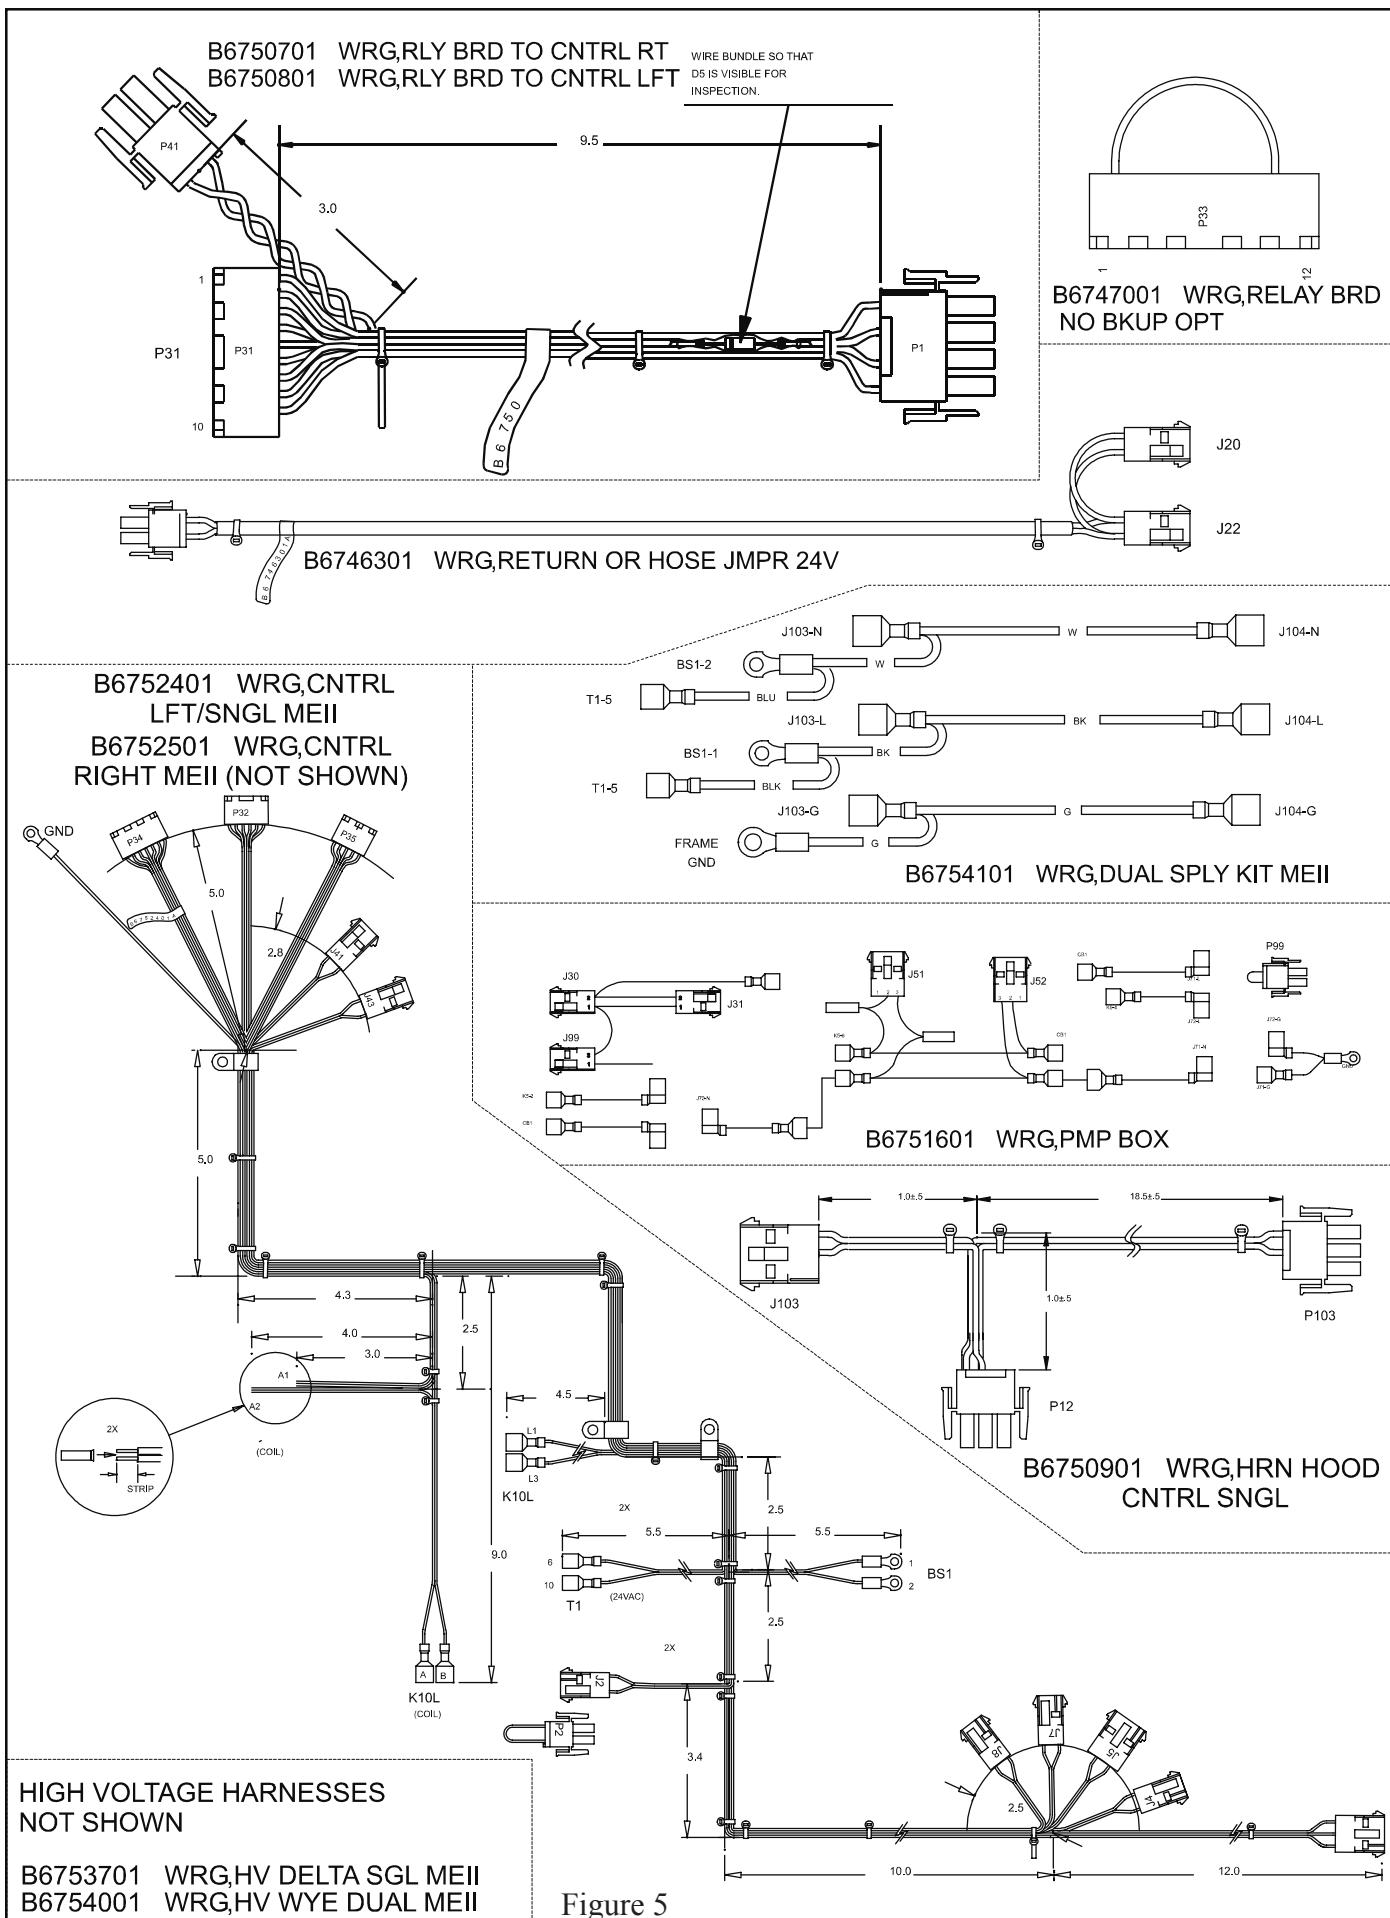


Figure 4



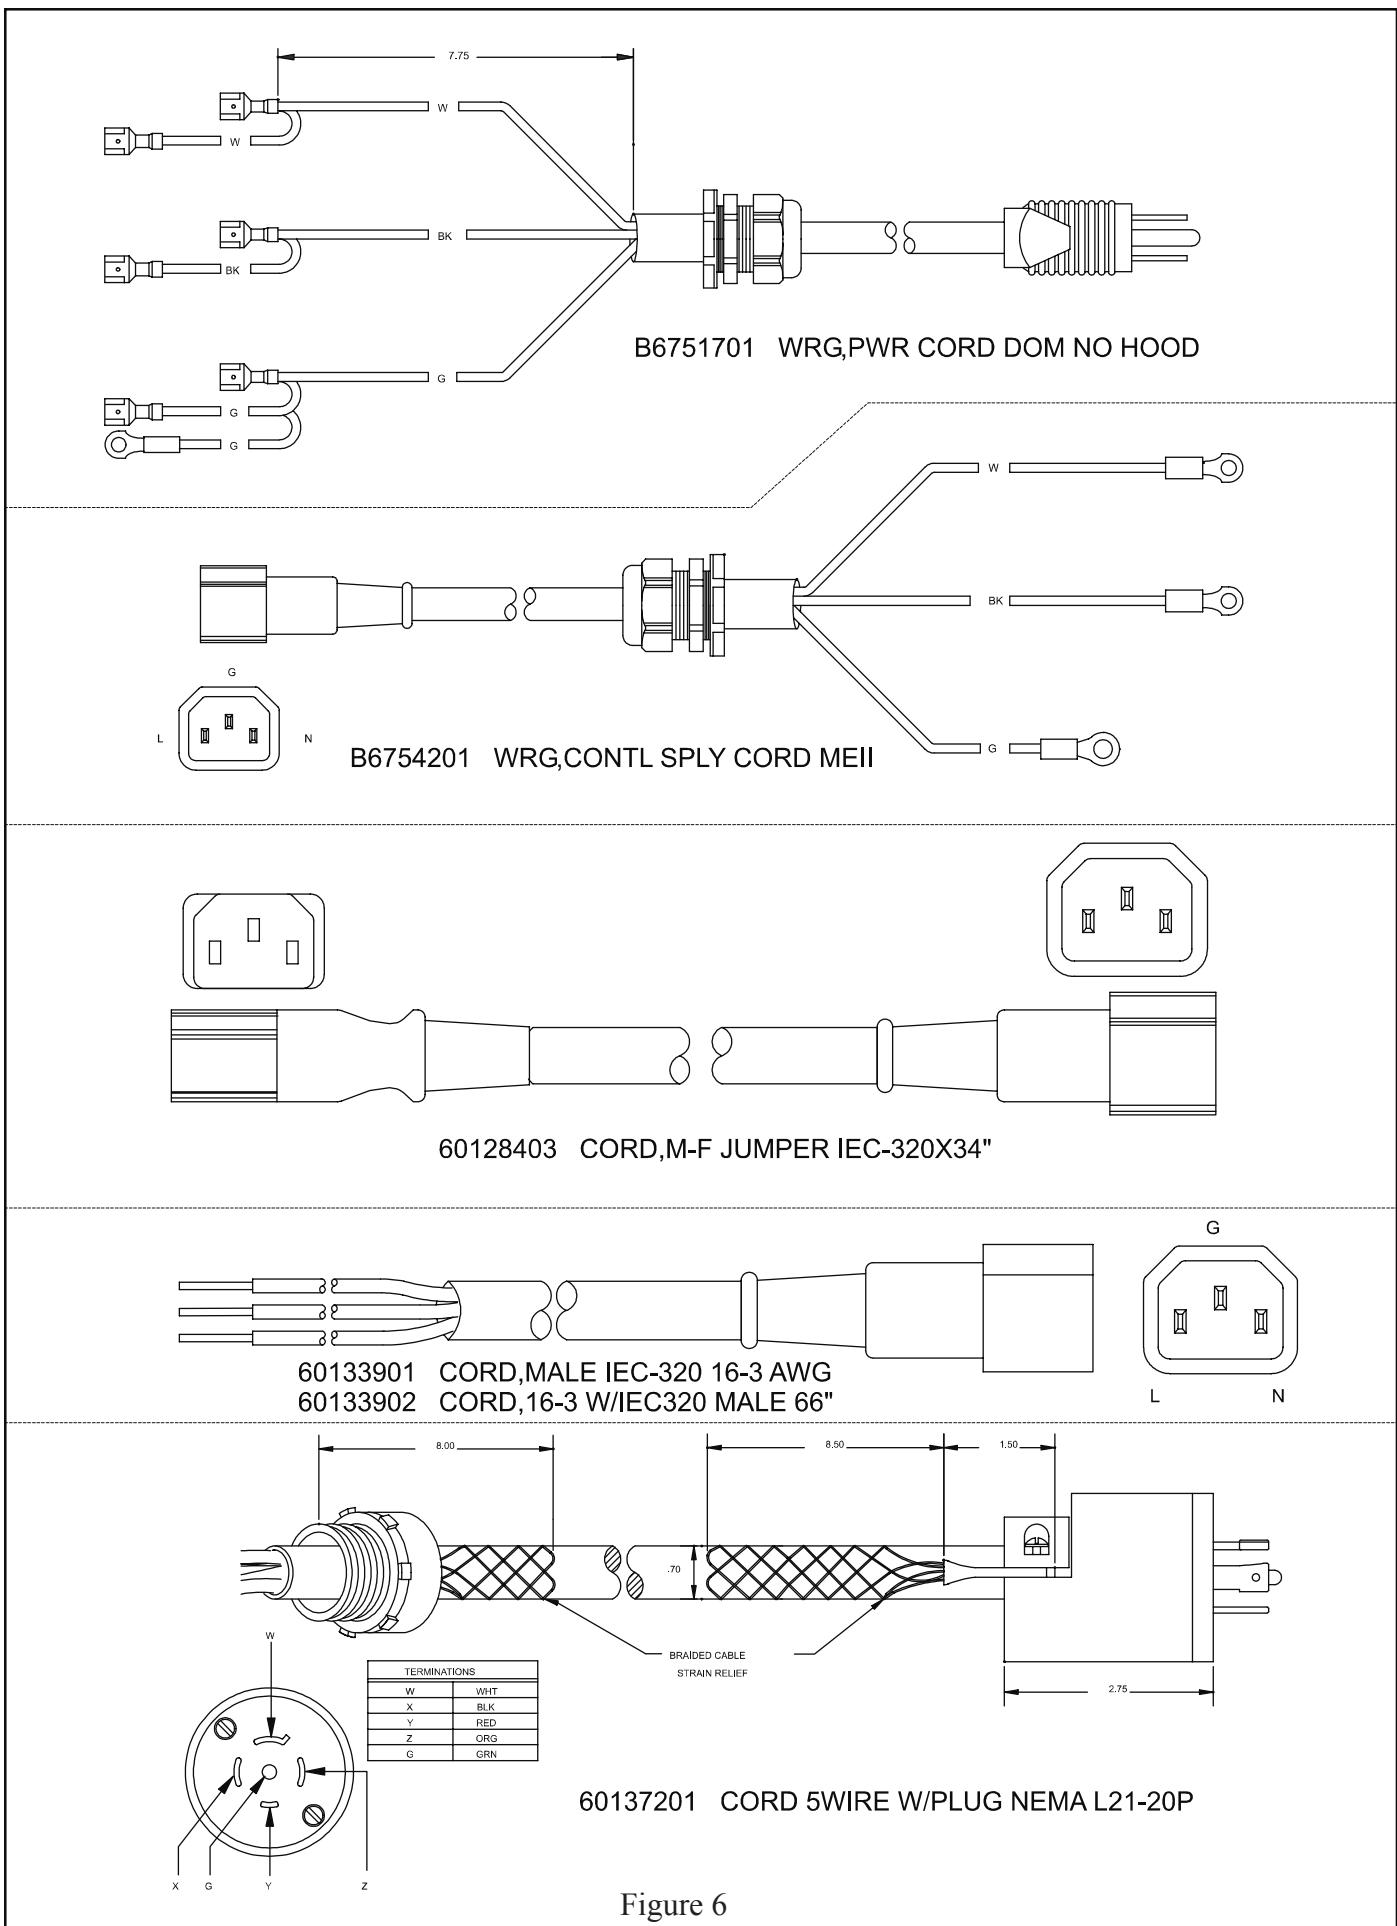


Figure 6







In the event of problems with or questions about your order, please contact the Pitco Frialator factory, from 8:00 a.m. - 5:00 p.m., Eastern Standard Time, Monday through Friday, toll-free at:

(800) 258-3708 US and Canada only or  
(603) 225-6680

In the event of problems with or questions about your order, please contact the Pitco Frialator Authorized Service and Parts representative (ASAP) covering your area, through Pitco at:

(800) 258-3708 US only, 24 hours